

If you need more information on Computer and Electronic Repair, please visit these websites to improve yourself.

<http://www.fastrepairguide.com>


<http://www.protech2u.com>

<http://www.plasma-television-repair.com>

<http://www.lcd-television-repair.com>

Happy Repairing!!

Highly Recommended Repair Ebook:

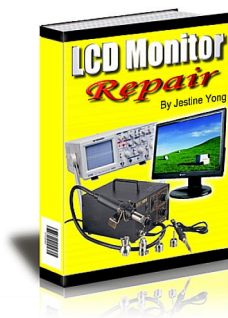


If you're a LCD Monitor repairer, then this is the best guide for you. Why? Because, the author revealed all his LCD Monitor Repairing secrets for you. I think, with just few Repair tips you learned from this guide you will get back your investment!

[Click Here to read](#) more.



This eBook will show you how to test the electronic component correctly and accurately. Some of you may say that I don't need this eBook because it is too simple! Do you know that, in fact there is lots of testing electronic components secrets I have learned from this guide? Do you know how to test a 'TRIAC' correctly and accurately? If you answer no then I guess you have to get this eBook. [Click Here to read more.](#)

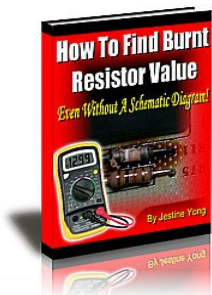


Are you tired of searching the service manuals to look for the value of a burnt resistor? If the answer is YES, then this eBook is a 'must have' guide for you. You can save a lot of time and be able to repair customer's Electronic equipment with burnt resistors in it.

[Click here to read more.](#)

Service Manual

Progressive Plasma Television

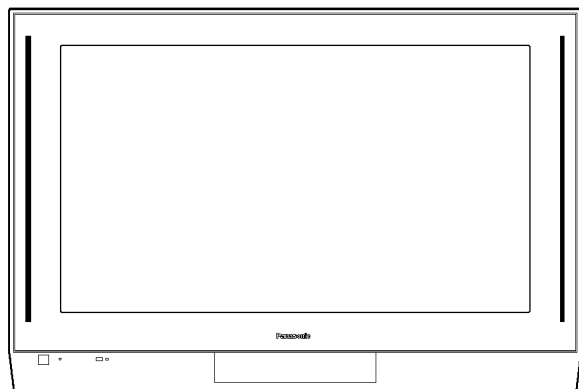

TH-37PA30E

TH-42PA30E

GP6DE Chassis

Specifications

Power Source	220 V -240 V 50 Hz /60 Hz A.C.
Power Consumption	245 W (TH-37PA30E)
Normal use	315 W (TH-42PA30E)
Standby	1.8 W
Power-OFF	1.0 W
Plasma Display panel	
Drive method	AC type
Aspect Ratio	16:9
Contrast Ratio	4000:1
Screen size (No.of pixels)	37-inch (TH-37PA30E)
	818 mm (W) × 461 mm (H) × 939 mm (diagonal)
	42-inch (TH-42PA30E)
	920 mm (W) × 518 mm (H) × 1,056 mm (diagonal)
	408,960 (852 (W) × 480 (H)) [2,556 × 480 dots]
Sound	
Speaker	Woofer ϕ 80 mm × 2, Tweeter 16 mm × 73 mm × 8
Audio Output	26 W [8 W +8 W, 5 W +5 W] ((10 %THD)
Headphone	M3 (3.5 mm) Jack × 1
Applicable signals	
Colour System	NTSC, PAL, PAL60, SECAM, Modified NTSC
Scanning format	525 (480) /60i . 60p, 625 (575) /50i . 50p
PC signals	VGA display
	VGA
	SVGA, XGA, SXGA, UXGA (compressed)
	Horizontal scanning frequency 15 - 110 kHz
	Vertical scanning frequency 48 - 120 Hz
Receiving Systems/Band name	PAL B, G, H, I, SECAM B, G SECAM L / L'
	VHF E2 -E12
	VHF H1 -H2 (ITALY)

Panasonic®

© 2004 Matsushita Electric Industrial Co., Ltd. All rights reserved. Unauthorized copying and distribution is a violation of law.

VHF A -H (ITALY)	UHF E21 -E69
CATV (S01 -S05)	CATV S1-S10 (M1 -M10)
CATV S11 -S20 (U1 -U10)	CATV S21 -S41 (Hyperband)
PAL D, K, SECAM D, K	
VHF R1-R2	VHF R3 -R5
VHF R6 -R12	UHF E21 -E69
PAL 525/60	Playback of NTSC tape from some PAL Video recorders (VCR)
M.NTSC	Playback from M.NTSC Video recorders (VCR)
NTSC (AV INPUT ONLY)	Playback from NTSC Video recorders (VCR)

OUTPUT

AUDIO OUT	AUDIO L-R (RCA Pin Type × 2)	0.5 Vrms
-----------	------------------------------	----------

INPUT

AV3-Front	VIDEO (RCA Pin Type × 2)	1.0 Vp-p (75 Ω)
	S-VIDEO (MINI DIN 4-pin)	Y: 1.0 Vp-p (75 Ω) C:0.286 Vp-p (75 Ω)
	AUDIO L-R (RCA Pin Type × 2)	0.5 Vrms
AV4C-Rear	Y	1.0 Vp-p (including synchronization)
	P _B /P _R	±0.35 Vp-p
PC	(HIGH-DENSITY D-SUB 15PIN)	R, G, B/ 0.7 Vp-p (75 Ω)
		HD, VD / 1.0 - 5.0 Vp-p (high impedance)
Others	SD Card slot × 1, PC Card slot × 1	

INPUT/OUTPUT

AV1-Rear	21 Pin terminal (Audio/Video in, TV out, RGB in)
AV2-Rear	21 Pin terminal (Audio/Video in, Audio/Video out, S-Video in, Q-Link)
AV4-Rear	21 Pin terminal (Audio/Video in, Audio/Video out, S-Video in, RGB in, Q-Link)

ANT-Rear UHF / VHF

Operating Conditions Temperature :0 ° - 40 °C
Humidity :20 % - 80 %RH (non-condensing)

Accessories Supplied

Remote Control Transmitter	EUR7635020
Batteries	2 × R6 Size
Clamper	TMME206 × 2
Ferrite core	Large size × 2, Small size × 5

Dimensions (W × H × D) 1,040 mm × 697 mm × 139 mm (TH-37PA30E)
1,140 mm × 757 mm × 139 mm (TH-42PA30E)

Mass (Weight) 34.5 kg (TH-37PA30E)
41.0 kg (TH-42PA30E)

Notes:

- Design and specifications are subject to change without notice. Mass and dimensions shown are approximate.
- This equipment complies with the EMC standards listed below.
EN55013, EN61000-3-2, EN61000-3-3, EN55020.

 WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

CONTENTS

	Page		Page
1 Applicable signals	5	3 Prevention of Electro Static Discharge (ESD) to	
2 Safety Precautions	6	Electrostatically Sensitive (ES) Devices	7
2.1. General Guidelines	6	4 About lead free solder (PbF)	8
2.2. Touch-Current Check	6	5 Service Hint	9

6 P.C.Board and Plasma panel replacement method	10	14.18. K and S-Board	65
7 Location of Lead Wiring	15	14.19. G-Board	66
7.1. Lead of Wiring (1)	15	14.20. JG-Board	67
7.2. Lead of wiring (2)	16	15 Block and Schematic Diagrams	69
7.3. Lead of wiring (3)	17	15.1. Schematic Diagram Notes	69
7.4. Lead of wiring (4)	18	15.2. Main Block Diagram	70
7.5. Lead of wiring (5)	18	15.3. PF-Board Block Diagram	71
8 Self Check	19	15.4. PF-Board Schematic Diagram	72
8.1. Power LED Blinking timing chart	20	15.5. P-Board Block Diagram	73
8.2. No Power	21	15.6. P-Board Schematic Diagram	74
8.3. No Picture	22	15.7. PA-Board Block Diagram	75
8.4. Local screen failure	22	15.8. PA-Board (1 of 2) Schematic Diagram	76
9 Service Mode Function	23	15.9. PA-Board (2 of 2) Schematic Diagram	77
9.1. How to enter SERVICE 1	23	15.10. H and T-Board Block Diagram	78
9.2. How to enter SERVICE 2	23	15.11. H-Board (1 of 2) Schematic Diagram	79
9.3. Option Description	25	15.12. H-Board (2 of 2) and T-Board Schematic Diagram	80
10 CAT (Computer Aided Test) mode	27	15.13. DG-Board (1 of 2) Block Diagram	81
10.1. IIC mode	27	15.14. DG-Board (2 of 2) Block Diagram	82
10.2. CD mode	28	15.15. DG-Board (1 of 9) Schematic Diagram	83
10.3. SD mode	28	15.16. DG-Board (2 of 9) Schematic Diagram	84
10.4. IIC mode structure (following items value is sample data.)	29	15.17. DG-Board (3 of 9) Schematic Diagram	85
11 Adjustment Procedure	30	15.18. DG-Board (4 of 9) Schematic Diagram	86
11.1. +B Set-up	30	15.19. DG-Board (5 of 9) Schematic Diagram	87
11.2. Driver Set-up	30	15.20. DG-Board (6 of 9) Schematic Diagram	88
11.3. Initialization Pulse Adjust	31	15.21. DG-Board (7 of 9) Schematic Diagram	89
11.4. P.C.B. (Printed Circuit Board) exchange	32	15.22. DG-Board (8 of 9) Schematic Diagram	90
11.5. Adjustment Volume Location	32	15.23. DG-Board (9 of 9) Schematic Diagram	91
11.6. Test Point Location	32	15.24. D-Board Block Diagram	92
12 Alignment	33	15.25. D-Board (1 of 12) Schematic Diagram	93
12.1. Pedestal setting	33	15.26. D-Board (2 of 12) Schematic Diagram	94
12.2. PAL panel white balance	34	15.27. D-Board (3 of 12) Schematic Diagram	95
12.3. PC panel white balance	35	15.28. D-Board (4 of 12) Schematic Diagram	96
12.4. Sub brightness setting	36	15.29. D-Board (5 of 12) Schematic Diagram	97
12.5. ABL Level	37	15.30. D-Board (6 of 12) Schematic Diagram	98
13 Hotel mode	38	15.31. D-Board (7 of 12) Schematic Diagram	99
14 Conductor Views	39	15.32. D-Board (8 of 12) Schematic Diagram	100
14.1. PF-Board	39	15.33. D-Board (9 of 12) Schematic Diagram	101
14.2. P-Board	41	15.34. D-Board (10 of 12) Schematic Diagram	102
14.3. PA-Board	43	15.35. D-Board (11 of 12) Schematic Diagram	103
14.4. D-Board	45	15.36. D-Board (12 of 12) Schematic Diagram	104
14.5. DG-Board	47	15.37. C1, C2, G and K-Board Block Diagram	105
14.6. H and T-Board	49	15.38. C1-Board Schematic Diagram (TH-37PA30E)	106
14.7. C1-Board (For TH-37PA30E)	51	15.39. C1-Board Schematic Diagram (TH-42PA30E)	107
14.8. C1-Board (For TH-42PA30E)	52	15.40. C2-Board (1 of 2) Schematic Diagram (TH-37PA30E)	108
14.9. C2-Board (For TH-37PA30E)	53	15.41. C2-Board (2 of 2) Schematic Diagram (TH-37PA30E)	109
14.10. C2-Board (For TH-42PA30E)	54	15.42. C2-Board Schematic Diagram (TH-42PA30E)	110
14.11. SC-Board	55	15.43. G-Board Schematic Diagram	111
14.12. SU-Board (For TH-37PA30E)	58	15.44. K-Board Schematic Diagram	112
14.13. SU-Board (For TH-42PA30E)	59	15.45. SC-Board Block Diagram	113
14.14. SD-Board (For TH-37PA30E)	60	15.46. SC-Board (1 of 3) Schematic Diagram	114
14.15. SD-Board (For TH-42PA30E)	61	15.47. SC-Board (2 of 3) Schematic Diagram	115
14.16. SS-Board	62	15.48. SC-Board (3 of 3) Schematic Diagram	116
14.17. SS2, SS3, SS4 and SS5-Board	64	15.49. SU-Board Block Diagram	117
		15.50. SU-Board Schematic Diagram (TH-37PA30E)	118

15.51. SU-Board Schematic Diagram (TH-42PA30E)	119
15.52. SD-Board Block Diagram	120
15.53. SD-Board Schematic Diagram (TH-37PA30E)	121
15.54. SD-Board Schematic Diagram (TH-42PA30E)	122
15.55. SS, S, SS2, SS3, SS4 and SS5-Board Block Diagram	123
15.56. SS-Board (1 of 2) and S-Board Schematic Diagram	124
15.57. SS-Board (2 of 2) SS2, SS3, SS4 and SS5-Board Schematic Diagram	125
15.58. JG-Board Block Diagram	126

15.59. JG-Board (1 of 2) Schematic Diagram	127
15.60. JG-Board (2 of 2) Schematic Diagram	128
16 Parts Location	129
17 Packing Exploded Views	130
18 Mechanical Replacement Parts List	132
19 Replacement Parts List	133
19.1. Replacement Parts List Notes	133
19.2. Electrical Replacement Part List	134

1 Applicable signals

Applicable input signals for PC Input (D-sub 15P) (* Mark)

	Signal name	Horizontal frequency(kHz)	Vertical frequency(Hz)	PC
1	640 × 400 @ 70 Hz	31.47	70.00	*
2	640 × 480 @ 60 Hz	31.47	59.94	*
3	Macintosh13" (640 × 480)	35.00	66.67	*
4	640 × 480 @ 75 Hz	37.50	75.00	*
5	852 × 480 @ 60 Hz	31.50	60.00	*
6	800 × 600 @ 60 Hz	37.88	60.32	*
7	800 × 600 @ 75 Hz	46.88	75.00	*
8	800 × 600 @ 85 Hz	53.67	85.06	*
9	Macintosh16" (832 × 624)	49.73	74.55	*
10	1,024 × 768 @ 60 Hz	48.36	60.00	*
11	1,024 × 768 @ 70 Hz	56.48	70.07	*
12	1,024 × 768 @ 75 Hz	60.02	75.03	*
13	1,024 × 768 @ 85 Hz	68.68	85.00	*
14	Macintosh21" (1,152 × 870)	68.68	75.06	*
15	1,280 × 1,024 @ 60 Hz	63.98	60.02	*
16	1,280 × 1,024 @ 75 Hz	79.98	75.03	*
17	1,280 × 1,024 @ 85 Hz	91.15	85.02	*
18	1,600 × 1,200 @ 60 Hz	75.00	60.00	*

Note:

Signals other than above may not be displayed properly.

2 Safety Precautions

2.1. General Guidelines

1. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
2. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers shields are properly installed.
3. After servicing, make the following leakage current checks to prevent the customer from being exposed to shock hazards.

2.2. Touch-Current Check

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a measuring network for touch currents between each exposed metallic part on the set and a good earth ground such as a water pipe, as shown in Figure 1.
3. Use Leakage Current Tester (Simpson 228 or equivalent) to measure the potential across the measuring network.
4. Check each exposed metallic part, and measure the voltage at each point.
5. Reserve the AC plug in the AC outlet and repeat each of the above measure.
6. The potential at any point (TOUCH CURRENT) expressed as voltage U_1 and U_2 , does not exceed the following values:
For a. c.: $U_1 = 35$ V (peak) and $U_2 = 0.35$ V (peak);
For d. c.: $U_1 = 1.0$ V,


Note:

The limit value of $U_2 = 0.35$ V (peak) for a. c. and $U_1 = 1.0$ V for d. c. correspond to the values 0.7 mA (peak) a. c. and 2.0 mA d. c.

The limit value $U_1 = 35$ V (peak) for a. c. correspond to the value 70 mA (peak) a. c. for frequencies greater than 100 kHz.

7. In case a measurement is out of the limits specified, there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.

Measuring network for TOUCH CURRENTS

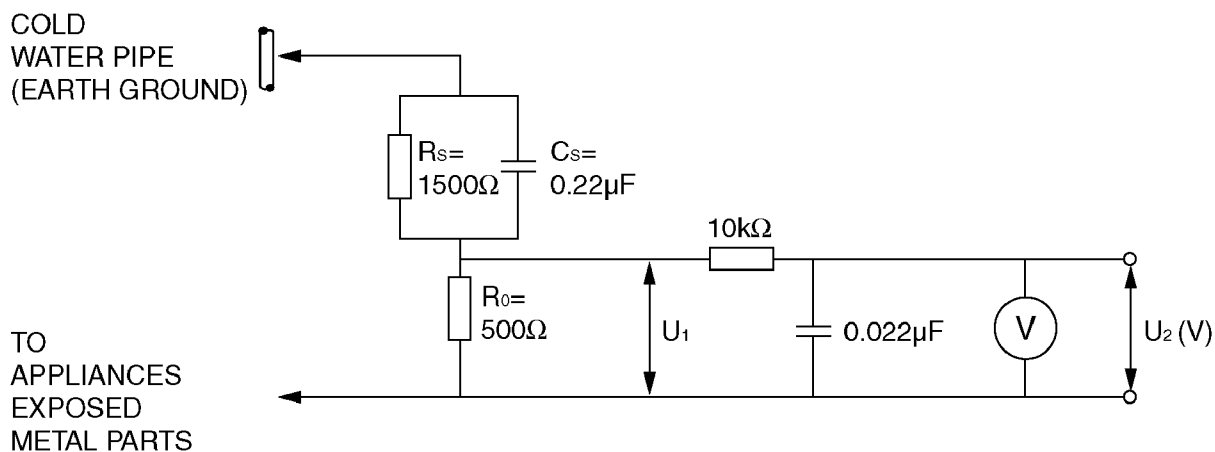

Resistance values in ohms (Ω)

V: Voltmeter or oscilloscope
(r.m.s. or peak reading)

Input resistance: ≥ 1 M Ω

Input capacitance: ≤ 200 pF

Frequency range: 15 Hz to 1 MHz and d.c. respectively

NOTE - Appropriate measures should be taken to obtain the correct value in case of non-sinusoidal waveforms.

Figure 1

3 Prevention of Electro Static Discharge (ESD) to Electrostatically Sensitive (ES) Devices

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by electro static discharge (ESD).

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static solder removal device. Some solder removal devices not classified as "anti-static (ESD protected)" can generate electrical charge sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

Caution

Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity (ESD) sufficient to damage an ES device).

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by Δ in the schematic diagrams, Exploded Views and replacement parts list. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire, or other hazards. Do not modify the original design without permission of manufacturer.

4 About lead free solder (PbF)

Note: Lead is listed as (Pb) in the periodic table of elements.

In the information below, Pb will refer to Lead solder, and PbF will refer to Lead Free Solder.

The Lead Free Solder used in our manufacturing process and discussed below is (Sn+Ag+Cu).

That is Tin (Sn), Silver (Ag) and Copper (Cu) although other types are available.

This model uses Pb Free solder in it's manufacture due to environmental conservation issues. For service and repair work, we'd suggest the use of Pb free solder as well, although Pb solder may be used.

PCBs manufactured using lead free solder will have the PbF within a leaf Symbol  stamped on the back of PCB.


Caution

- Pb free solder has a higher melting point than standard solder. Typically the melting point is 50 ~ 70 °F (30~40 °C) higher. Please use a high temperature soldering iron and set it to 700 ± 20 °F (370 ± 10 °C).

- Pb free solder will tend to splash when heated too high (about 1100 °F or 600 °C).




If you must use Pb solder, please completely remove all of the Pb free solder on the pins or solder area before applying Pb solder. If this is not practical, be sure to heat the Pb free solder until it melts, before applying Pb solder.

- After applying PbF solder to double layered boards, please check the component side for excess solder which may flow onto the opposite side. (see figure below)

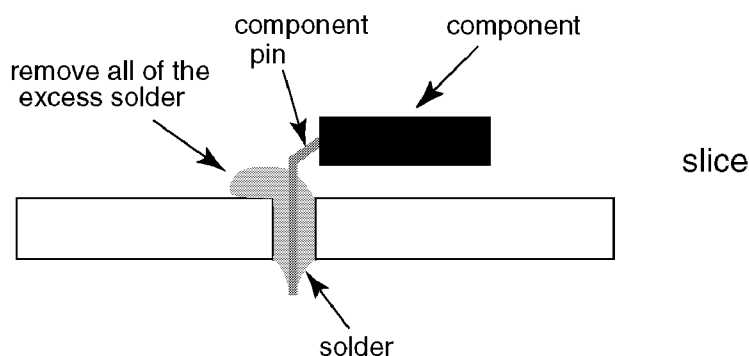


Suggested Pb free solder

There are several kinds of Pb free solder available for purchase. This product uses Sn+Ag+Cu (tin, silver, copper) solder. However, Sn+Cu (tin, copper), Sn+Zn+Bi (tin, zinc, bismuth) solder can also be used.

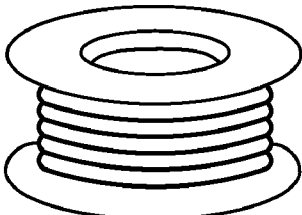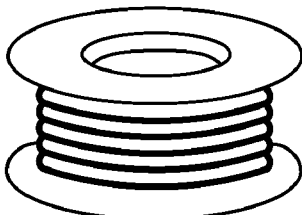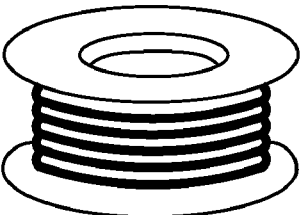
0.3mm X 100g	0.6mm X 100g	1.0mm X 100g
		

5 Service Hint


Stand the unit used for pedestal.

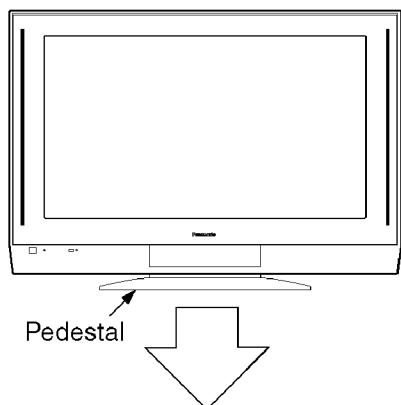


Remove the Rear Cover.

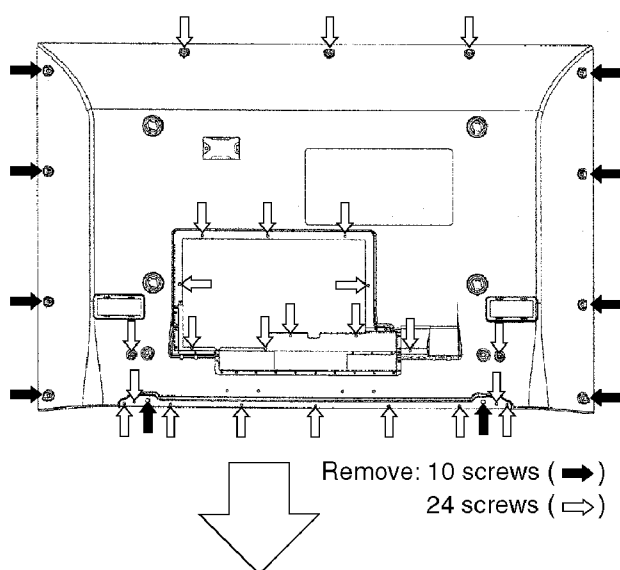

Remove the AV Connector Cover.

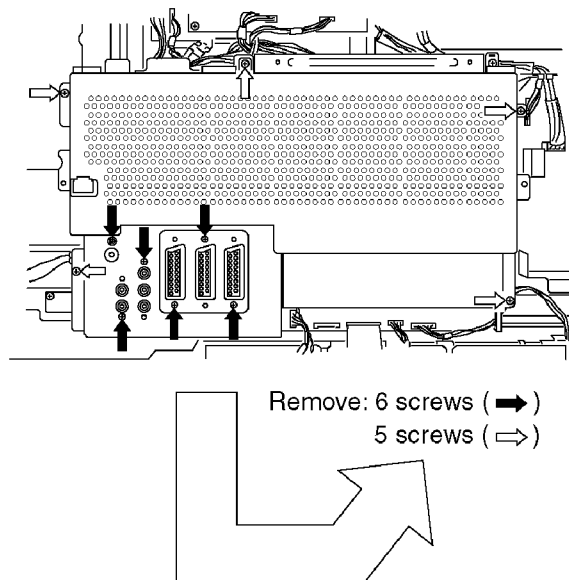

Service position.

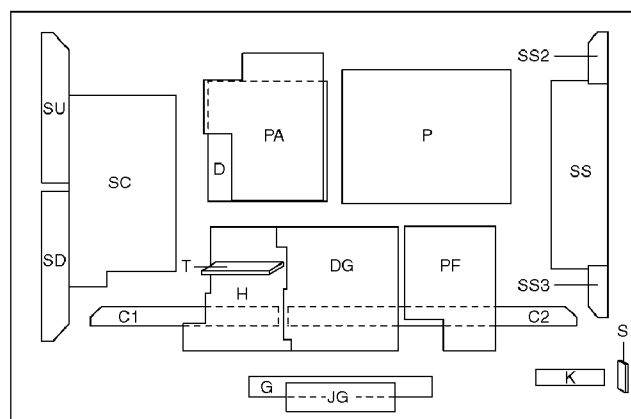


Board Name	Function
C1	DATA DRIVER (RIGHT)
C2	DATA DRIVER (LEFT)
D	DIGITAL SIGNAL PROCESS
DG	DIGITAL CORE, MICOM
G	FRONT TERMINAL, SWITCH
H	REAR TERMINAL
JG	SD CARD/PC CARD, JPEG I/F D/A
K	LED, REMOTE, POWER SWITCH
P	POWER SUPPLY
PA	DC/DC, AUDIO
PF	LINE FILTER
S	POWER SWITCH
SC	SCAN DRIVE
SD	SCAN OUT (DOWN)
SS	SUSTAIN DRIVE
SS2	SUSTAIN CONNECTION (UP)
SS3	SUSTAIN CONNECTION (DOWN)
SU	SCAN OUT (UP)
T	TUNER


6 P.C.Board and Plasma panel replacement method

■ To replace the plasma panel (finished), place the unit on the servicing stand, remove the front frame (finished), and replace the panel, being careful not to scratch the plasma panel surface.


1. Remove the rear cover and the AV connector cover.
2. Remove the P-Board.
 - a. Remove the couplers (P2, P5, P7, P9, P11, P12, P23, P25, P27).
 - b. Remove the screws (×5) and remove the P-Board.

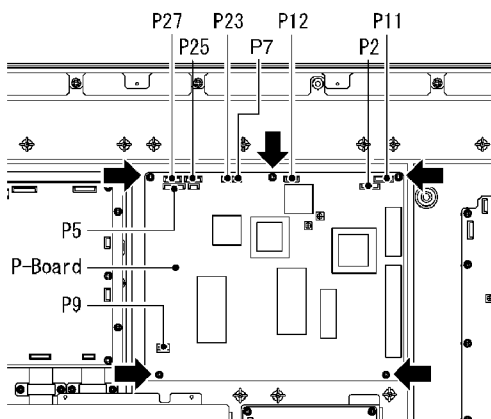


3. Remove the PA-Board.
 - a. Remove the couplers (PA1, PA2, PA3, PA4, PA5, PA6, PA7, PA8, PA10A, PA12).
 - b. Remove the screws (×4 ➡) and remove the PA-Board with the PA-Board Bracket.
 - c. Remove the screws (×6 ⇨) and remove the PA-Board.

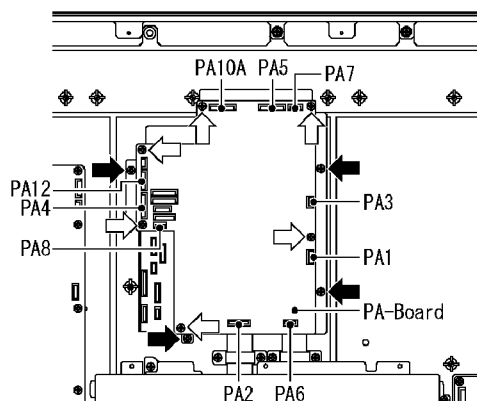


4. Remove the D-Board.
 - a. Disconnect the couplers (D3, D4, D6, D12, D22, D25) and the flexible cables (D31, D32).
 - b. Remove the screws (×7) and remove the D-Board with the bracket.

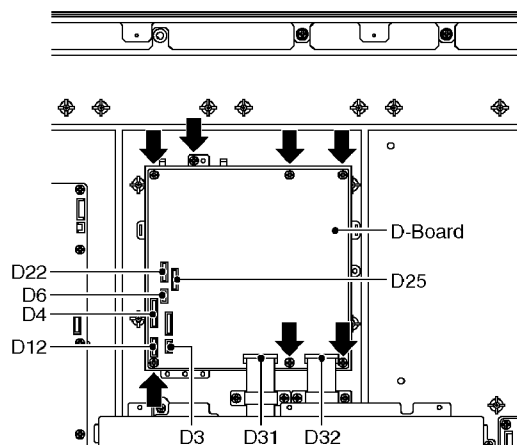

5. Remove the DG-Board, the H-Board and the T-Board.
 - a. Remove the couplers (DG2, DG3, DG6, DG8, DG10, DG12, H9), a flexible cable (DG7), and the screws (×5 ➡).
 - b. Remove the DG-Board, the H-Board and the T-Board with the bracket.
 - c. Remove the bridge connectors (DG1-H1, DG4-H4) and remove the screws (×3 ⇨) on the DG-Board.
 - d. Remove the DG-Board.
 - e. Remove the screws (×6 ⇨) on the H-Board and the screws (×2 ⇨) on the T-Board bracket.
 - f. Remove the coupler (H10) and the antenna cable, remove the T-Board with the T-Board bracket.
 - g. Remove the H-Board.

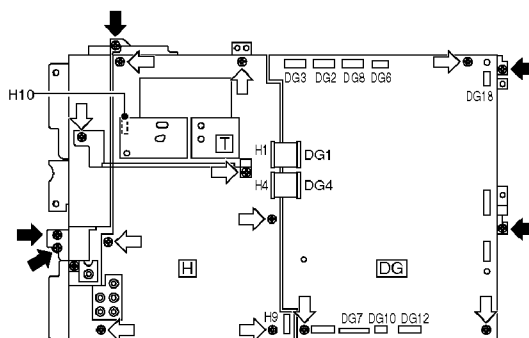


- h. Remove the screws (×2) and remove the T-Board.



6. Remove the PF-Board.

- Remove the couplers (PF2, PF10).
- Remove the screws (x5 ➡), and remove the PF-Board with the Bracket.

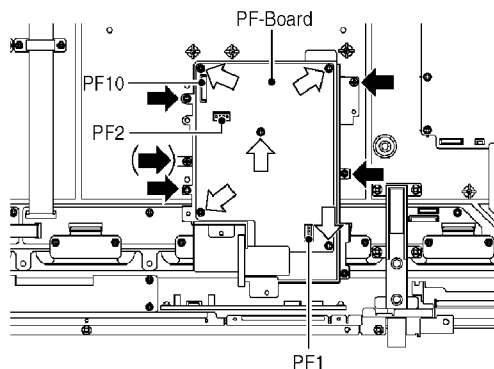


- Remove the coupler (PF1) and remove the screws (x5 ➡).


- Remove the PF-Board.

7. Remove the SU-Board.

- Remove the screws (x2).
- Slide the SU-Board to the left and disconnect from the couplers (SC41, SC42) on the SC-Board.

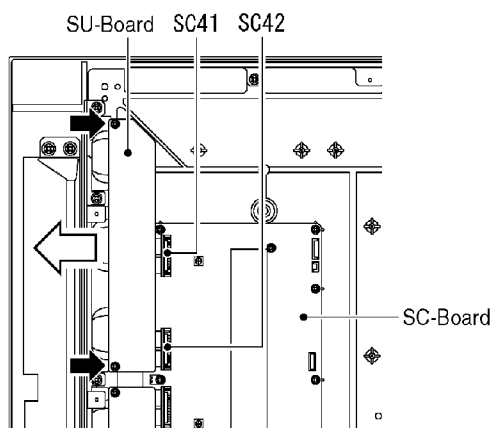


- Remove the flexible cables (SU1, SU2, SU3) connected to the SU-Board, and remove the SU-Board.

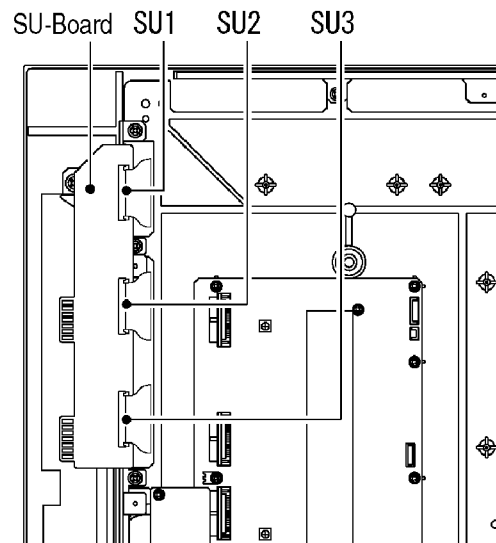


8. Remove the SD-Board.

- Remove the screws (x2).
- Slide the SD-Board to the left and disconnect from the couplers (SC43, SC44) on the SC-Board.

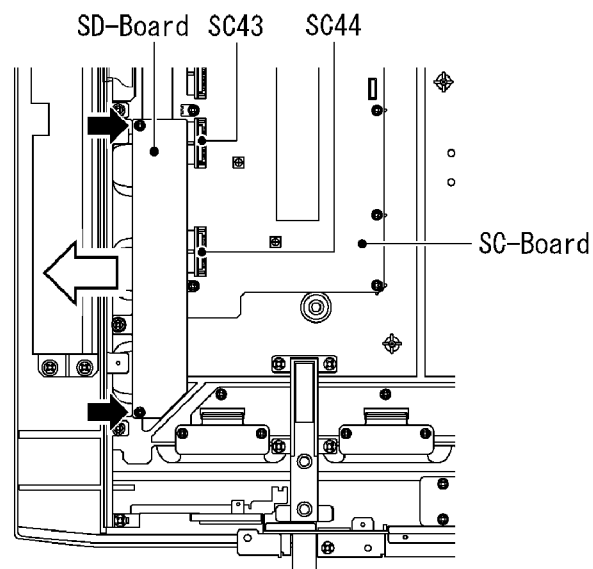


- c. Remove the flexible cables (SD1, SD2, SD3) connected to the SD-Board, and remove the SD-Board.

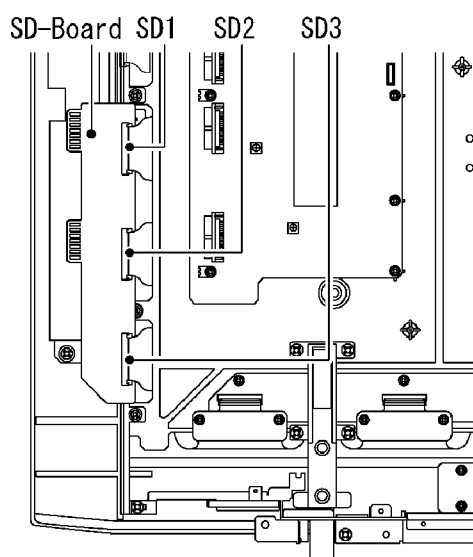


10. Remove the SS2-Board.

- a. Remove the coupler (SS47), and remove the flexible cable (SS45).
b. Remove the screws (×2), and remove the SS2-Board.

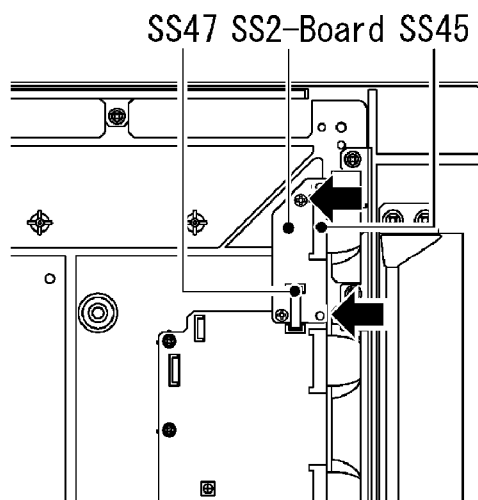


9. Remove the SC-Board.

- a. Remove the couplers (SC2, SC20, SC23), the screws (×9) and remove the SC-Board.

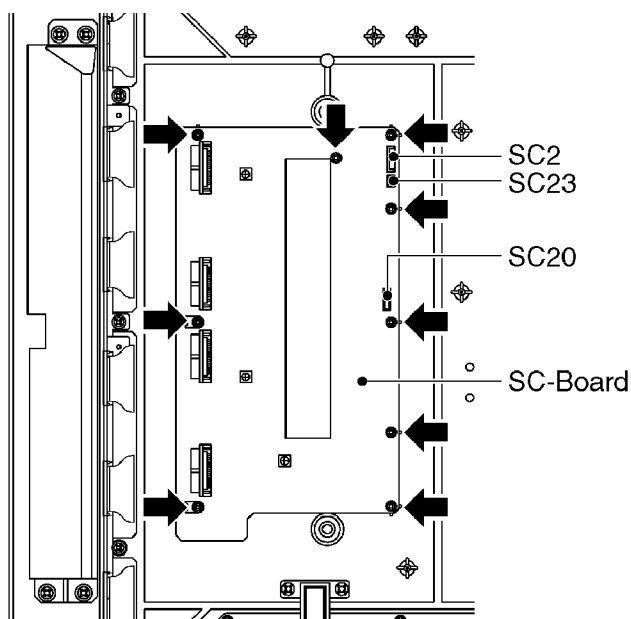


11. Remove the SS3-Board.

- a. Remove the coupler (SS40) and the flexible cable (SS46).
b. Remove the screws (×2), and remove the SS3-Board.

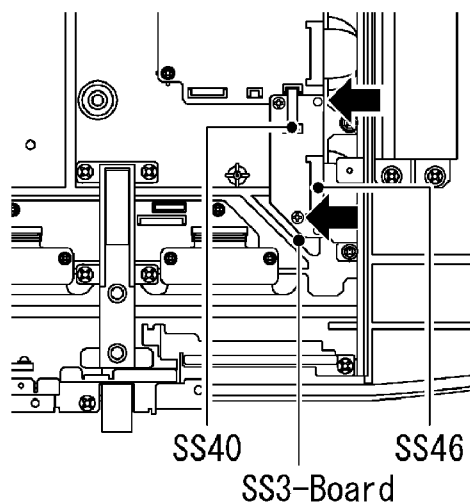


12. Remove the SS-Board.

- Remove the couplers (SS11, SS12, SS23, SS34), and remove the flexible cables (SS40, SS47) on the SS3-Board and SS2-Board.
- Remove the flexible cables (SS41, SS42, SS43, SS44).
- Remove the screws (x6), and remove the SS-Board.

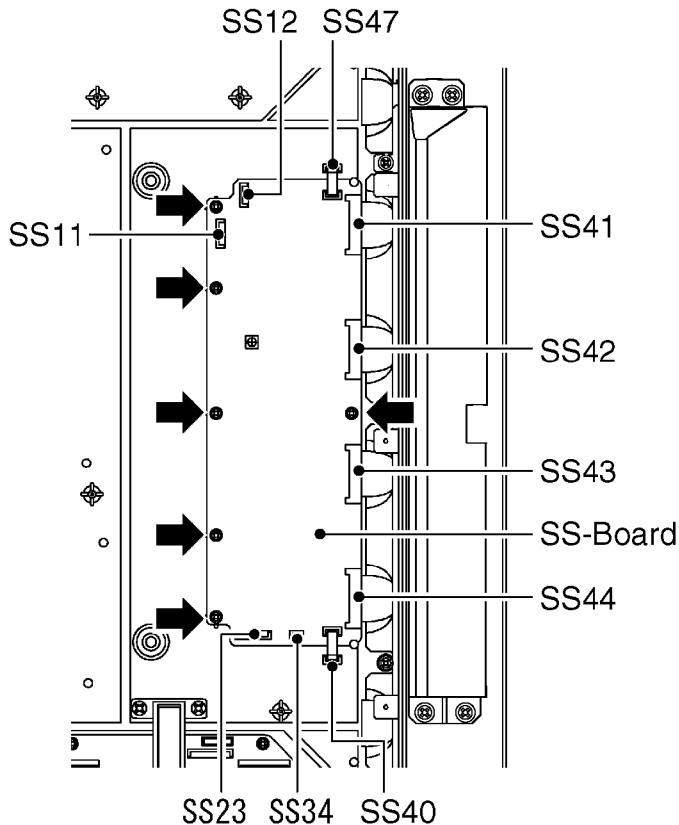


13. Remove the C1-Board.

- Remove the flexible cable holder fastening screws (x6) and remove the flexible cables (CB1, CB2, CB3).

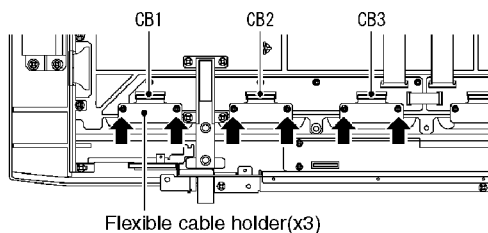


- Remove the flexible cables (C11, C12) release the speaker cables from the clampers (x2) on the C1-Board.
- Remove the screws (x4), and remove the C1-Board.

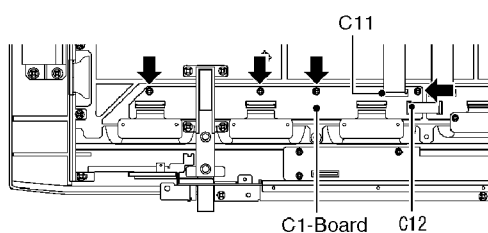


14. Remove the C2-Board.

- Remove the flexible cable holder fastening screws (x8), and remove the flexible cables (CB4, CB5, CB6, CB7).

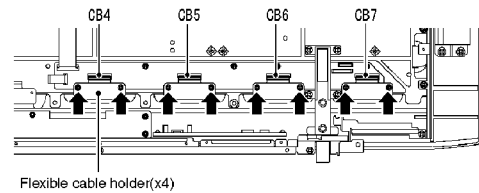


- Remove the couplers (C23, C24), a flexible cable (C21) and release the speaker cables from the clammer on the C2-Board.
- Remove the screws (x4), and remove the C2-Board.

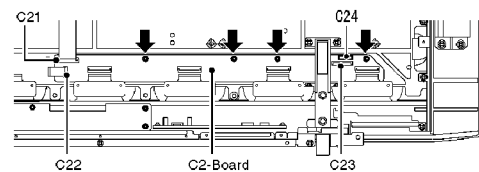


15. Remove the JG-Board and G-Board.


- Remove the screws (x7) fixing the woofer speakers, the interconnecting couplers (x4, to woofer and tweeter) and remove the woofer speakers (right and left).
- Disconnect a coupler (DG10), a flexible cable (DG7) and the couplers of interconnecting connector (from DG18 to G18 and H9 to G5).
- Remove the screws (x5) and remove the JG-Board and G-Board with the Bracket.
- Remove the screws (x7) and remove the JG-Board with Bracket.
- Remove the screws (x2) and remove the Shield case of JG-Board.

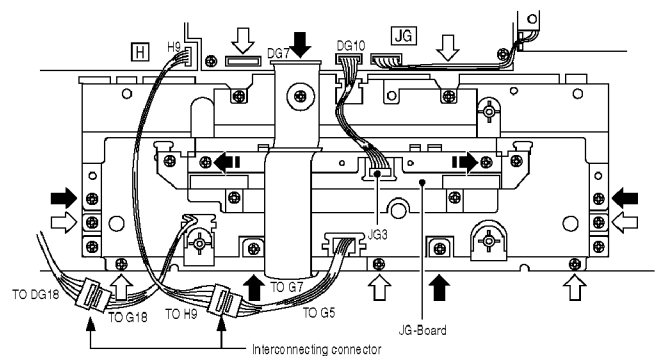

- Remove the screws (x5) and remove the JG-Board.

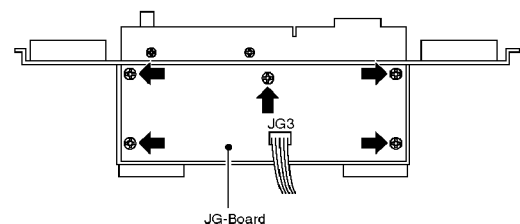


g. Remove the screws (×2) and remove the G-Board.

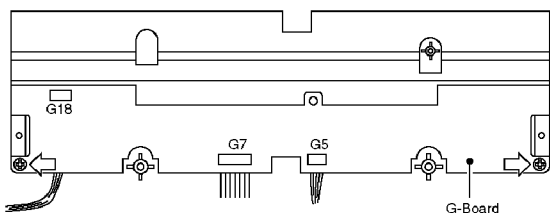


16. Remove the Front frame (glass).

a. Remove the front frame and the plasma panel fastening screws (×10 ➡), and remove the front frame and the stand bracket fastening screws (×6 ➡).

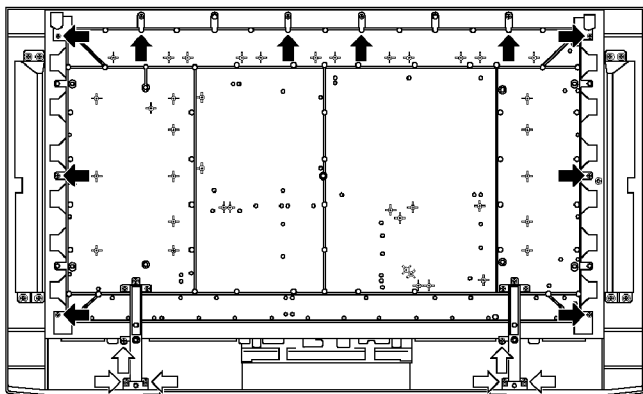

b. Release all cables from the clasper on the bracket of the front frame.

c. For leaving the the plasma panel from the front frame, pull the bottom of the front frame forward, lift, and remove.

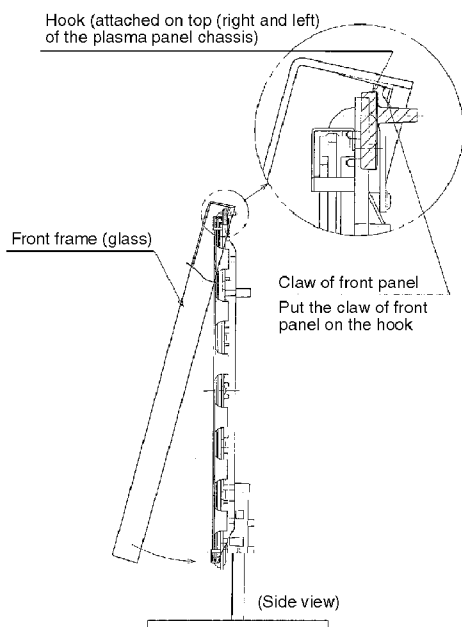


17. Remove stand brackets.

a. Remove the plasma panel section from the servicing stand and lay on a surface such as a table (covered), with the plasma panel surface facing downward.

Spread a soft cloth or similar on the table for protection, so the panel surface is not scratched.

b. Remove the stand bracket (left, right) fastening screws (×4 each) and remove the stand brackets (left, right).

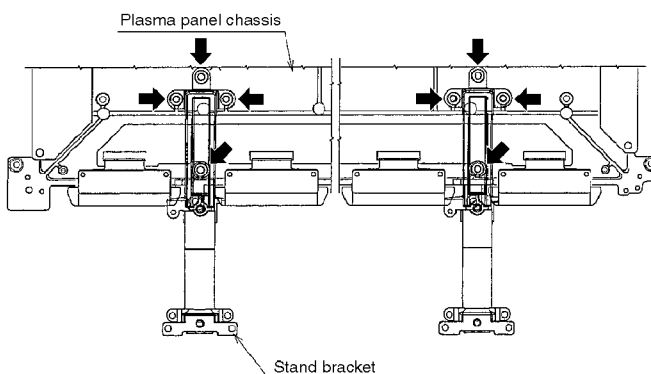

18. Replace the plasma panel (finished).

a. Place the new plasma panel (finished) on the flat surface of the table (covered by a soft cloth), with the plasma panel surface facing downward.

b. Fit the stand brackets (left, right) to the new plasma panel.


c. Place the plasma panel section on the servicing stand.

d. Attach the front frame and the each P.C.Board and so on, to the new plasma panel.

*** When fitting the front frame, be careful not to allow any debris, dust or handling residues to remain between the front glass and plasma panel.**


7 Location of Lead Wiring

7.1. Lead of Wiring (1)

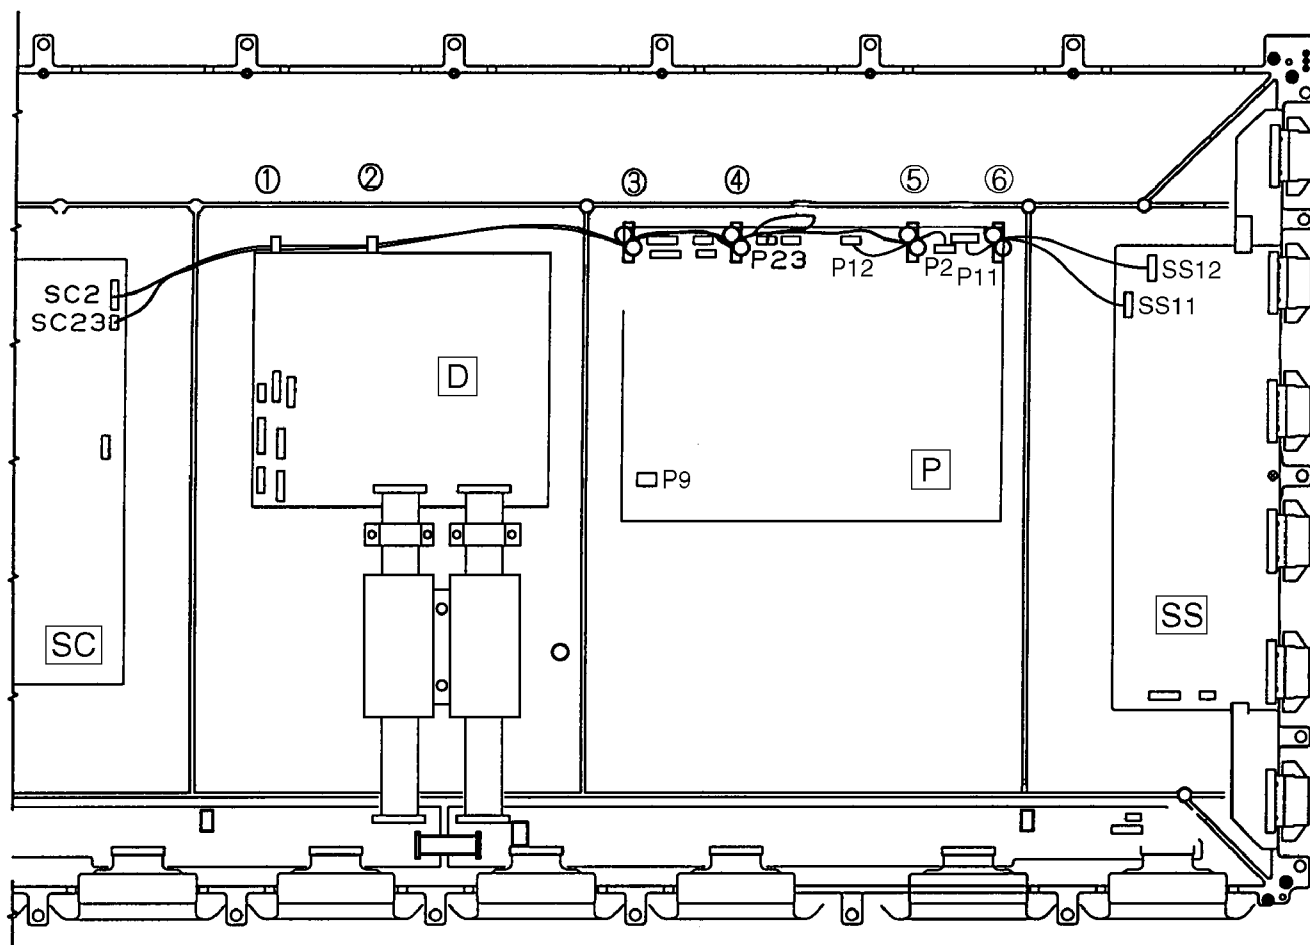


CON:NO.	—	CON:NO.	①	②	③	④	⑤	⑥
SC2	—	P2	○	○	○	○	○	
SC23	—	P23	○	○	○	○		
P12	—	SS12					○	○
P11	—	SS11					○	

7.2. Lead of wiring (2)

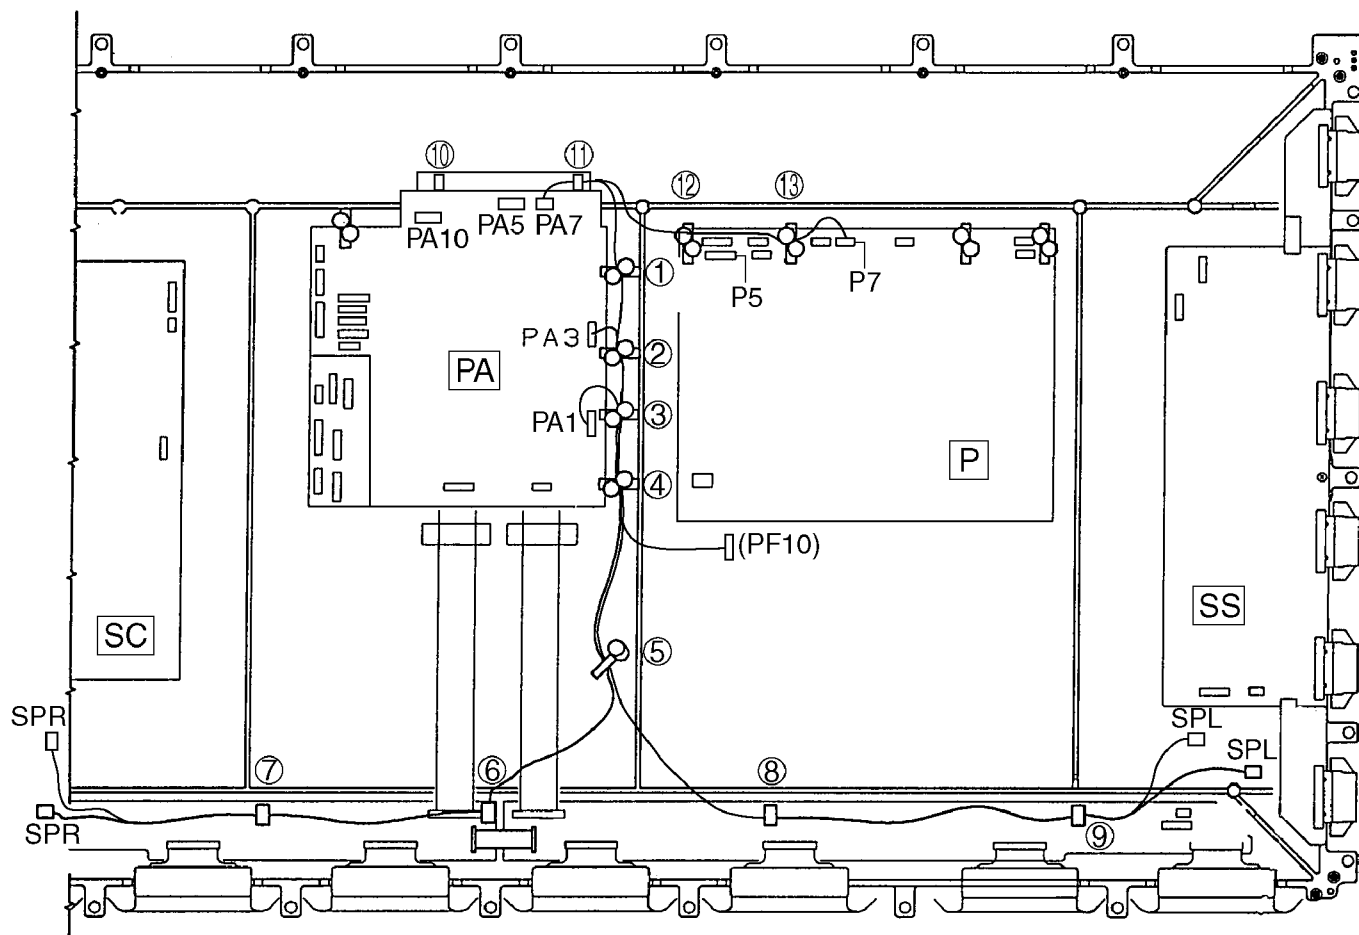

CON:NO.	CON:NO.	①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	⑪	⑫	⑬
PA3	SPR		○	○	○	○	○	○						
PA3	SPL		○	○	○	○			○	○				
PA1	SPR		○	○	○	○	○	○						
PA1	SPL		○	○	○	○			○	○				
PA7	P7											○	○	○
PA5	P5											○	○	
PA10	PF10	○	○	○	○						○	○		

7.3. Lead of wiring (3)

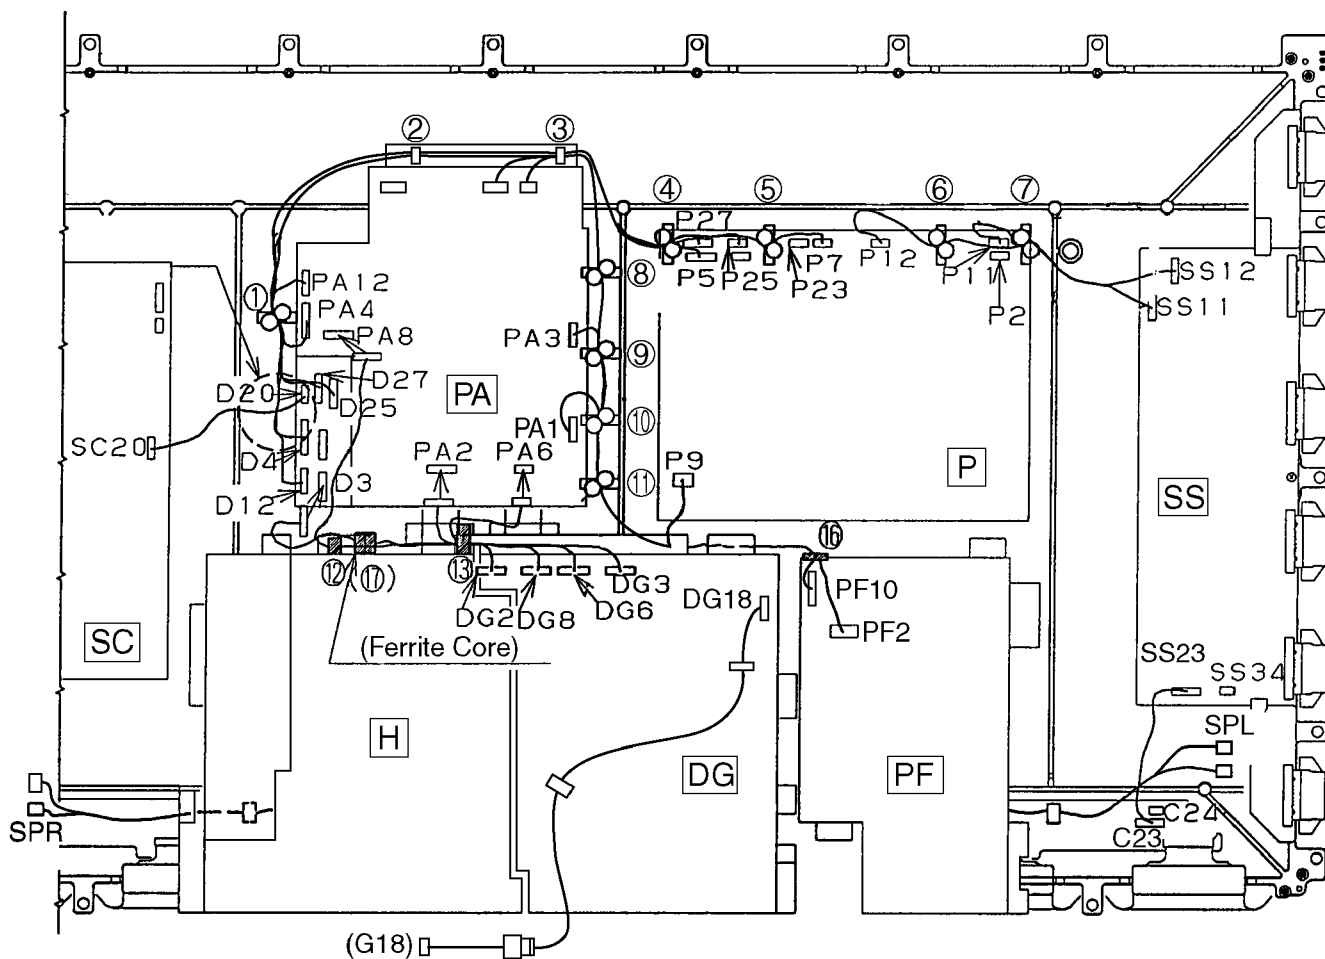


CON:NO.	CON:NO.	①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	⑪	⑫	⑬	⑭	⑮	⑯	⑰
SC20	D20																	
D12	PA12	○																
D4	PA4	●																
D25	P25	○	○	○	○													
D27	P27	○	○	○	○													
PA5	P5			○	○													
SS11	P11							○										
SS12	P12						○	○										
PA7	P7			○	○	○												
PF2	P9																○	
PA8	DG8												○	○				
SS23	C23																	
DG2	PA2													○				
DG6	PA6													○				
DG3	D3													○				○
PA10	PF10		○	○					○	○	○	○					○	
SC2	P2				○	○	○											
SC23	P23				○	○												

● Wind up second time

Refer to item 7.1.


Refer to item 7.1.

7.4. Lead of wiring (4)

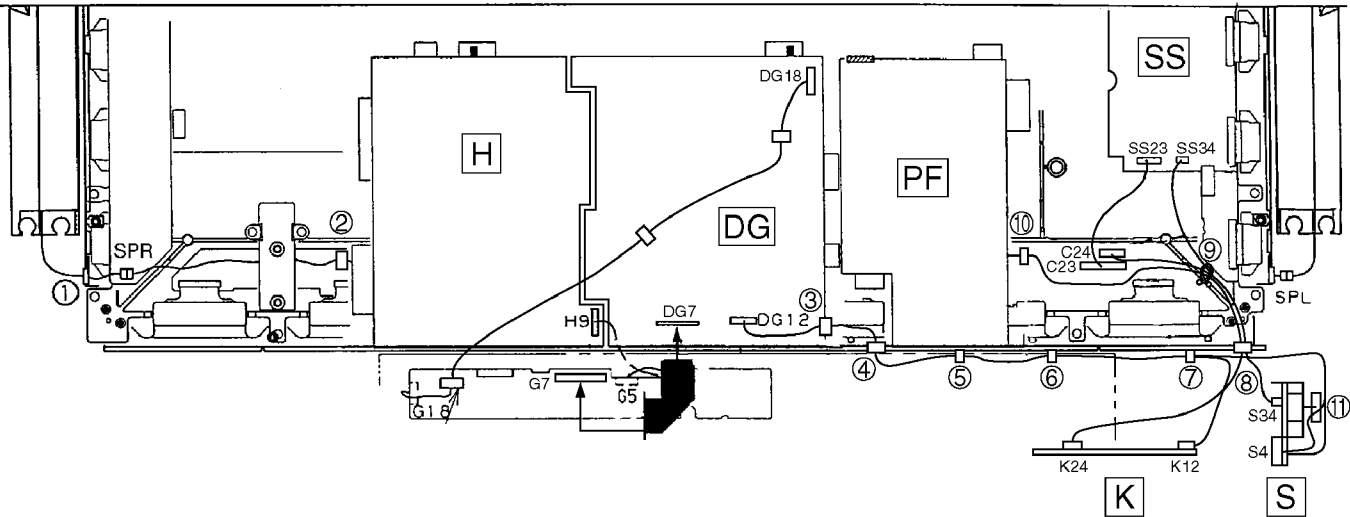

CON:NO.	CON:NO.	①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	⑪	⑫
H9	G5												
DG12	K12			○	○	○	○						
K24	C24								○	○			
SS23	C23												
PA1,PA3	SPR	○	○										
PA1,PA3	SPL								○	○	○		
DG12	S4			○	○	○	○					○	
SS34	S34								○	○			


7.5. Lead of wiring (5)

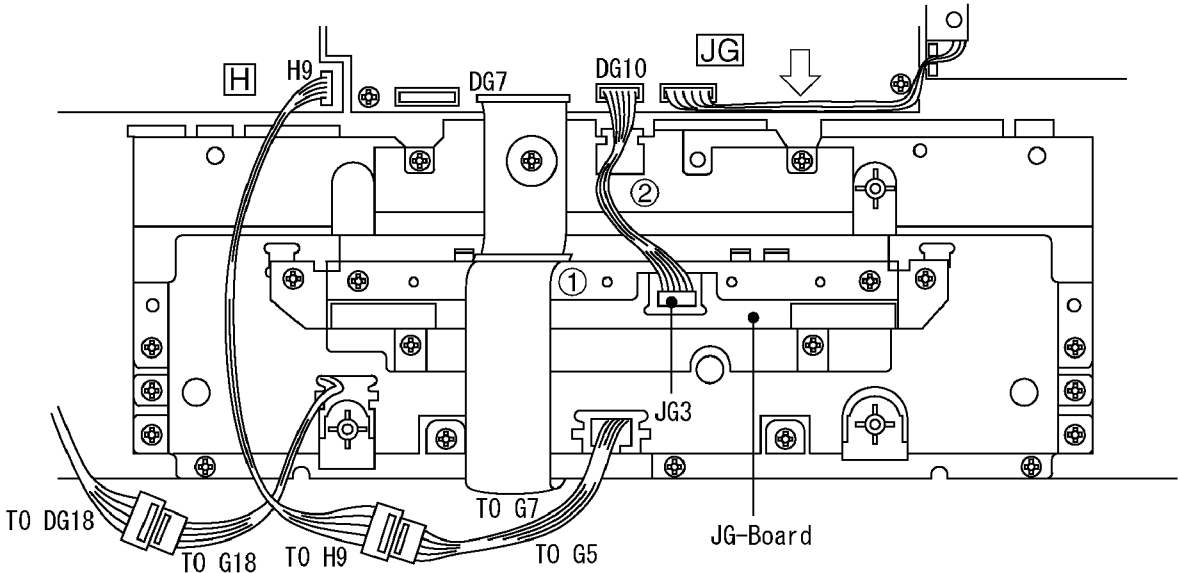

CON:NO. - CON:NO.	①	②
DG7 - G7	○	
JG3 - DG10		○
G18 - DG18		
G5 - H9		

8 Self Check

1. Self-Check is used to automatically check the bus lines and hexadecimal code of the TV set.
2. To get into the Self -Check mode press the Down (—/√) button on the customer controls at the front of the set, at the same time pressing the Status button on the remote control, and the screen will show :

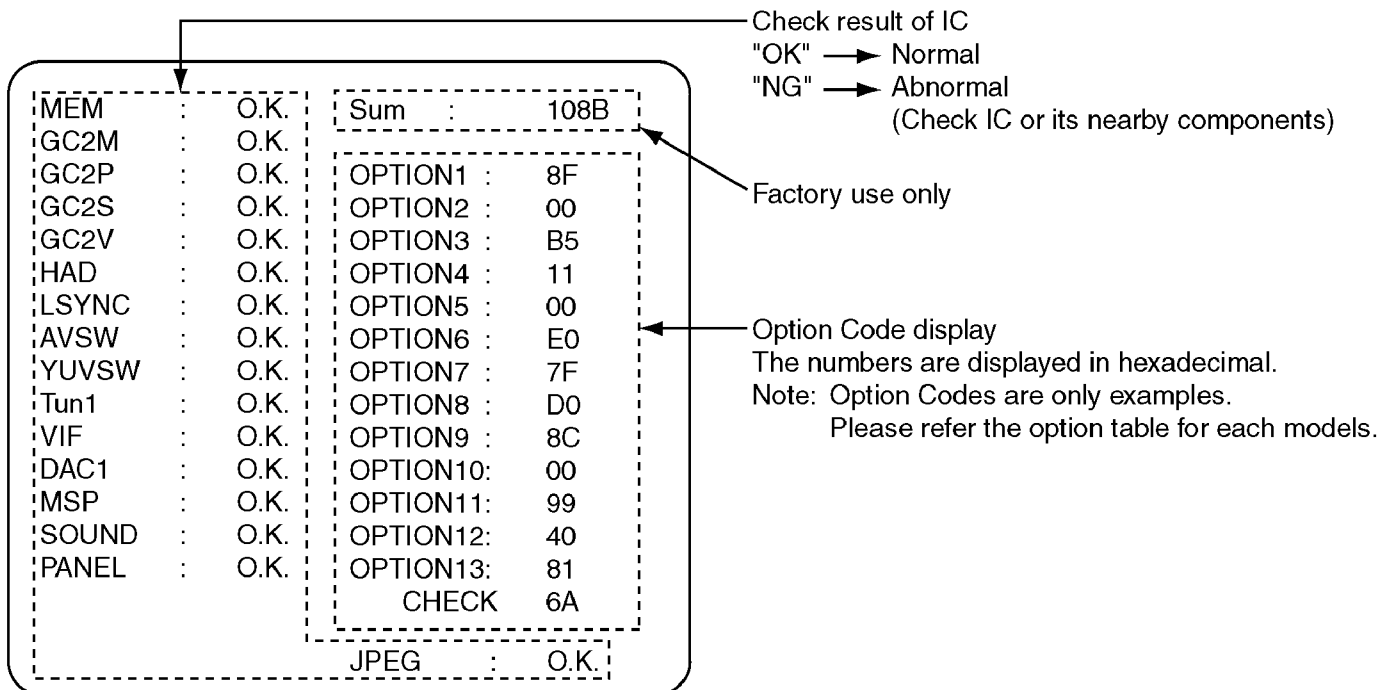

If the CCU ports have been checked and found to be incorrect or not located then "---" will appear in place of "O.K.".

Display	Ref.No	Description	P.C.B.
MEM	IC1008	EEPROM	DG-BOARD
GC2M	IC1301	GROBAL CORE MAIN	DG-BOARD
GC2P	IC1304	GROBAL CORE SUB	DG-BOARD
GC2S	IC1302	GROBAL CORE 3D Comb	DG-BOARD
GC2V	IC1350	GROBAL CORE V Scalar	DG-BOARD
HAD	IC1851	HD-AD CONVERTER	DG-BOARD
LSYNC	IC2652	SYNC PROCESSOR	H-BOARD
AVSW	IC3200	AV switch	H-BOARD
YUVSW	IC1270	YUV switch	DG-BOARD
Tun1	TNR001	TUNER 1	TU-BOARD
VIF	---	---	---
DAC1	IC3003	Ext. DAC	DG-BOARD
MSP	IC2002	Multi Sound Processor	H-BOARD
SOUND	IC2401	AUDIO AMP	PA-BOARD
PANEL	---	PANEL	---
JPEG	IC60	JPEG I/F	PG-BOARD

8.1. Power LED Blinking timing chart

1. Subject

Information of LED Flashing timing chart.

2. Contents

When an abnormality has occurred on the unit, the protection circuit operates and reset to the stand by mode. At this time, the defective block can be identified by the number of blinks of the Power LED on the front panel of the unit.

Blinking times	Blinking timing	Contents & Check point
2		SCAN Driver1
3		3.3V SOS
4		5V SOS
5		Power SOS
7		SCAN Driver2
9		SUS Driver
12		PA board Base Voltage (15, 12, 9, 5, 2.5V)


8.2. No Power

First check point


There are following 3 states of No Power indication by power LED.

1. No lit
2. Green is lit then turns red blinking a few seconds later.
3. Only red is lit.


1. No lit

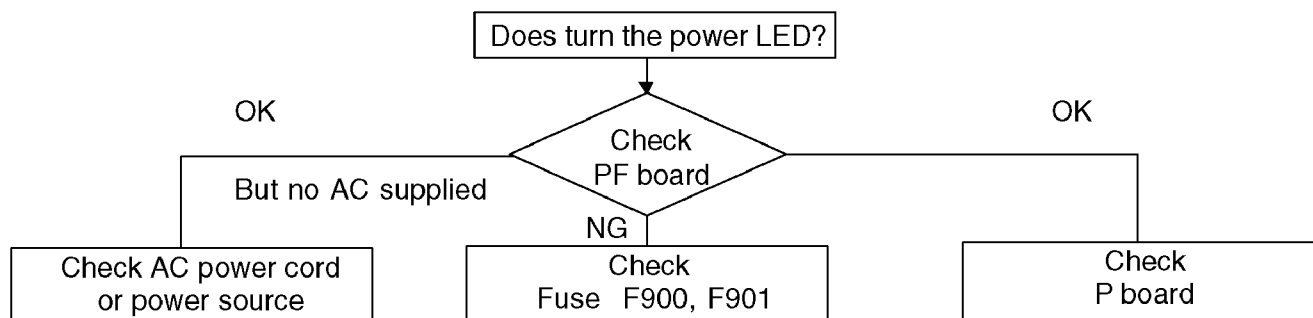

Drive circuits LED indicator

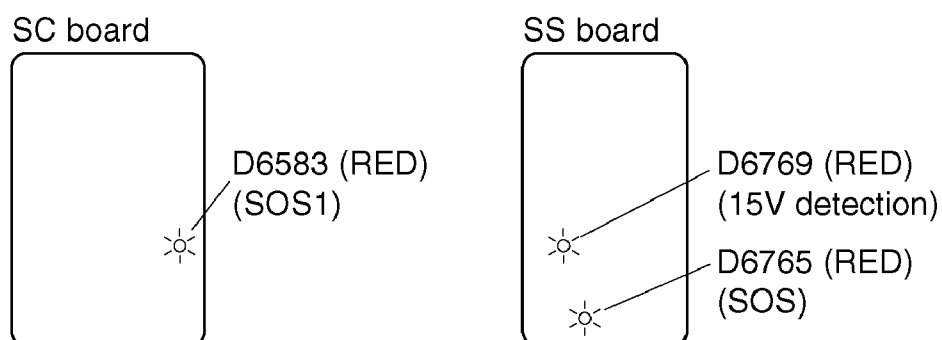


8.3. No Picture

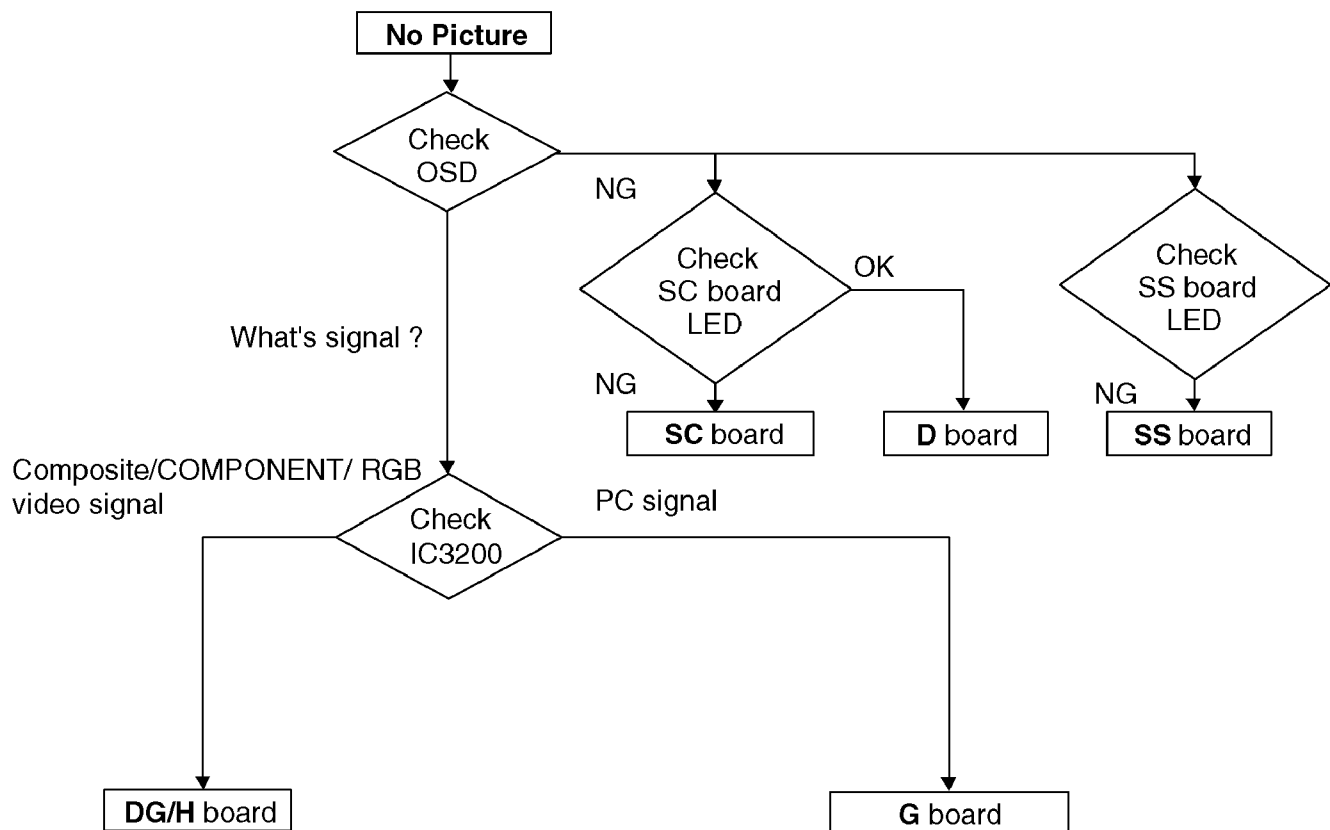

8.4. Local screen failure

Plasma display may have local area failure on the screen. Fig - 1 is the possible defect P.C.Board for each local area.

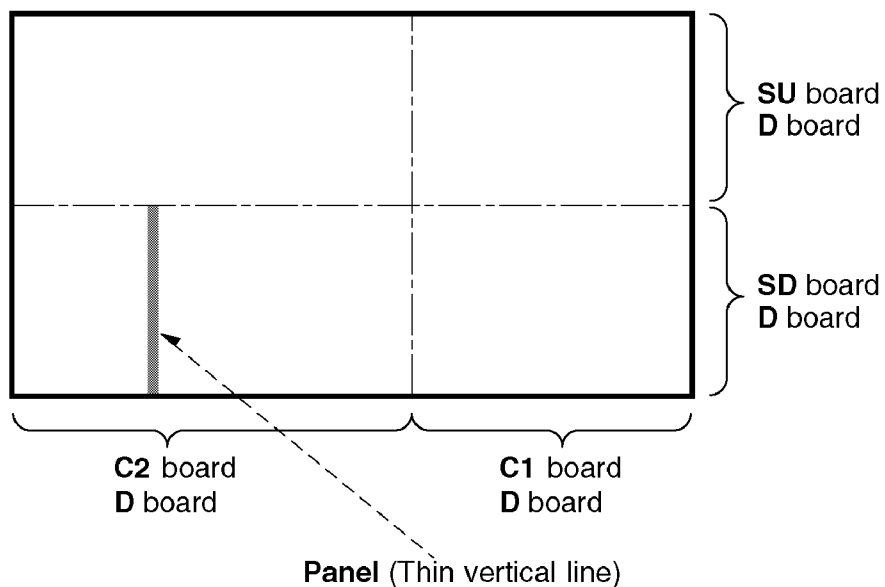

<Local screen failure chart>

Fig - 1

9 Service Mode Function

MPU controls the functions switching for each IICs through IIC bus in this chassis. The following setting and adjustment can be adjusted by remote control in Service Mode.

9.1. How to enter SERVICE 1

1. In sound menu, set BASS to MAXIMUM, and set TREBLE to MINIMUM.
2. Simultaneously press **INDEX** button on remote control and **DOWN** button [] on the TV set.


9.2. How to enter SERVICE 2

1. Set the channel to CH99.
2. Select the JPEG Viewer.
3. Press HOLD button on remote control.


Note:

To exit to Service mode, press N or Power button on remote control.

SERVICE 1

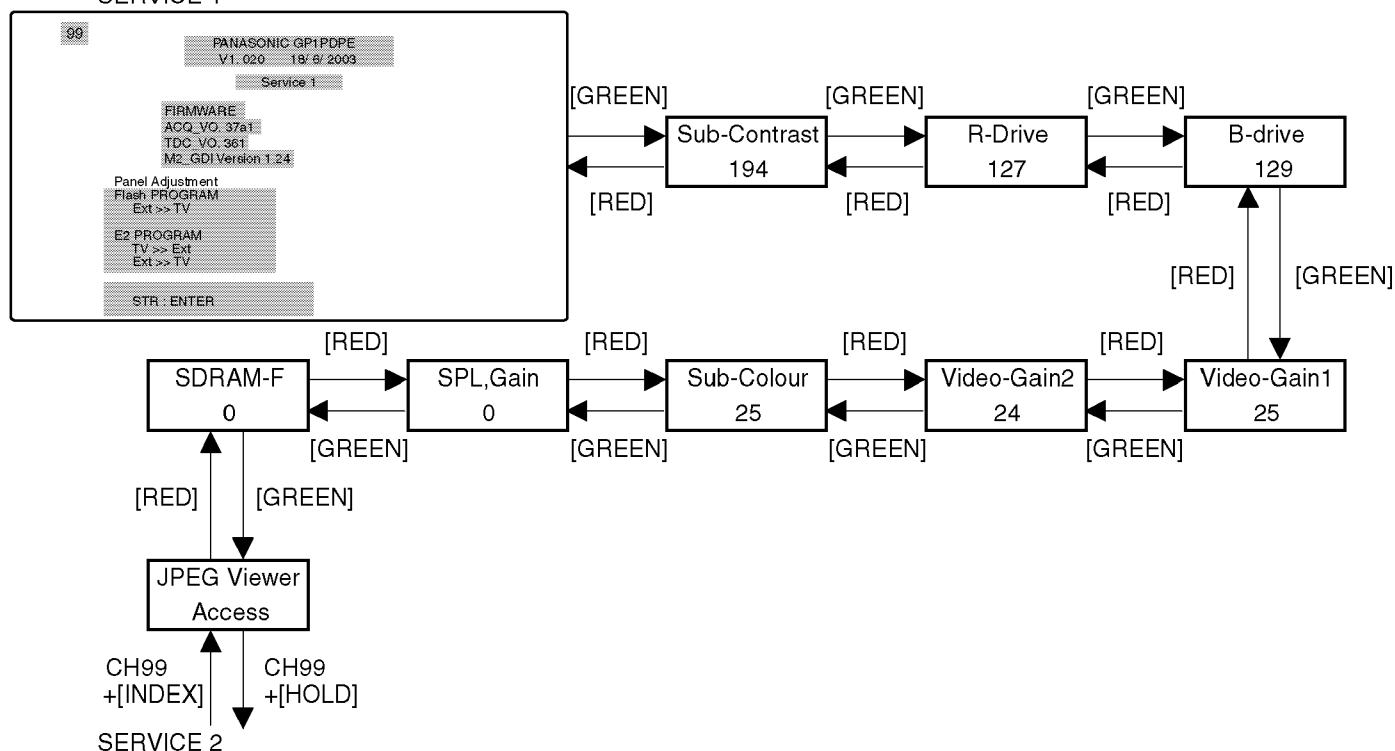

SERVICE 2

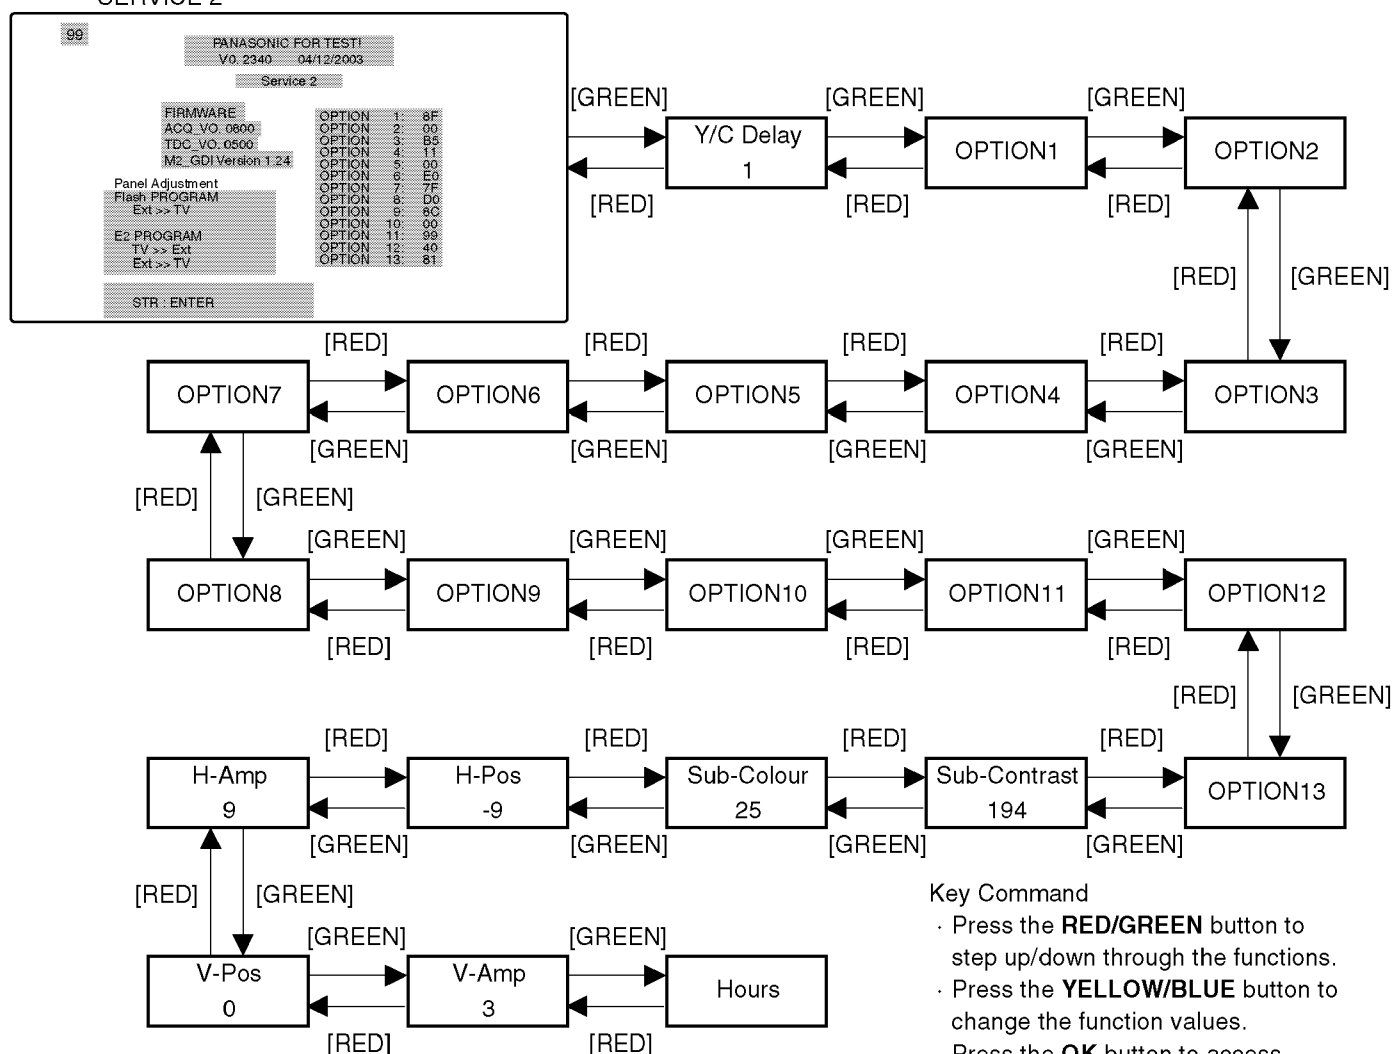

Key Command

- Press the **RED/GREEN** button to step up/down through the functions.
- Press the **YELLOW/BLUE** button to change the function values.
- Press the **OK** button to access the CAT mode.

9.3. Option Description

option1		8F	
b0	1	Colour system	Auto(1)
b1	1		SECAM(1)
b2	1		NTSC(1)
b3	1		M.NTSC(1)
b4	0	3:2 pulldown	enable (1)
b5	0	YUV for MW	enable (1)
b6	0	free	
b7	1	3D-COMB in the menu	Setup menu (0), Picture menu (1)
option2		00	
b0	0	(CH Plan)	ASIA/M.E/HK/UK/CHINA (1)
b1	0		NZ/INDNES (1)
b2	0		AUSTRALIA (1)
b3	0		E. EUROPE (1)
b4	0		SPECIAL (1)
b5	0		AMERICA (1)
b6	0		CATV (1)
b7	0		JAPAN (1)
option3		B5	
b0	1	sub picture	without sub-picture (0), with sub-picture (1)
b1	0	2tuner	2 tuner (1), 1 tuner (0)
b2	1	VGA	enable (1)
b3	0	AV5	enable (1)
b4	1	Wide (16:9)	16:9 (1), 4:3 (0) (change multi window/aspect operation
b5	1	JPEG	enable (1)
b6	0	SIF	I only(0), BG only(1)
b7	1		I/BG/DK/L(2), BG/DK(3)
option4		11	
b0	1	A2 enable	enable(1)
b1	0		not use
b2	0		not use
b3	0		not use
b4	1	NICAM enable	enable(1)
b5	0		not use
b6	0		not use
b7	0		not use
option5		00	
b0	0	(A2 select 6.5MHz)	5,742MHz (0), 6,742MHz
b1	0	(NICAM priority)	ASIA/M.E. (1)
b2	0		HK/UK (1)
b3	0		CHINA (1)
b4	0		NZ/INDN (1)
b5	0		AUSTRA (1)
b6	0		E. EURO (1)
b7	0		SPECIAL (1)
option6		E0	
b0	0	Ext HV input	without HV input (0) / with HV input (1)
b1	0	SASO enable	SASO enable (1)
b2	0	Noise mute	Noise mute enable (0)
b3	0	Monitor out AV1 mute	Monitor out AV1 mute (1)
b4	0	Tuner no refresh	Refresh tuner (0), no refresh (1)
b5	1	Tuner	MACO tuner (1), Others (0)
b6	1	HYPER	UHF only (0), UHF/VHF (1)
b7	1	IF I2C	I2C controlled Tuner IF module (1)
option7		7F	
b0	1	Power up EC-Mode	Power on EC enable (1)
b1	1	CH Blanking	Blanking enable (1)
b2	1	AV Blanking	Blanking enable (1)
b3	1	Auto WIDE	always enable (1)
b4	1	Volume correction	TV Volume correction enable (1)
b5	1	AVLink	Q-Link on/off selectable in menu (1)
b6	1	MPX/NICAM display	Display NICAM (0), Display MPX (1)
b7	0	Owner ID	not use

option8	D0		
	b0	0	Teletext CH Refresh not use
	b1	0	Geomagnetic Sensor Geomagnetic sensor enable (1)
	b2	0	Geomagnetic Polarity Geomagnetic polarity +(0), -(1)
	b3	0	RF Attenuation Enable (1)
	b4	1	Fine tuning Enable (1)
	b5	0	Search speed Slow (1) Fast (0)
	b6	1	TEXT Enable (1)
	b7	1	TEXT TOP TOP enable (1)
option9	8C		
	b0	0	Dolby Dolby enable (1)
	b1	0	3D Subwoofer Subwoofer enable (1) Dolby model should be 0.
	b2	1	Dolby Virtual Dolby Virtual enable (1)
	b3	1	Amp with Amp (0) / without Amp (1)
	b4	0	Sound Ext. DA without Sound Ext. DA (0) / with Sound Ext. DA (1)
	b5	0	Shipping Sound menu MUSIC (0) / CINEMA (1)
	b6	0	Volume curve Volume curve1(0), curve2(1)
	b7	1	LIP SYNC LIP SYNC enable (1)
option10	00		
	b0	0	OSD language not used
	b1	0	ACI all country ACI enable (1), only Netherland (0)
	b2	0	ACI auto MP ACI auto multi package enable (1)
	b3	0	ACI offset ACI offset for VCR prog, enable (1)
	b4	0	Blue Back not used
	b5	0	Aspect Auto Reserved
	b6	0	S1/S1 Detection Reserved
	b7	0	Protect 5V detect Protection input enable (1)
option11	99		
	b0	1	Acuity Demo enable (1)
	b1	0	Picture Shift enable (1)
	b2	0	Shop mode enable (1)
	b3	1	User aspect Just enable (1)
	b4	1	User aspect 14:9 enable (1)
	b5	0	NICAM C4 bit enable (1)
	b6	0	ID-1 enable (1)
	b7	0	1080i enable (1)
option12	40	Area Option	
	b0	0	Asia Asia (1), Europe (0)
	b1	0	Australia not used
	b2	0	Ireland/India Ireland (1)
	b3	0	UK UK (1)
	b4	0	MELCOA not used
	b5	0	28 inch 28 inch (1) when only large size = 0, Wide = 1, PTV = 0
	b6	1	Large size 52 (1) / 42 (0) for PTV, 36 (1) / 32 (0) for Wide, 34 (1) / 29 (0) for 4:3
	b7	0	free
option13	81	Temporal	
	b0	1	
	b1	0	UK Tuner IF (38.9MHz (0), 39.5MHz (1)) set to 1
	b2	0	New ALBD set to 0
	b3	0	
	b4	0	
	b5	0	TEXT mode initialize enable (1), disable when TV (0)
	b6	0	
	b7	1	Black-level correction enable : GC2S+ IAJ0_YOS control (1)

10 CAT (Computer Aided Test) mode

CAT mode menu

CAT Panel sys8.2		
IIC Mode	←.....	
CD Mode	←.....	
SD Mode	←.....	
MS Mode	←.....	
ID Mode	←.....	

Mode	Function	Access button
IIC	Service Alignment	OK
CD(Complete Diagnostics)	Software version information EEPROM edit	Mute more than 5 seconds
SD(Status Display)	MTBF parameter	OK
MS Mode	Not use	----
ID	Not use	----


How to access the CAT mode.

1. Enter the service mode.
2. Press the OK button on the remote control.

10.1. IIC mode

Select the IIC mode by **Up/Down (Channel) button** on the remote control at the front page of CAT mode then press the **OK button** on the remote control.

OSD

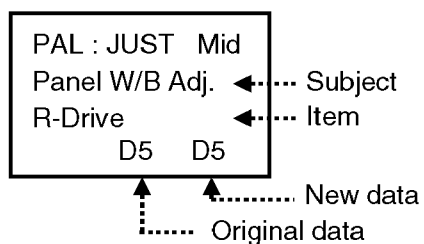

How to use the IIC mode.

1. Select the alignment **Subject** by Cursor UP/DOWN **buttons** on the remote control.
2. Select the alignment **Item** by **Cursor L/R buttons** on the remote control.
3. Adjust **optimum setting** by **Volume Up/Down buttons** on the remote control.
4. The **data is memorized** when press the **N button** on the remote control or change the alignment Subject (or Item).

Subject and item are mentioned on IIC mode structure.

(Refer to item 10.4.)

To exit the IIC mode, press the **MENU button** on the remote control.

10.2. CD mode

Select the CD mode by **Up/Down (Channel) button** on the remote control at the front page of CAT mode then press the **Mute** (M) **button** on the remote control morethan 5 sec.

OSD

MiCom Software version.	0.11	OK	Factory use
Memory data version D	0.11 1	8 63	
Memory data version H	21.05	78 3F	
Memory data change Address	0	0	
Data	0	0	New data
			Original data

Micom software version (IC1007), this version can be upgrade by replace of new version IC

Memory data change

Address	0	0	Change by Up/Down (Cursor) buttons on the remote control.
			Change by Left/Right (Cursor) buttons on the remote control.
Data	0	0	Change by VOL Up/Down buttons on the remote control.

The data is memorized when switch off the main power.

To exit the CD mode, press the **MENU button** on the remote control.

10.3. SD mode


Select the SD mode by **Up/Down (Channel) button** on the remote control at the front page of CAT mode then press the **OK button** on the remote control.

OSD

Input command check	23 25 27 -- -- -- 27 27 27 -- -- -- 28 25 25 37		History of remote control command. (Factory use)
Power Protect			
MTBF parameter	WT	72	Cumulative Time for power on condition. (unit :hour)
	PT	12	Counter of power on. (unit :time)
Remote Control mode	A B		

To exit the SD mode, press the **MENU button** on the remote control.

10.4. IIC mode structure (following items value is sample data.)

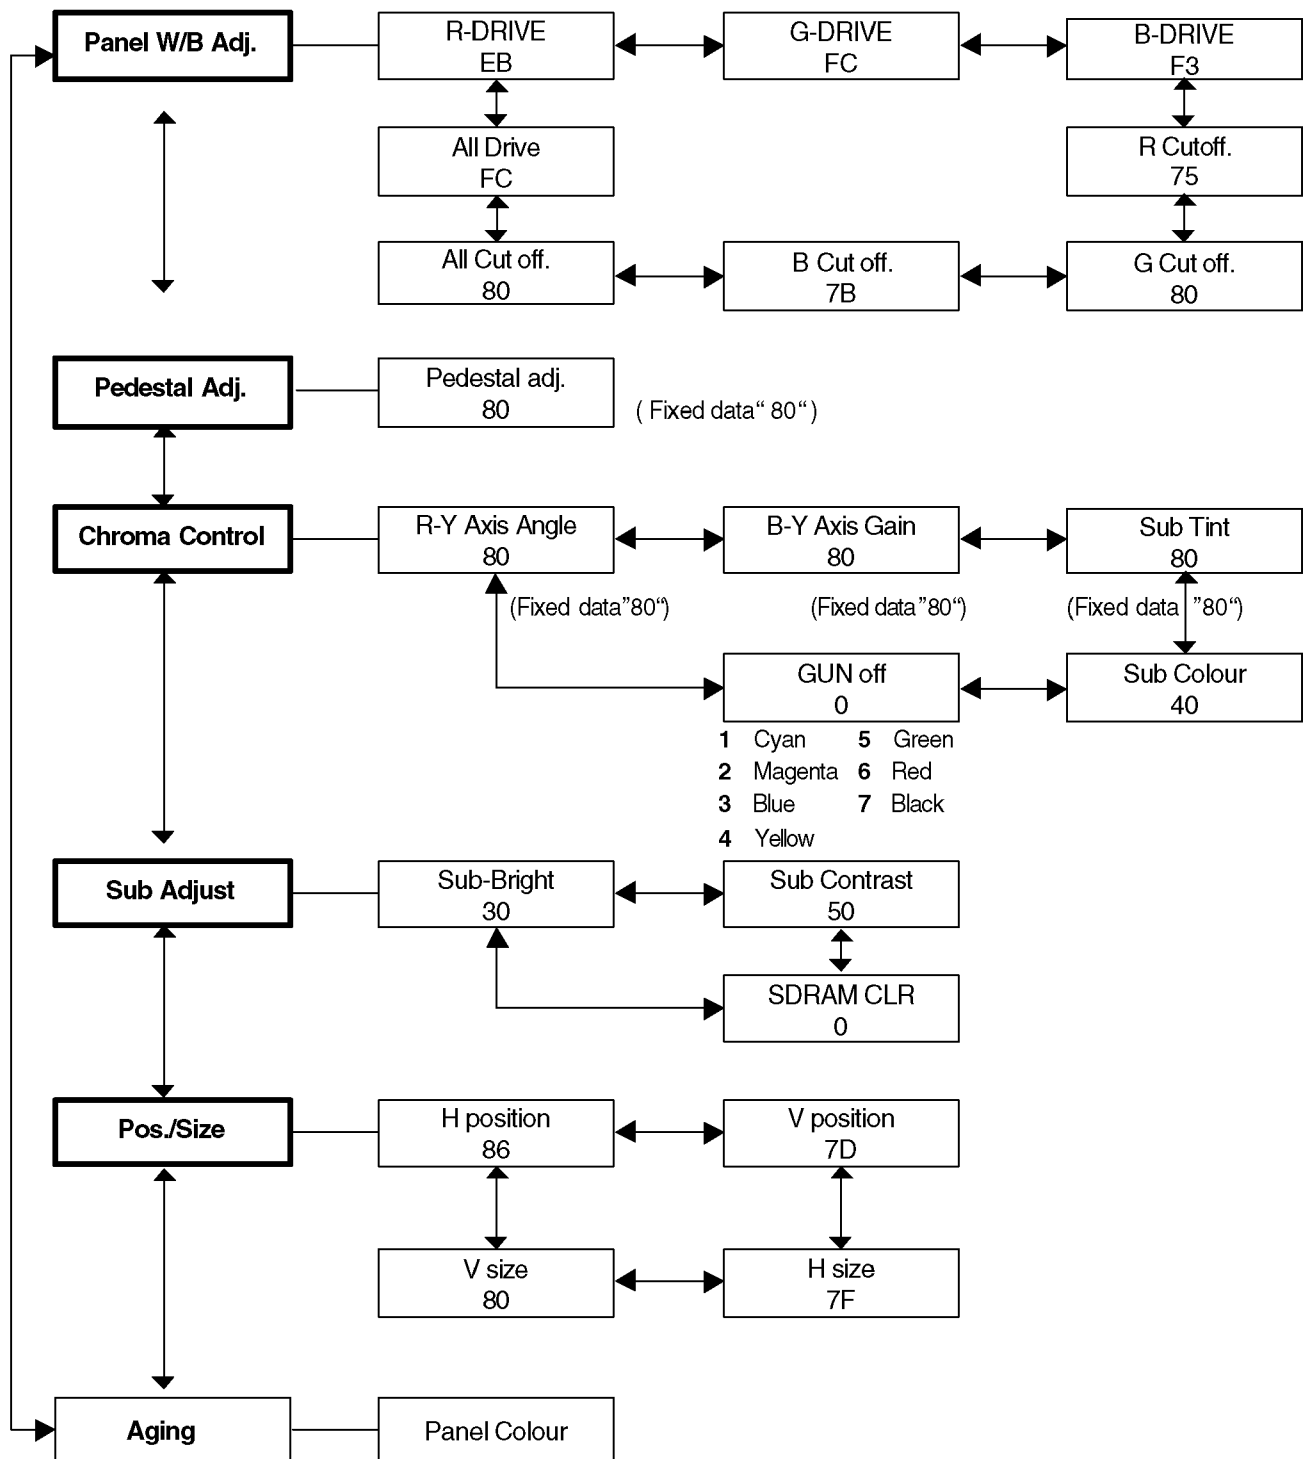

- | | | |
|---------|--------------|----------|
| 0 WHITE | 3 BLUE | 6 RAMP_R |
| 1 RED | 4 SCROLL BAR | 7 RAMP_G |
| 2 GREEN | 5 RAMP_W | 8 RAMP_B |

These are selected by OK button of Remote control and to exit, press the MENU button.

exit : MENU button

11 Adjustment Procedure

11.1. +B Set-up

11.1.1. Item / Preparation

1. Input a Gray scale signal.
2. Set the picture controls: -
Picture mode: Normal
Colour balance: Normal

11.1.2. Adjustments

Adjust and confirm indicated test point for the specified voltage.

Adjust

Name	Volume	Voltage	Test Point	Remarks
Vsus	R605	170V $\pm$ 1V	P11 pin 2	P-Board
Vda	R590	67V $\pm$ 0.5V	P12 pin 1	P-Board

Confirm

Name	Voltage	Test Point	Remarks
15V	15.4V $\pm$ 0.5V	P23 pin 1	P23-3 (GND)
15V	15.2V $\pm$ 0.5V	P7 pin 1	P7-3 (GND)
12V	11.8V $\pm$ 0.5V	P25 pin 1	P25-3 (GND)
Audio+12V	12.5V $\pm$ 0.8V	P5 pin 7	P5-9 (GND)
5V	5.1V $\pm$ 0.3V	P25 pin 5	P25-6 (GND)
STB 5V	5.0V $\pm$ 0.3V	P27 pin 4	P27-9 (GND)
PFC	380V $\pm$ 15V	C468(+)	C468 (-) (GND)

11.2. Driver Set-up

11.2.1. Item / Preparation

1. Input an APL 100 % white signal.
2. Set the picture controls: -
Picture mode: Normal
Colour balance: Cool
Aspect: 16:9


11.2.2. Adjustments

Adjust driver section voltages referring the panel data on the panel data label.

Name	Test Point	Voltage	Volume	Remarks
Vsus	TPVSUS (SS)	170V $\pm$ 1V	R605 (P)	
Vbk	TPVBK (SC)	155V $\pm$ 5V	R6443 (SC)	
Ve	TPVE (SS)	158V $\pm$ 1V	R6774 (SS)	
Vset	TPVSET (SC)	218V $\pm$ 6V	---	
Vad	TPVAD (SC)	-90V $\pm$ 1V	R6477 (SC)	
Vscn	TPVSCN (SC)	Vad*+118V $\pm$ 2V	---	
Vda	TPVDA (SS)	67V $\pm$ 1V	R590 (P)	

*See the Panel label.

Panel Label information

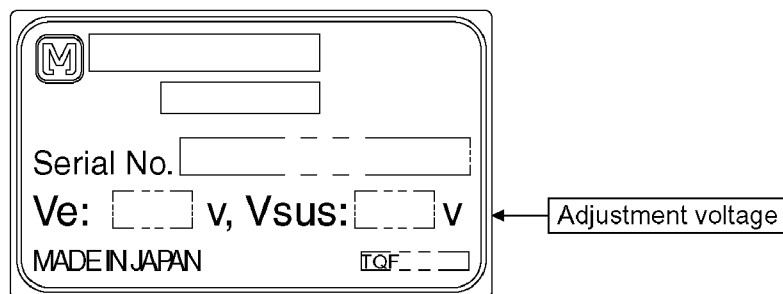


11.3. Initialization Pulse Adjust

1. Input a Cross hatch signal.
2. Set the picture controls: -
Picture mode: Normal
Colour balance: Cool



Adjust the indicated test point for the specified waveform falling period.

	Test point	Volume	Level
T1	TPSC1 (SC)	---	---
T2	TPSC1 (SC)	R6557 (SC)	$170 \pm 20\mu\text{Sec}$

TPSC1 SCAN OUTPUT

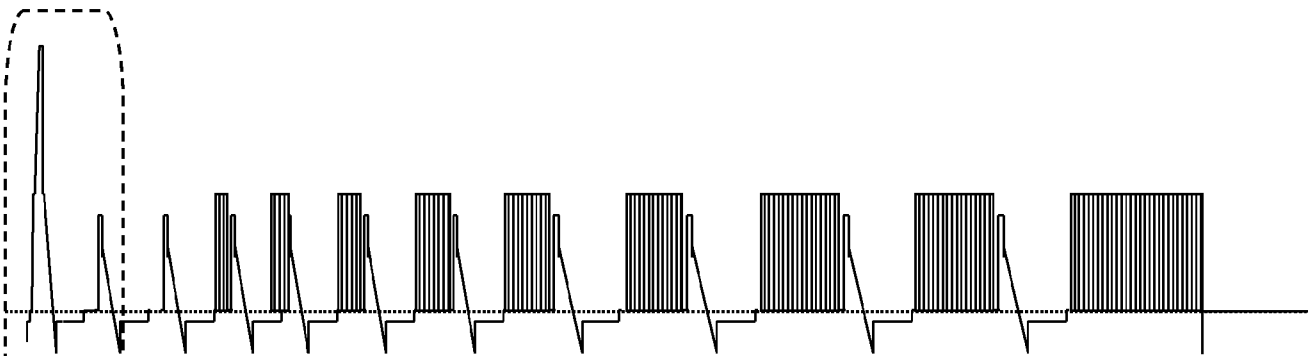

TPSS1 SUSTAIN OUTPUT

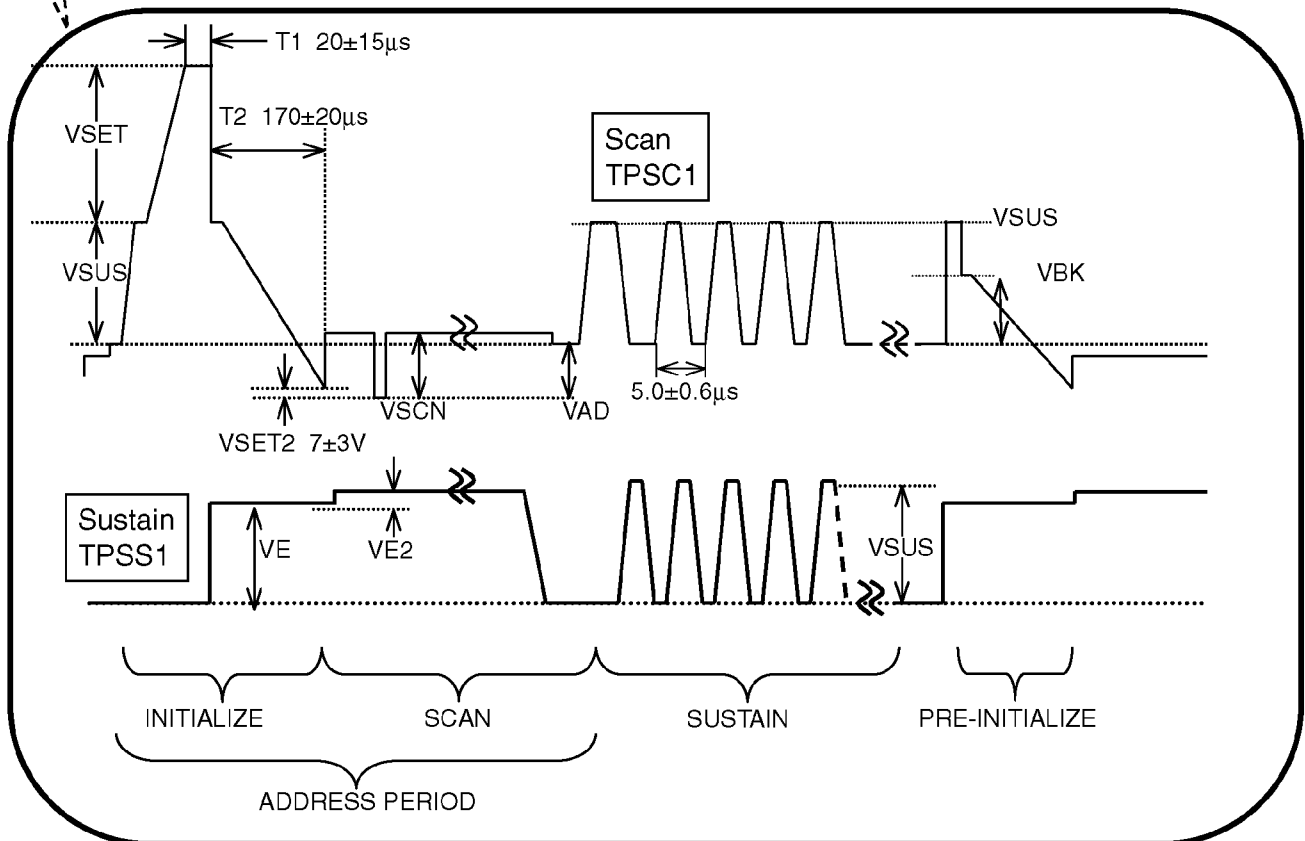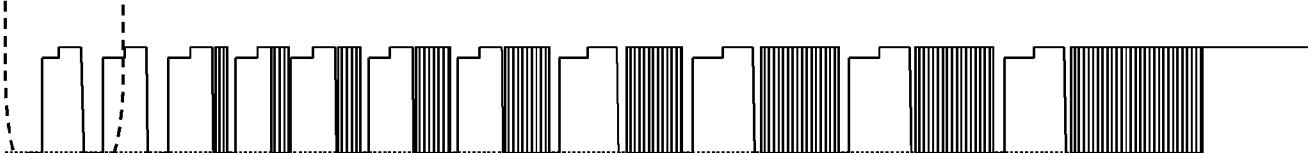

11.4. P.C.B. (Printed Circuit Board) exchange

11.4.1. Caution


1. To remove P.C.B. , wait 1 minute after power was off for discharge from electrolysis capacitors.

11.4.2. Quick adjustment after P.C.B. exchange


P.C.B.	Name	Test Point	Voltage	Volume	Remarks
P Board	Vsus	TPVSUS (SS)	$170V \pm 1V$	R605 (P)	
	Vda	TPVDA (SS)	$67V \pm 1V$	R590 (P)	
SC Board	Vbk	TPVBK (SC)	$155V \pm 5V$	R6443 (SC)	
	Vad	TPVAD (SC)	$-90V \pm 1V$	R6477 (SC)	
	Vset	TPVSET (SC)	$218V \pm 6V$	- - -	
	Vscn	TPVSCN (SC)	$Vad + 118 \pm 2V$	- - -	
SS Board	Ve	TPVE (SS)	$158V \pm 1V$	R6774 (SS)	
D, DG Board	White balance, Pedestal and Sub brightness for NTSC, PAL, HD, PC and 625i signals				

*See the Panel label.

11.5. Adjustment Volume Location


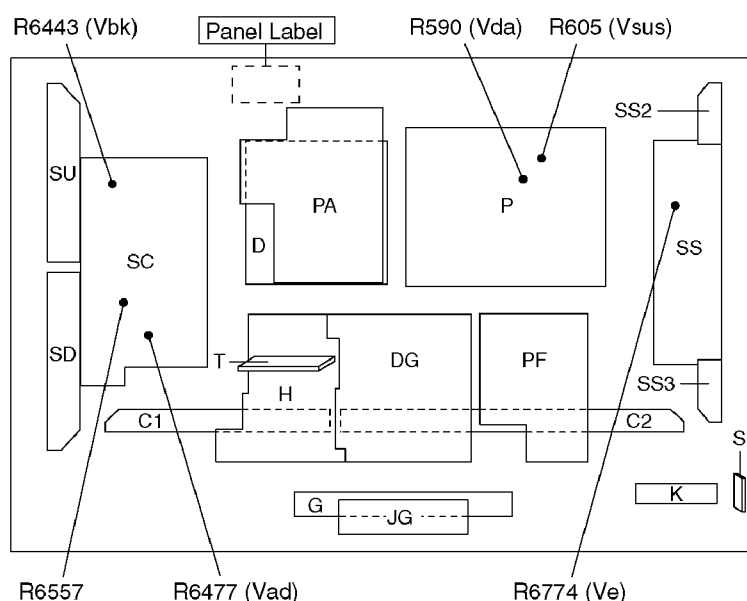


11.6. Test Point Location

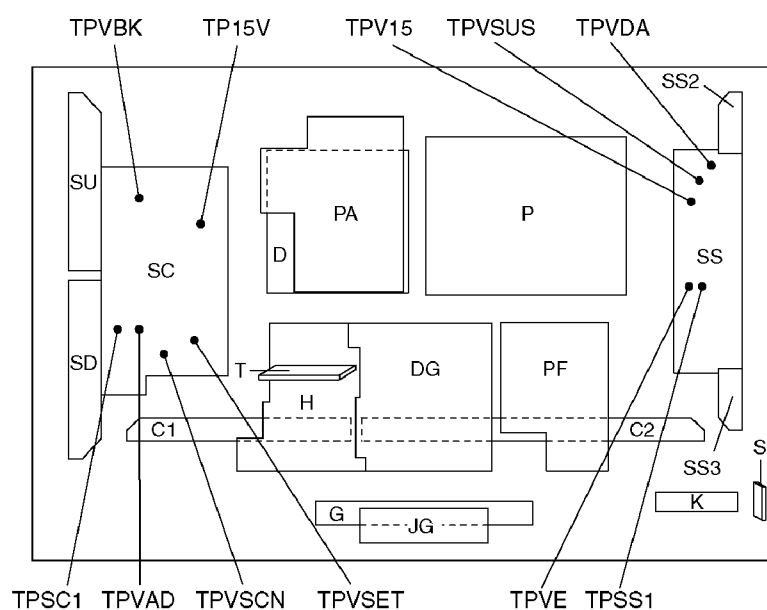


12 Alignment

12.1. Pedestal setting

	INPUT	Equipment	Setting	Alignment menu	Procedure
1	RF Sub Bright Pattern 		Picture: Normal Colour balance: Cool Aspect: 16:9	PANEL W/B R cut off G cut off B cut off Chroma Control: Gun off RGB Sub Adjust: G Sub Bright 1 Chroma Control: Gun off RGB Sub Adjust: B Sub Bright 1 Chroma Control: Gun off RGB Sub Adjust: R Sub Bright 1	** Adjust at the dark room. 1) Set R,G and B cut off to "80". Set R, G and B drive to "F0". 2) Set Gun off to "5". (Only green pixels can emit.) 3) Adjust G Sub bright 1 to start some of green pixels emission at black 2% area and no emission at black 0% area. 4) Set Gun off to "3". (Only blue pixels can emit.) 5) Adjust B Sub bright 1 to start some of blue pixels emission at black 2% area and no emission at black 0% area. 6) Set Gun off to "6". (Only red pixels can emit.) 7) Adjust R Sub bright 1 to start some of red pixels emission at black 2% area and no emission at black 0% area.
2	HD Sub Bright Pattern 		Picture: Normal Colour balance: Cool Aspect: 16:9	PANEL W/B R,G,B cut off PANEL W/B R,G,B Drive	1) Change input to HD signal. 2) Repeat procedure 1) to 7) of Component input signal.


12.2. PAL panel white balance

	INPUT	Equipment	Setting	Alignment menu	Procedure
1	PAL White Balance Pattern 	Colour Analyzer	Picture: Normal Colour balance: Cool Aspect: 16:9	Sub Adjust Sub Bright PANEL W/B G cut off PANEL W/B B cut off R cut off Sub Adjust Sub Bright PANEL W/B G Drive PANEL W/B B Drive R Drive PANEL W/B R,G,B Drive R,G,B Drive PANEL W/B R,G,B cut off	1) Find the nearest area to brightness of 10 cd/m ² as Low light by colour sensor. 2) Adjust Sub bright to set Low light level to 10 cd/m ² exactly. 3) Set G cut off to " 80 ". 4) Adjust B and R cut off to set colour temperature as shown Fig.-01. 5) If Sub Bright is changed re-adjust it to set Low light to 10 cd/m ² . 6) Find 75% of white area by colour sensor.u 7) Set G Drive to " E0 ". 8) Adjust B and R Drive to set colour temperature as shown Fig.-01. 9) Repeat procedure 4) to 7) to set both Low light and high light. 10) Increase same steps of R, G and B Drive to set largest level of 3 colour drive to "FC". 11) Re-adjust Low light level again.
2			Picture: Normal Colour balance: Normal Aspect: 16:9	PANEL W/B R,G,B cut off PANEL W/B R,G,B Drive	1) Change white balance to "Normal". 2) Repeat procedure 3) to 11) of Cool mode.
3			Picture: Normal Colour balance: Warm Aspect: 16:9	PANEL W/B R,G,B cut off PANEL W/B R,G,B Drive	1) Change white balance to "Warm". 2) Repeat procedure 3) to 11) of Cool mode.
4			Picture: Normal Colour balance: Cool Aspect: 16:9	Picture Menu Sub Adjust Sub Bright	1) Change colour template to "Cool". 2) Re-set Sub bright to "30"


Colour Temp.	x	y
Cool(Hi)	0.276	0.276
Normal(Mid)	0.288	0.296
Warm(Low)	0.313	0.329

Fig. -01

12.3. PC panel white balance

	INPUT	Equipment	Setting	Alignment menu	Procedure												
1	PC White Balance Pattern 	Colour Analyzer	Picture: Normal Colour balance: Cool Aspect: 16:9	Sub Adjust Sub Bright PANEL W/B G cut off PANEL W/B B cut off R cut off Sub Adjust Sub Bright PANEL W/B G Drive PANEL W/B B Drive R Drive PANEL W/B R,G,B Drive R,G,B Drive PANEL W/B R,G,B cut off	1) Find the nearest area to brightness of 10 cd/m ₂ as Low light by colour sensor. 2) Adjust Sub bright to set Low light level to 10 cd/m ₂ exactly. 3) Set G cut off to " 80 ". 4) Adjust B and R cut off to set colour temperature as shown Fig.-02. 5) If Sub Bright is changed re-adjust it to set Low light to 10 cd/m ₂ . 6)Find 75% of white area by colour sensor. 7) Set G Drive to " E0 ". 8) Adjust B and R Drive to set colour temperature as shown Fig.-02. 9) Repeat item 4) to 7) to set both Low light and high light. 10) Increase same steps of R, G and B Drive to set largest level of 3 colour drive to "FC". 11) Re-adjust Low light level again. <table border="1" data-bbox="920 1075 1299 1196"><tr><td>Colour Temp.</td><td>x</td><td>y</td></tr><tr><td>Cool(Hi)</td><td>0.276</td><td>0.276</td></tr><tr><td>Normal(Mid)</td><td>0.288</td><td>0.296</td></tr><tr><td>Warm(Low)</td><td>0.313</td><td>0.329</td></tr></table> Fig. -02	Colour Temp.	x	y	Cool(Hi)	0.276	0.276	Normal(Mid)	0.288	0.296	Warm(Low)	0.313	0.329
Colour Temp.	x		y														
Cool(Hi)	0.276		0.276														
Normal(Mid)	0.288		0.296														
Warm(Low)	0.313	0.329															
2		Picture: Normal Colour balance: Normal Aspect: 16:9	PANEL W/B R,G,B cut off PANEL W/B R,G,B Drive	1) Change white balance to "Normal". 2) Repeat procedure 3) to 11) of Cool mode.													
3		Picture: Normal Colour balance: Warm Aspect: 16:9	PANEL W/B R,G,B cut off PANEL W/B R,G,B Drive	1) Change white balance to "Warm". 2) Repeat procedure 3) to 11) of Cool mode.													
4			Picture: Normal Colour balance: Cool Aspect: 16:9	Picture Menu Sub Adjust Sub Bright	1) Change colour templature to "Cool". 2)Re-set Sub bright to "30"												

12.4. Sub brightness setting

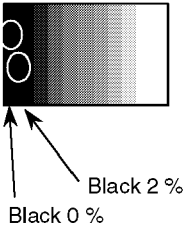1	PAL Sub Bright Pattern 		Picture: Normal Aspect: 16:9	PANEL W/B All cut off	** Adjust at the dark room. Finish white balance adjustment 1) Set white balance to Cool . 2) Adjust All cut off to start some pixels emission at black 2% area and no emission at black 0% area. 3) Write down all cut off data. 4) Set white balance to Normal . 5) Adjust All cut off to set same data of Cool mode. 6) Set white balance to warm . 7) Adjust All cut off to set same data of Cool mode.
	PC Sub Bright Pattern				8) Change to PC signal. 9) Copy PAL All cut off data to PC mode.

12.5. ABL Level

Instrument name	Connection	Remarks
1. HD Signal Generator (Color Bar Pattern) 2. Power meter (Connected to the inlet of Set)	COMPONENT INPUT	
Setting		
Perform aging for more than 30 minutes. Power-Supply voltage: 230V 50/60Hz (Distortion indicate 1%) Volume is MINIMUM; Screen size is MAXIMUM.		
Procedure		
1. Connect power meter to AC power. 2. Apply the colour bar pattern. 3. Select APL MULT among Panel APL/ABL in IIC mode. 4. Adjust APL MULT so that power consumption may Indicate following value. TH-37PA30E 239 ± 10W TH-42PA30E 307 ± 10W		Initialization : 1C Power is in inverse Proportion to data. (Reduce data when increase power.) Increase (↑) : 1C→1F Decrease (↓) : 1C→1A

13 Hotel mode

1. Purpose

Restrict a function for hotels.

2. Access command

- Enter to the Service 2 Mode.
- Press Status button on remote control and entry to the EEPROM EDITOR Mode.
- Set the data of EEPROM(ADDRESS 160) to C0.

Address	Data
100	FF FF FF FF FF FF FF FF
108	FF FF FF FF FF FF FF FF
110	FF FF FF FF FF FF FF FF
118	FF FF FF FF FF FF FF FF
120	FF FF FF FF FF FF FF FF
128	FF FF FF FF FF FF FF FF
130	FF FF FF FF FF FF FF FF
138	FF FF FF FF FF FF FF FF
140	FF FF FF FF FF FF FF FF
148	FF FF FF FF FF FF FF FF
150	FF FF FF FF FF FF FF FF
158	FF FF FF FF FF FF 00 10 00
160	80 00 80 64 80 00 00 FF
168	FF FF FF FF FF FF FF FF
170	FF 0F FF FF FF FF FF FF
178	FF FF FF FF FF FF FF FF

Push the Power switch(button) off/on the set(the remote control) to turn the set off/on.

It can be made Hotel mode.

3. Exit command

- First, set the data of EEPROM(ADDRESS 160) to 80.
- Next, Push the Power switch(button) off/on the set(the remote control) to turn the set off/on.
- Then, it is no longer hotel mode.


4. Access command to the Hotel mode setup menu

- <Prerequisite> : It is conditions that the data of EEPROM(ADDRESS 160) is C0.

In order to display the Hotel mode setup menu, please enter the following command (**within 2 second**) .

[TV]:down + [REMOTE]:TV/AV(3 times)

Then, the Hotel mode setup menu is displayed.

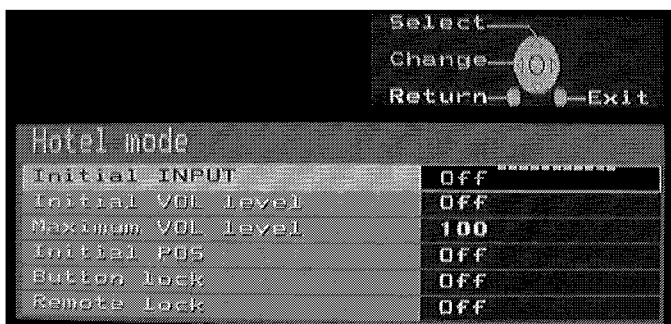

5. Explain the Hotel mode setup menu


CAUTION

This setup is not valid, unless data of EEPROM(ADDRESS 160) will be C0, even if each settings were done.



item	Function
Initial INPUT	Select input signal modes. Set this signal, each time power is switched on. <Selection> : Off/TV/AV1/AV2/AV2S/AV3/Av3S/AV4/Av4S/AV4 C/PC • Off: give priority to a last memory. However, Euro model is compulsorily set to TV. • AVnS/AVnC: only Euro model selectable • PC: selectable with VGA option
Initial VOL level	Adjust output Volume. Set this volume, each time power is switched on. If the value of InitVol is changed, volume will change. However, priority is given to a last memory when InitVol is Off. When "InitVol" is larger than "MaxVol", make "InitVol" and "MaxVol" the same. <Selection/Range> : Off/0 to 100 • Off: give priority to a last memory
Maximum level	VOI Adjust maximum volume. Set this max. volume, each time power is switched on. When "MaxVol" is smaller than "InitVol", make "MaxVol" and "InitVol" the same, if "InitVol" is not Off. <Range> : 0to 100
Initial POS	Select programme number. Set this programme number, each time power is switched on. <Selection> : Off/0 to 99 (Euro model) • Off: give priority to alast memory
Button lock	Select local key conditions. Set this condition, each time power is switched on. <Selection> : Off/SETUPMENU/All • Off: altogether valid • SETUP: restrict F-key selection (Tuning guide(menu) can not be selected.) • MENU: restrict F-key selection (only Volume/Mute can be selected.) • All: altogether invalid.
Remote lock	Select remote control key conditions. Set this condition, each time power is switched on. <Selection> : Off/SETUP/MENU • Off: altogether valid • SETUP: only Setup menu is invalid • MENU: Picture/Sound/Setup menu are invalid

14 Conductor Views

14.1. PF-Board

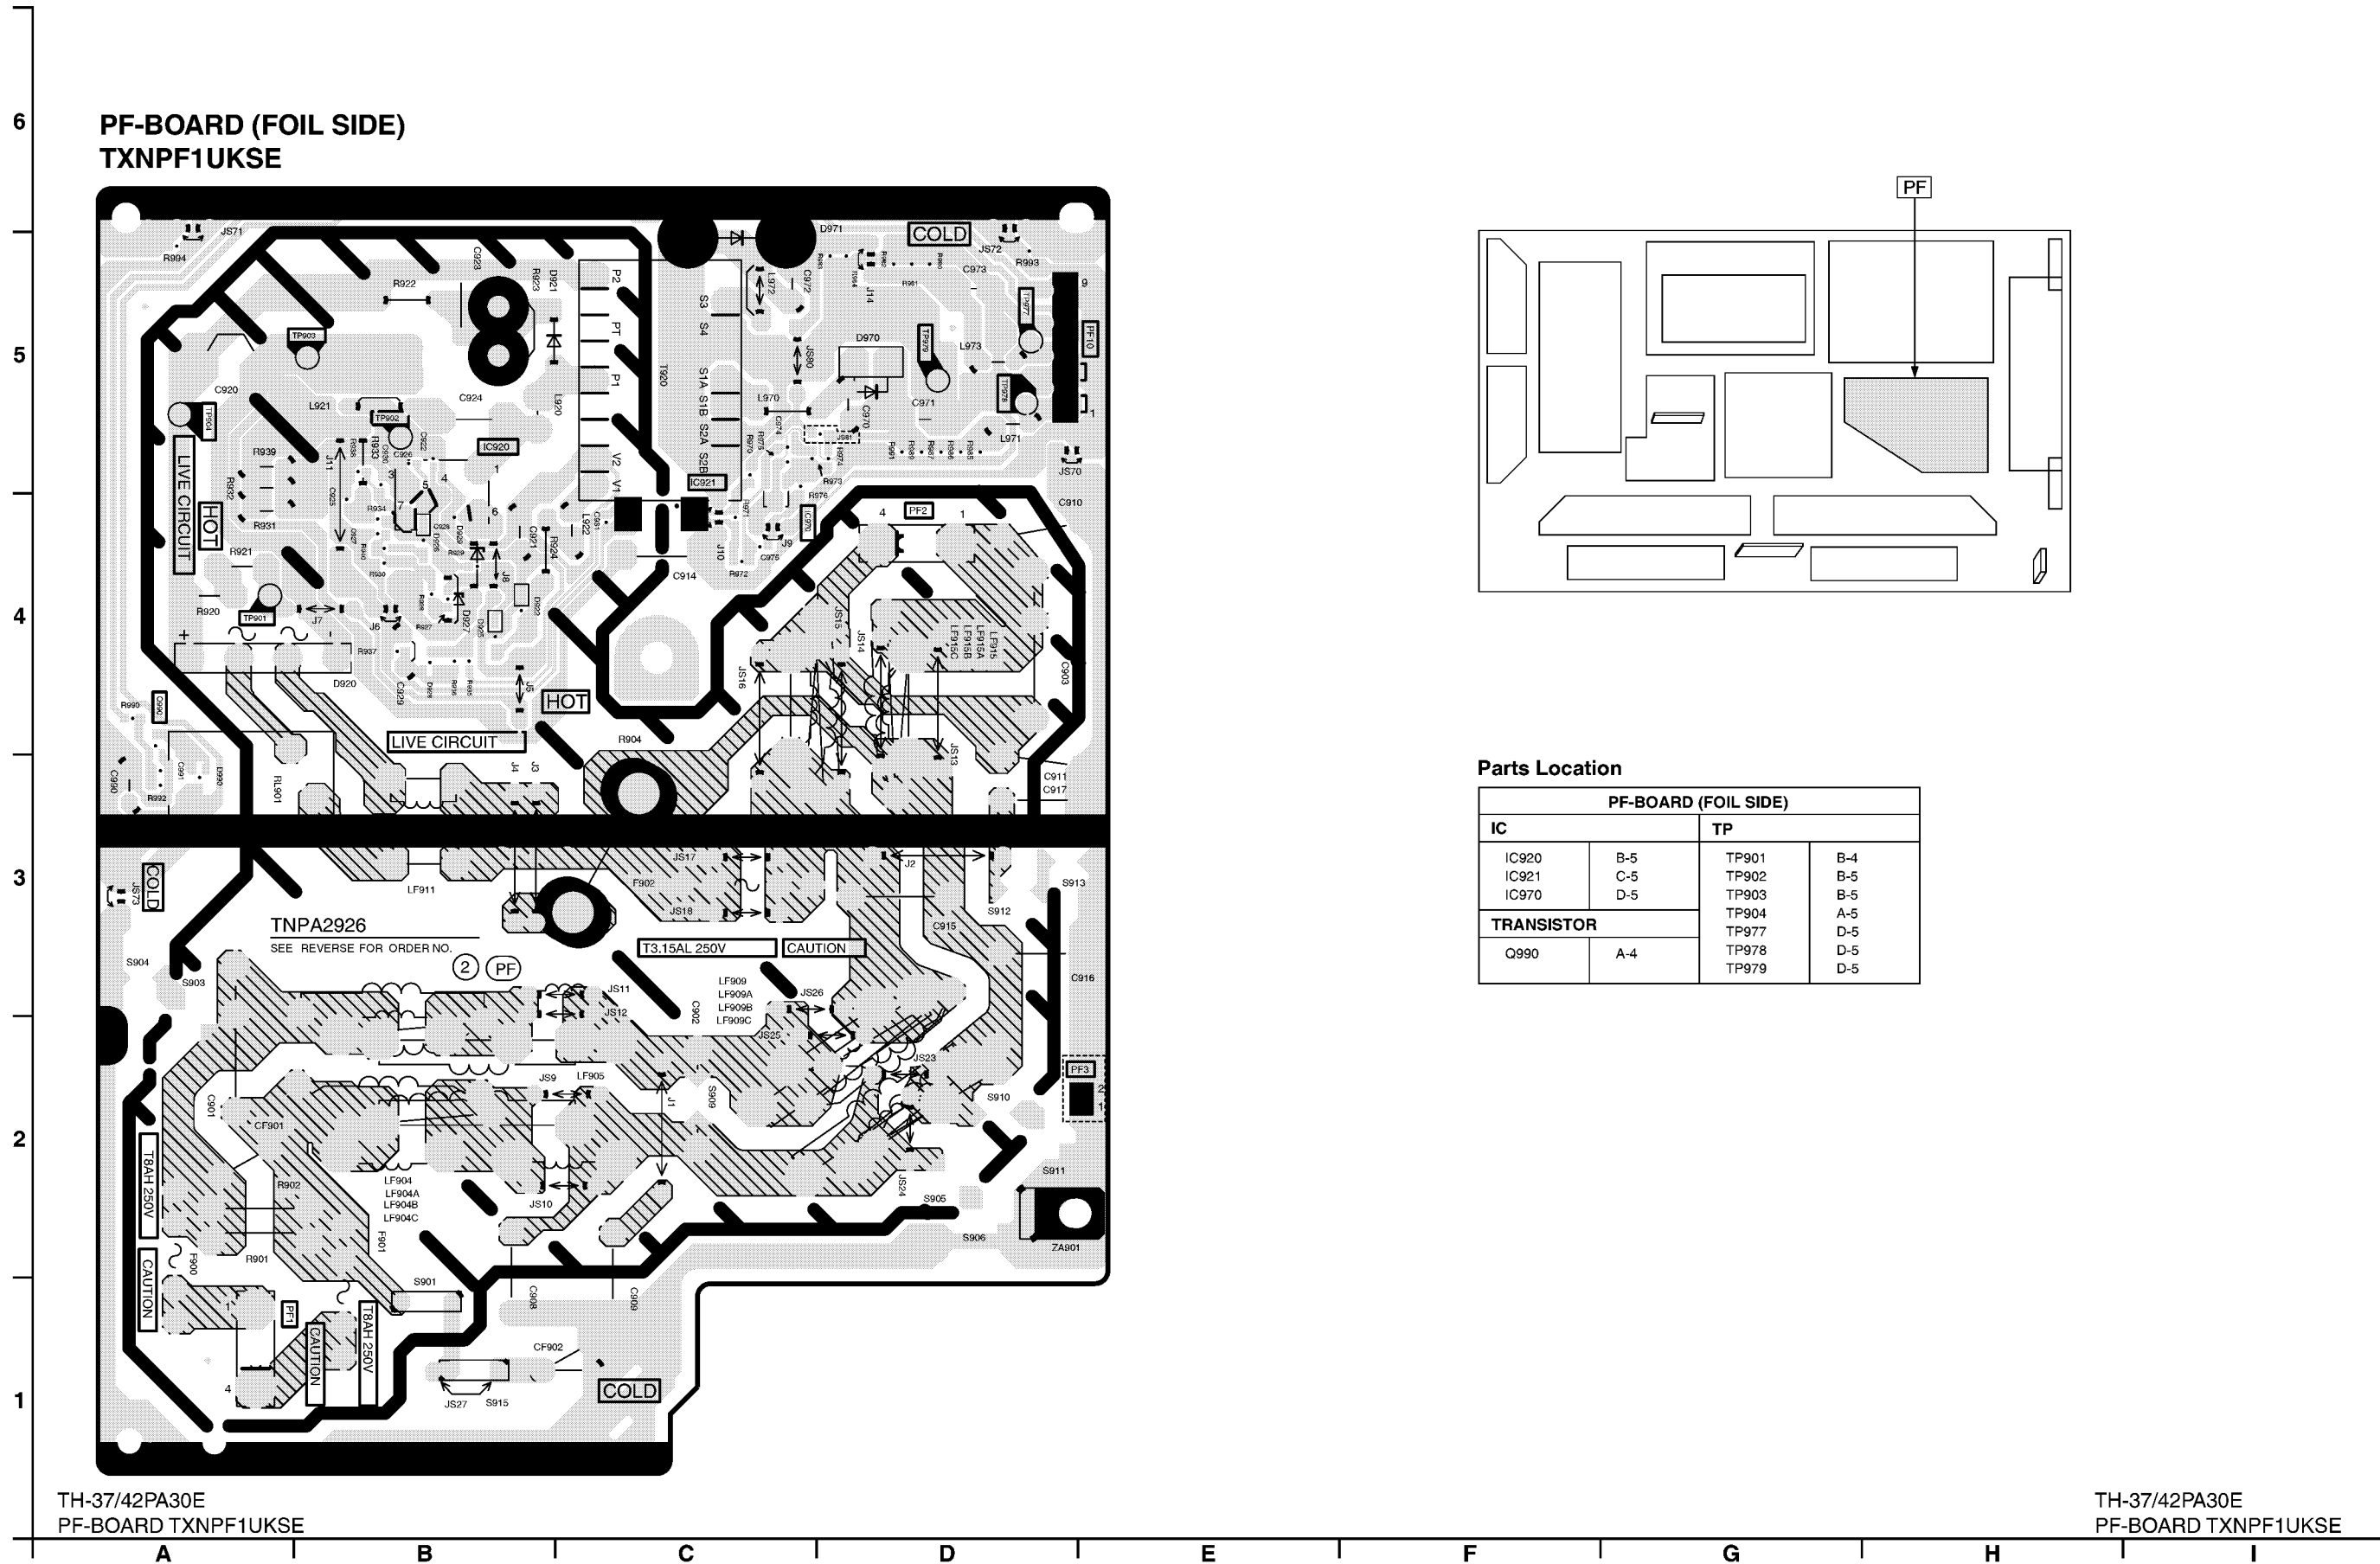


PF-BOARD (COMPONENT SIDE)
TXNPF1UKSE

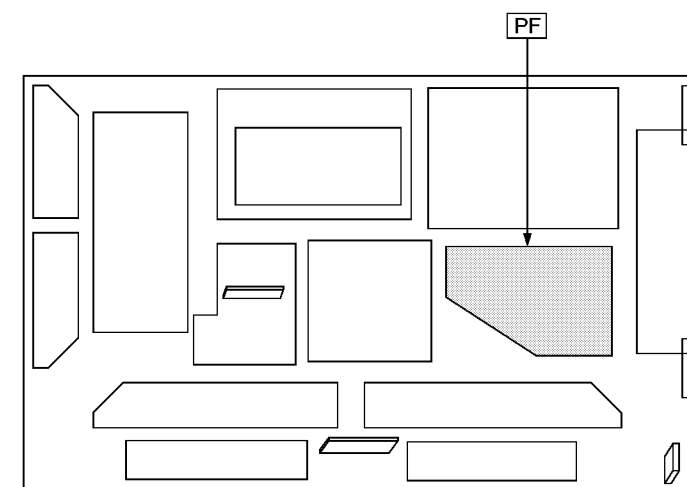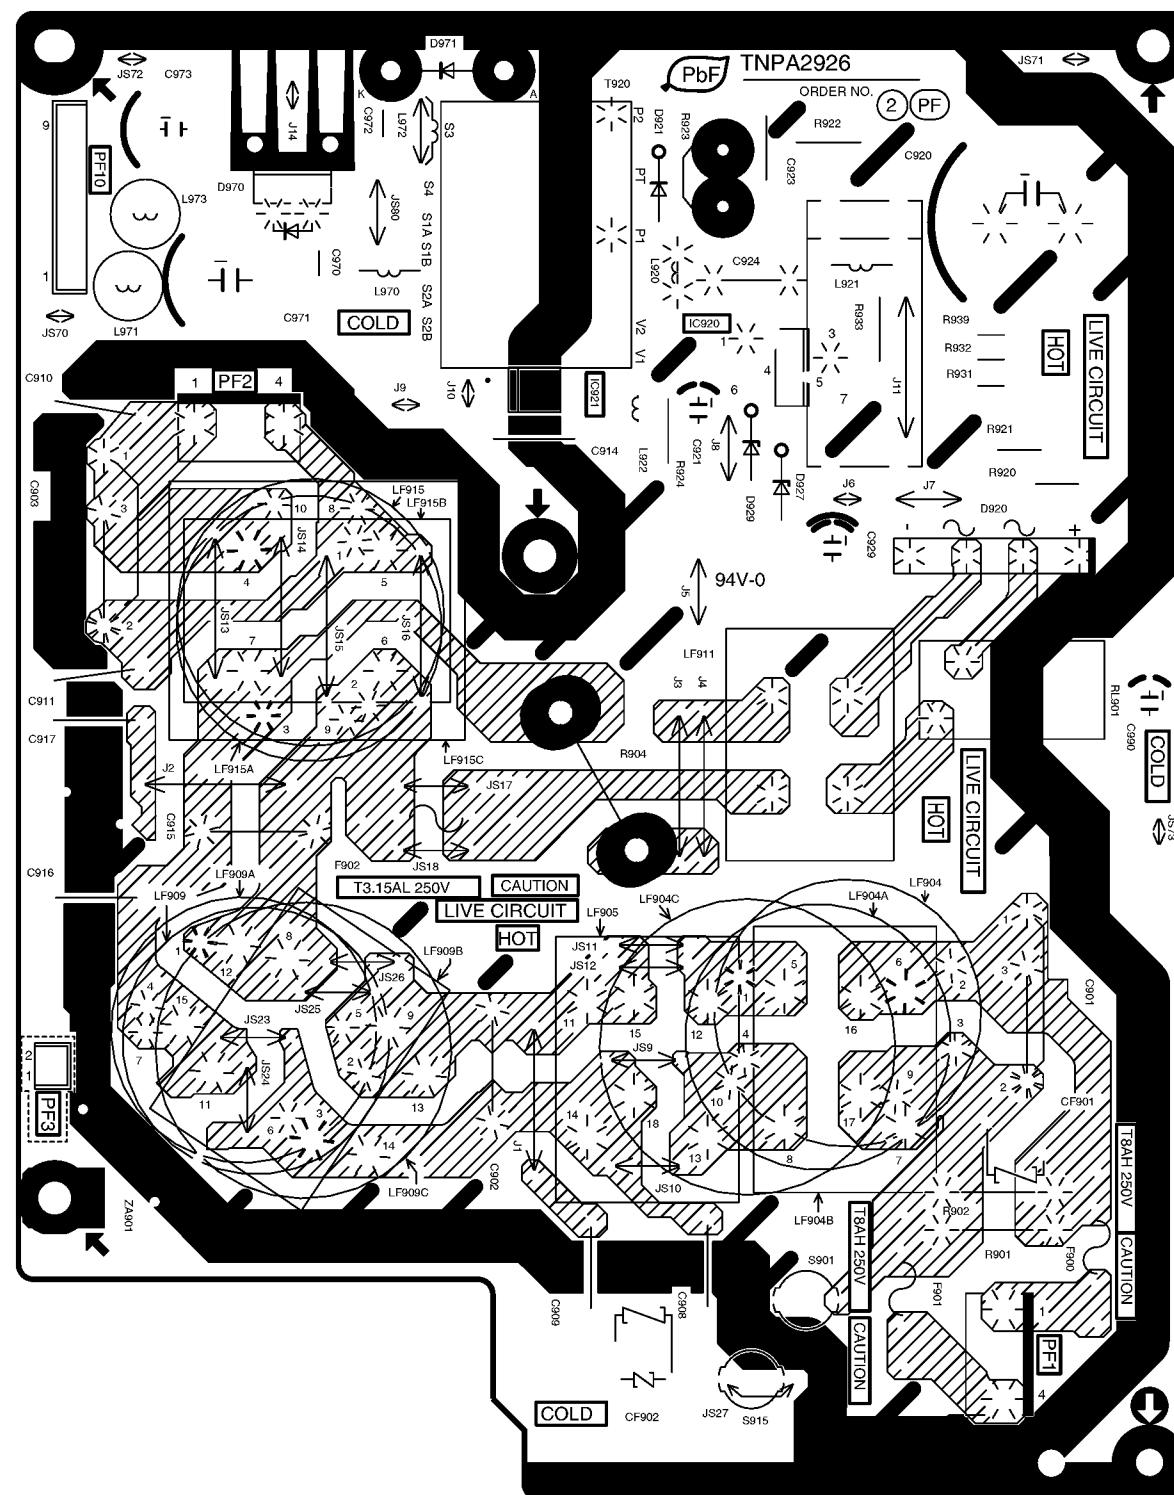

Parts Location


PF-BOARD (COMPONENT SIDE)			
IC			
IC920	C-5		
IC921	C-5		

14.2. P-Board

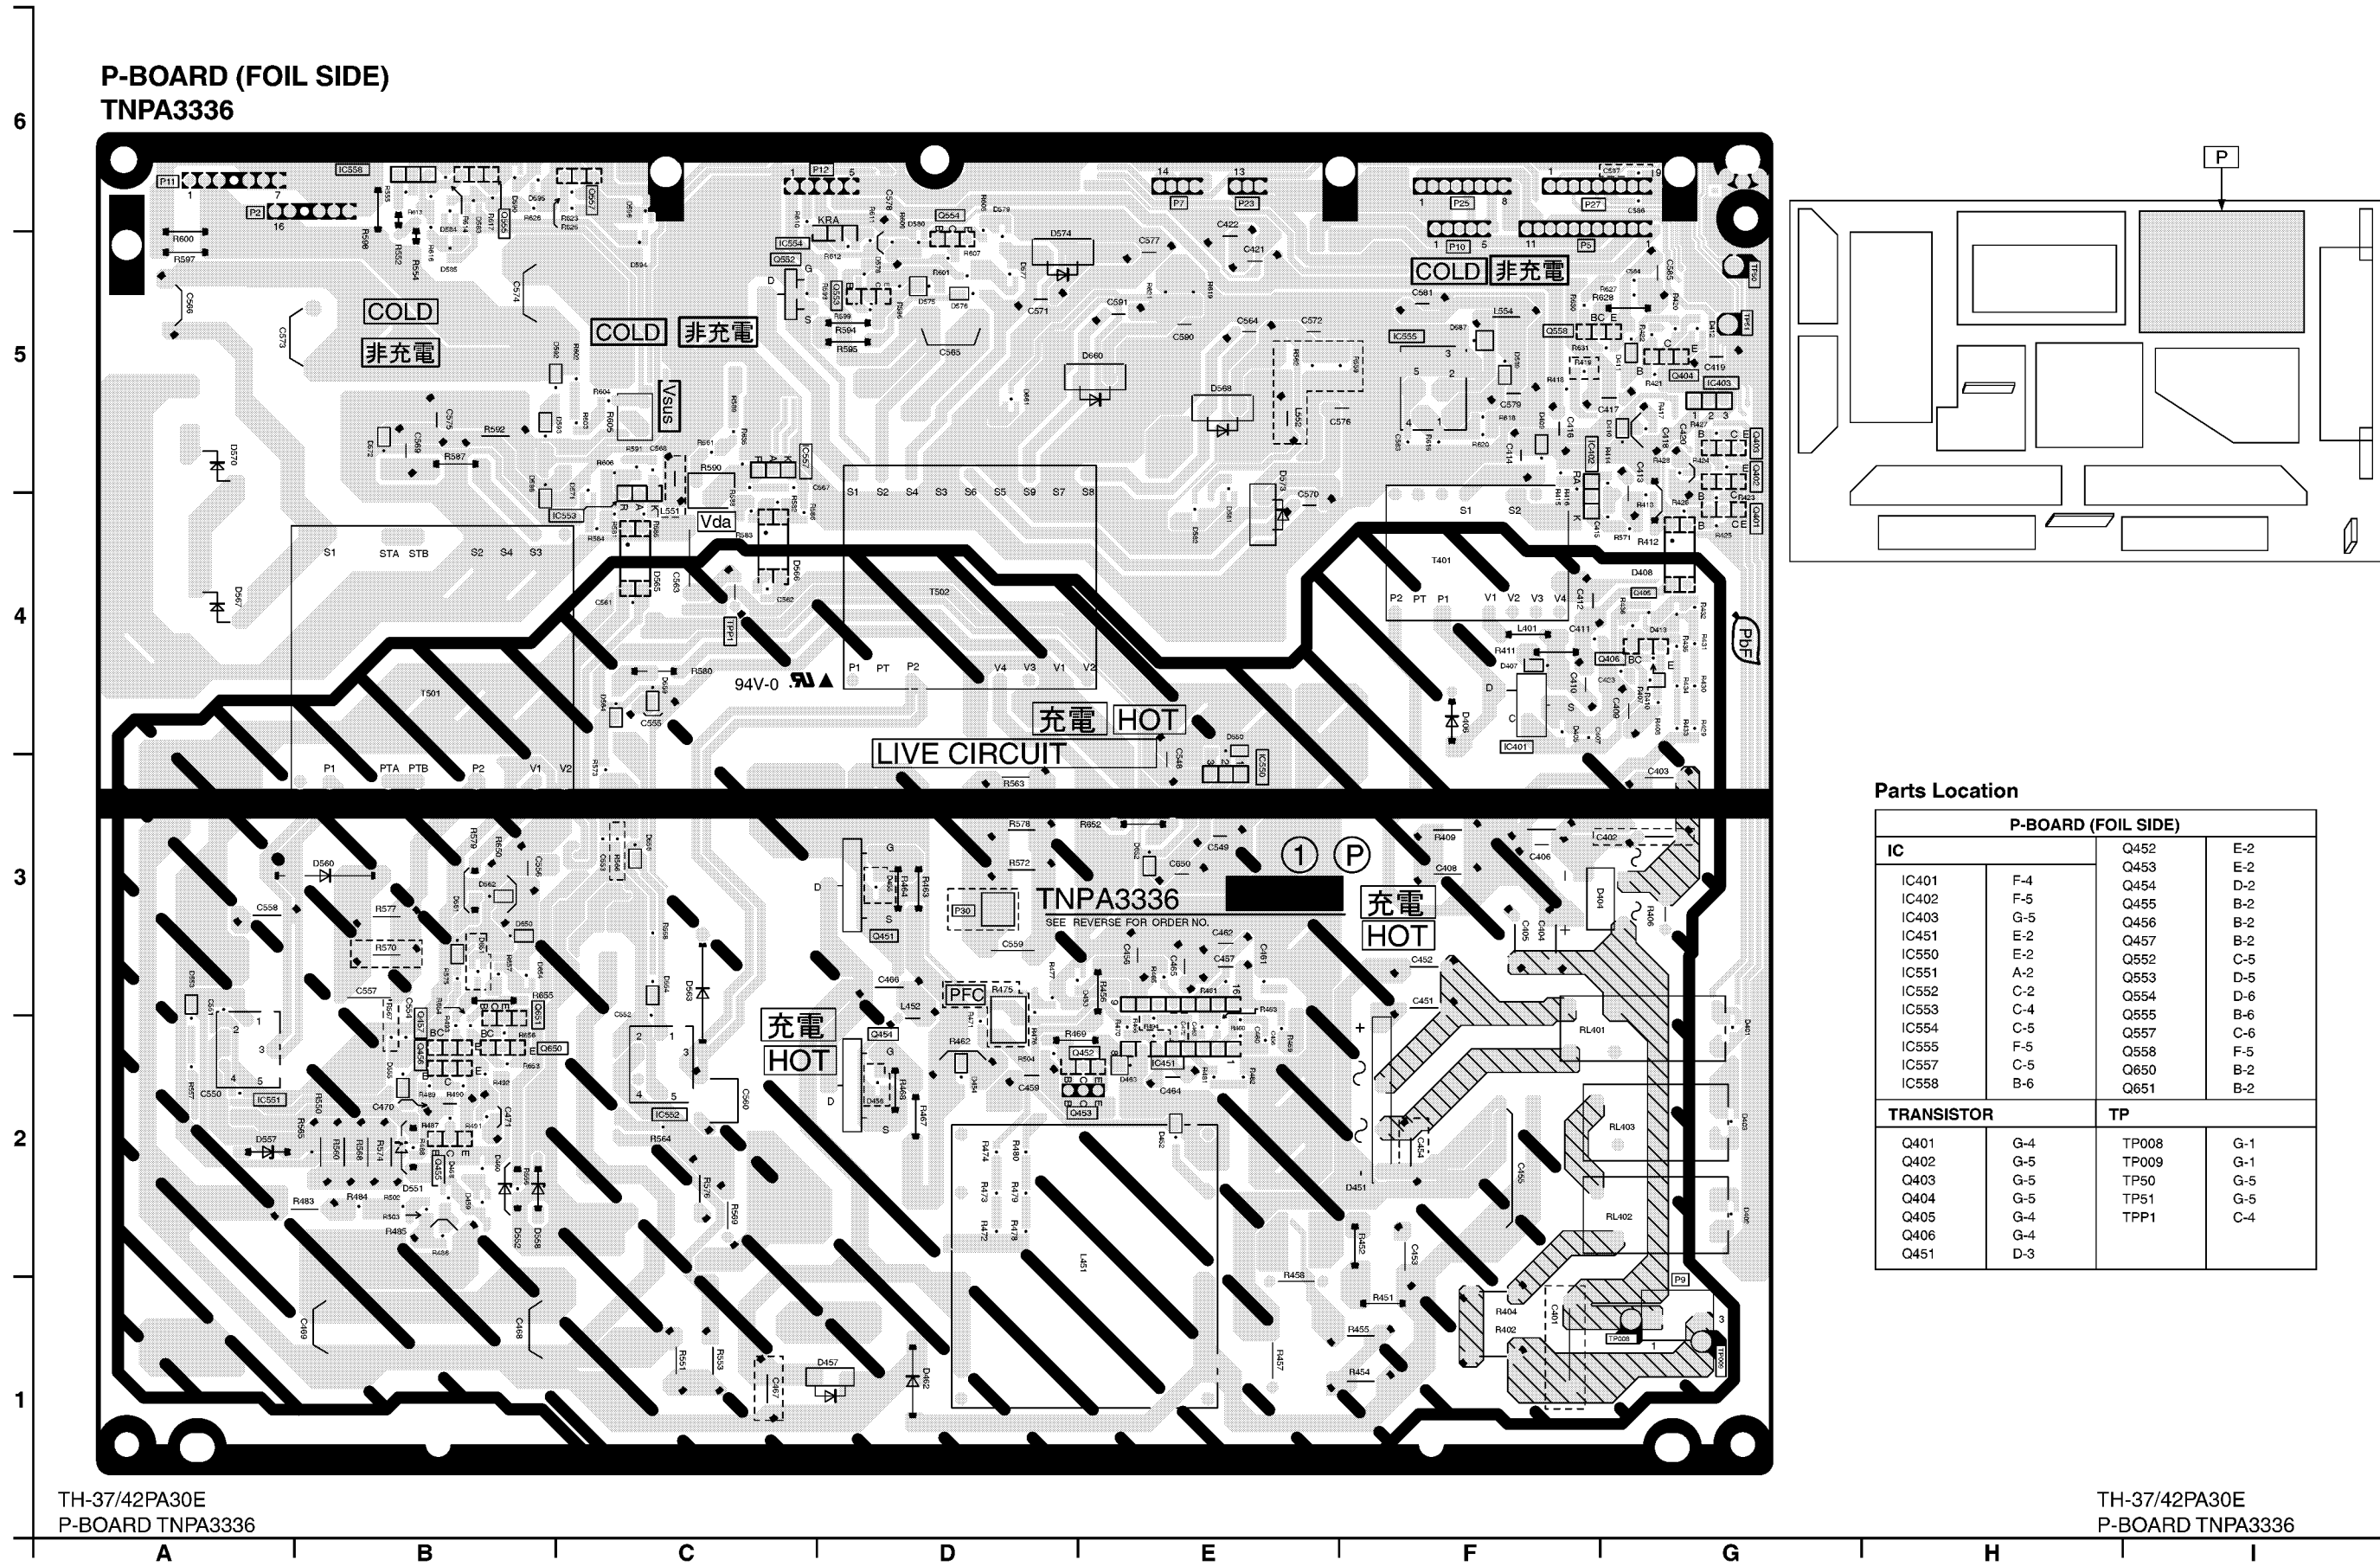


TH-37/42PA30E
P-BOARD TNPA3336

TH-37/42PA30E
P-BOARD TNPA3336


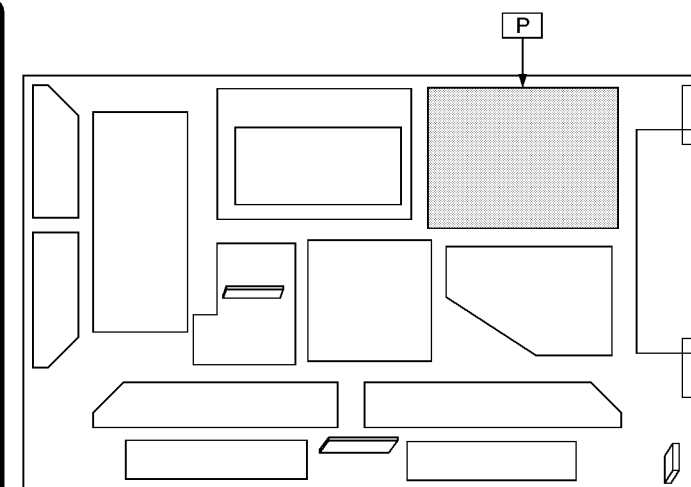


P-BOARD (COMPONENT SIDE)			
IC		TRANSISTOR	
IC401	B-4	Q401	A-4
IC402	A-5	Q402	A-5
IC403	A-5	Q403	A-5
IC451	C-3	Q404	A-5
IC550	C-4	Q406	A-4
IC551	F-2	Q451	D-3
IC552	E-3	Q452	C-2
IC553	E-5	Q453	C-2
IC554	D-6	Q454	D-2
IC555	B-5	Q455	F-2
IC557	E-5	Q456	F-2
IC558	F-6	Q457	F-2
		Q552	D-5
		Q553	D-5
		Q554	D-6
		Q555	F-6
		Q557	E-6
		Q558	A-5
		Q650	F-2
		Q651	F-2
		TPP1	E-4

14.3. PA-Board

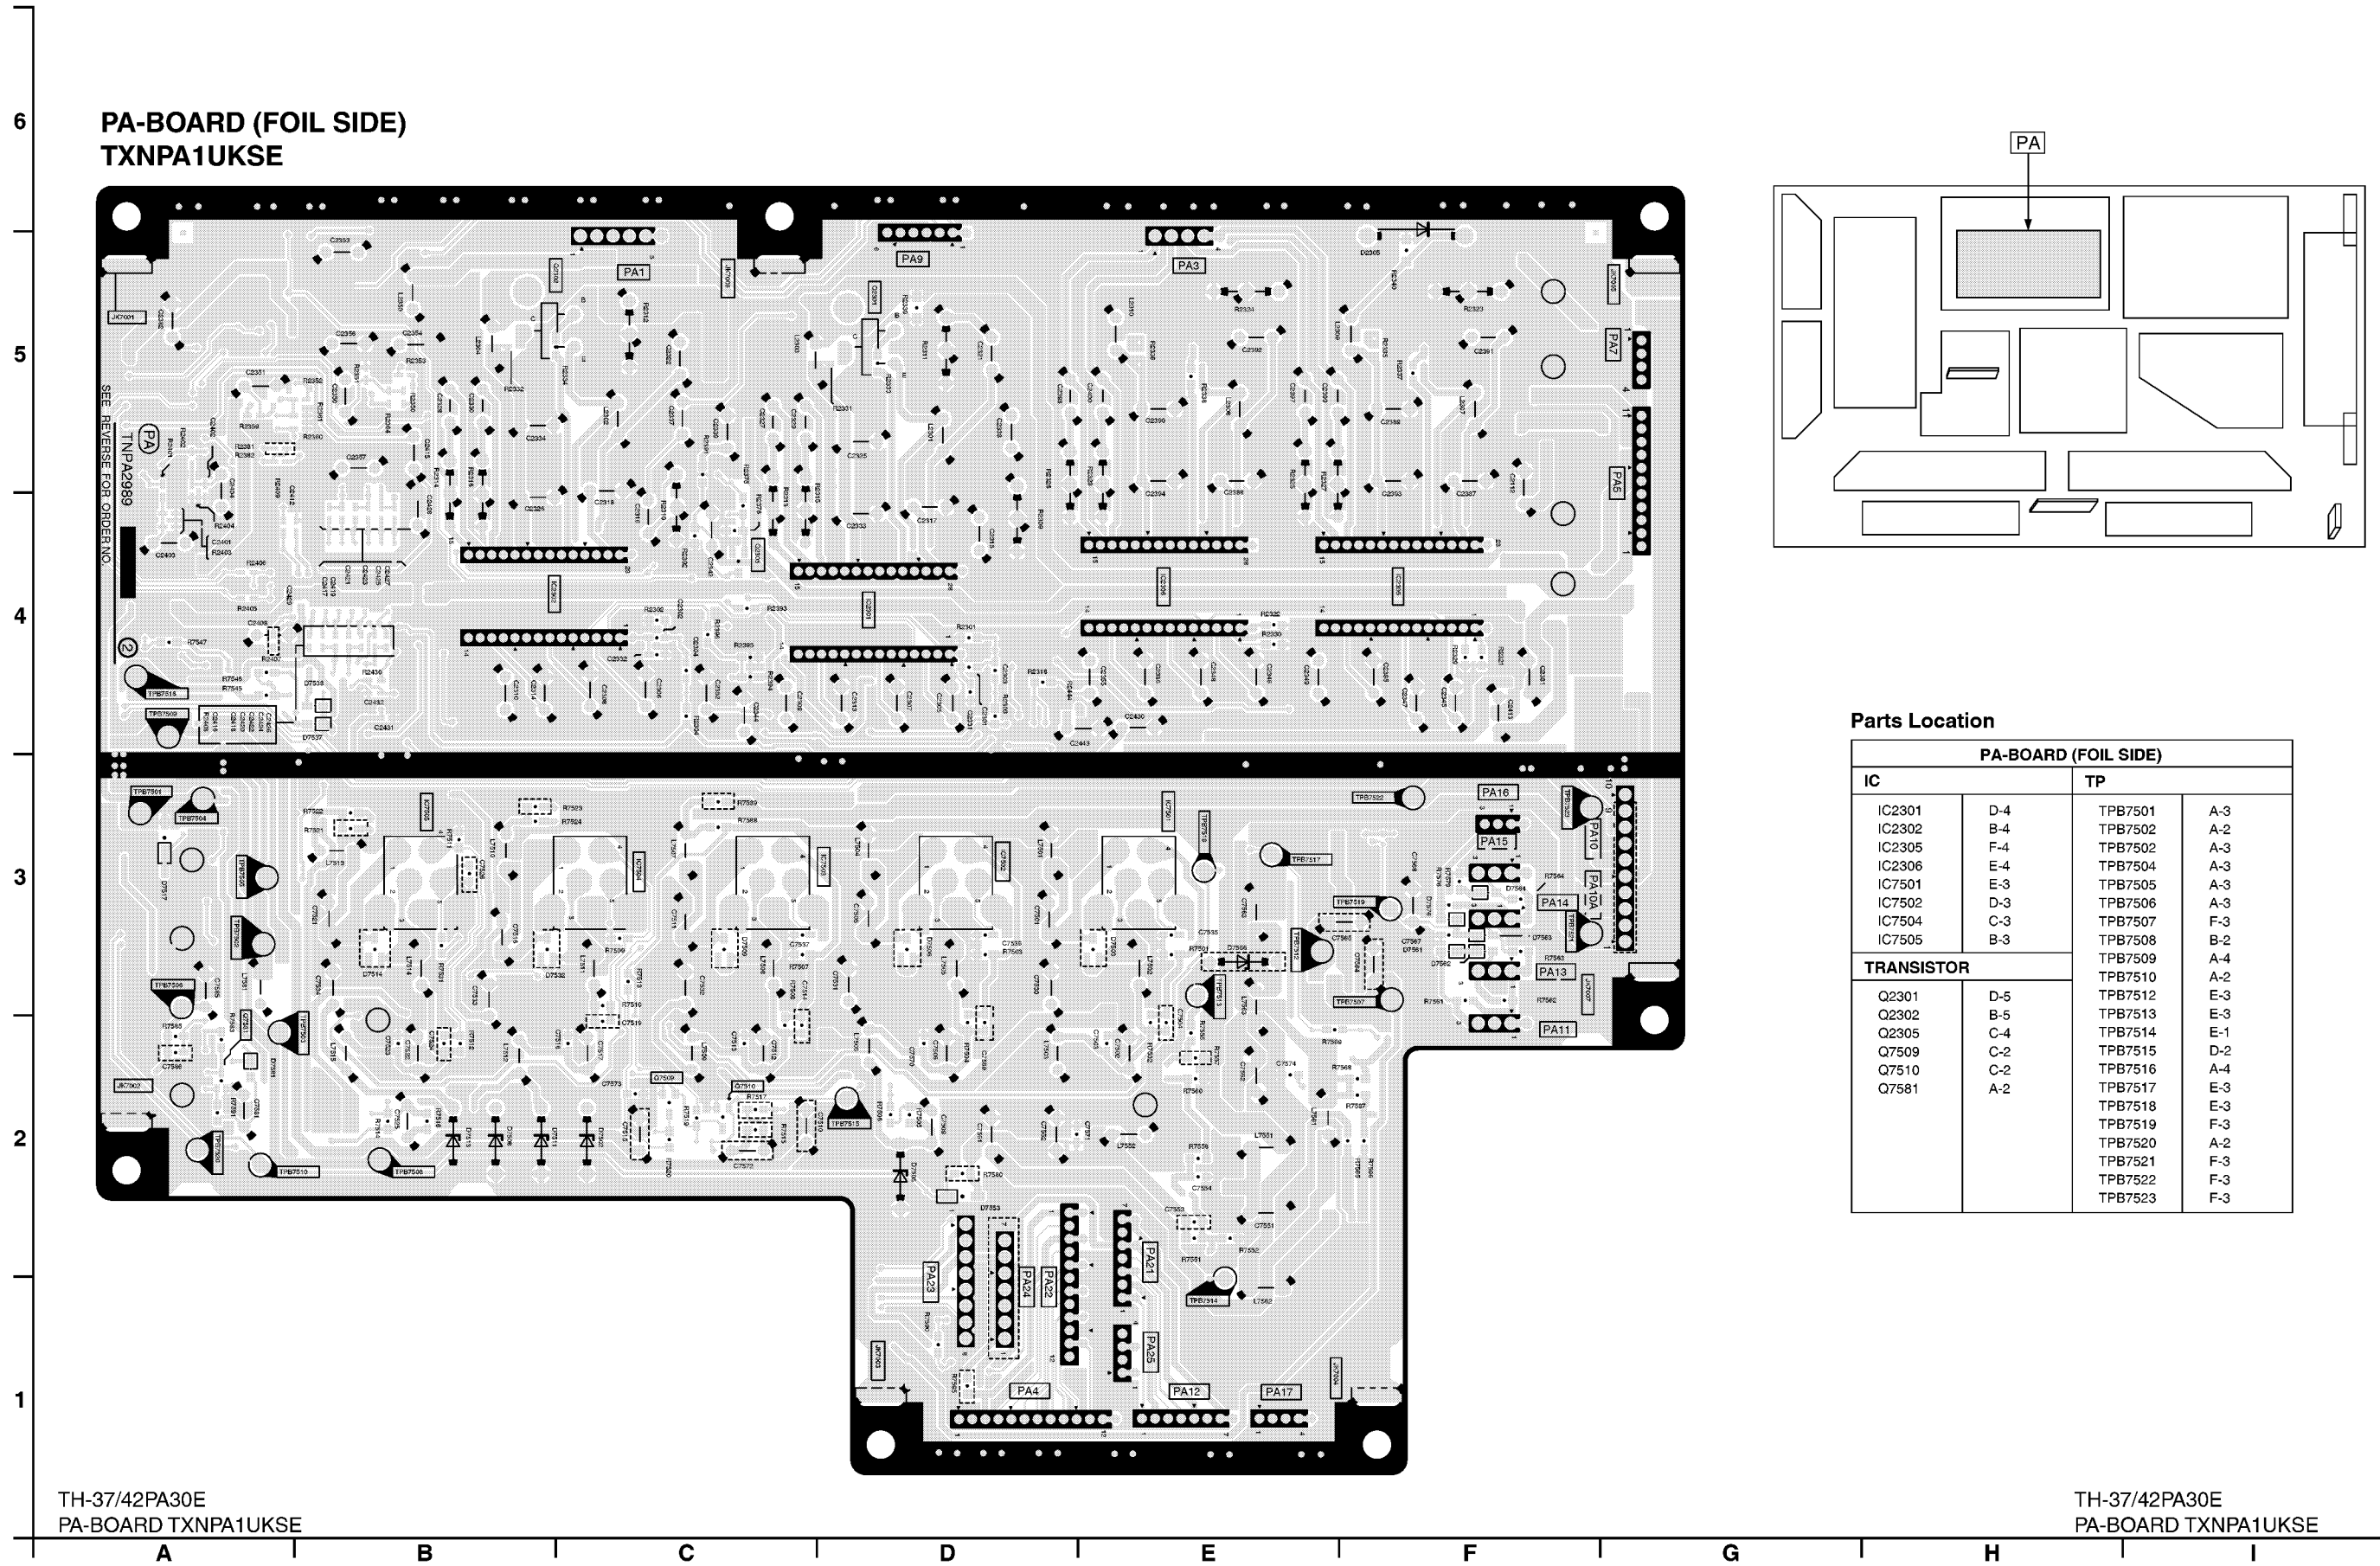


PA-BOARD (COMPONENT SIDE)
TXNPA1UKSE

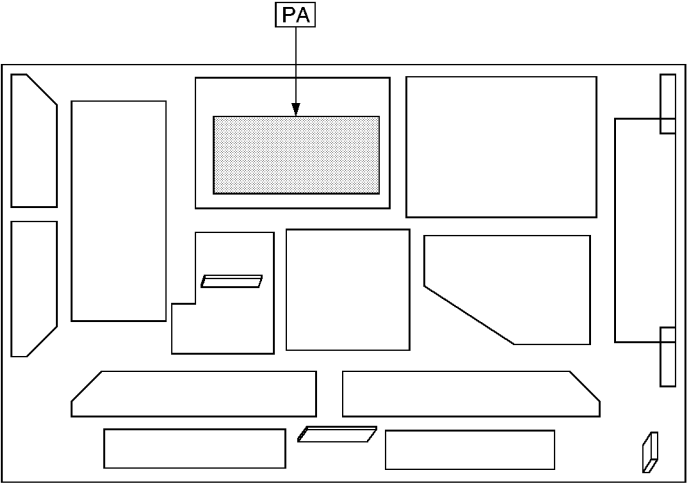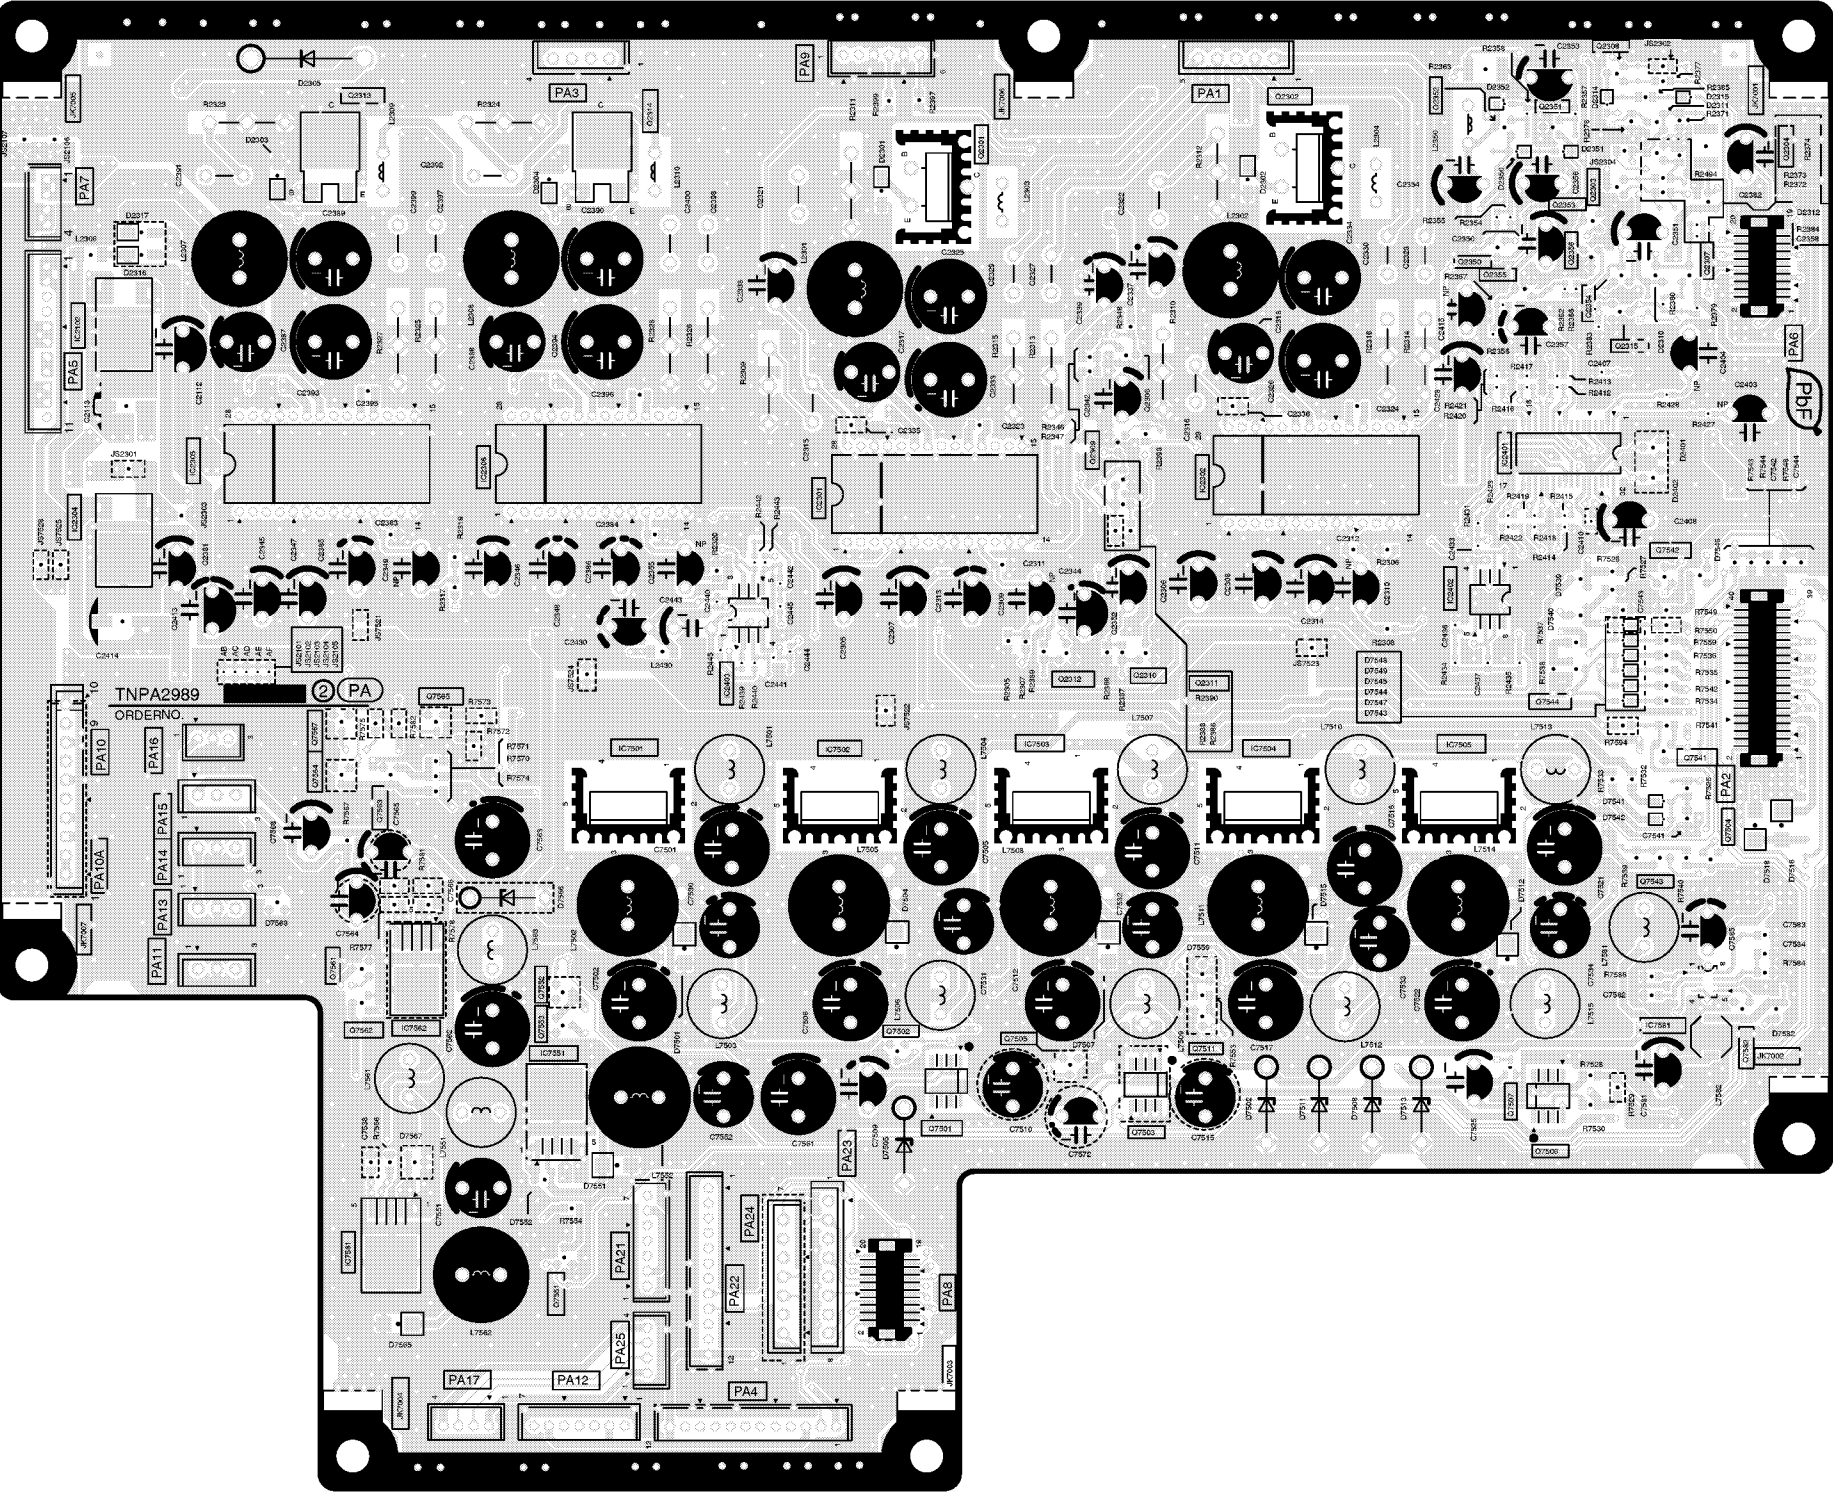


Parts Location

PA-BOARD (COMPONENT SIDE)					
IC		TP			
IC2102	A-5	Q2301	D-5	Q7501	D-2
IC2301	C-4	Q2302	E-5	Q7502	D-2
IC2302	E-4	Q2303	F-5	Q7503	E-2
IC2304	A-4	Q2304	G-5	Q7504	G-3
IC2305	A-4	Q2306	E-4	Q7505	D-2
IC2306	B-4	Q2307	F-5	Q7506	F-2
IC2401	F-4	Q2308	F-5	Q7507	F-2
IC2402	F-4	Q2309	D-4	Q7511	E-2
IC2403	C-3	Q2310	E-3	Q7532	B-2
IC7501	C-3	Q2311	E-3	Q7541	F-3
IC7502	D-3	Q2312	D-3	Q7542	F-4
IC7503	D-3	Q2313	B-5	Q7543	F-3
IC7504	E-3	Q2314	C-5	Q7544	F-3
IC7505	F-3	Q2315	F-5	Q7551	C-1
IC7551	C-2	Q2350	F-5	Q7552	C-2
IC7561	B-2	Q2351	F-5	Q7553	C-2
IC7562	B-2	Q2352	F-5	Q7561	B-2
IC7581	F-2	Q2353	F-5	Q7562	B-2
		Q2354	F-5	Q7563	B-3
		Q2355	F-5	Q7564	B-3
		Q2356	F-5	Q7567	B-3
				Q7582	G-2

14.4. D-Board

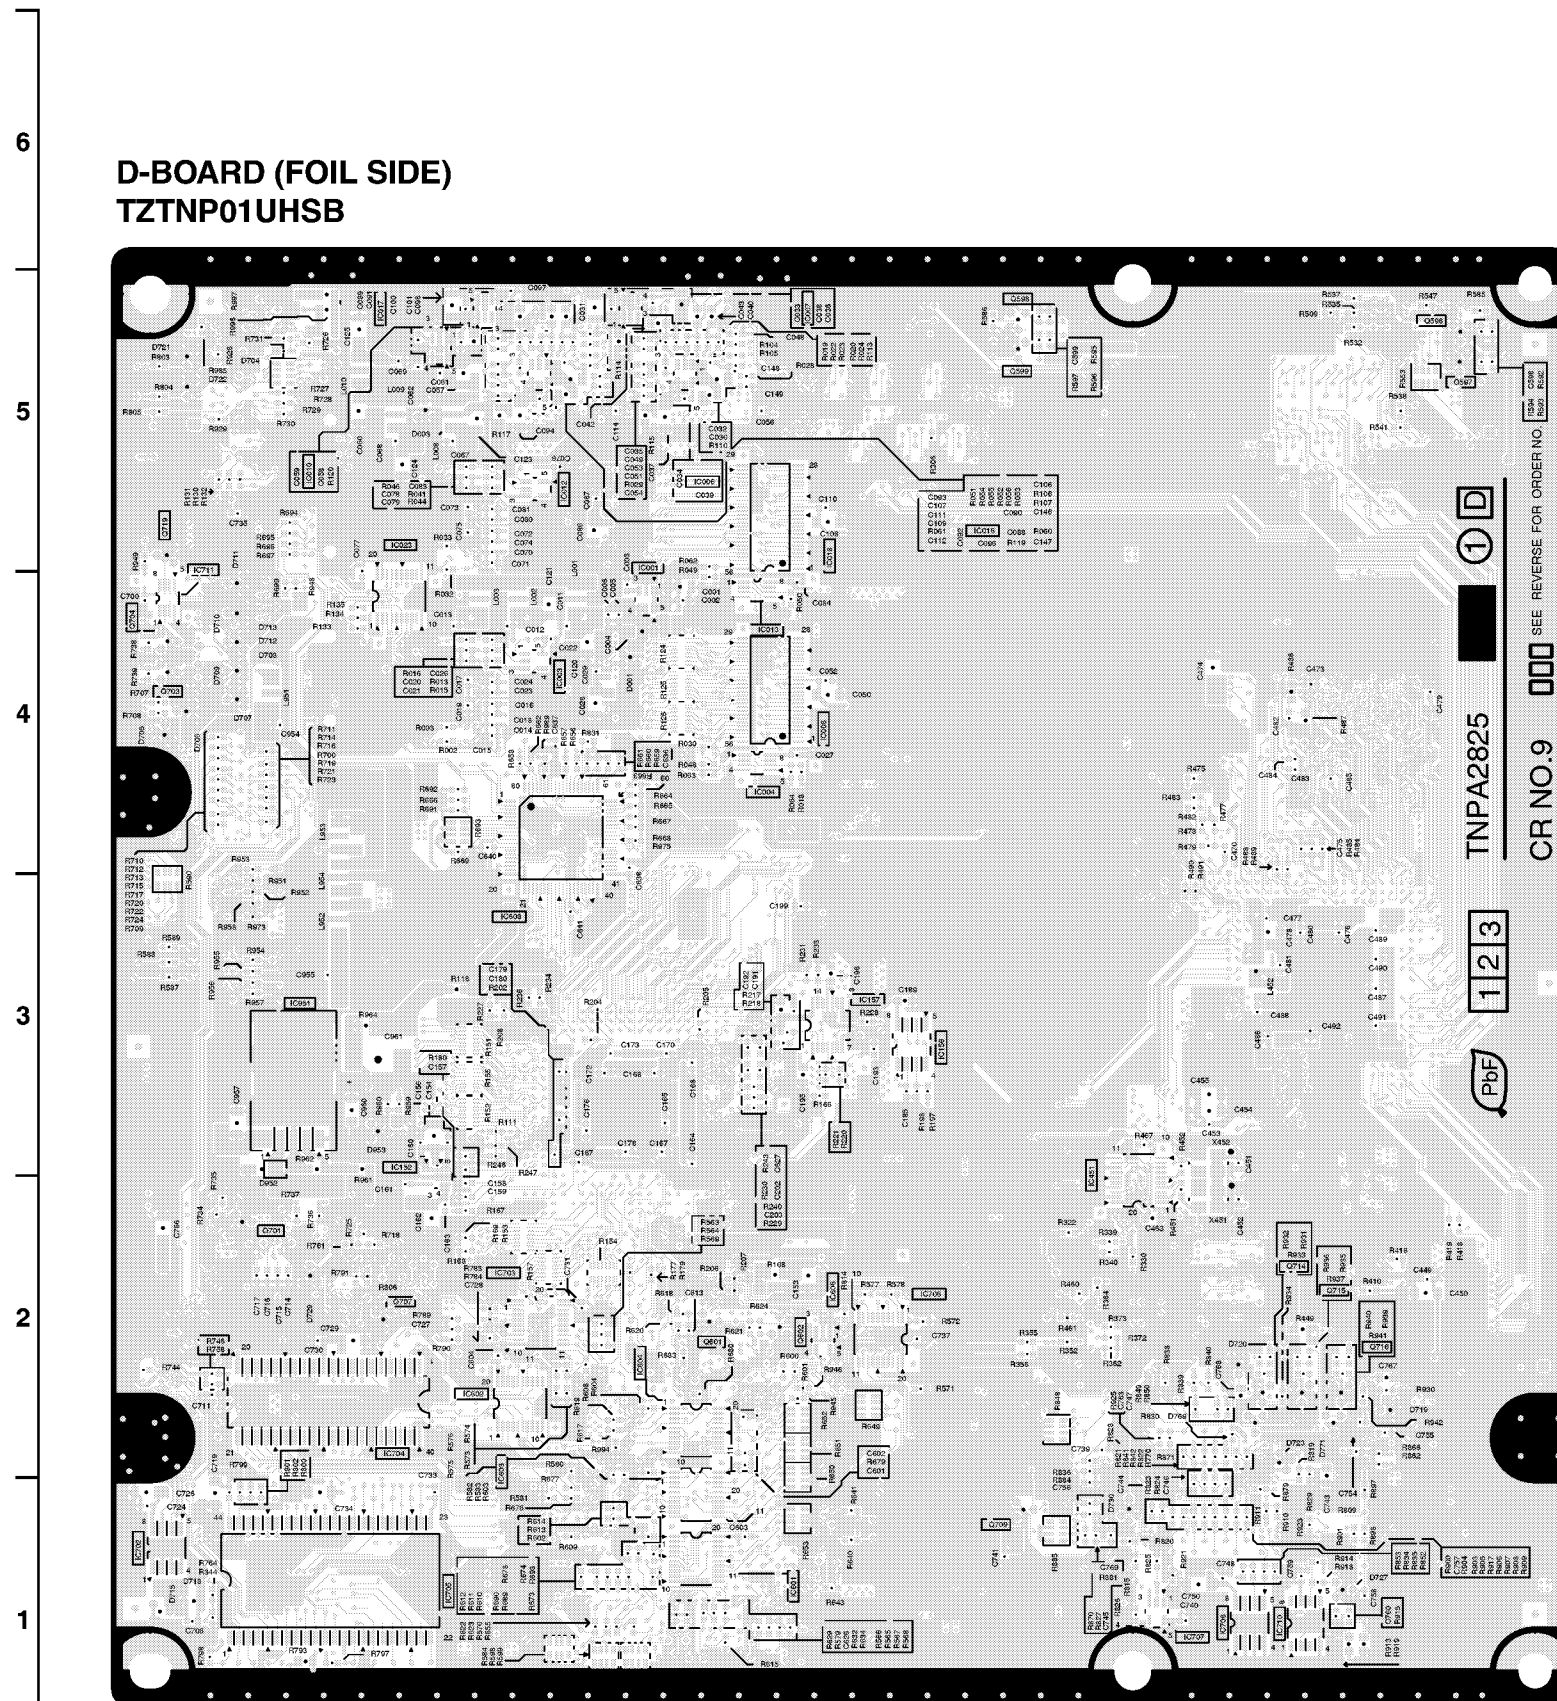

TH-37/42PA30E
D-BOARD TZTNP01UHSB

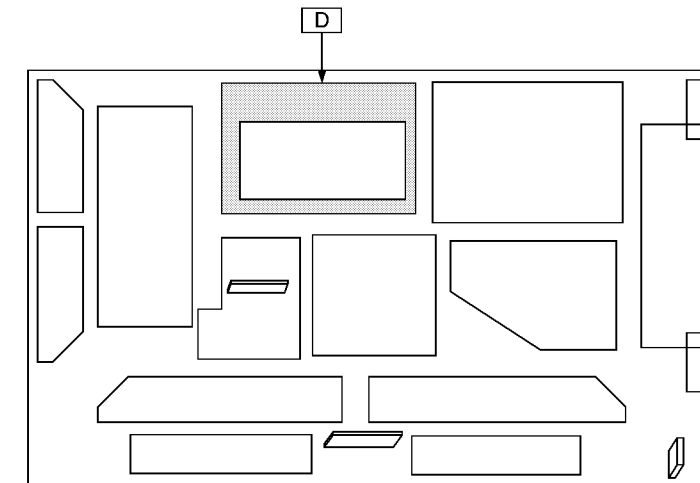


Parts Location

D-BOARD (FOIL SIDE)			
IC		TRANSISTOR	
IC9001	C-5	Q9596	E-5
IC9003	B-4	Q9597	E-5
IC9004	C-4	Q9598	D-5
IC9006	C-5	Q9599	D-5
IC9007	C-5	Q9601	C-2
IC9008	C-4	Q9602	C-2
IC9010	A-5	Q9701	A-2
IC9012	B-5	Q9703	A-4
IC9013	C-4	Q9704	A-4
IC9016	D-5	Q9707	B-2
IC9017	B-5	Q9709	D-1
IC9018	C-5	Q9714	E-2
IC9023	B-5	Q9715	E-2
IC9152	B-3	Q9716	E-2
IC9156	C-3	Q9719	A-5
IC9157	C-3		
IC9451	D-2		
IC9601	C-1		
IC9602	B-2		
IC9603	B-2		
IC9604	B-2		
IC9606	C-2		
IC9608	B-3		
IC9702	A-1		
IC9703	B-3		
IC9704	B-2		
IC9705	B-1		
IC9706	C-2		
IC9707	D-1		
IC9708	D-1		
IC9710	E-1		
IC9711	A-5		
IC9951	A-3		

TH-37/42PA30E
D-BOARD TZTNP01UHSB

6
5
4
3
2
1

D-BOARD (COMPONENT SIDE)
TZTNP01UHSB

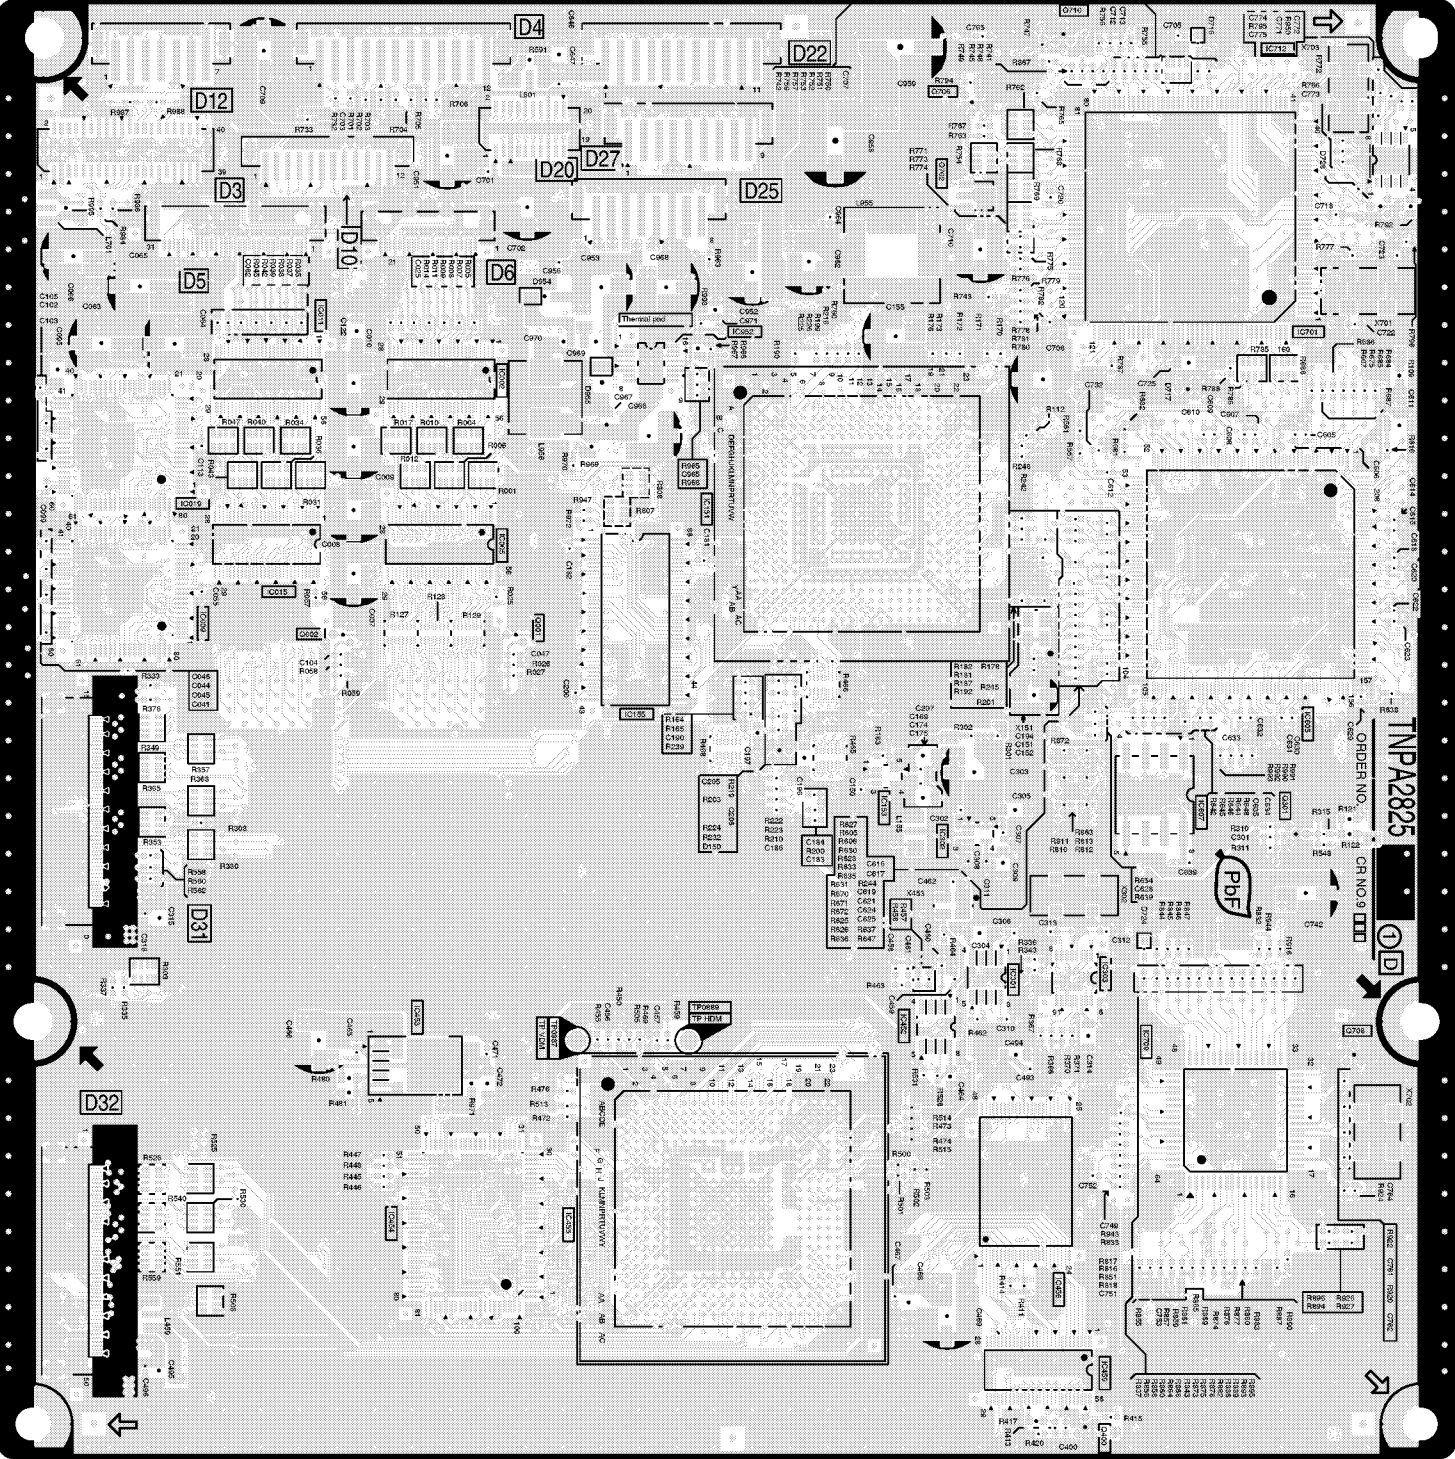

TH-37/42PA30E
D-BOARD TZTNP01UHSB

A

B

C

D


E

F

G

H

I


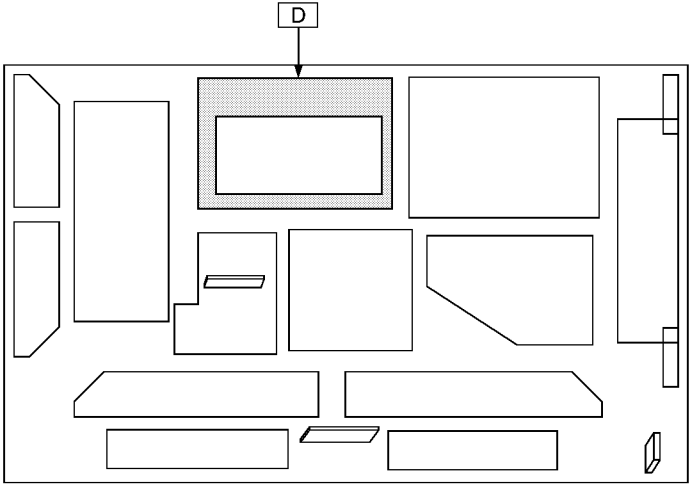


Parts Location

D-BOARD (COMPONENT SIDE)			
IC		TRANSISTOR	
IC9002	B-4	Q9001	C-3
IC9005	B-4	Q9002	B-3
IC9009	A-4	Q9301	E-3
IC9011	B-5	Q9400	D-1
IC9015	B-4	Q9702	D-5
IC9019	A-4	Q9706	D-5
IC9151	C-4	Q9708	E-2
IC9153	D-3	Q9710	D-5
IC9155	C-3	TRANSISTOR	
IC9301	D-2		
IC9302	D-2	TP0887	C-2
IC9303	D-2	TP0889	C-2
IC9452	D-2		
IC9453	B-2		
IC9454	B-2		
IC9455	C-2		
IC9456	D-1		
IC9459	D-1		
IC9605	E-3		
IC9607	E-3		
IC9701	E-4		
IC9709	E-2		
IC9712	E-5		
IC9952	C-4		

TH-37/42PA30E
D-BOARD TZTNP01UHSB

14.5. DG-Board

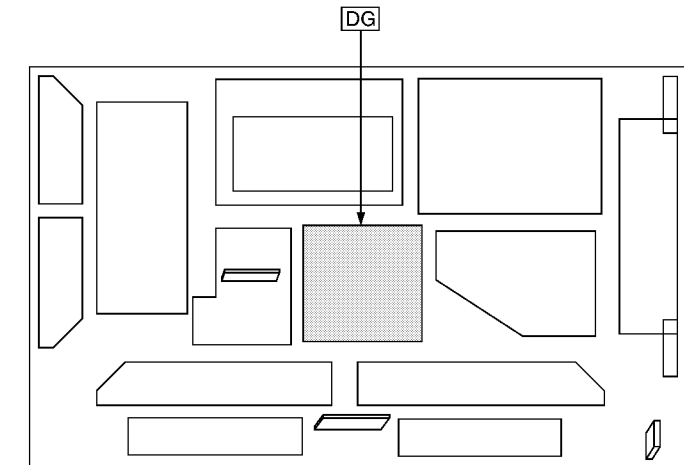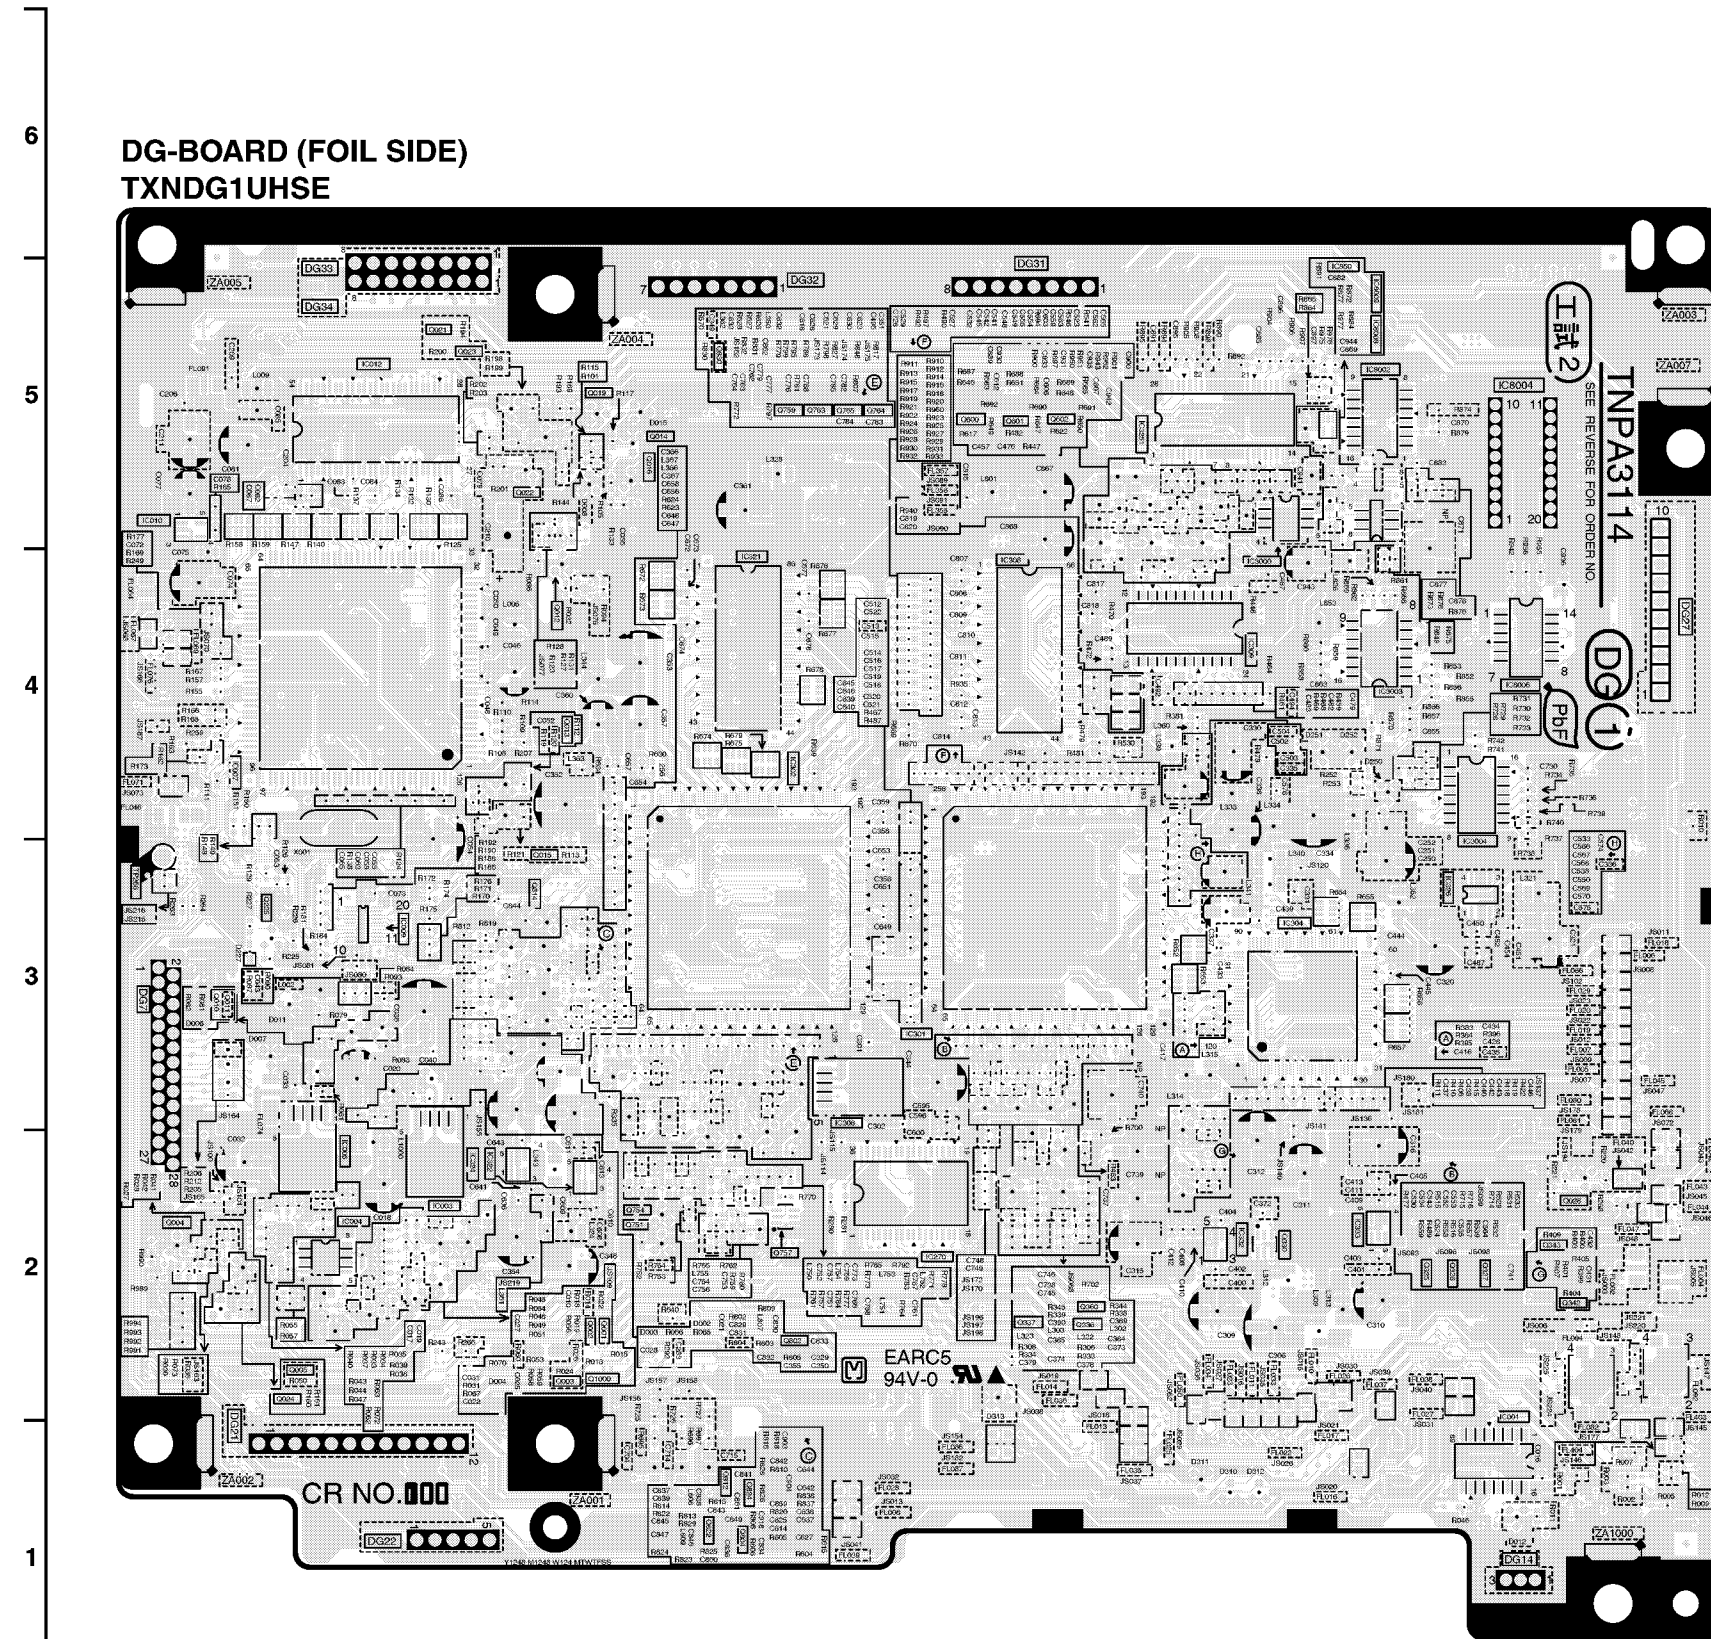



Parts Location

DG-BOARD (FOIL SIDE)					
IC		TRANSISTOR		Q1600	D-5
IC1001	F-1	Q1000	B-2	Q1601	D-5
IC1003	B-2	Q1001	B-2	Q1602	D-5
IC1004	B-2	Q1002	B-2	Q1751	C-2
IC1005	B-2	Q1003	B-2	Q1754	C-2
IC1007	A-4	Q1004	A-2	Q1757	C-2
IC1009	B-3	Q1005	A-2	Q1759	C-5
IC1010	A-5	Q1010	A-2	Q1763	C-5
IC1012	B-5	Q1011	A-2	Q1764	C-5
IC1270	D-2	Q1012	B-4	Q1765	C-5
IC1301	D-3	Q1013	B-4	Q1802	C-2
IC1302	C-4	Q1014	C-5	Q1804	C-1
IC1304	E-3	Q1015	B-3	Q1812	C-1
IC1306	C-3	Q1016	C-5	Q1814	B-3
IC1308	D-4	Q1019	B-5	Q1822	C-1
IC1321	C-4	Q1021	B-5	Q1824	C-1
IC1322	B-2	Q1022	B-5	Q1830	C-5
IC1324	B-2	Q1023	B-5	TP	
IC1326	E-3	Q1024	A-2	TP1286	A-3
IC1332	E-2	Q1028	F-2		
IC1850	E-5	Q1225	A-3		
IC3000	E-4	Q1325	E-2		
IC3003	E-4	Q1326	E-2		
IC3004	E-3	Q1327	E-2		
IC3251	D-5	Q1330	E-2		
IC8002	E-5	Q1336	D-2		
IC8004	F-5	Q1337	D-2		
IC8006	F-4	Q1342	F-2		
IC8008	E-5	Q1343	F-2		
IC8009	E-5	Q1360	D-2		

TH-37/42PA30E
DG-BOARD TXNDG1UHSE

TH-37/42PA30E
DG-BOARD TXNDG1UHSE

DG-BRD (COMPONENT SIDE)
TXNDG1UHSE

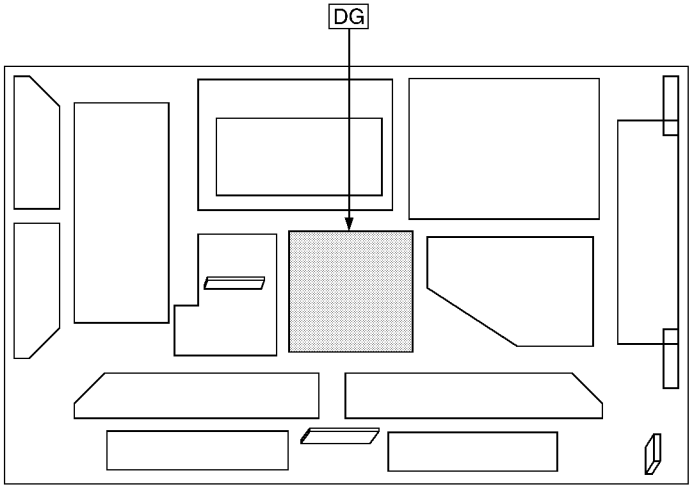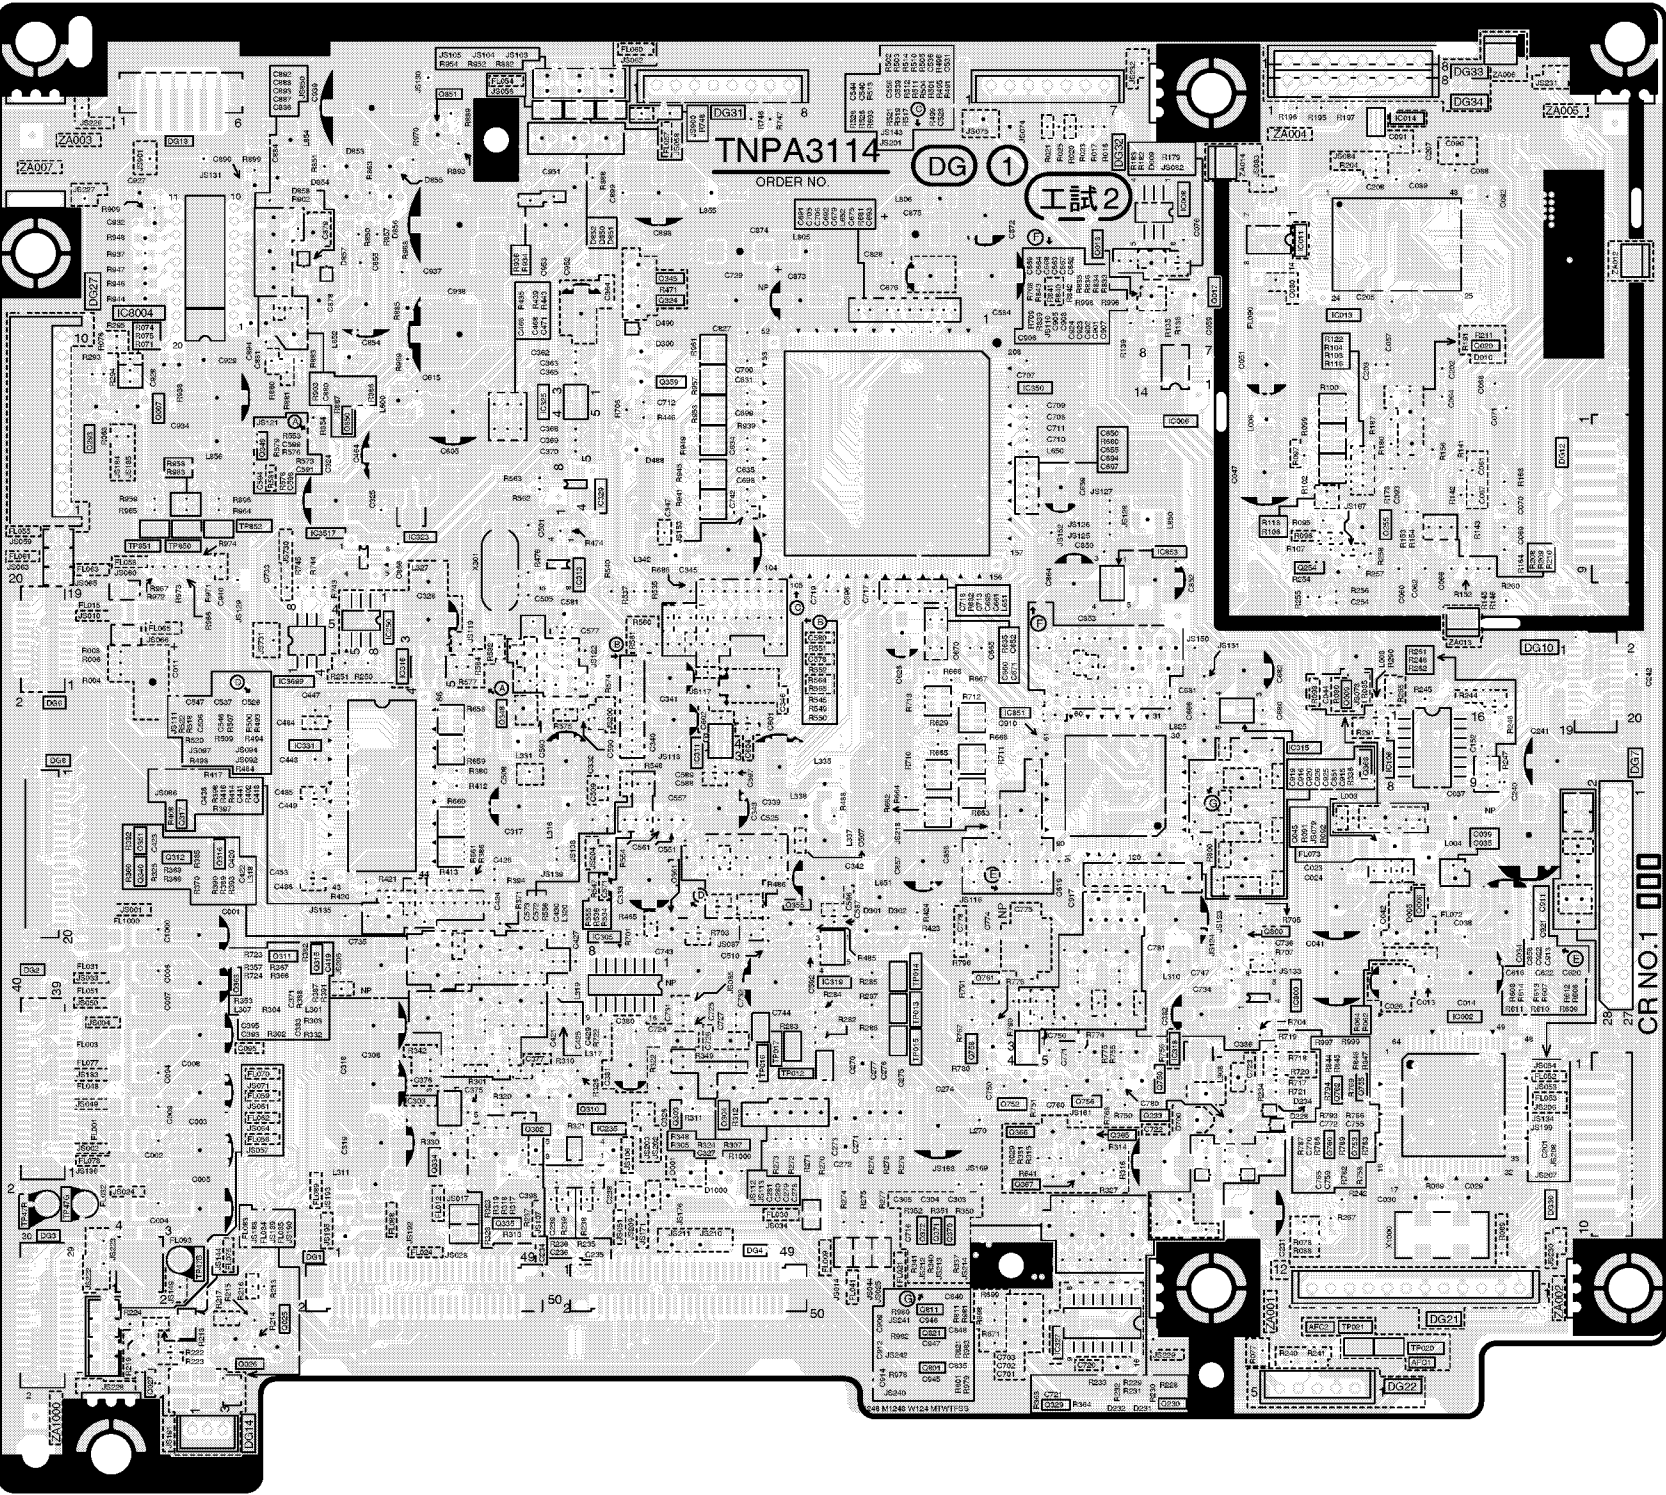



Parts Location

DG-BRD (COMPONENT SIDE)					
IC	TRANSISTOR				
IC1002	F-2	Q1006	E-3	Q1363	B-2
IC1006	E-4	Q1007	A-4	Q1365	D-2
IC1008	E-5	Q1009	E-3	Q1366	D-2
IC1011	E-5	Q1017	E-5	Q1367	D-2
IC1013	E-5	Q1018	D-5	Q1368	E-3
IC1014	E-5	Q1020	F-4	Q1370	D-2
IC1106	E-3	Q1025	B-1	Q1371	D-2
IC1235	C-2	Q1026	B-1	Q1372	D-2
IC1250	B-4	Q1027	A-1	Q1750	E-2
IC1303	B-2	Q1230	E-1	Q1752	D-2
IC1305	C-3	Q1233	E-2	Q1753	E-2
IC1309	E-4	Q1254	E-4	Q1755	E-2
IC1311	C-3	Q1255	E-4	Q1756	D-2
IC1313	C-4	Q1293	A-4	Q1758	D-2
IC1315	E-3	Q1302	C-2	Q1760	E-2
IC1316	B-3	Q1303	C-2	Q1761	D-2
IC1318	E-2	Q1304	C-2	Q1762	E-2
IC1319	D-2	Q1310	C-2	Q1800	E-3
IC1323	B-4	Q1311	B-3	Q1801	D-1
IC1325	C-4	Q1312	A-3	Q1811	D-1
IC1327	D-1	Q1315	B-2	Q1821	D-1
IC1329	C-4	Q1316	A-3	Q1850	B-4
IC1331	B-3	Q1317	A-3	Q1851	B-5
IC1333	E-2	Q1324	C-5	TP	
IC1350	D-4	Q1329	D-1		
IC1750	D-2	Q1334	B-2	TP1012	C-2
IC1800	E-2	Q1335	B-2	TP1013	D-2
IC1851	D-3	Q1340	A-3	TP1014	D-2
IC1853	D-4	Q1345	C-5	TP1015	D-2
IC3517	B-4	Q1348	B-3	TP1016	C-2
IC3699	B-3	Q1349	B-4	TP1850	A-4
IC8004	A-5	Q1351	A-3	TP1851	A-4
		Q1355	C-3	TP1852	B-4
		Q1359	C-4	TP47B	A-2
		Q1361	C-3	TP47G	A-2
				TP47R	A-2

TH-37/42PA30E
DG-BRD TXNDG1UHSE

TH-37/42PA30E
DG-BRD TXNDG1UHSE

14.6. H and T-Board

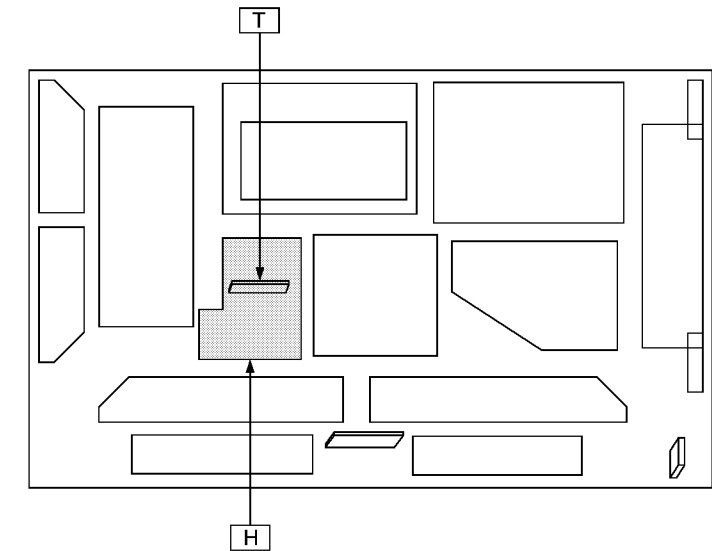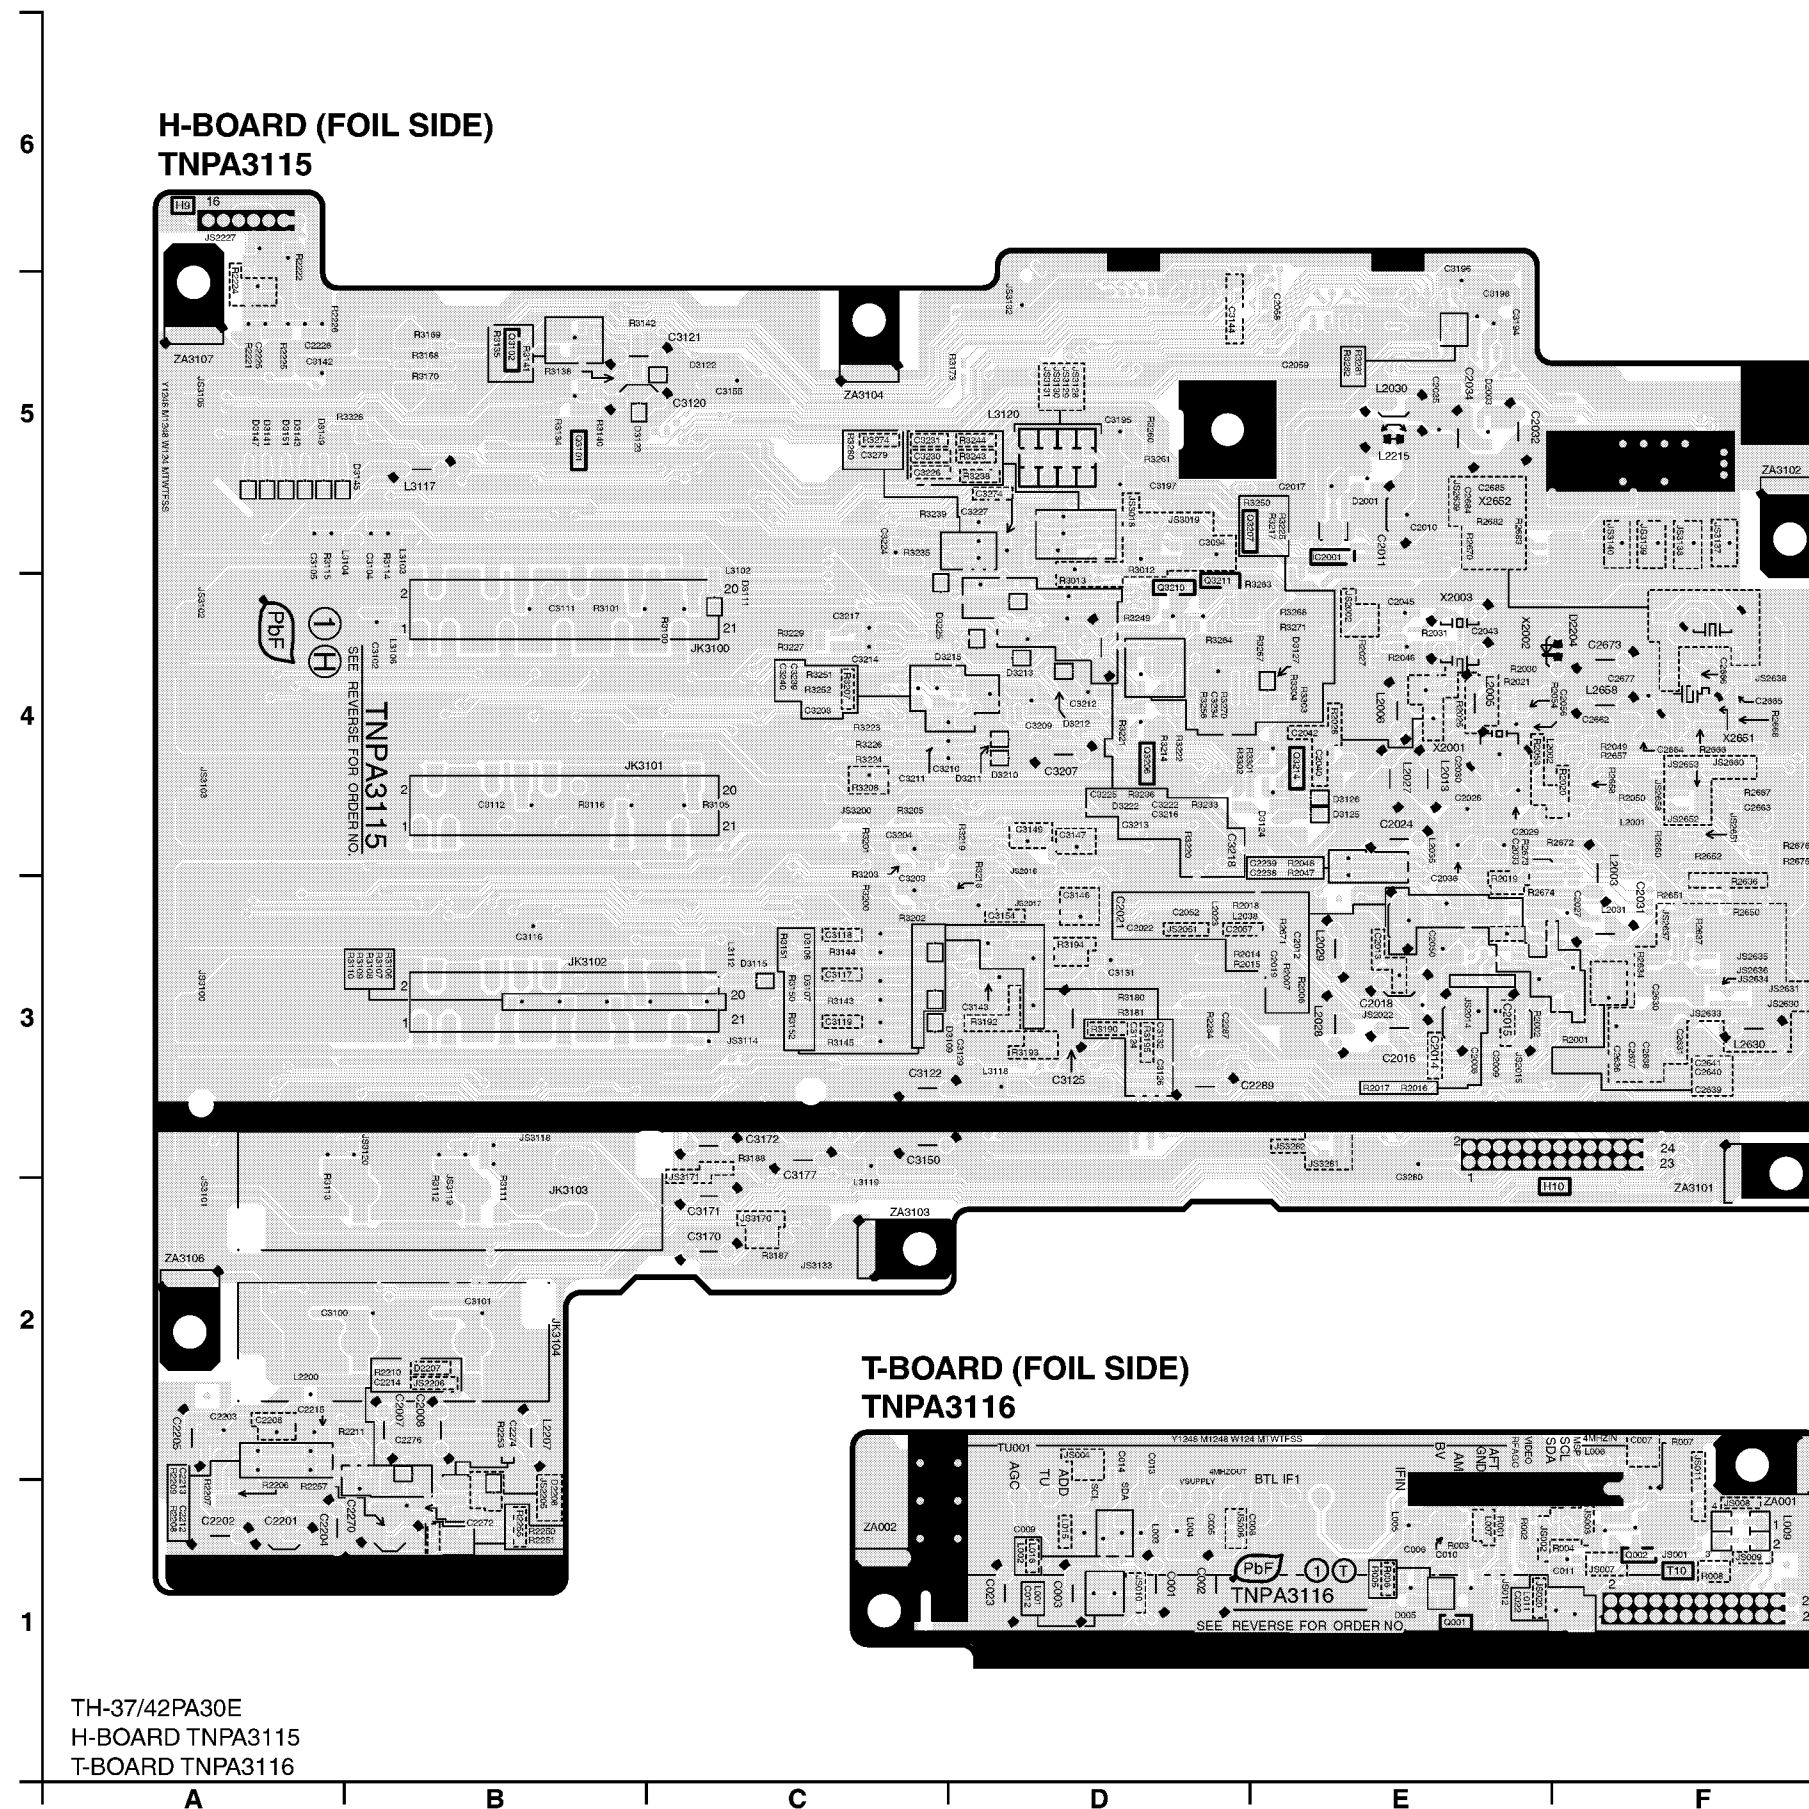

Parts Location



H-BOARD (FOIL SIDE)			
IC		TRANSISTOR	
IC2001	D-4	Q3101	B-5
		Q3102	B-5
		Q3206	D-4
		Q3207	D-4
		Q3210	D-4
		Q3211	D-4
		Q3214	D-4

Parts Location

T-BOARD (FOIL SIDE)			
TRANSISTOR			
Q001 Q002	E-1 F-1		

TH-37/42PA30E
H-BOARD TNPA3115
T-BOARD TNPA3116

H-BOARD (COMPONENT SIDE)
TNPA3115

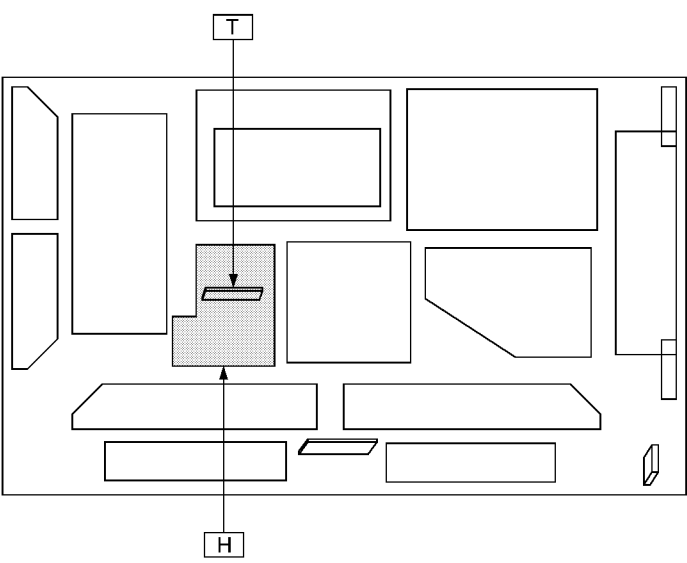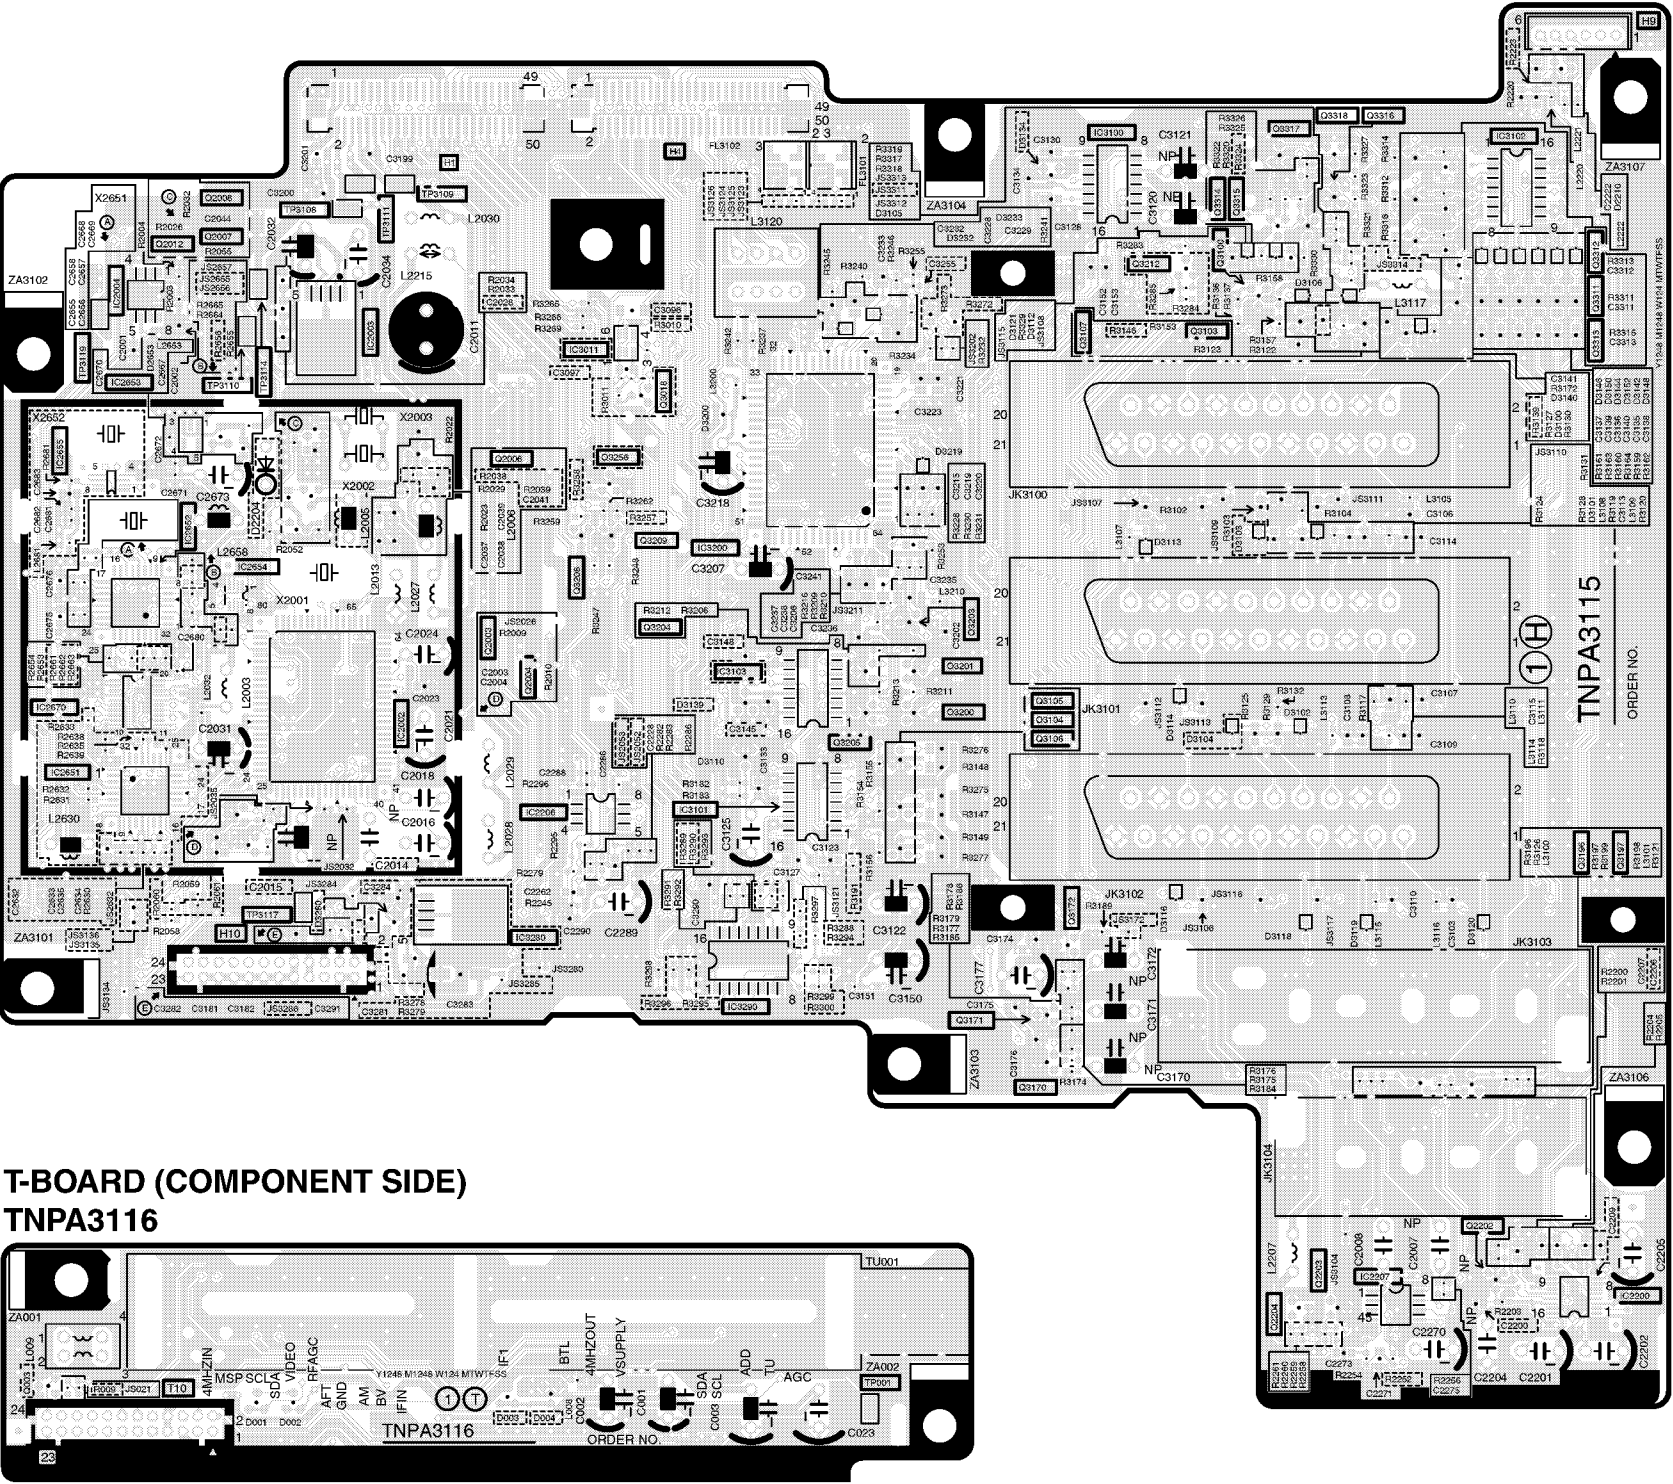

Parts Location

H-BOARD (COMPONENT SIDE)					
IC		TRANSISTOR		TP	
IC2002	B-3	Q2003	C-4	Q3203	D-4
IC2003	B-5	Q2004	C-4	Q3204	C-4
IC2004	A-5	Q2006	C-4	Q3205	D-3
IC2200	F-2	Q2007	B-5	Q3208	C-4
IC2206	C-3	Q2008	B-5	Q3209	C-4
IC2207	E-2	Q2012	A-5	Q3212	E-5
IC2651	A-3	Q2202	F-2	Q3256	C-4
IC2652	A-4	Q2203	E-2	Q3311	F-5
IC2653	A-5	Q2204	E-1	Q3313	F-5
IC2654	B-4	Q3018	C-4	Q3314	E-5
IC2655	A-4	Q3100	E-5	Q3315	E-5
IC2670	A-3	Q3103	E-5	Q3316	E-5
IC3011	C-5	Q3104	D-3	Q3317	E-5
IC3100	E-5	Q3105	D-3	Q3318	E-5
IC3101	C-3	Q3106	D-3		
IC3102	F-5	Q3107	D-5		
IC3103	C-4	Q3170	D-2	TP3108	B-5
IC3200	C-4	Q3171	D-2	TP3109	B-5
IC3280	C-3	Q3172	D-2	TP3110	A-5
IC3290	C-2	Q3196	F-3	TP3111	B-5
		Q3197	F-3	TP3114	B-5
		Q3200	D-3	TP3117	B-3
		Q3201	D-4		


Parts Location

T-BOARD (COMPONENT SIDE)			
TP			
TP001	D-1		


TH-37/42PA30E
H-BOARD TNPA3115
T-BOARD TNPA3116

TH-37/42PA30E
H-BOARD TNPA3115
T-BOARD TNPA3116


14.7. C1-Board (For TH-37PA30E)

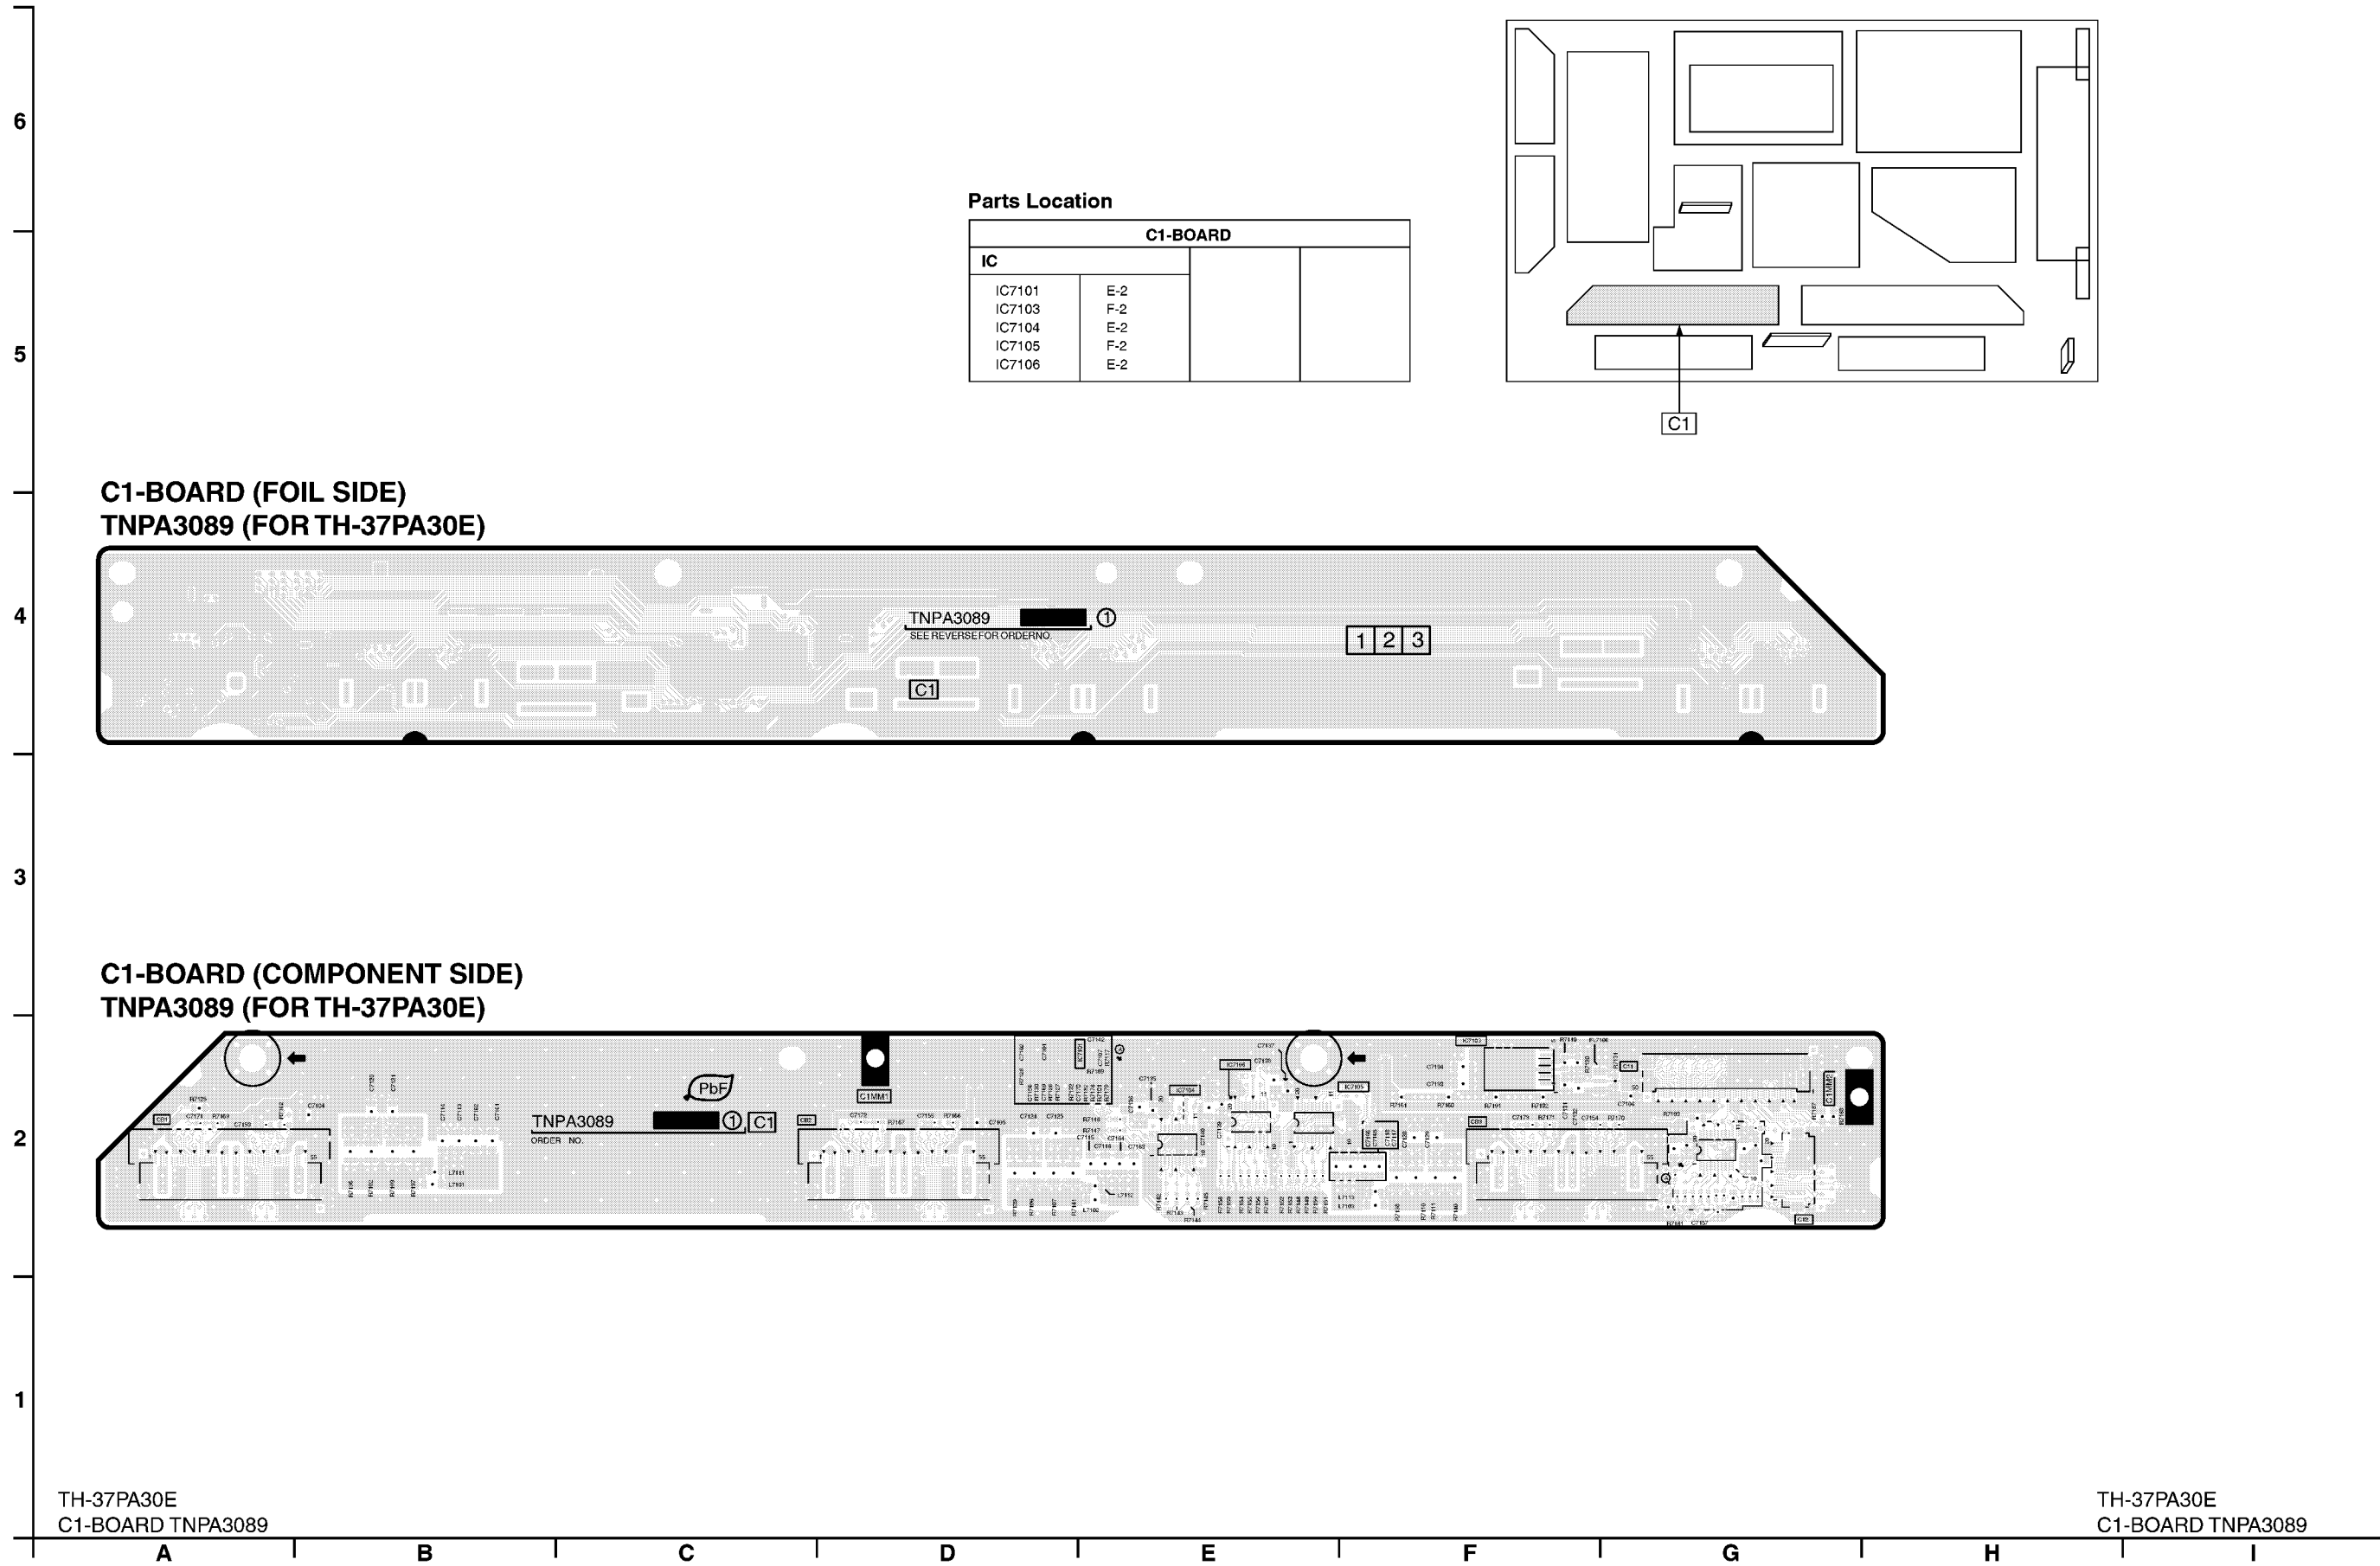


14.8. C1-Board (For TH-42PA30E)

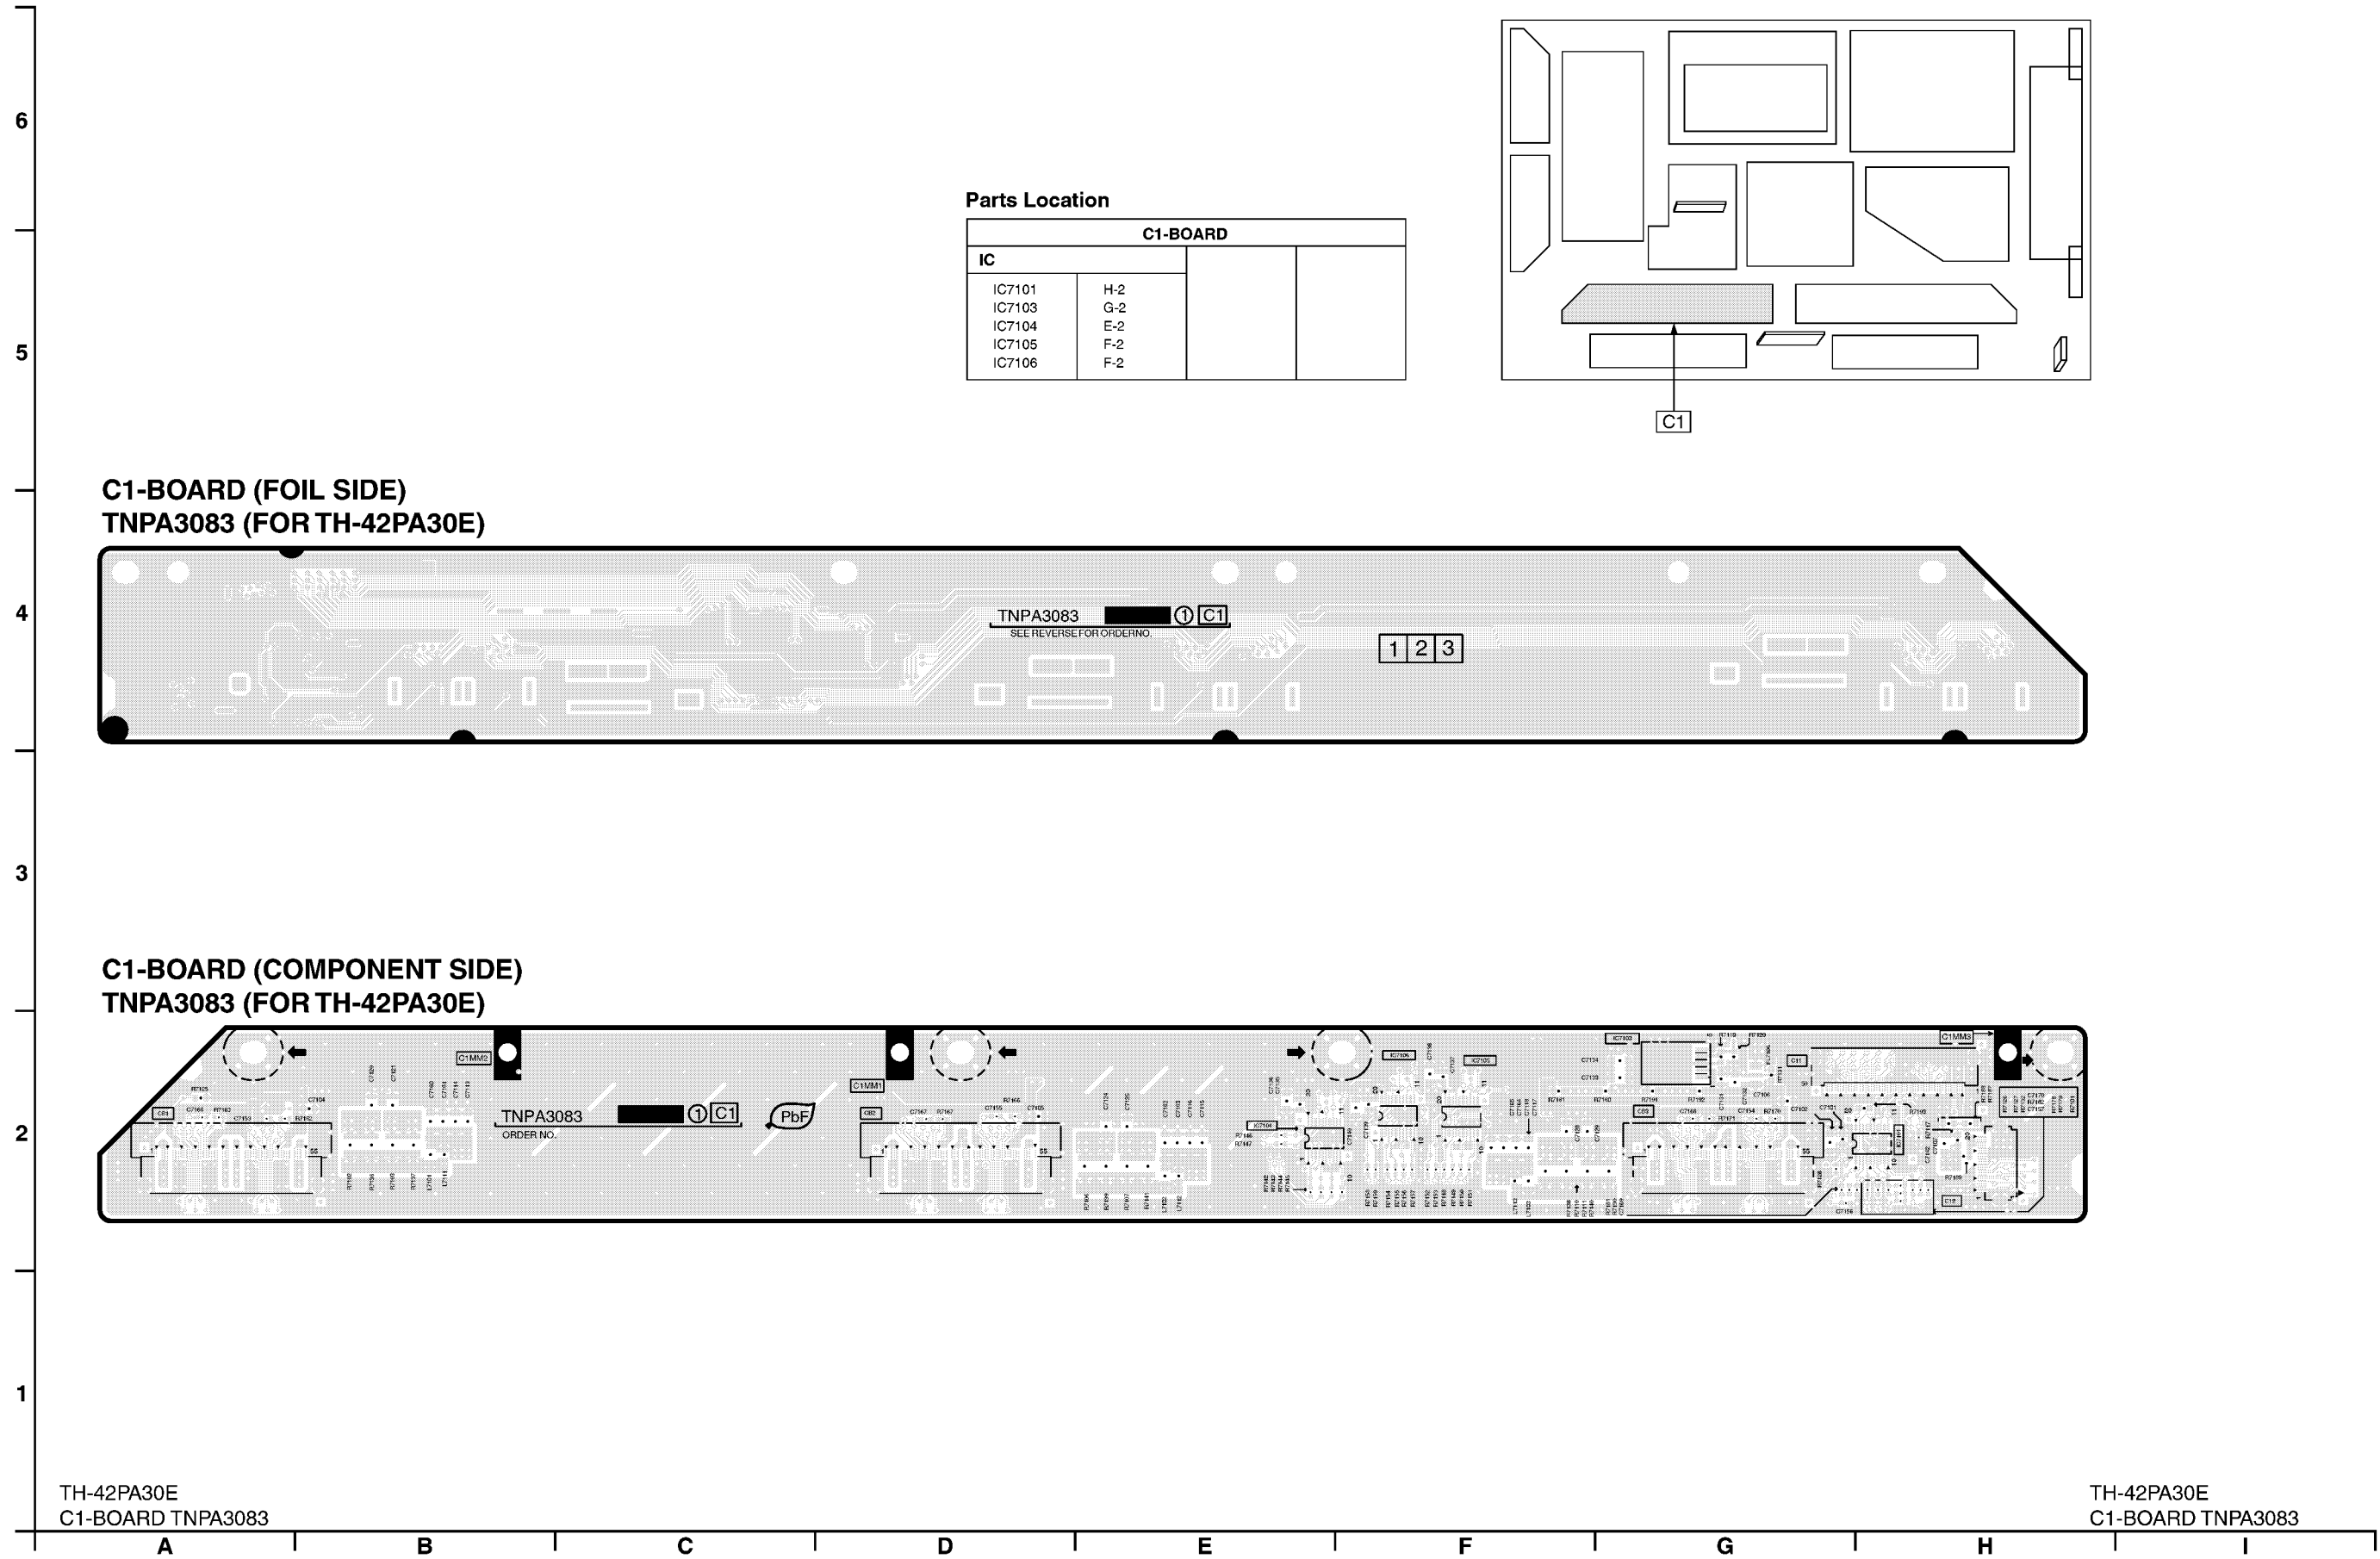


14.9. C2-Board (For TH-37PA30E)

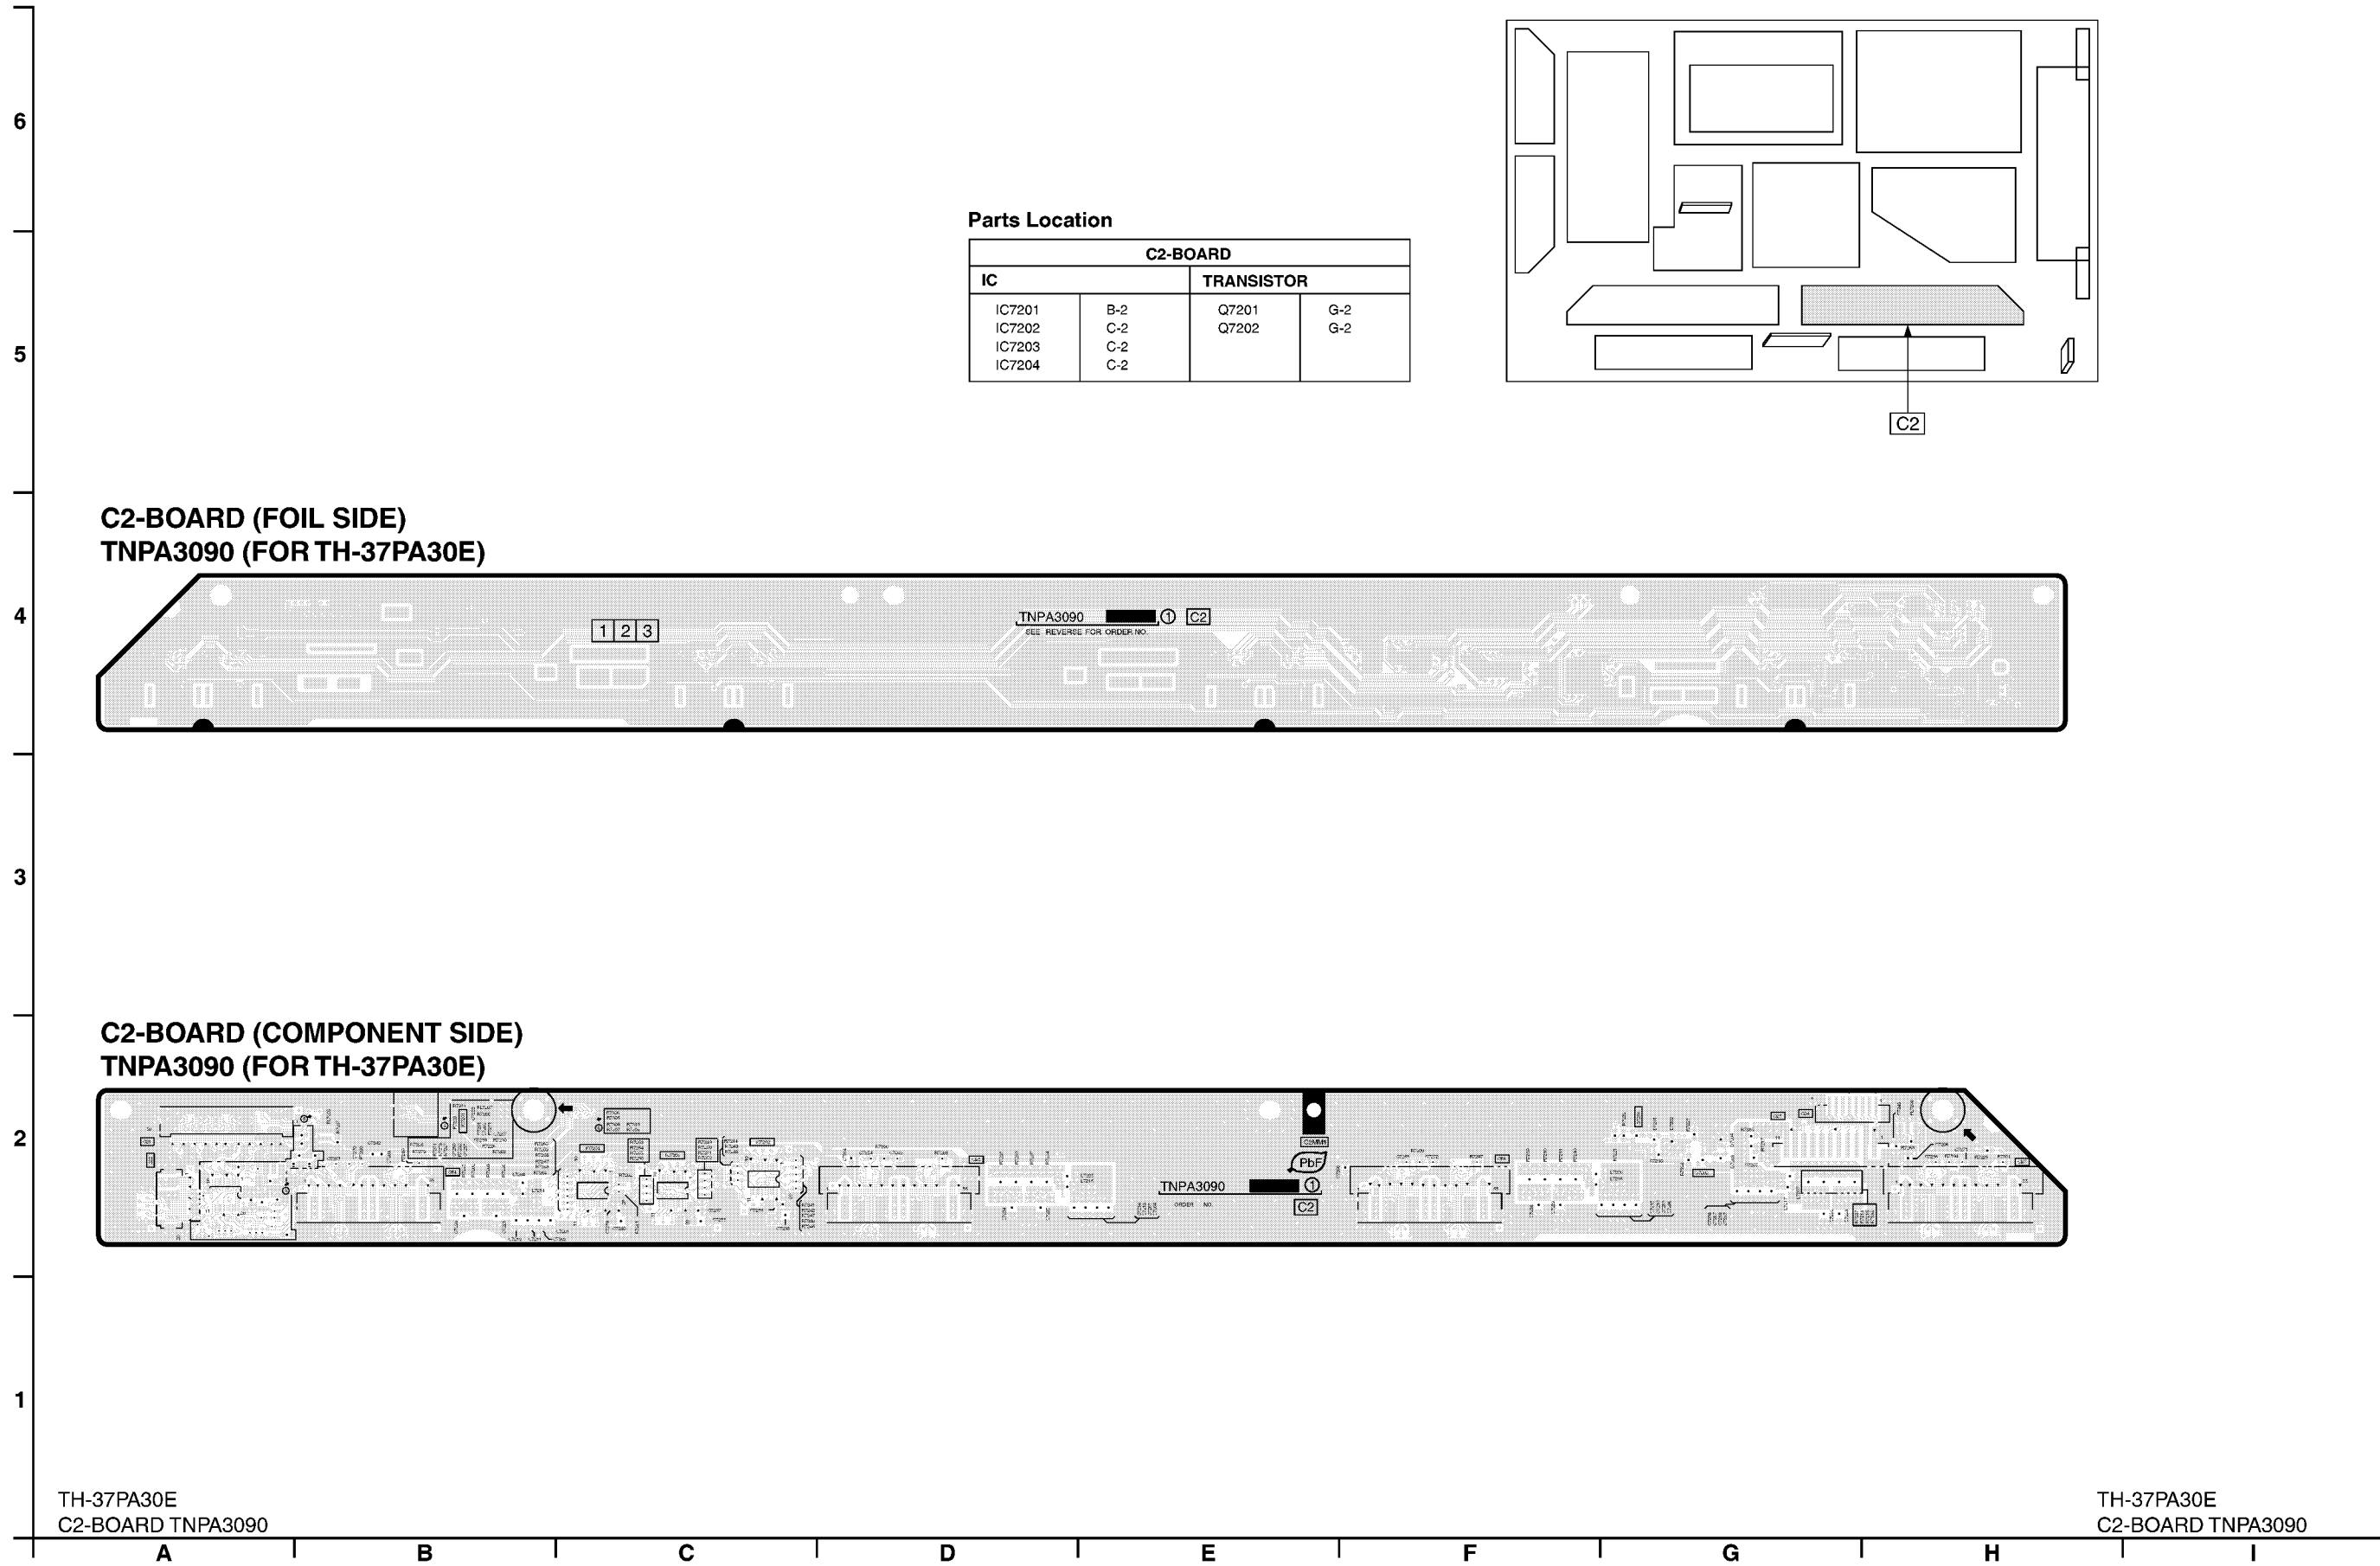

14.10. C2-Board (For TH-42PA30E)

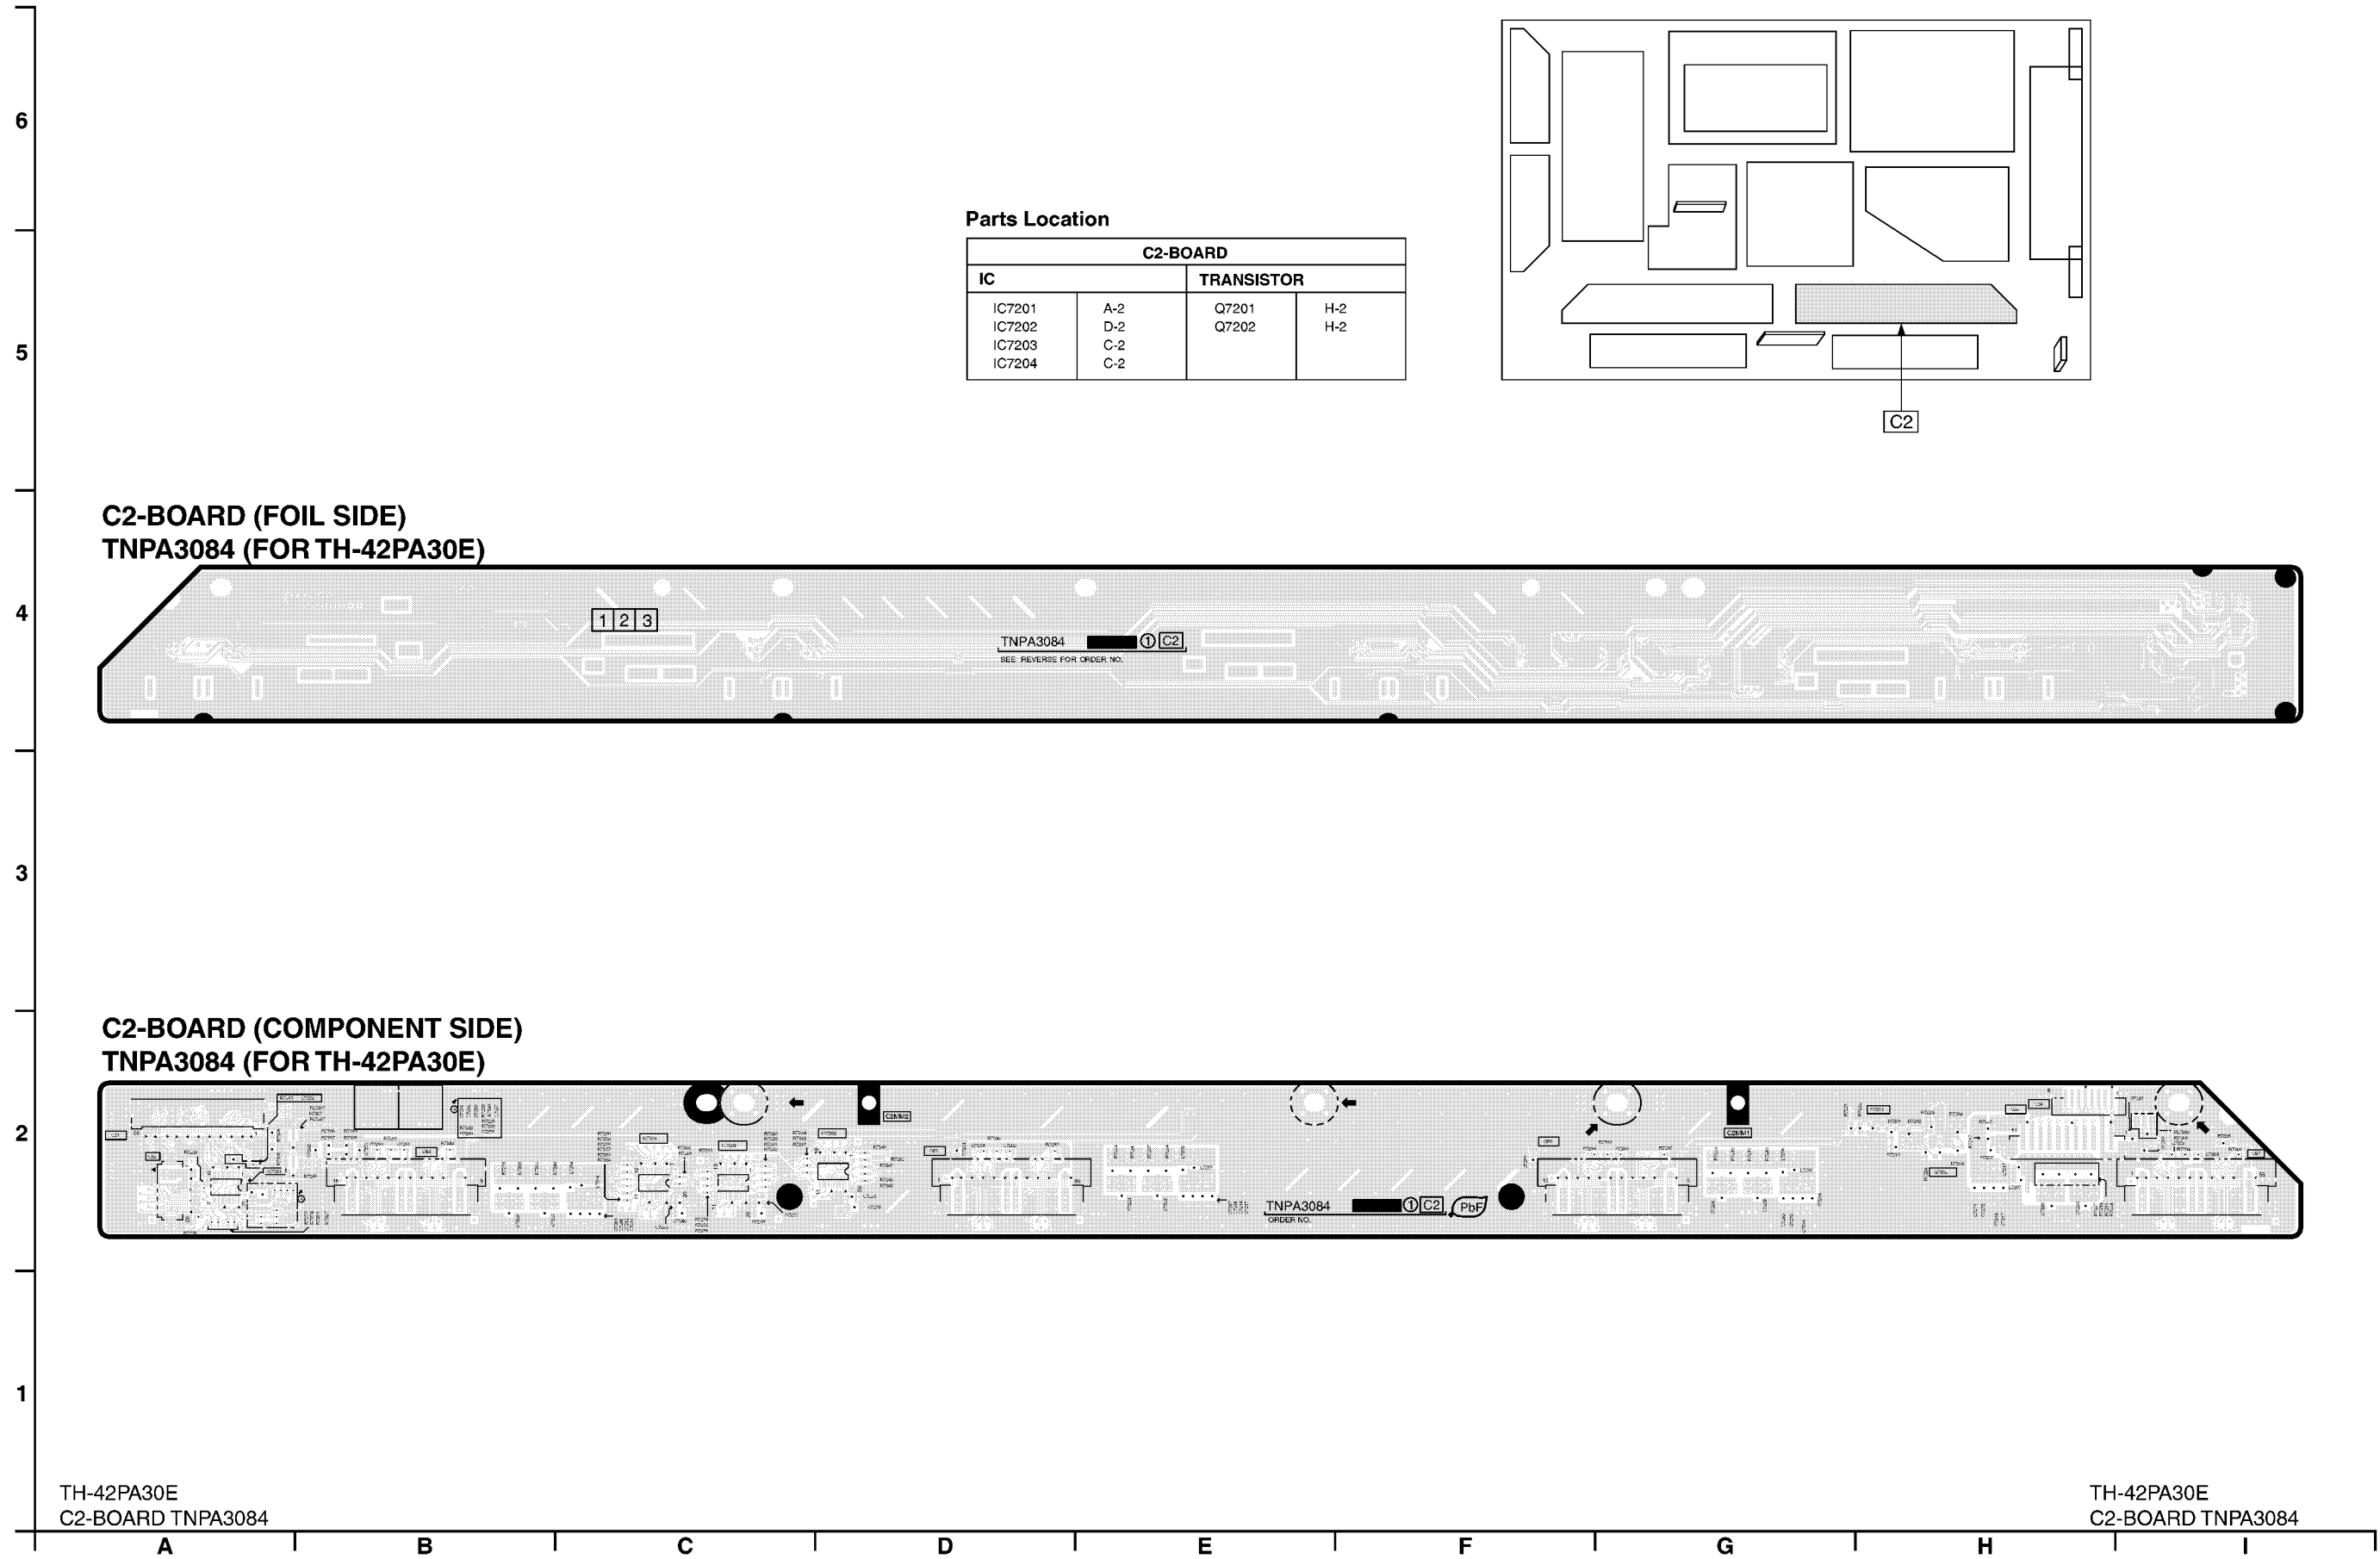

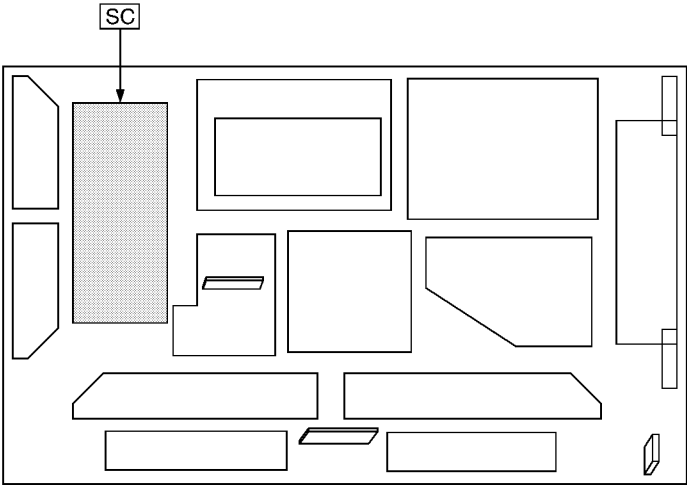

Parts Location


SC-BOARD (FOIL SIDE)					
TRANSISTOR		TP			
Q6491	G-2	TP6001	B-1	TP6033	C-1
Q6492	G-2	TP6002	A-1	TP6034	C-1
Q6550	C-5	TP6004	A-1	TP6035	C-1
Q6601	B-2	TP6005	A-1	TP6036	B-4
Q6602	C-2	TP6006	B-1	TP6037	A-4
Q6605	C-2	TP6007	B-1	TP6038	D-1
Q6606	D-2	TP6008	B-1	TP6039	D-1
Q6621	F-2	TP6009	B-1	TP6040	A-5
Q6624	F-2	TP6010	D-1	TP6041	A-5
Q6671	A-4	TP6011	D-1	TP6042	A-5
Q6672	A-4	TP6012	E-1	TP6043	B-5
Q6673	A-3	TP6013	E-1	TP6044	A-5
		TP6014	D-1	TP6045	B-5
		TP6015	D-1	TP6046	H-5
		TP6016	E-1	TP6047	H-5
		TP6017	D-1	TP6048	H-5
		TP6018	D-1	TP6049	H-5
		TP6019	E-1	TP6050	G-5
		TP6021	E-1	TP6051	G-5
		TP6022	D-1	TP6051	H-5
		TP6023	D-1	TP6052	E-1
		TP6024	E-1	TP6054	C-5
		TP6025	F-1	TP6055	C-5
		TP6026	D-1	TP6056	C-5
		TP6027	D-1	TP6057	C-5
		TP6028	D-1	TP6058	C-5
		TP6029	D-1	TP6060	G-5
		TP6030	D-1	TP6061	G-5
		TP6031	C-1	TP6062	F-5
		TP6032	C-1	TP6063	F-5
				TP6064	G-2

Parts Location

SC-BOARD (COMPONENT SIDE)					
IC		TRANSISTOR			
IC6434	B-2	Q6451	A-2	Q6549	G-4
IC6451	B-2	Q6452	A-2	Q6550	G-4
IC6452	B-2	Q6454	B-2	Q6551	D-3
IC6453	B-4	Q6455	A-2	Q6552	D-3
IC6454	B-4	Q6461	A-1	Q6553	C-4
IC6455	A-4	Q6462	A-1	Q6554	D-4
IC6456	B-2	Q6463	A-1	Q6555	B-3
IC6458	A-4	Q6471	A-3	Q6556	C-4
IC6467	C-2	Q6472	A-3	Q6581	C-1
IC6469	B-3	Q6474	B-3	Q6582	D-3
IC6471	B-3	Q6475	A-3	Q6601	G-2
IC6472	B-4	Q6476	B-4	Q6602	G-2
IC6474	B-3	Q6477	B-4	Q6603	E-2
IC6480	B-1	Q6491	C-2	Q6604	E-2
IC6491	C-1	Q6492	C-2	Q6605	F-2
IC6501	A-4	Q6501	C-4	Q6606	F-2
IC6502	A-4	Q6502	E-3	Q6611	F-2
IC6503	B-4	Q6503	D-4	Q6612	F-2
IC6504	B-4	Q6504	D-4	Q6613	F-2
IC6505	A-3	Q6511	C-5	Q6614	F-2
IC6506	C-3	Q6512	C-4	Q6621	C-2
IC6507	C-3	Q6520	D-3	Q6624	D-2
IC6508	C-3	Q6521	E-4	Q6641	H-4
IC6509	C-3	Q6522	E-3	Q6642	H-3
IC6510	B-3	Q6523	E-3	Q6671	H-4
IC6511	C-4	Q6524	F-3	Q6672	H-3
IC6512	E-3	Q6525	F-3	Q6673	H-3
IC6517	B-1	Q6526	F-3		
IC6521	E-3	Q6527	G-3		
IC6541	E-4	Q6528	G-3		
IC6542	C-4	Q6529	G-3		
IC6543	D-4	Q6530	E-3		
IC6581	C-1	Q6541	E-4		
IC6601	F-2	Q6542	E-4		
IC6602	D-2	Q6543	F-4		
IC6603	H-4	Q6544	F-4		
IC6604	H-4	Q6545	F-4		
IC6605	E-2	Q6546	F-4		
IC6606	E-1	Q6547	G-4		
IC6607	E-2	Q6548	G-4		

TP	
TP15V	H-1
TPVSC1	C-5
TPVBK	H-4
TPVSCN	C-3
TPVSET	C-2

SC-BEARD (COMPONENT SIDE)
TNPA3116 (FOR TH-42PA30E)
TNPA3106AB (FOR TH-37PA30E)

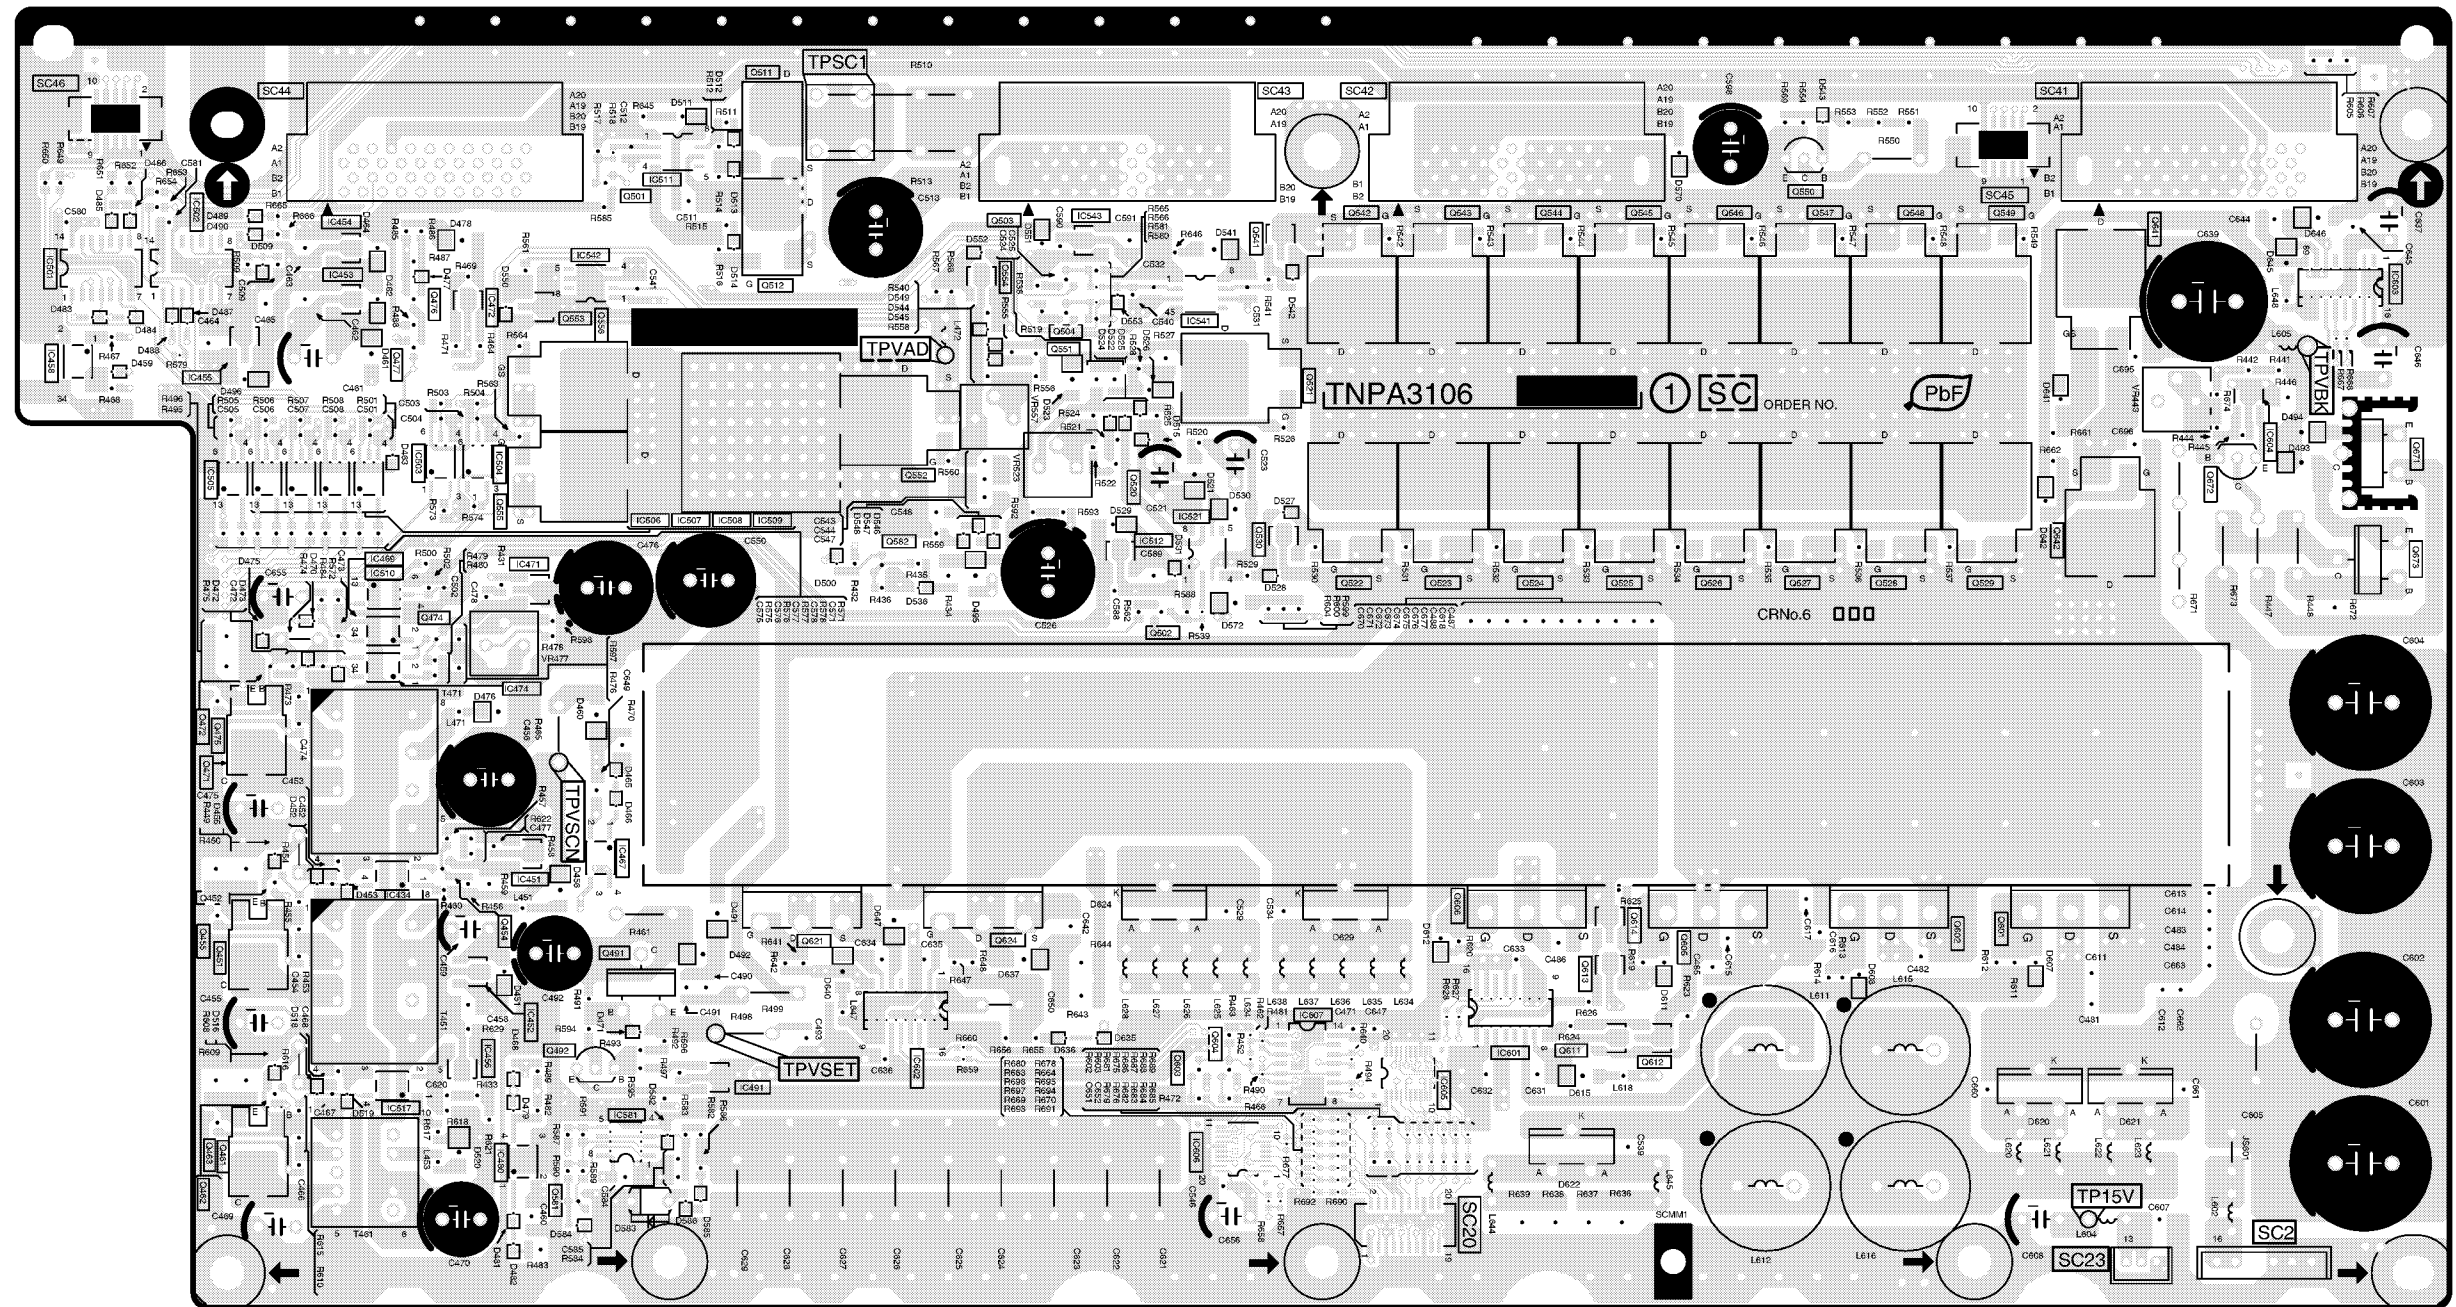


TH-37PA30E
SC-BEARD TNPA3106AB

TH-42PA30E
SC-BEARD TNPA3116




TH-37PA30E
SC-BEARD TNPA3106AB

TH-42PA30E
SC-BEARD TNPA3116

14.12. SU-Board (For TH-37PA30E)

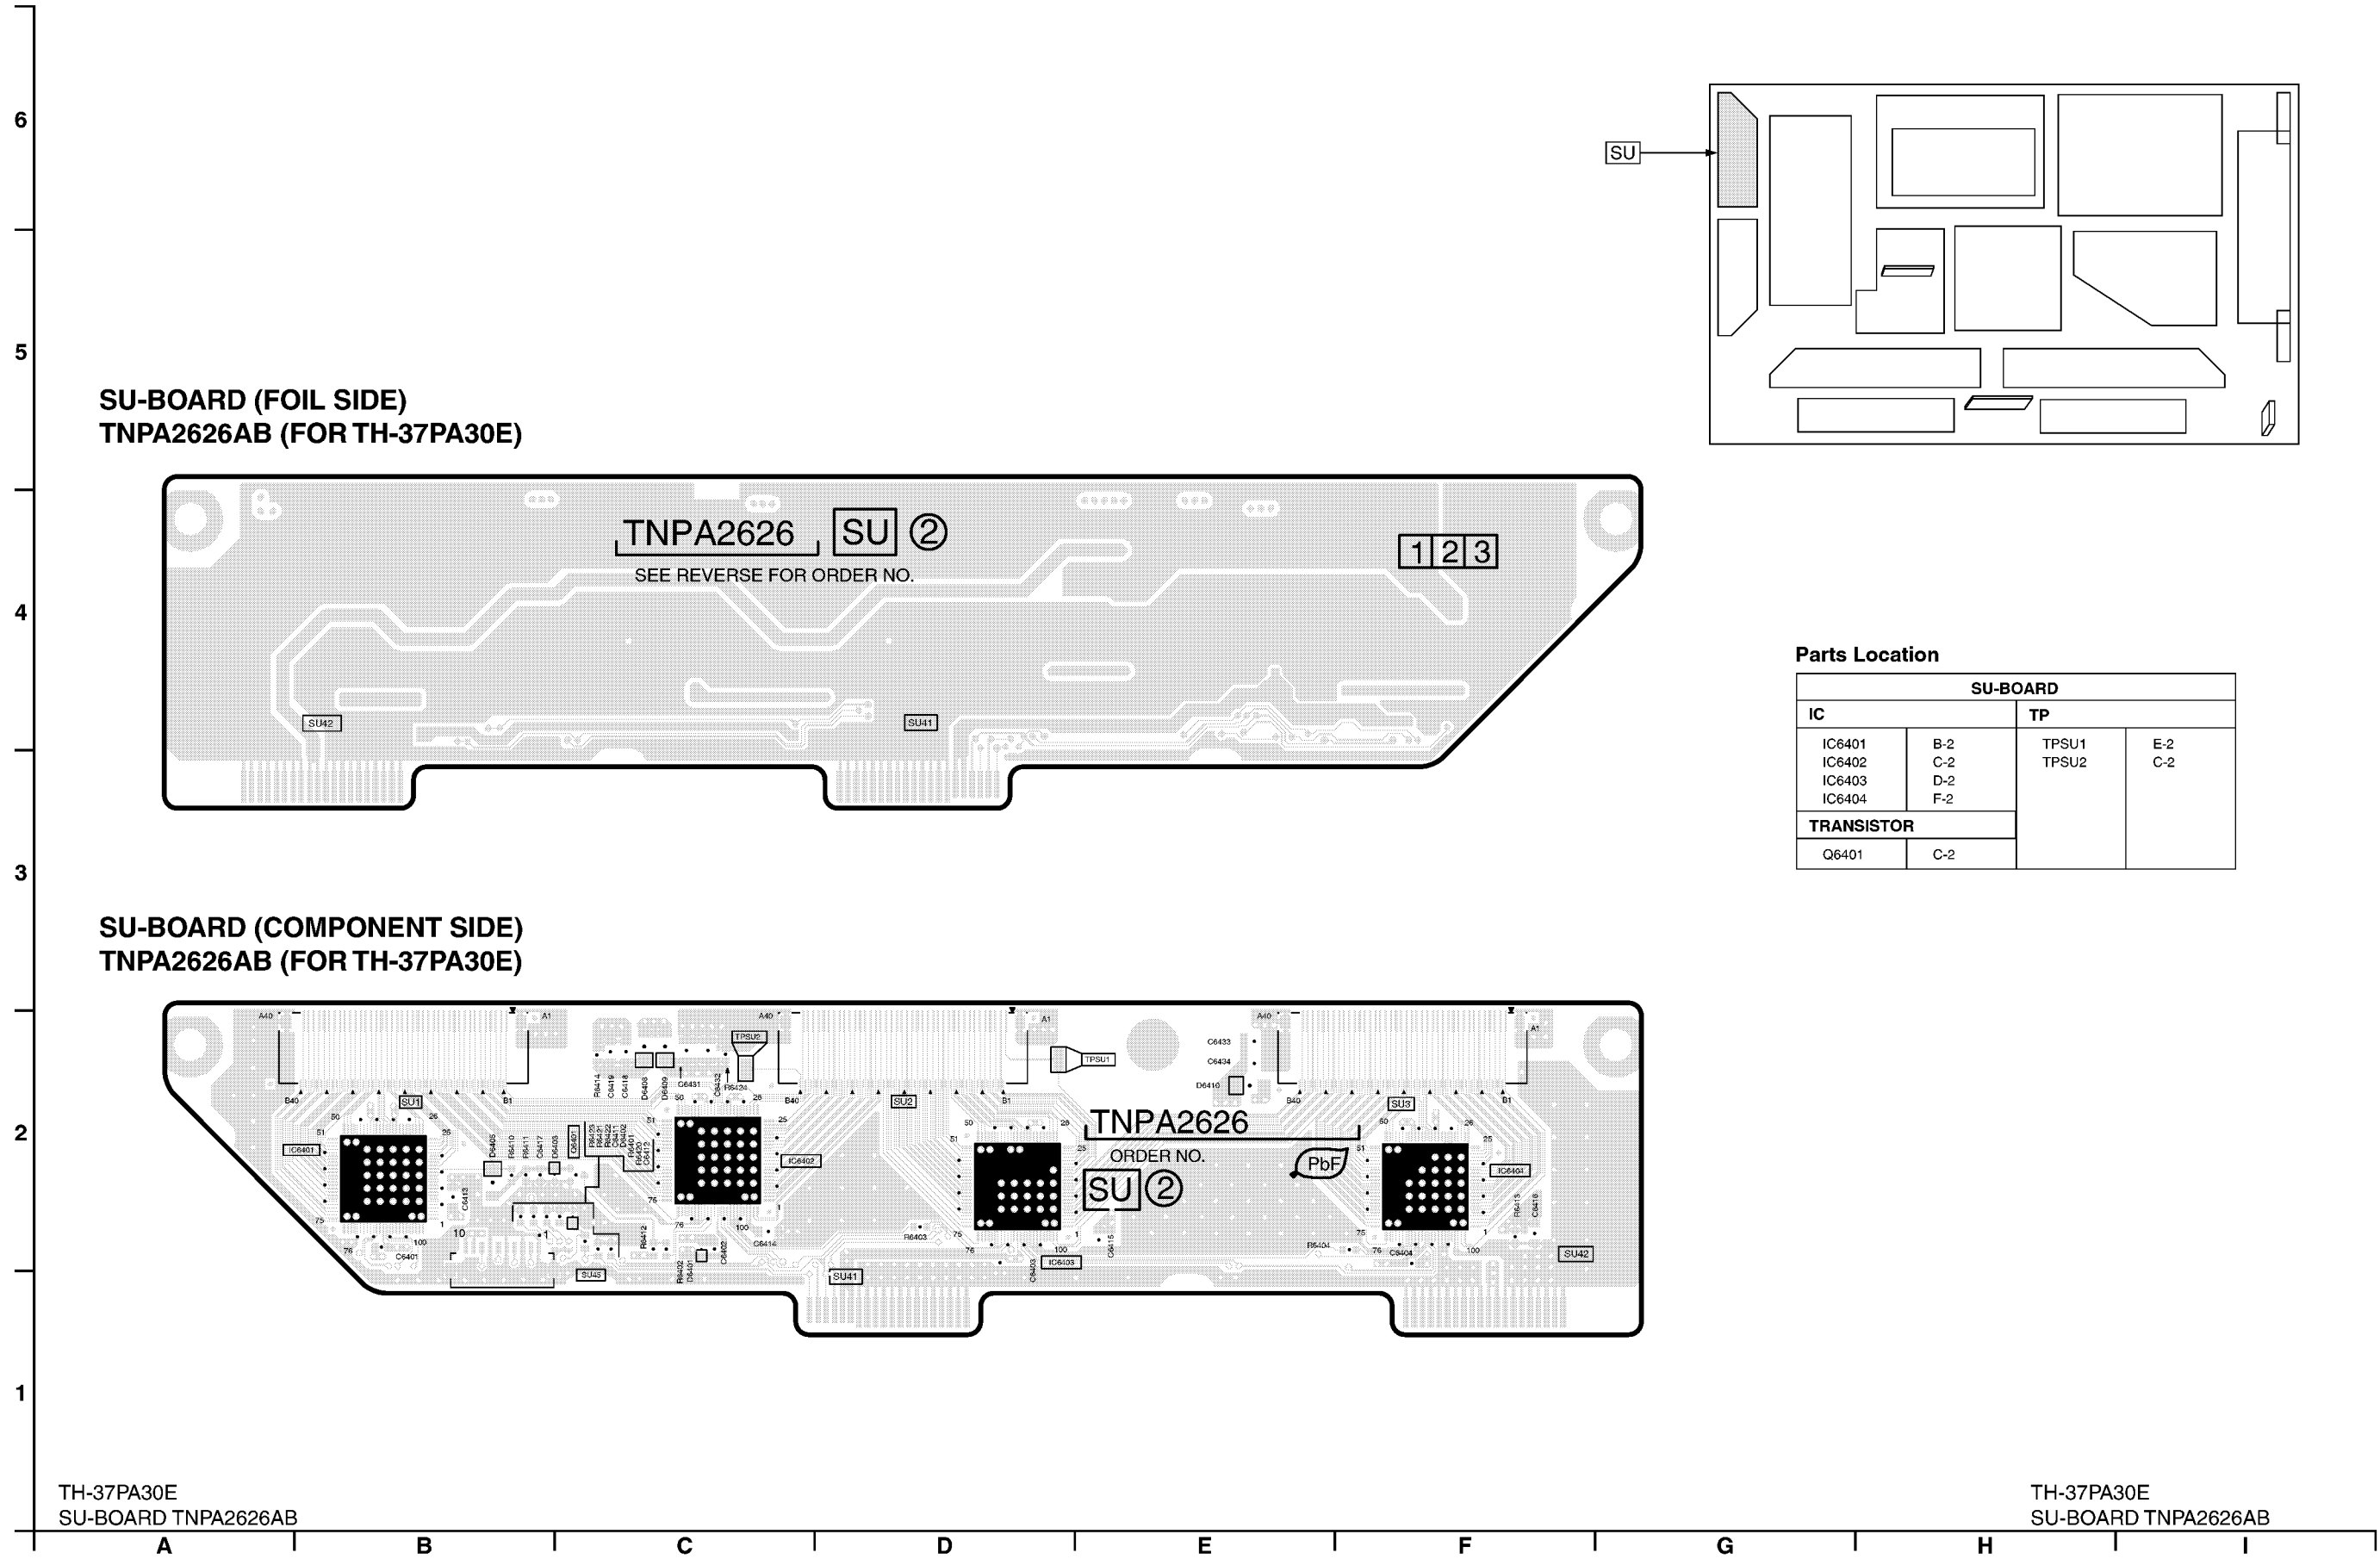


14.13. SU-Board (For TH-42PA30E)

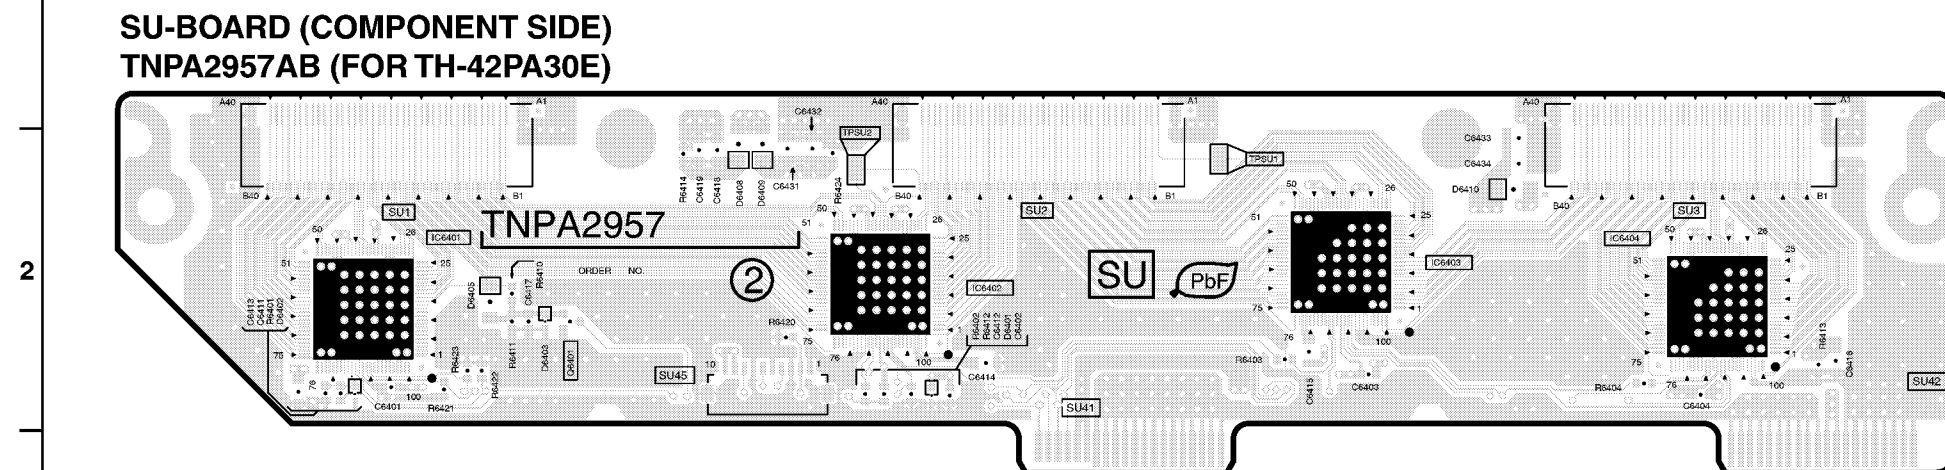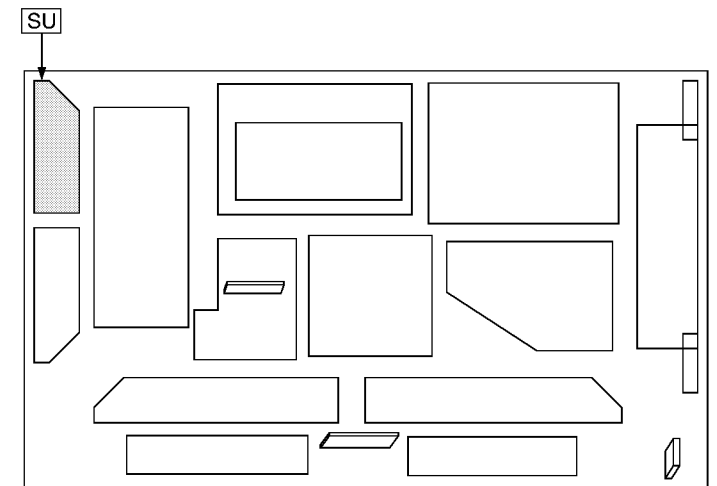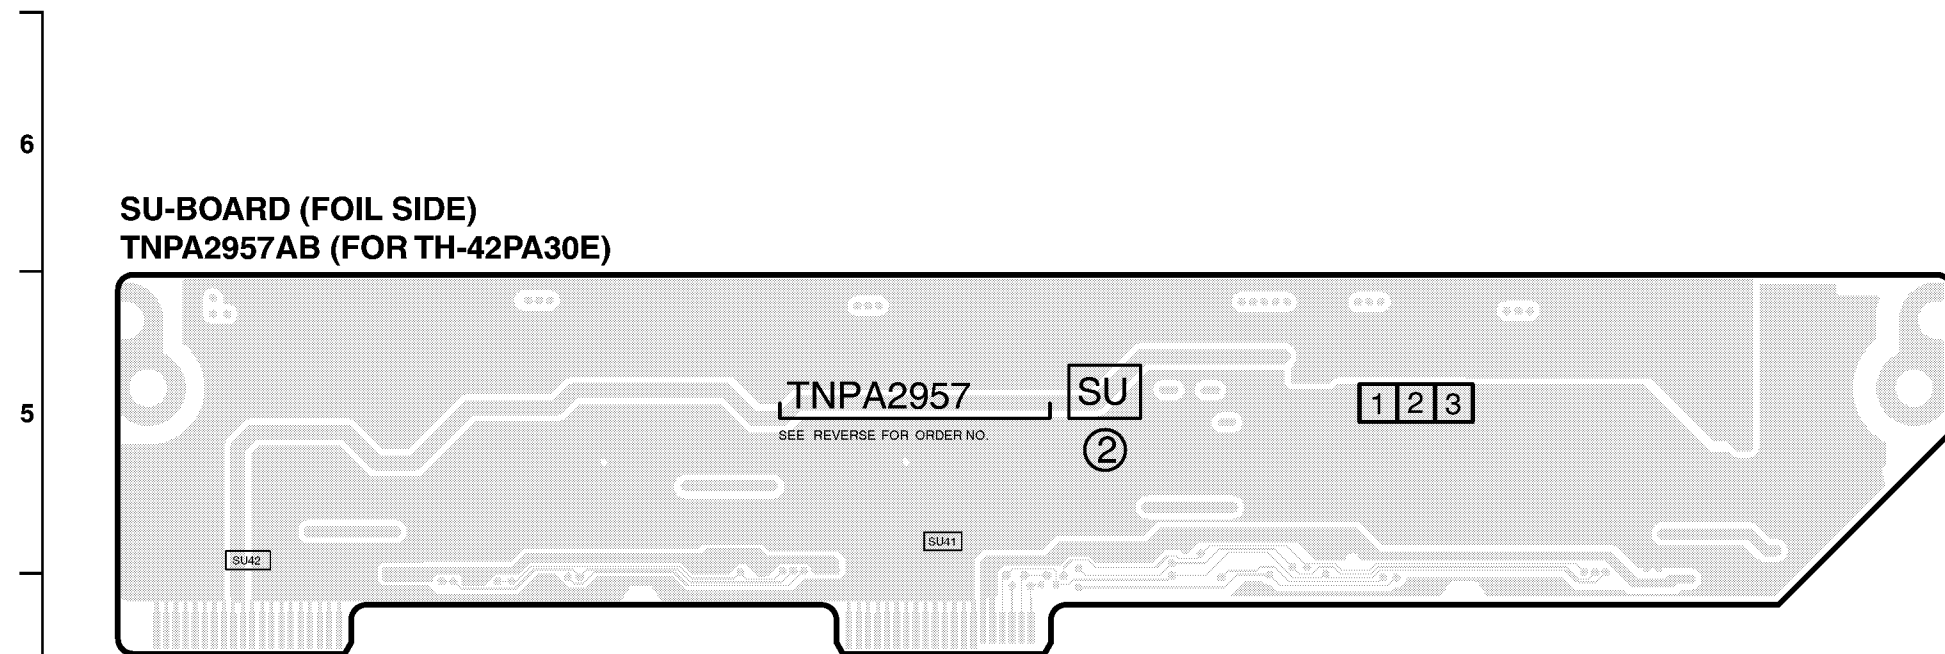


Parts Location

SU-BOARD			
IC		TP	
IC6401	B-2	TPSU1	E-2
IC6402	D-2	TPSU2	C-2
IC6403	E-2		
IC6404	F-2		
TRANSISTOR			
Q6401	B-2		

14.14. SD-Board (For TH-37PA30E)

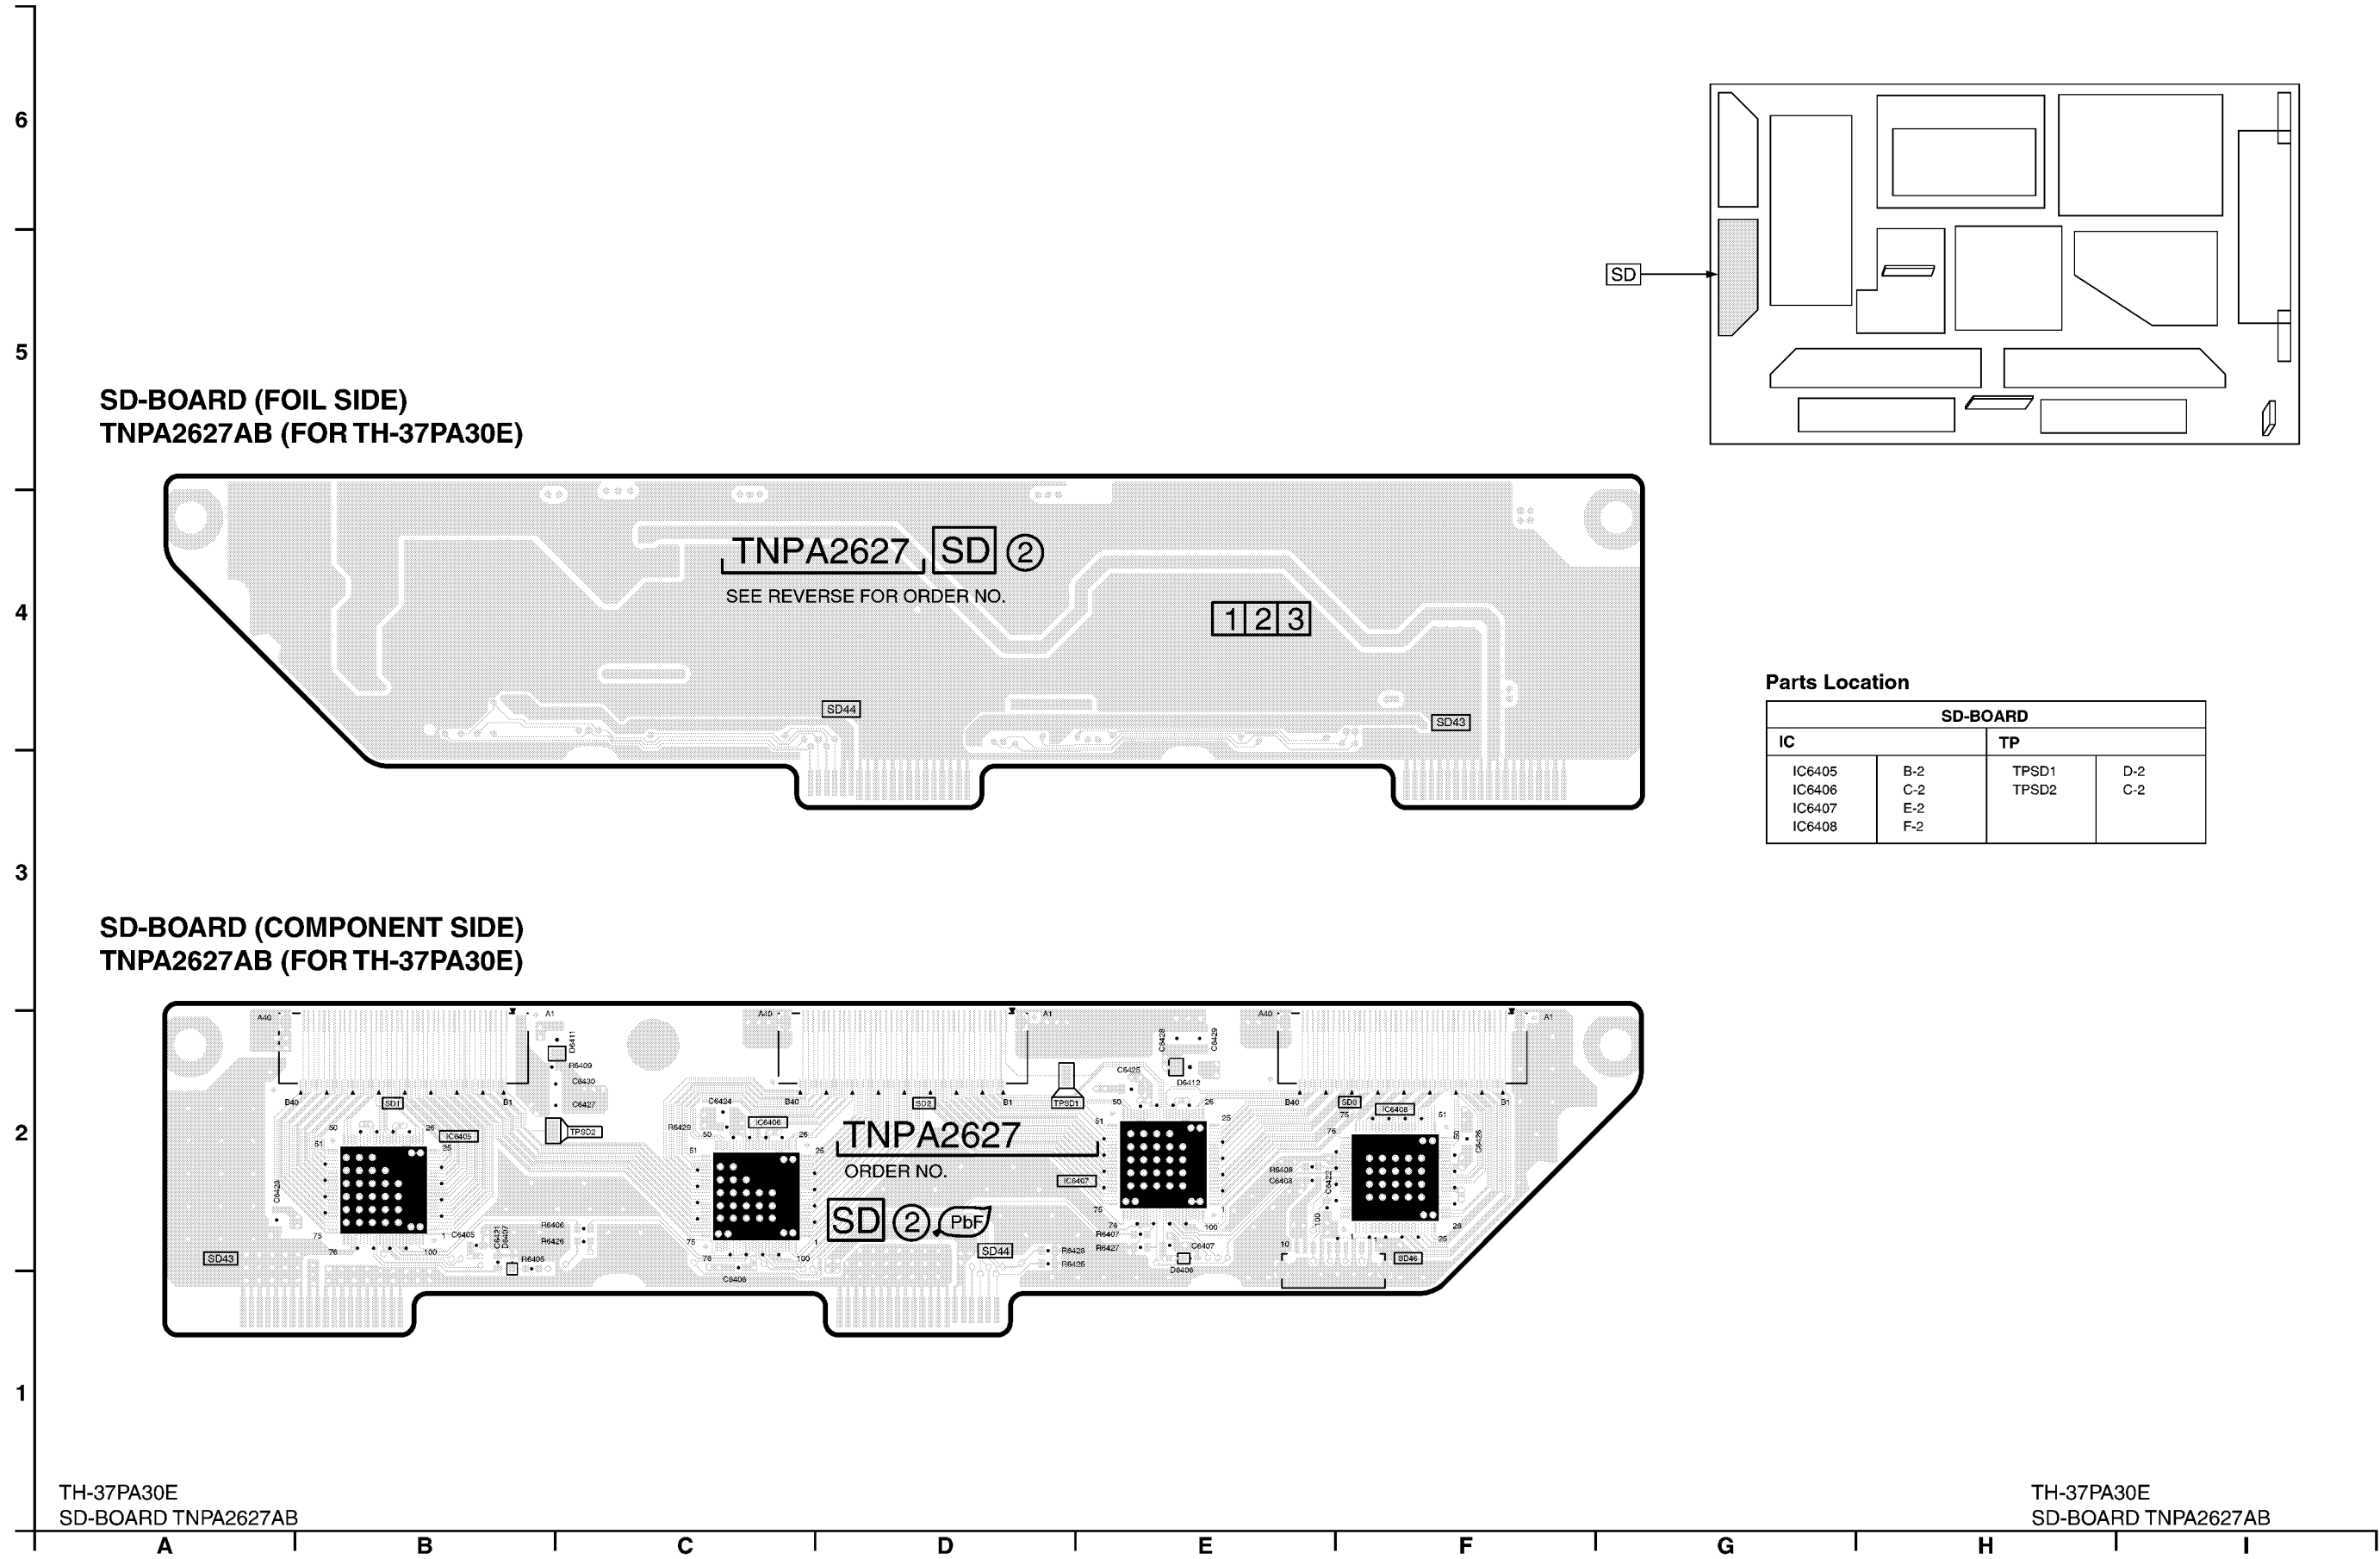

14.15. SD-Board (For TH-42PA30E)

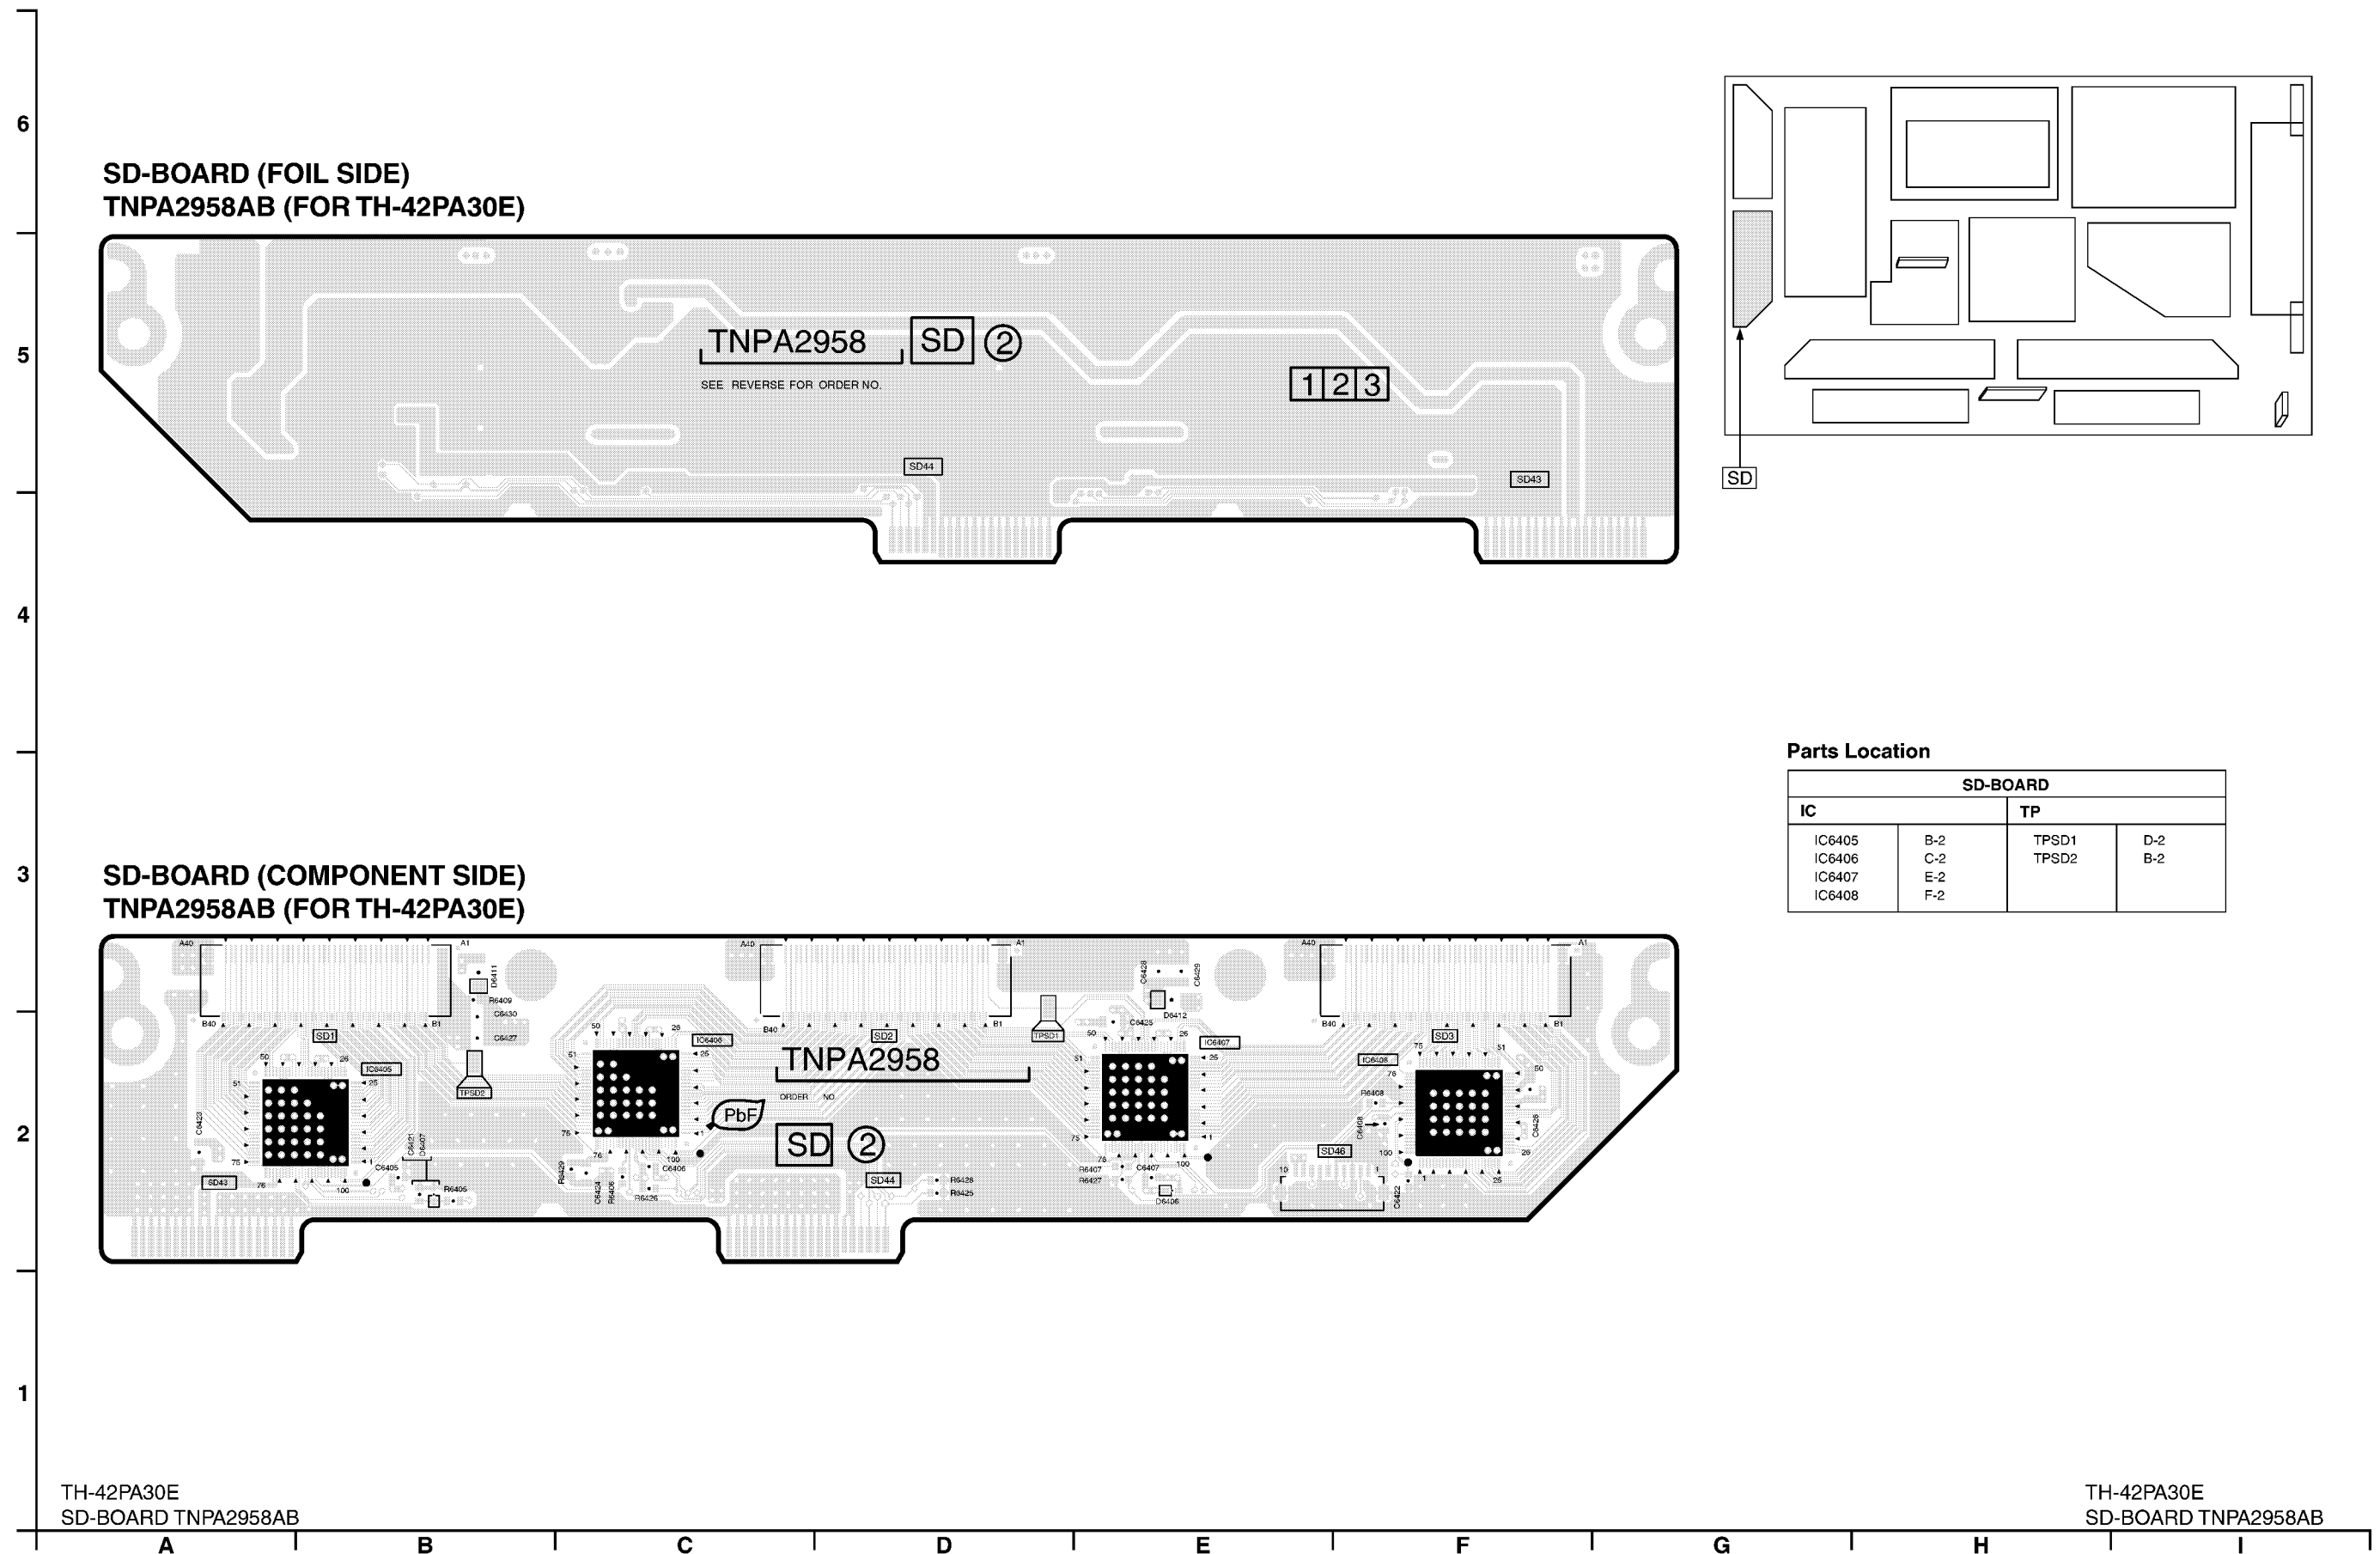


14.16. SS-Board


6
5
4
3
2
1

Parts Location

SS-BOARD (FOIL SIDE)					
TRANSISTOR		TP			
Q6701	G-2	TP6001	H-1	TP6016	A-2
Q6702	F-2	TP6002	H-1	TP6017	A-2
Q6705	F-2	TP6003	F-1	TP6018	A-2
Q6706	E-2	TP6004	E-1	TP6019	A-2
Q6721	C-2	TP6005	H-2	TP6020	A-2
Q6724	C-2	TP6006	H-2	TP6021	A-2
Q6751	F-1	TP6007	H-1	TP6022	A-2
Q6752	F-1	TP6008	H-1	TP6023	A-2
Q6753	F-1	TP6009	H-2	TP6024	G-1
		TP6010	H-2	TP6025	G-1
		TP6011	H-2	TP6026	G-1
		TP6012	H-2	TP6027	F-1
		TP6013	A-1	TP6028	E-1
		TP6014	A-1	TP6029	E-1
		TP6015	A-2	TP6030	E-1
				TP6031	E-1

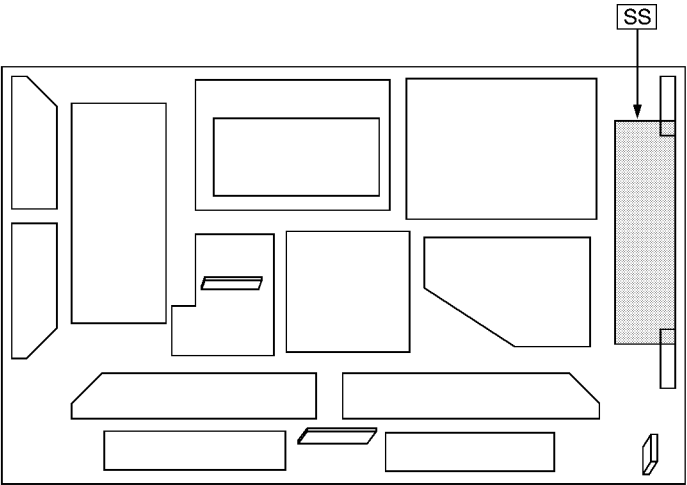

SS-BOARD (FOIL SIDE)
TNPA3107 (TH-42PA30E)
TNPA3107AB (TH-37PA30E)

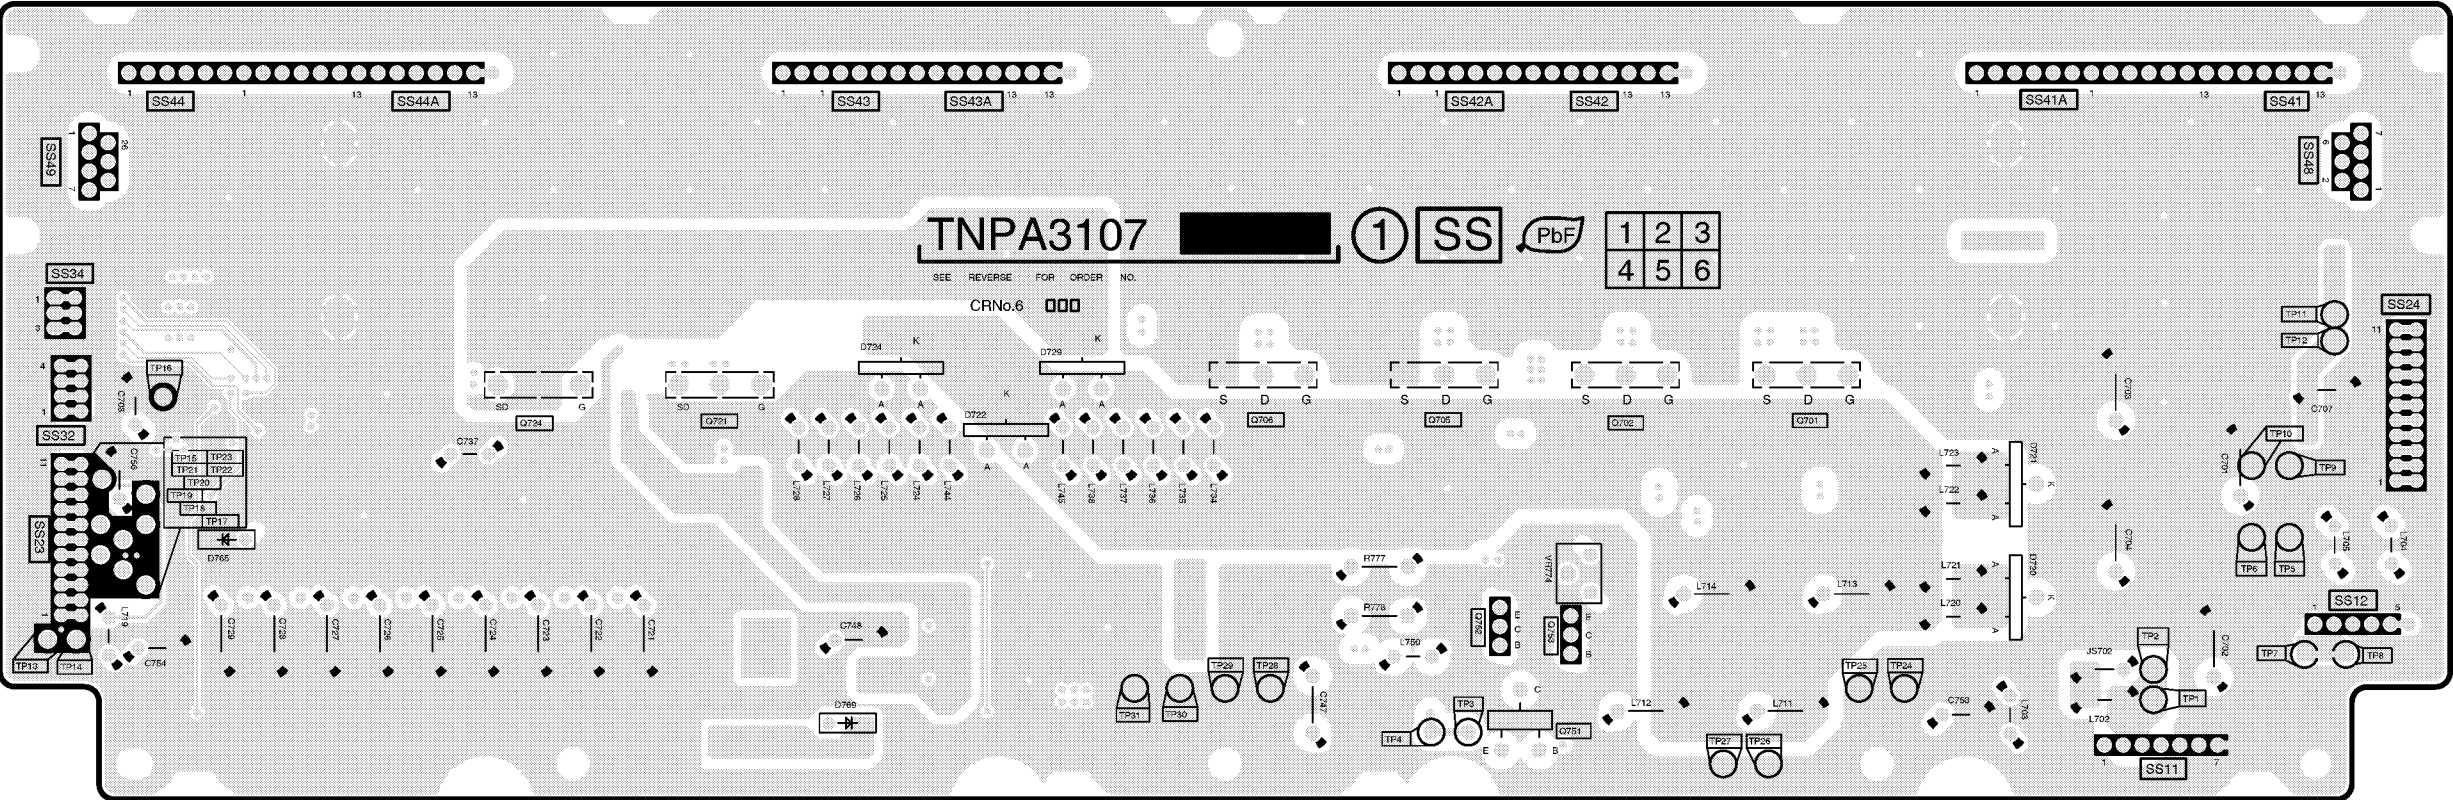


TH-37PA30E TH-42PA30E TH-37PA30E TH-42PA30E
SS-BOARD TNPA3107AB SS-BOARD TNPA3107 SS-BOARD TNPA3107AB SS-BOARD TNPA3107

A B C D E F G H I


6
5
4
3
2
1

Parts Location

SS-BOARD (COMPONENT SIDE)					
IC		TRANSISTOR		TP	
IC6701	D-2	Q6701	C-2	TPSS1	D-1
IC6702	G-2	Q6702	C-2	TPV15	B-1
IC6703	F-1	Q6705	D-2	TPVDA	A-2
IC6704	G-1	Q6706	E-2	TPVE	D-1
IC6705	H-2	Q6711	C-2	TPVSUS	B-1
IC6706	H-2	Q6712	C-2		
IC6711	D-2	Q6713	D-2		
		Q6714	E-2		
		Q6721	G-2		
		Q6724	G-2		
		Q6725	H-2		
		Q6741	E-2		
		Q6742	E-1		
		Q6745	F-1		
		Q6746	G-1		
		Q6751	D-1		
		Q6752	D-1		
		Q6753	D-1		
		Q6755	F-1		
		Q6756	I-2		

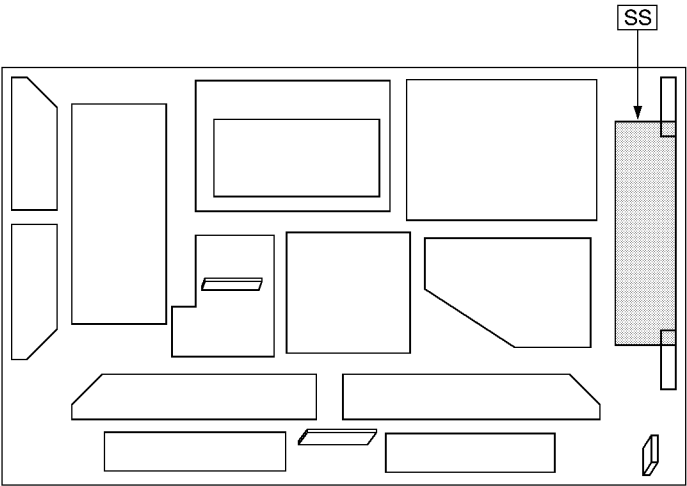


SS-BOARD (COMPONENT SIDE)
TNPA3107 (TH-42PA30E)
TNPA3107AB (TH-37PA30E)

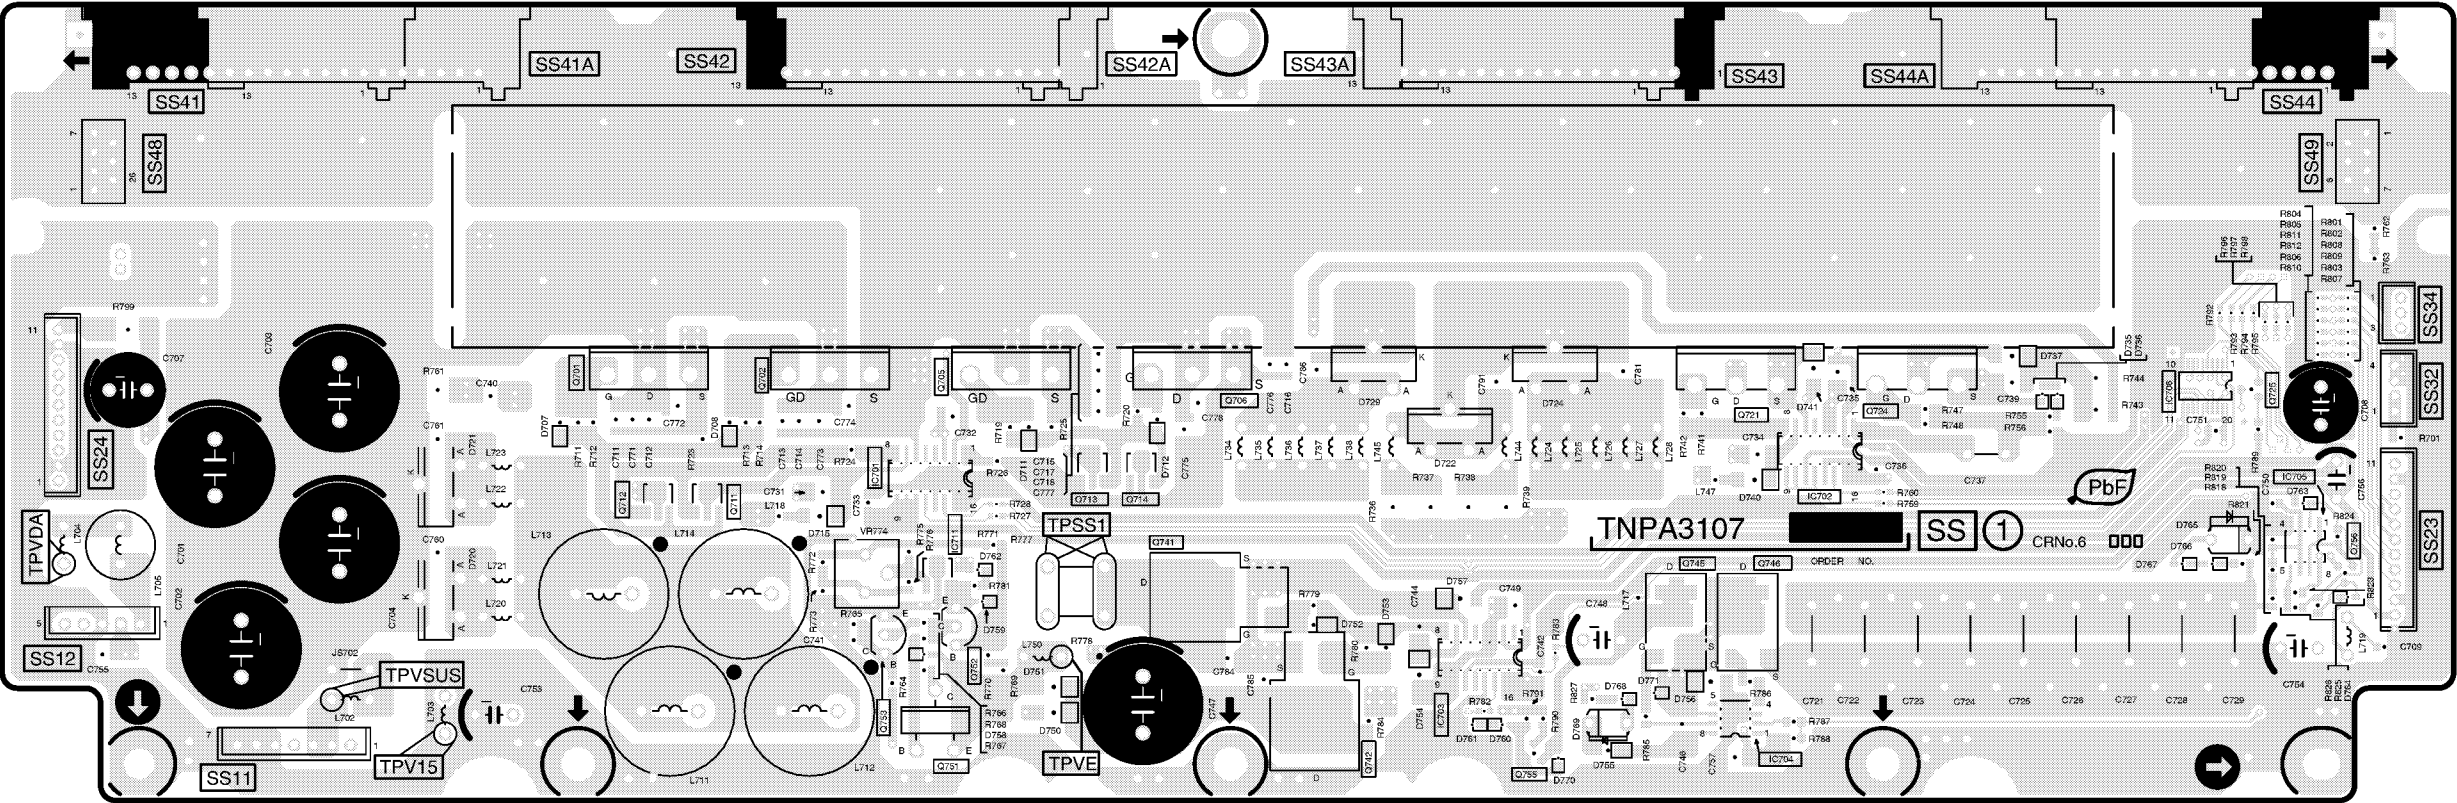


TH-37PA30E	TH-42PA30E					TH-37PA30E	TH-42PA30E
SS-BOARD TNPA3107AB	SS-BOARD TNPA3107					SS-BOARD TNPA3107AB	SS-BOARD TNPA3107
A	B	C	D	E	F	G	H

14.17. SS2, SS3, SS4 and SS5-Board

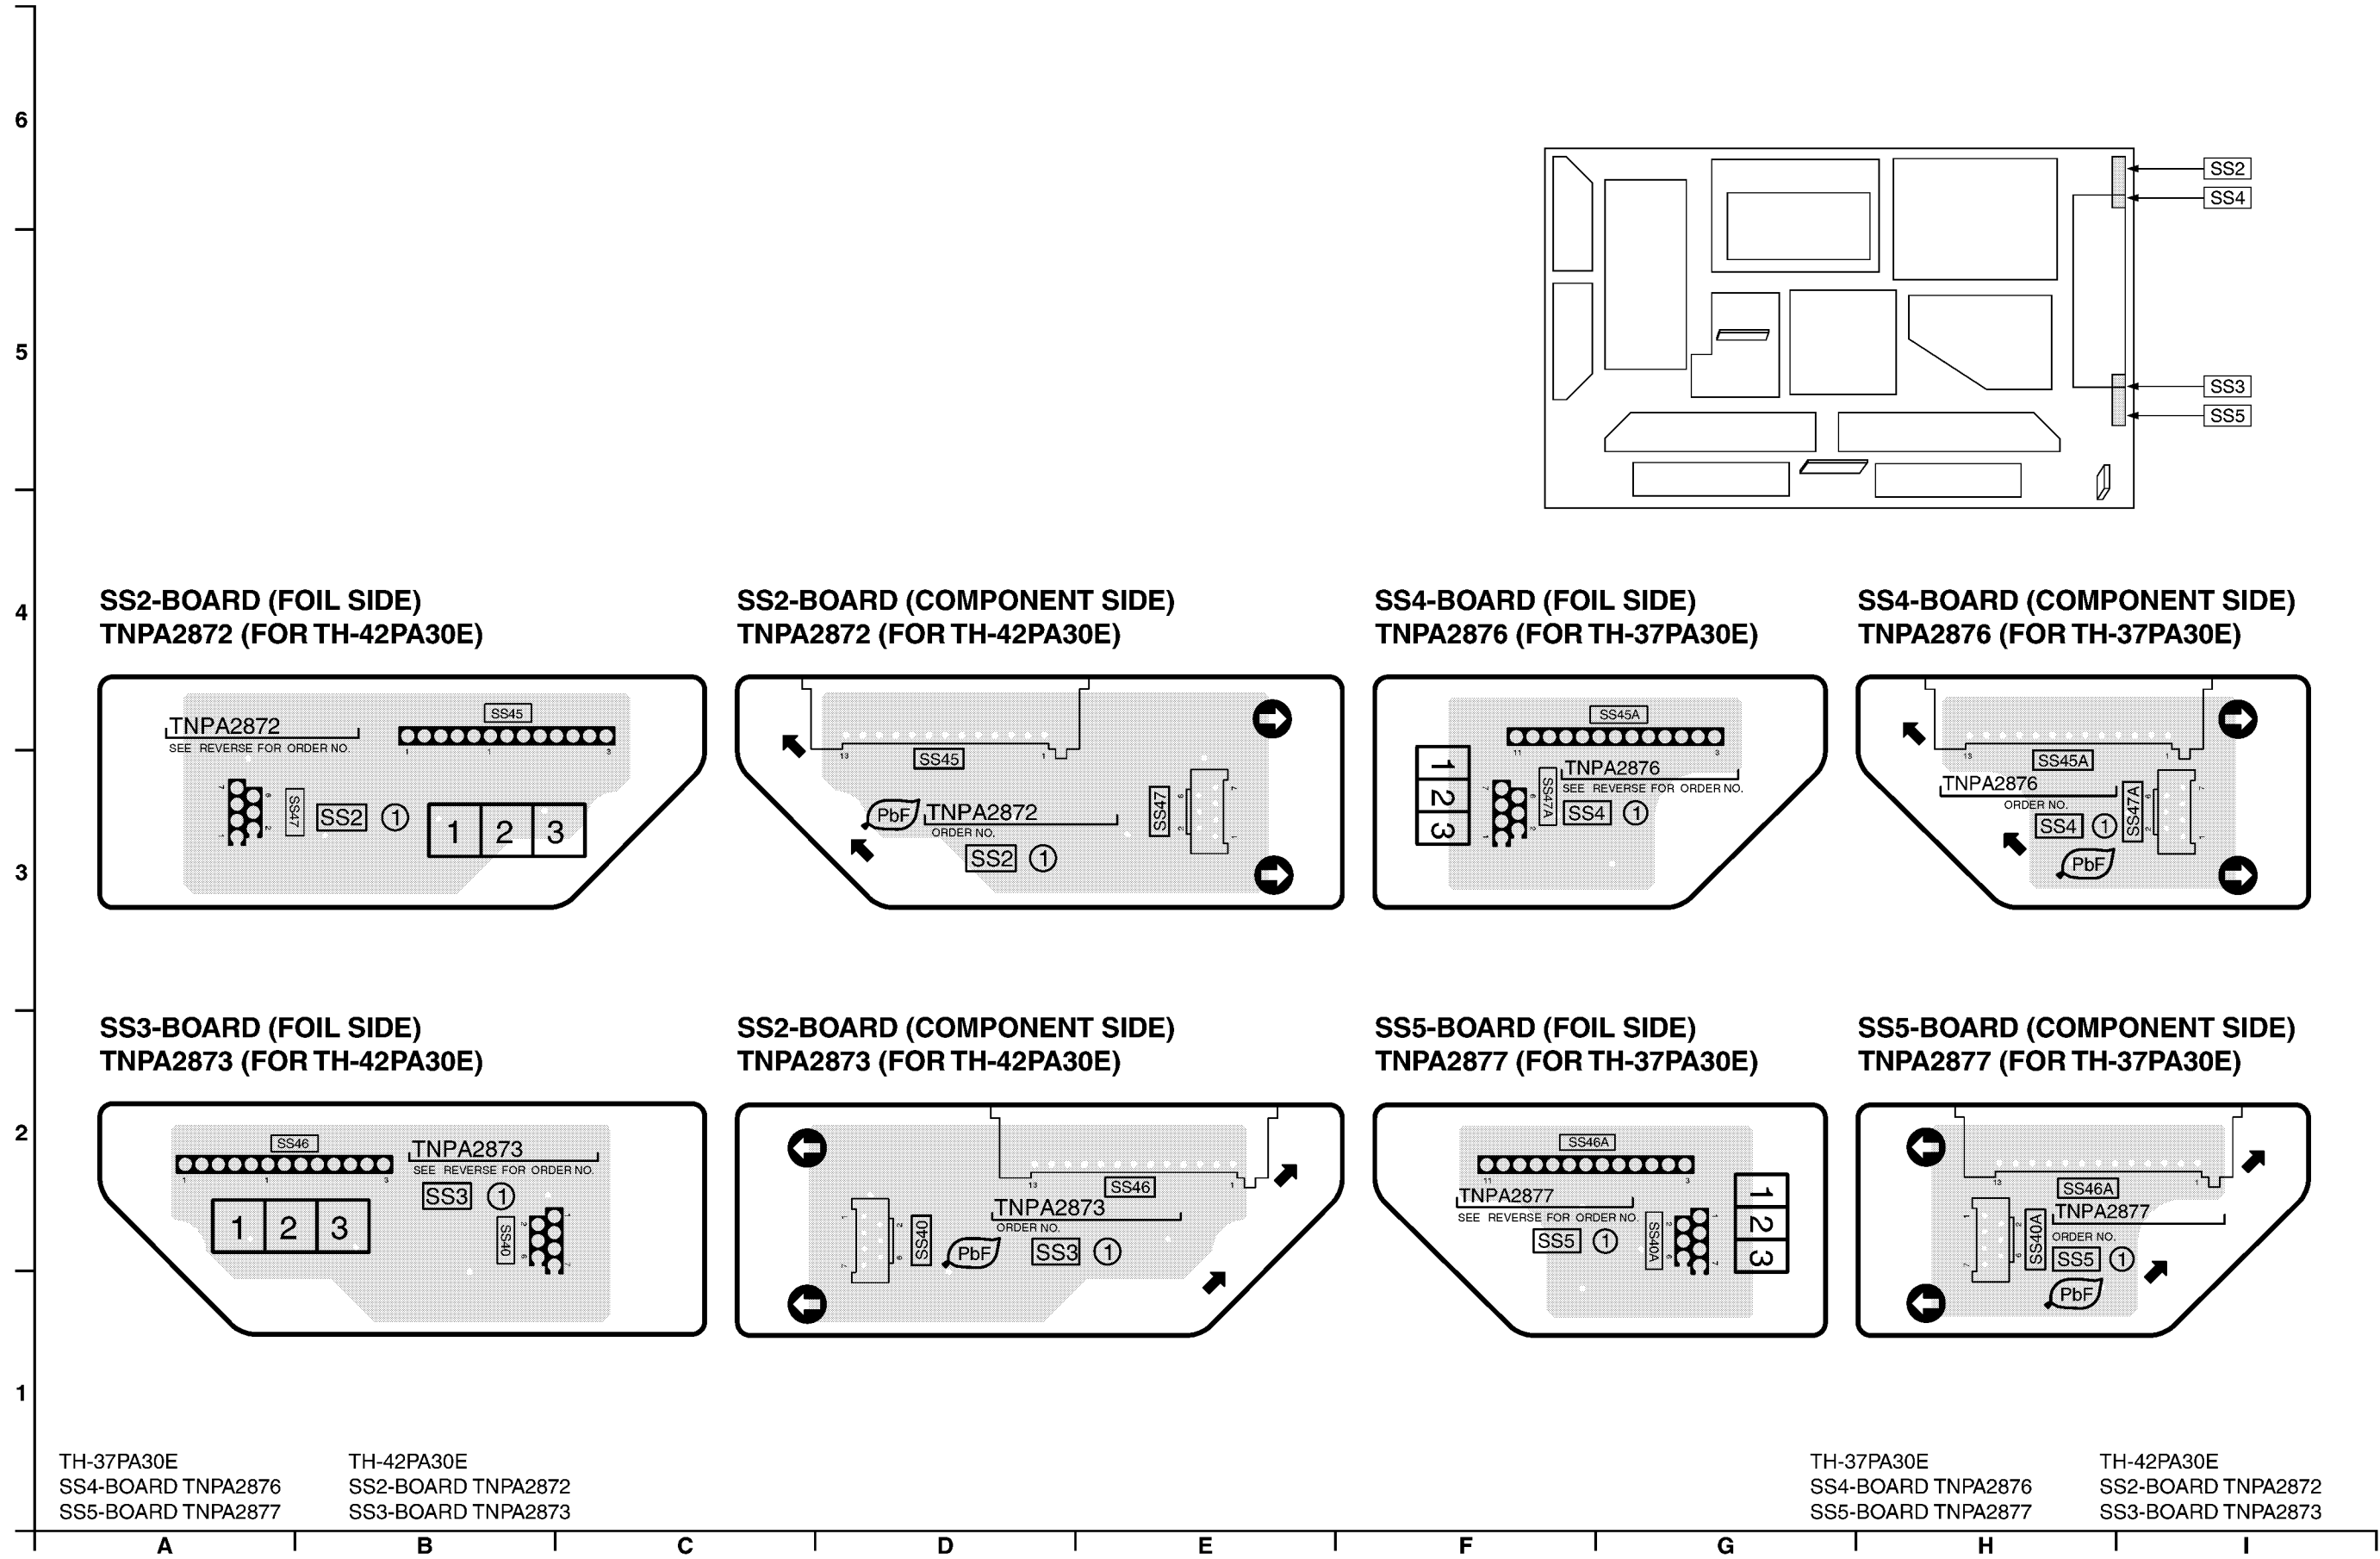


14.18. K and S-Board

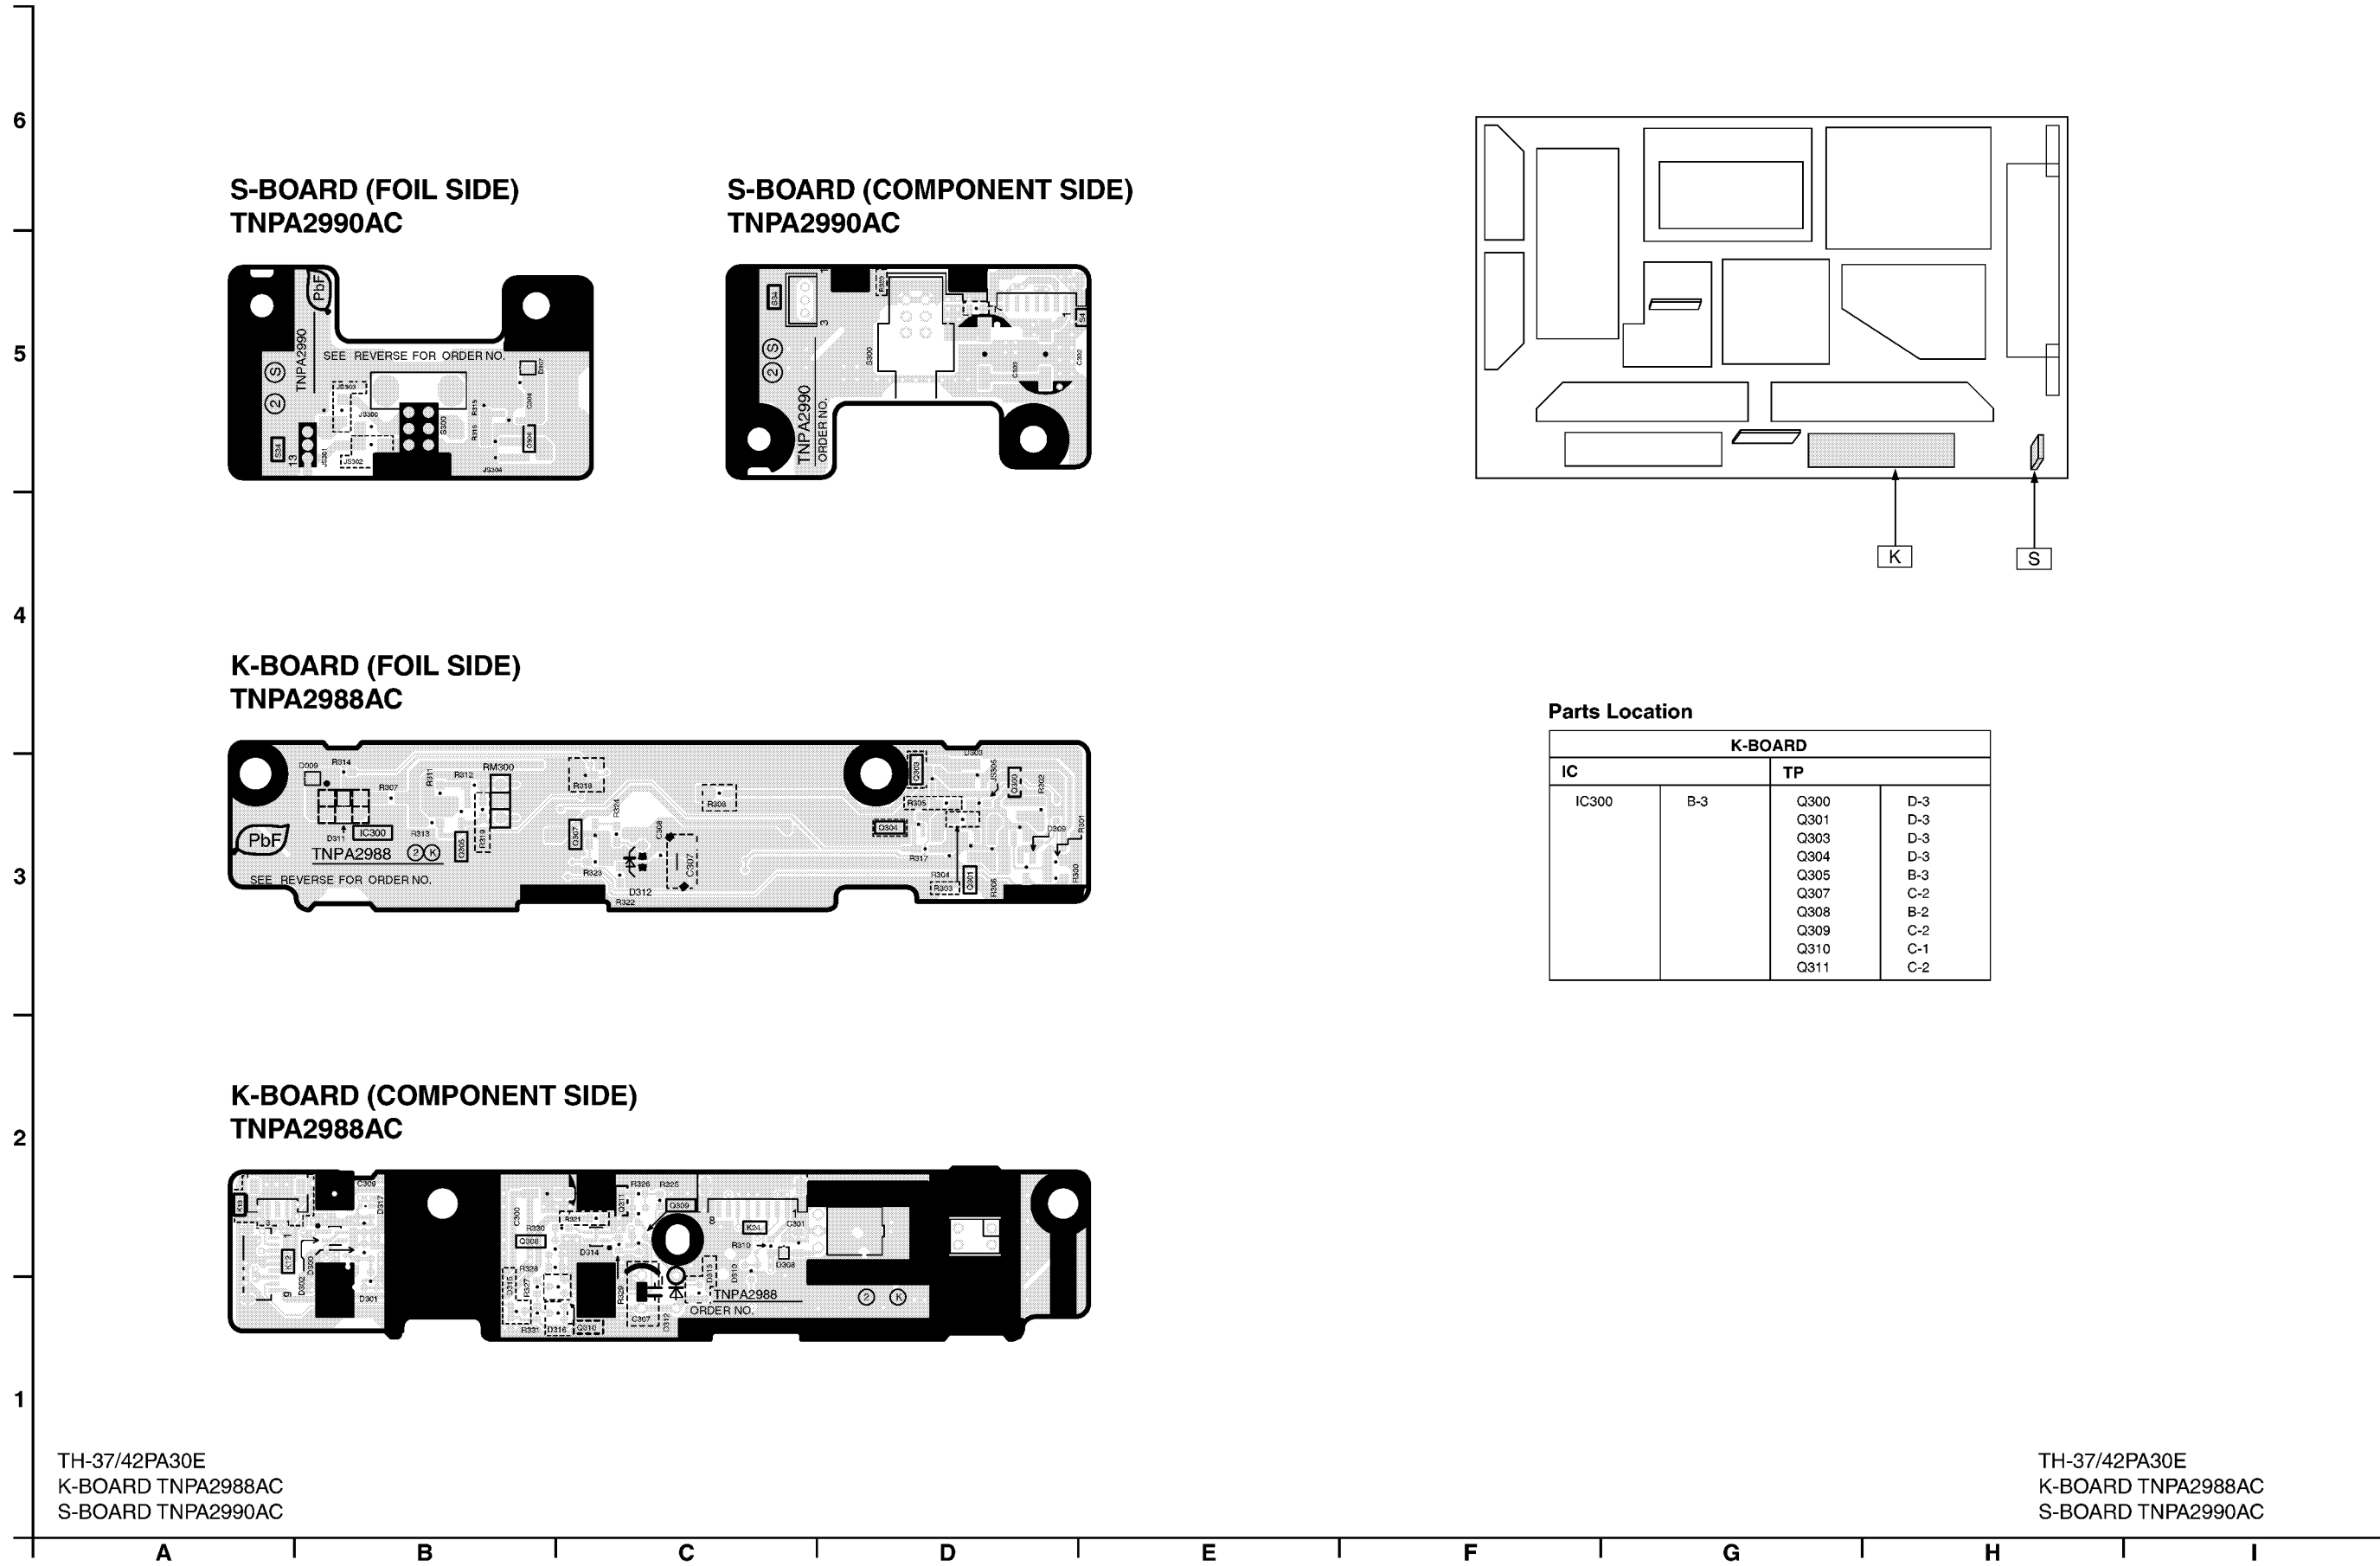


TH-37/42PA30E
K-BOARD TNPA2988AC
S-BOARD TNPA2990AC

TH-37/42PA30E
K-BOARD TNPA2988AC
S-BOARD TNPA2990AC



14.19. G-Board

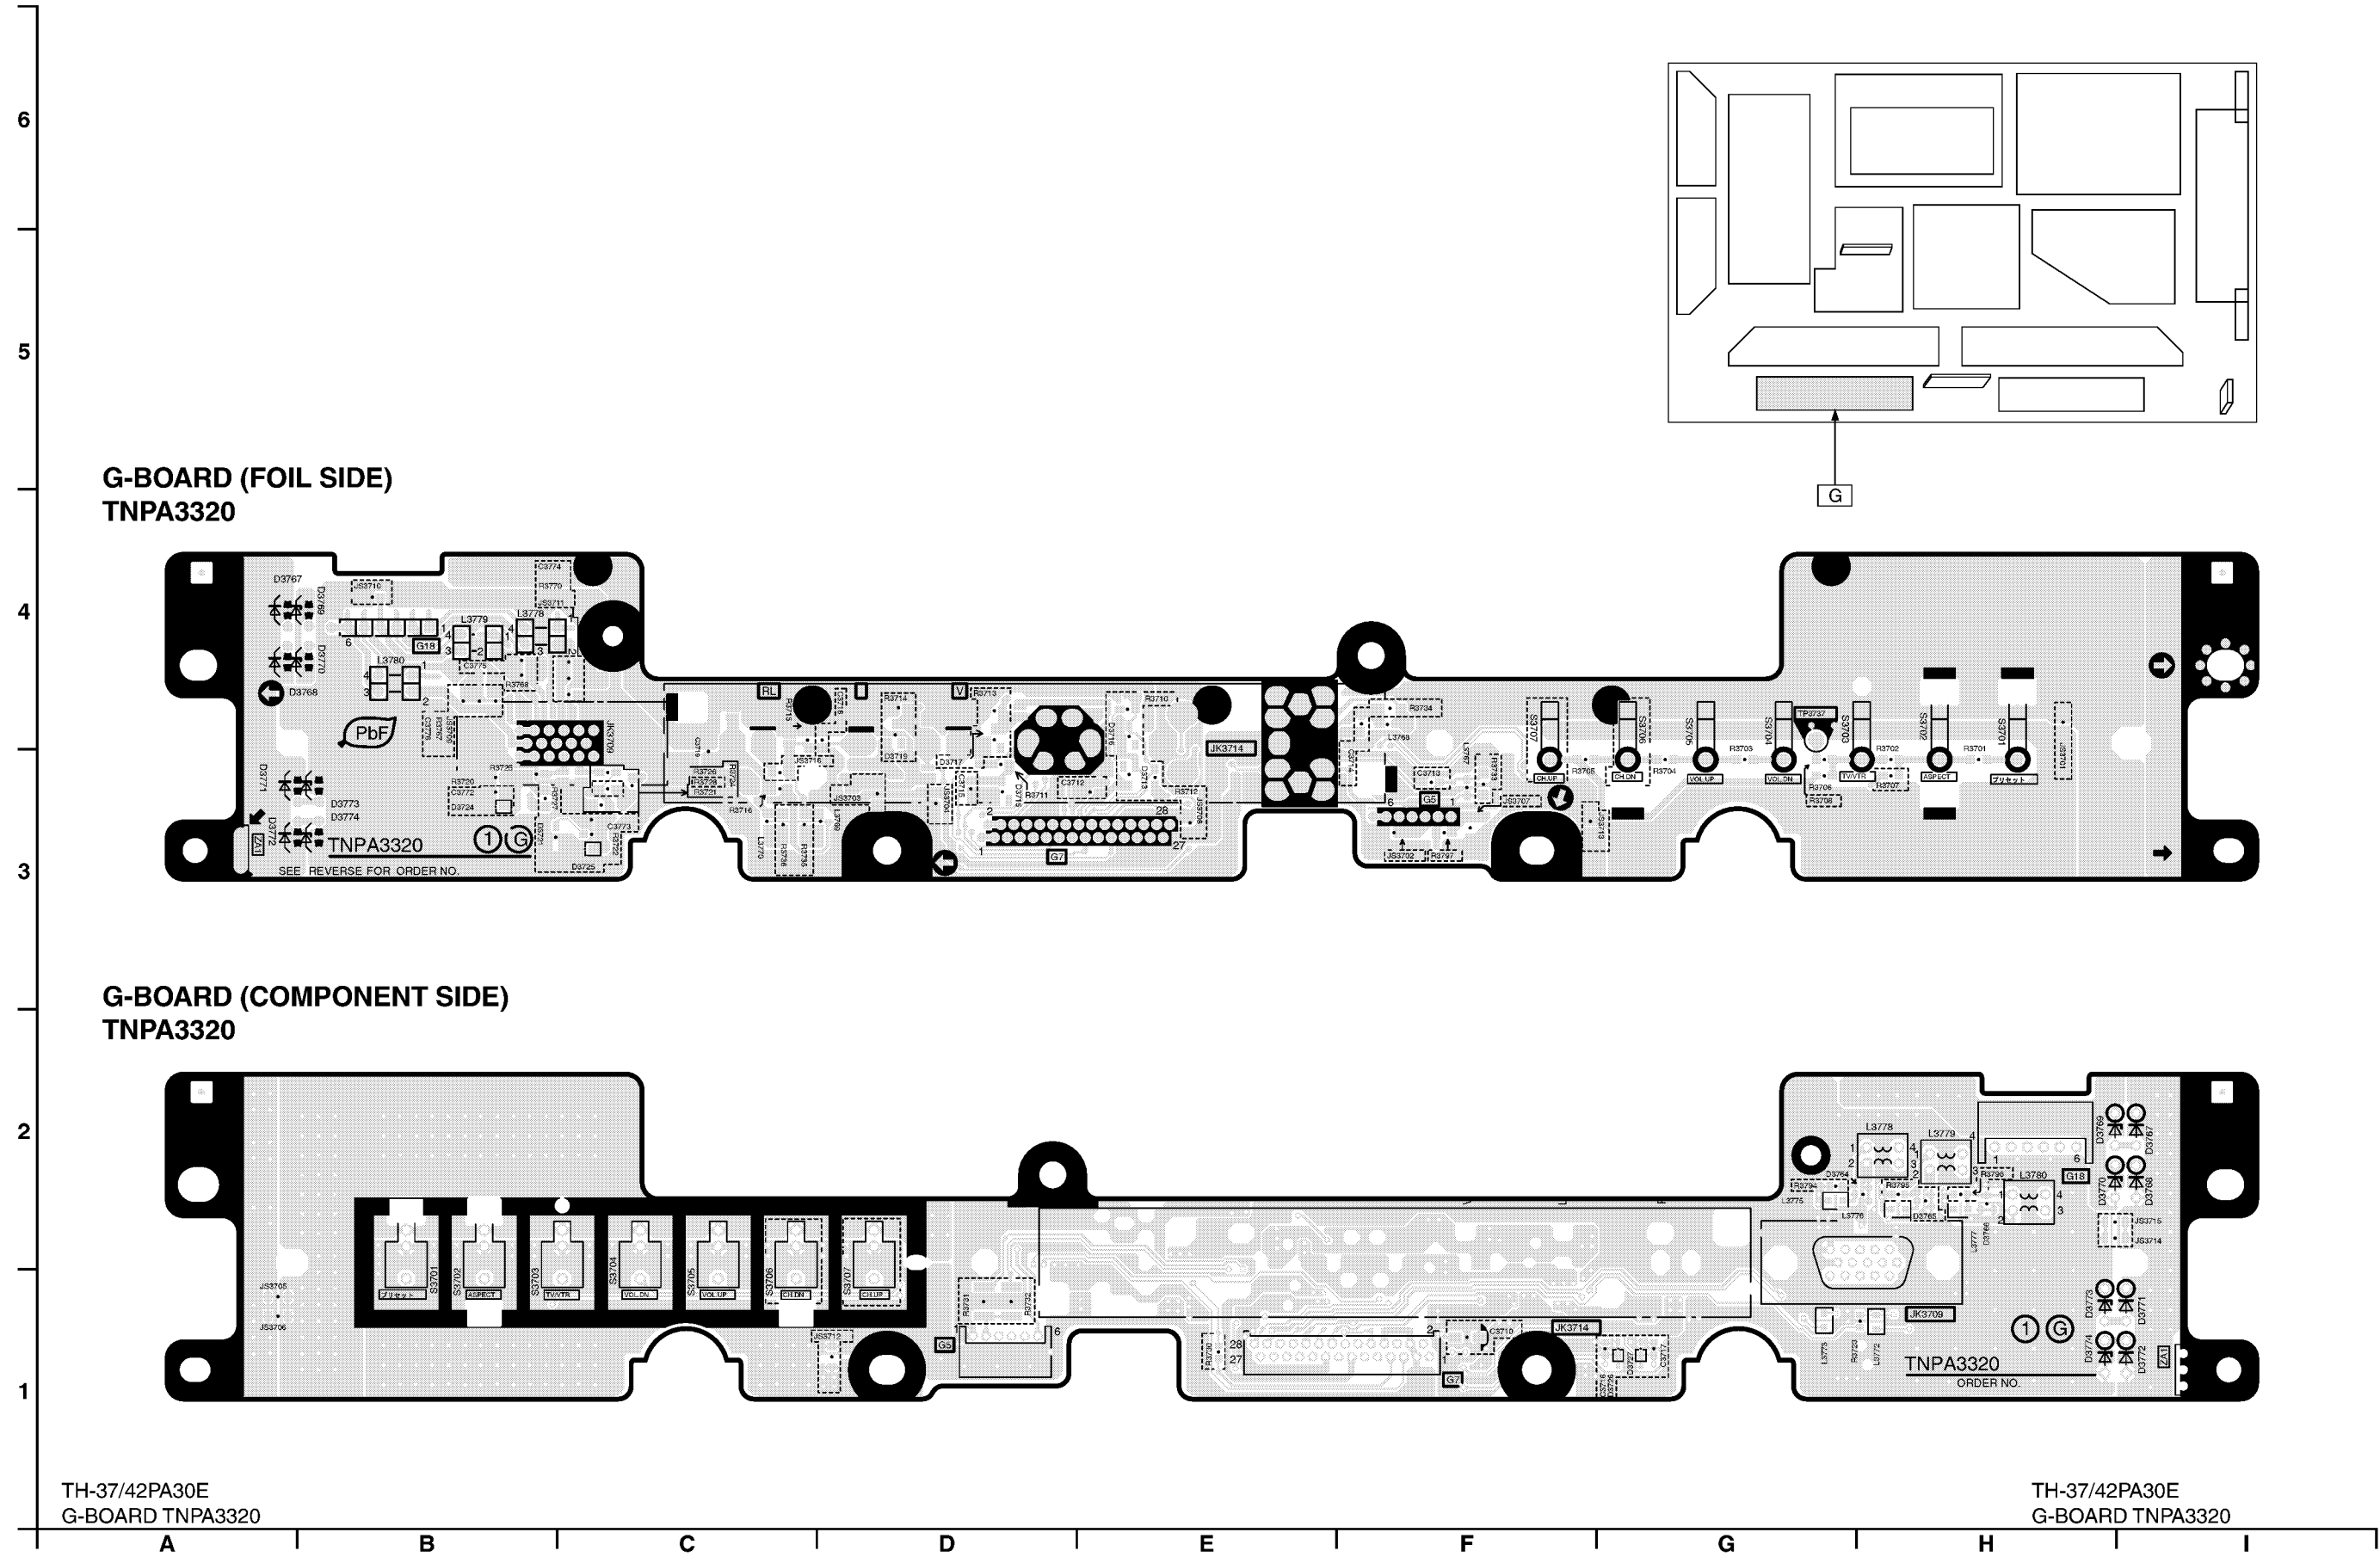

14.20. JG-BOARD

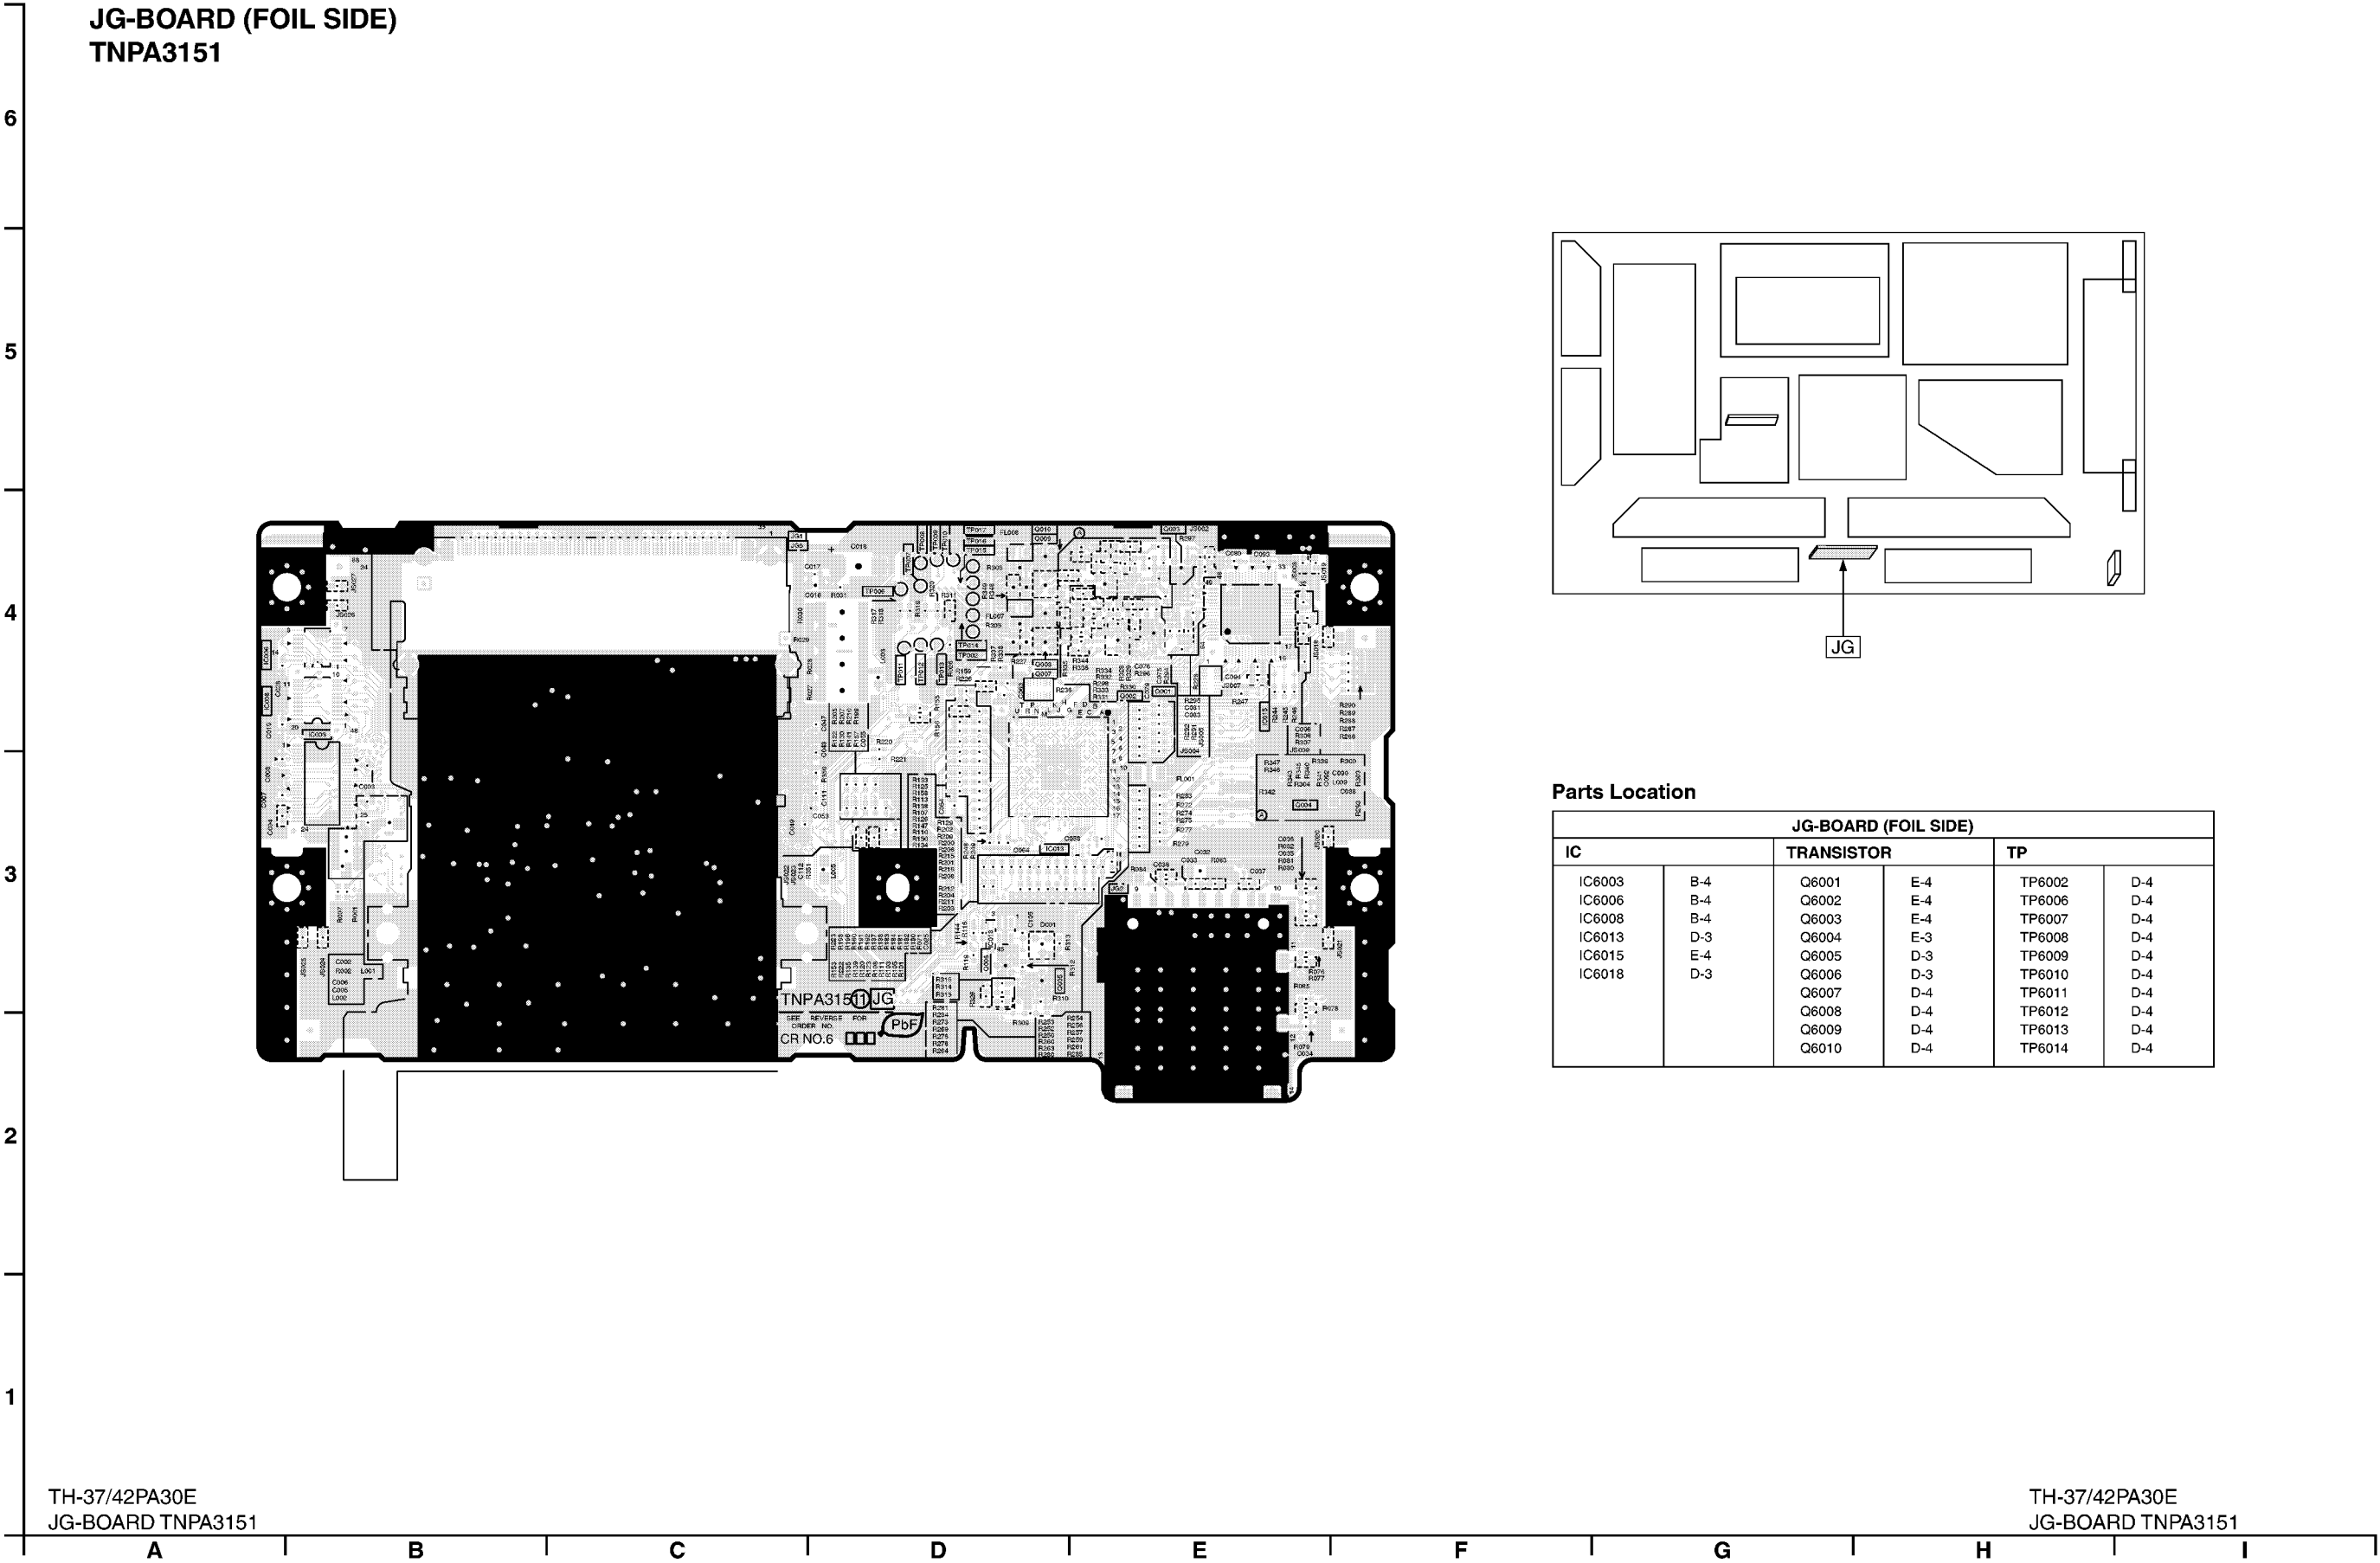

JG-BOARD (COMPONENT SIDE)
TNPA3151

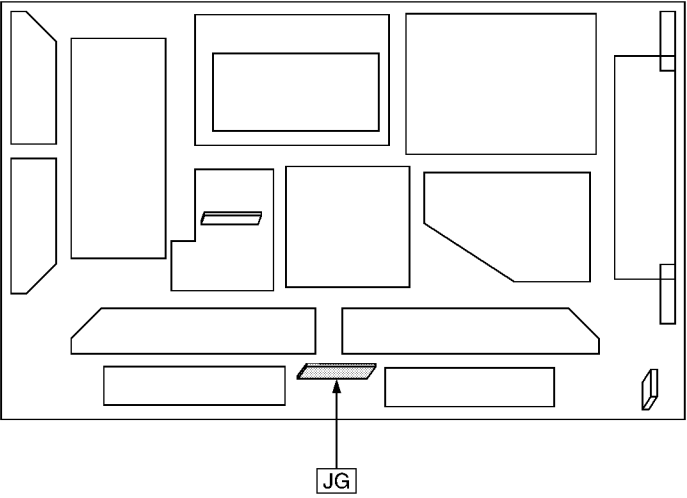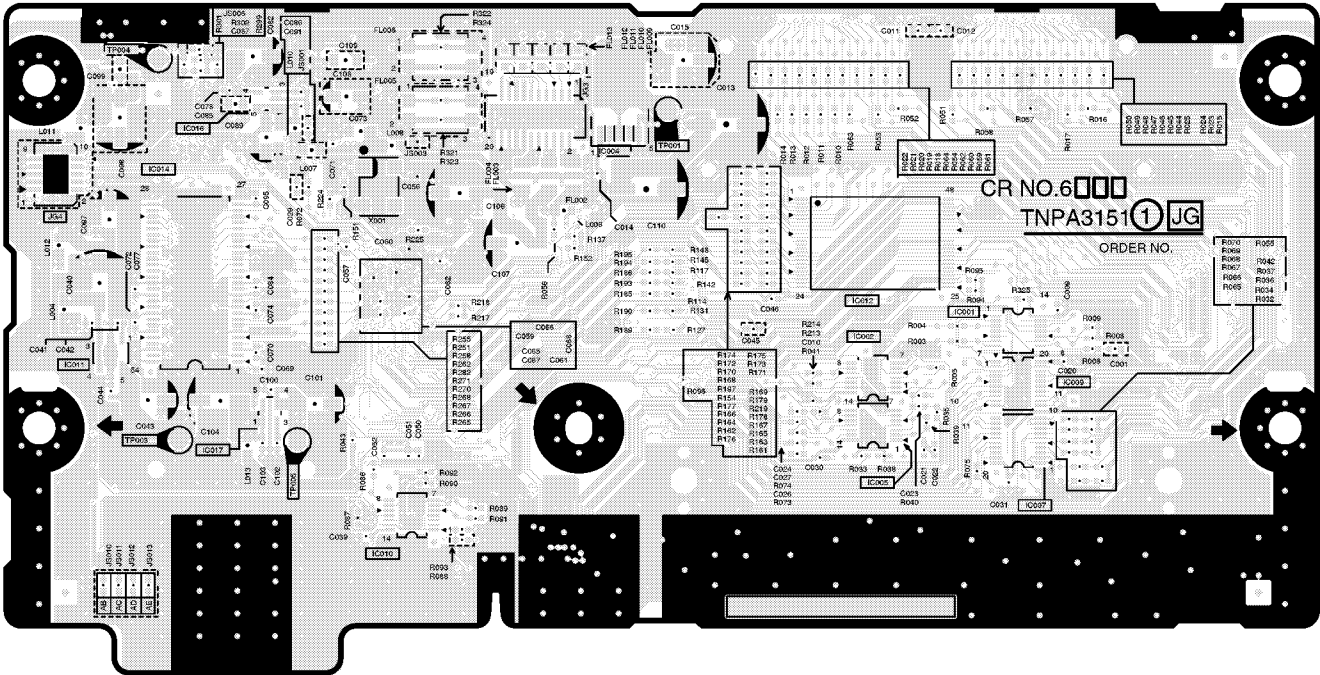

Parts Location

JG-BOARD (COMPONENT SIDE)			
IC		TP	
IC6001	E-3	TP6001	D-4
IC6002	D-3	TP6003	B-3
IC6004	C-4	TP6004	B-4
IC6005	D-3	TP6005	B-3
IC6007	E-3		
IC6009	E-3		
IC6010	C-3		
IC6011	B-3		
IC6012	D-3		
IC6014	B-4		
IC6016	B-4		
IC6017	B-3		

15 Block and Schematic Diagrams

15.1. Schematic Diagram Notes

Important Safety Notice

Components identified by $\triangle$ mark have special characteristics important for safety.
When replacing any of these components, use only manufacture's specified parts.

Notes:

1. Resistor

All resistors are carbon 1/4W resistor, unless marked as follows:

Unit of resistance is OHM [Ω] (K=1,000, M=1,000,000).

$\bigcirc$	: Nonflammable	$\boxtimes$	: Metal Oxide
$\triangle$	: Solid	$\odot$	: Metal Film
$\boxplus$	: Wire Wound	$\otimes$	: Fuse:

2. Capacitor

All capacitors are ceramic 50V capacitor, unless marked as follows:

Unit of capacitance is μ F, unless otherwise noted.

$\otimes$	: Temperature Compensation	$\begin{array}{c} + \\ \text{---} \text{---} \end{array}$	: Electrolytic
$\textcircled{M}$	: Polyester	$\begin{array}{c} \text{NP} \\ \text{---} \text{---} \end{array}$	: Bipolar
$\textcircled{m}$	: Metalized Polyester	$\textcircled{T}$	: Dipped Tantalum
$\boxtimes$	: Polypropylene	$\textcircled{Z}$	: Z-Type

3. Coil

Unit of inductance is μ H, unless otherwise noted.

4. Test Point

$\bigcirc$: Test Point position

5. Earth Symbol

$\text{---} \text{---}$: Chassis Earth (Cold) $\downarrow$: Line Earth (Hot)

6. Voltage Measurement

Voltage is measured by a DC voltmeter.

Conditions of the measurement are the following:

Power Source	AC220-240V, 50/60Hz
Receiving Signal	Colour Bar signal (RF)
All customer's controls	Maximum positions

7. Number in red circle indicates waveform number.

(See waveform pattern table.)

8. When arrow mark ($\nearrow$) is found, connection is easily found from the direction of arrow

9. Indicates the major signal flow. : Video $\Rightarrow$ Audio $\Rightarrow$

10. This schematic diagram is the latest at the time of printing and subject to change without notice.

Remarks:

- The Power Circuit contains a circuit area which uses a separate power supply to isolate the earth connection.


The circuit is defined by HOT and COLD indications in the schematic diagram. Take the following precautions.

All circuits, except the Power Circuit, are cold.

Precautions


- Do not touch the hot part or the hot and cold parts at the same time or you may be shocked.
 - Do not short-circuit the hot and cold circuits or a fuse may blow and parts may break.
 - Do not connect an instrument, such as an oscilloscope, to the hot and cold circuits simultaneously or a fuse may blow.
Connect the earth of instruments to the earth connection of the circuit being measured.
 - Make sure to disconnect the power plug before removing the chassis.
- Following diodes are interchangeable.
MA150- MA162 (Replacement part)

15.2. Main Block Diagram

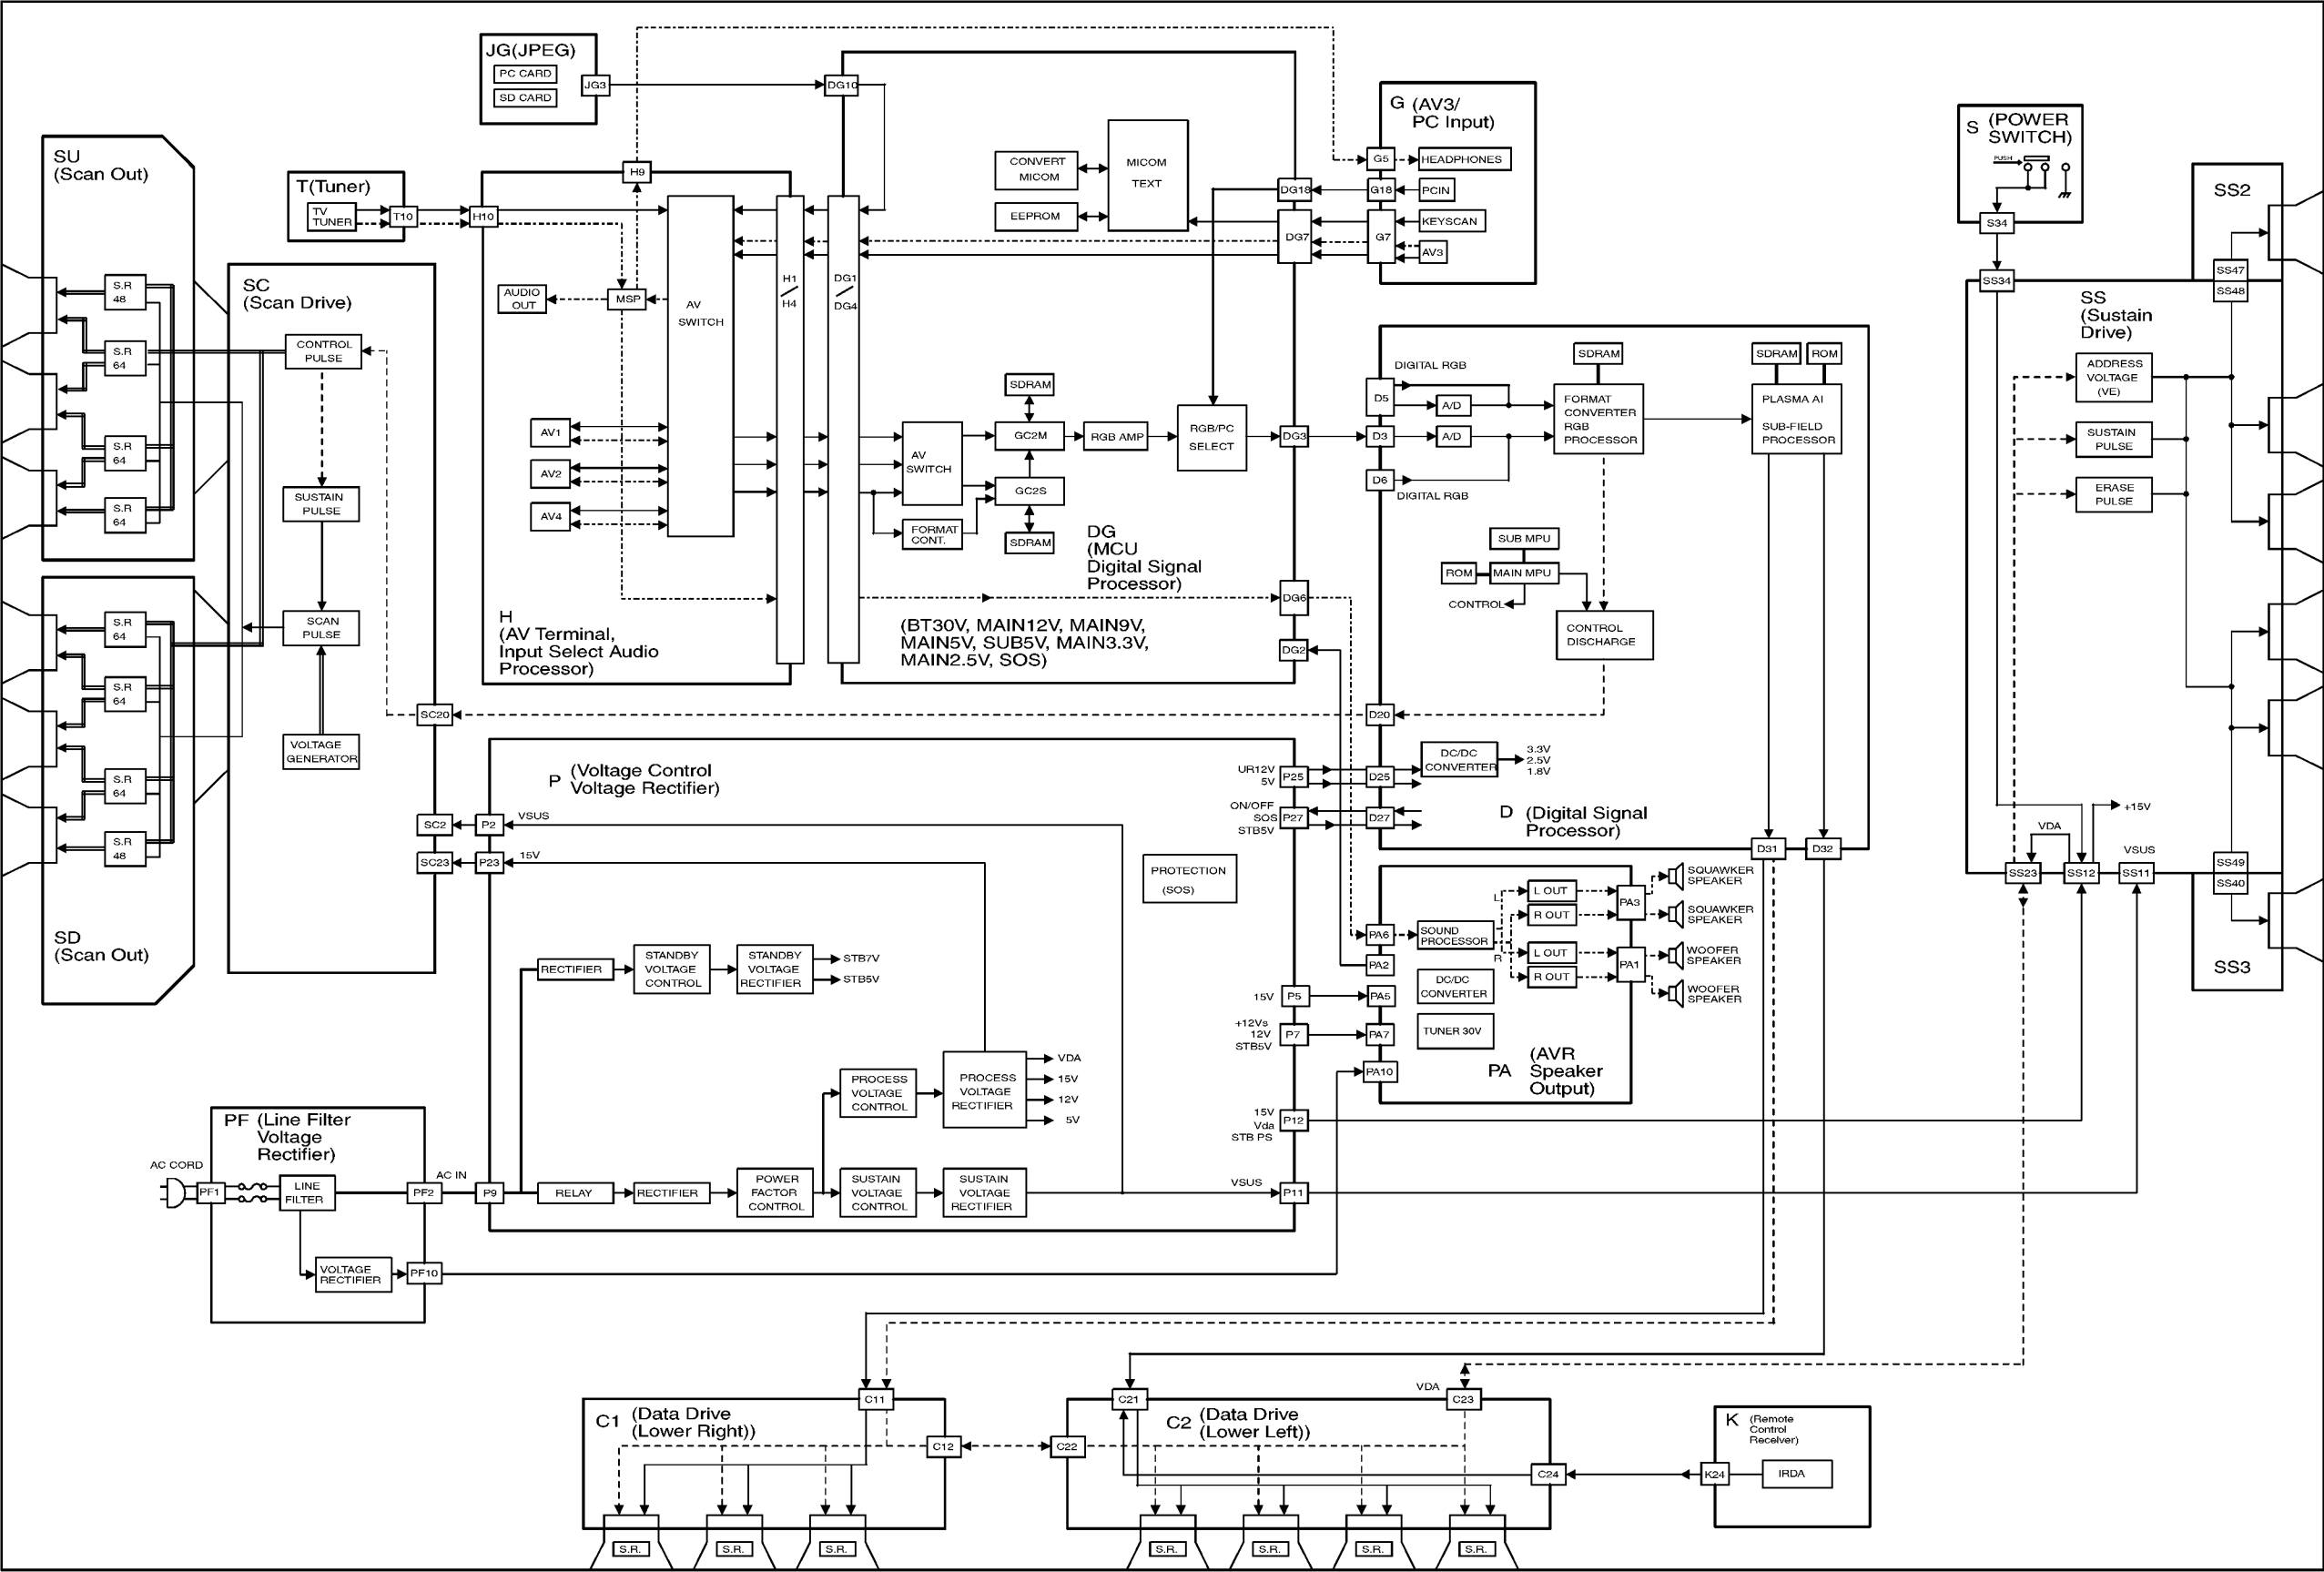


TH-37PA30E/TH-42PA30E
Main Block Diagram

15.3. PF-Board Block Diagram

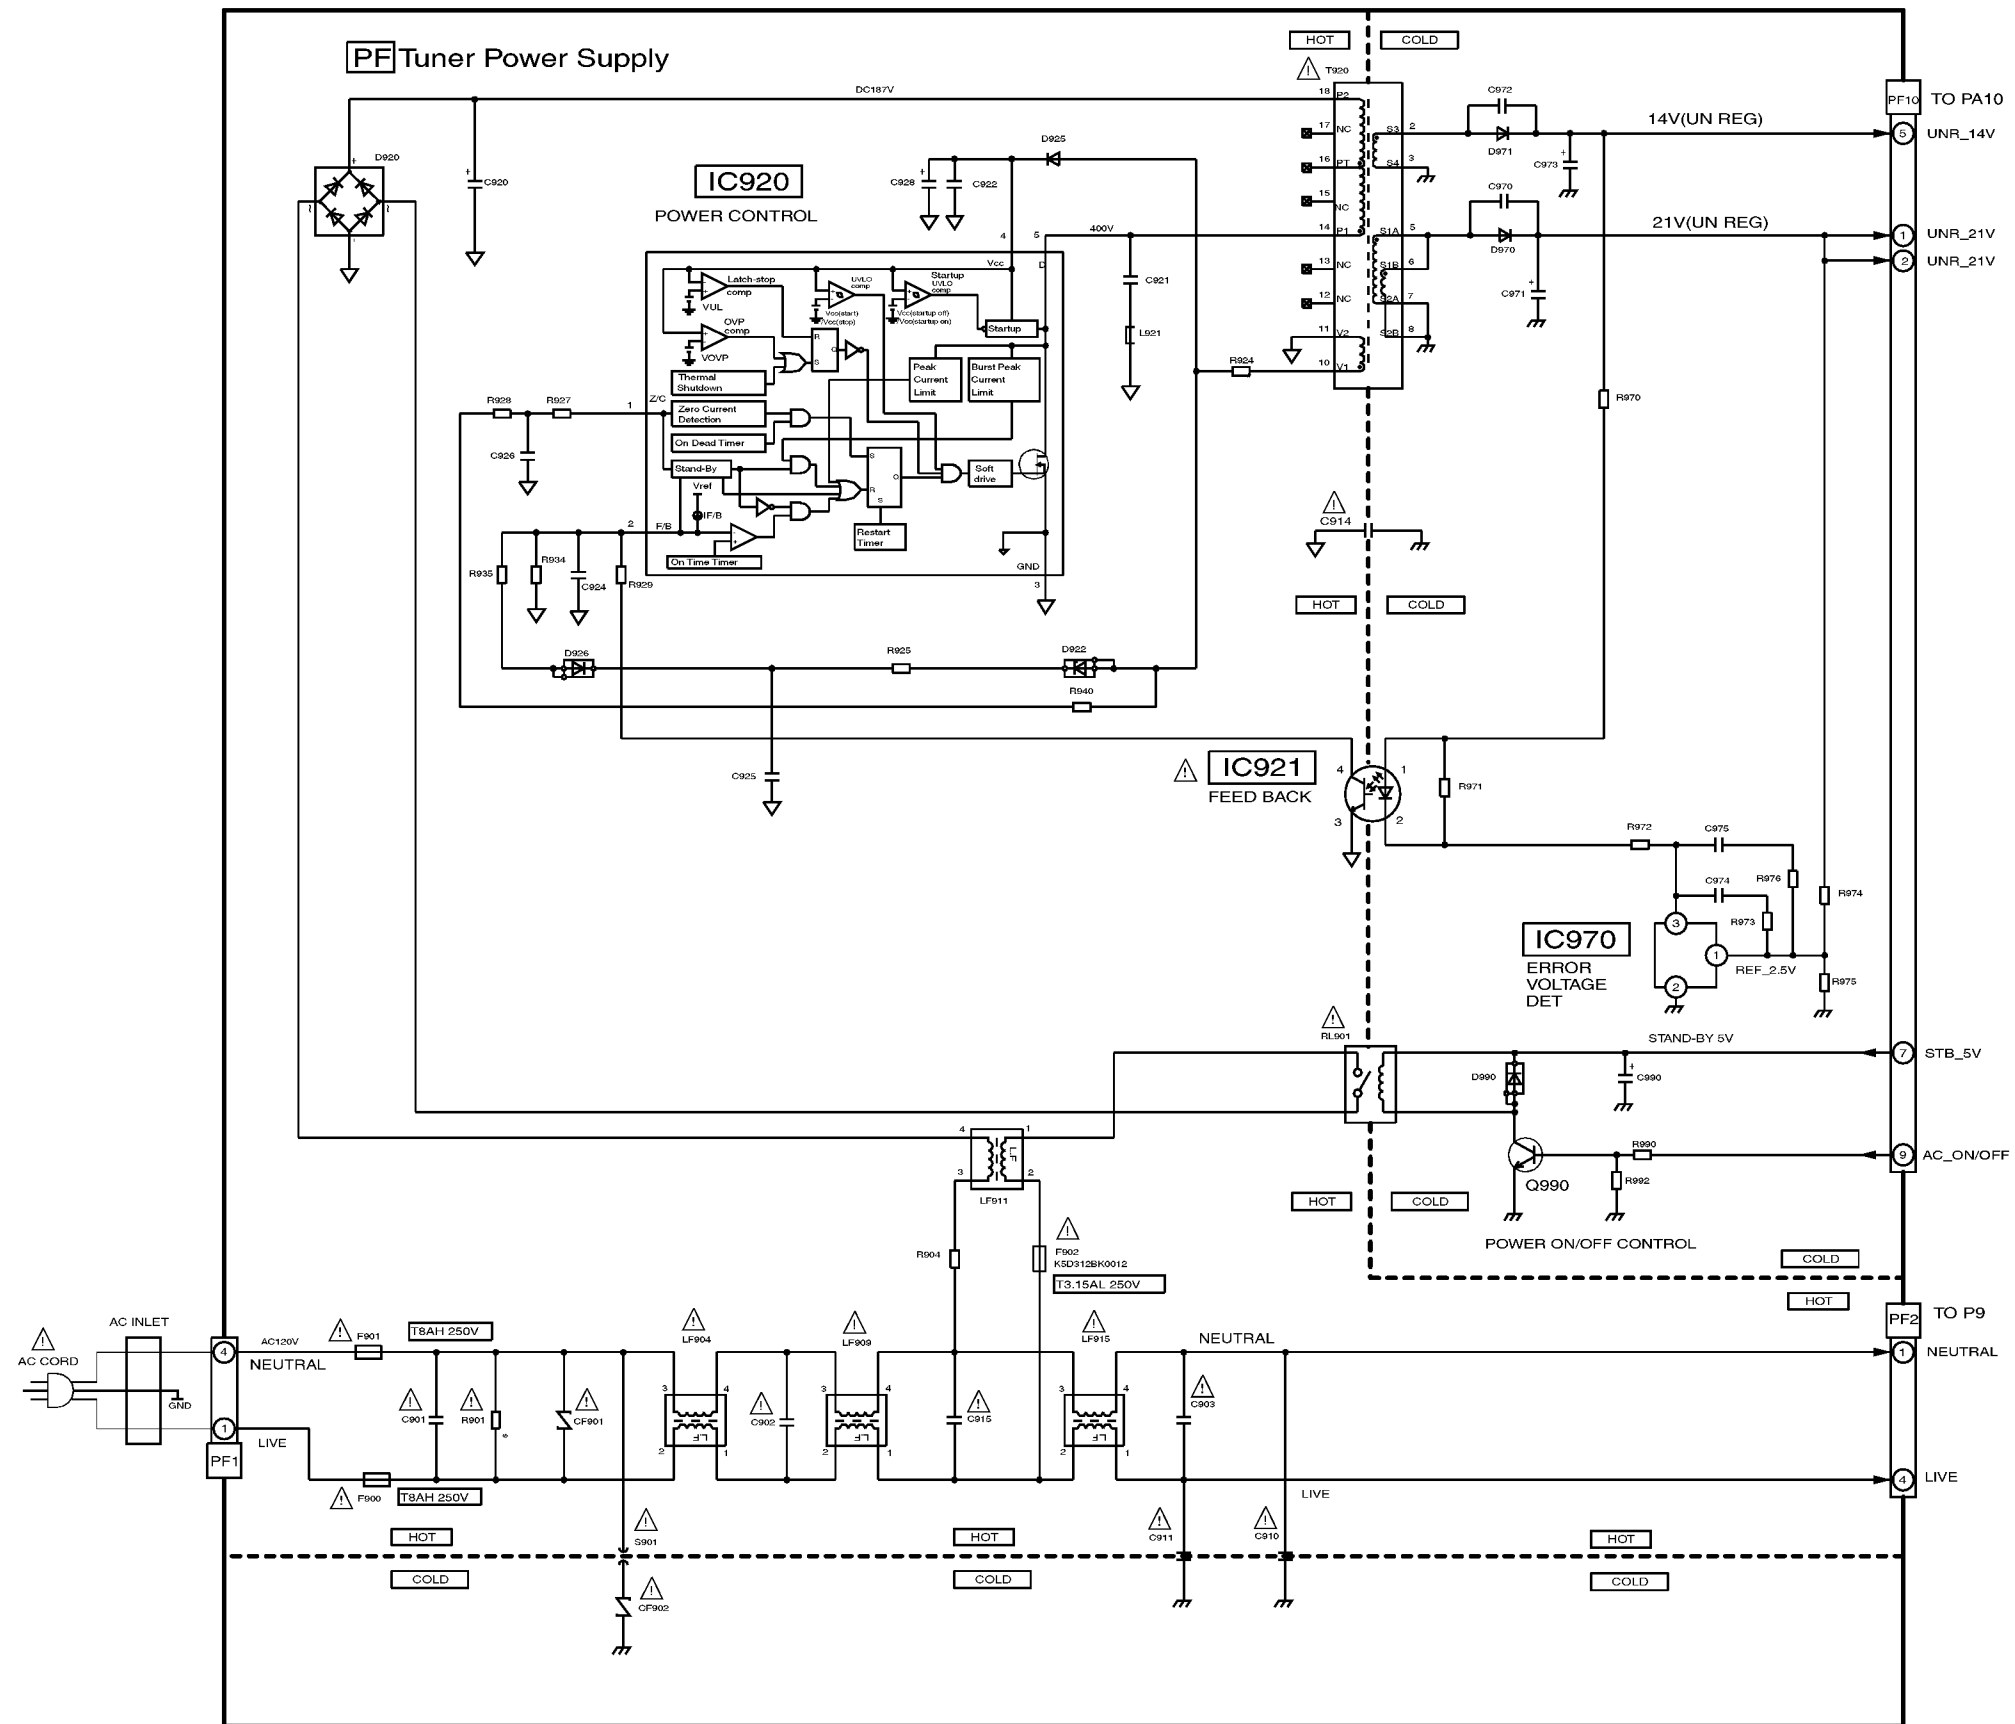


15.4. PF-Board Schematic Diagram

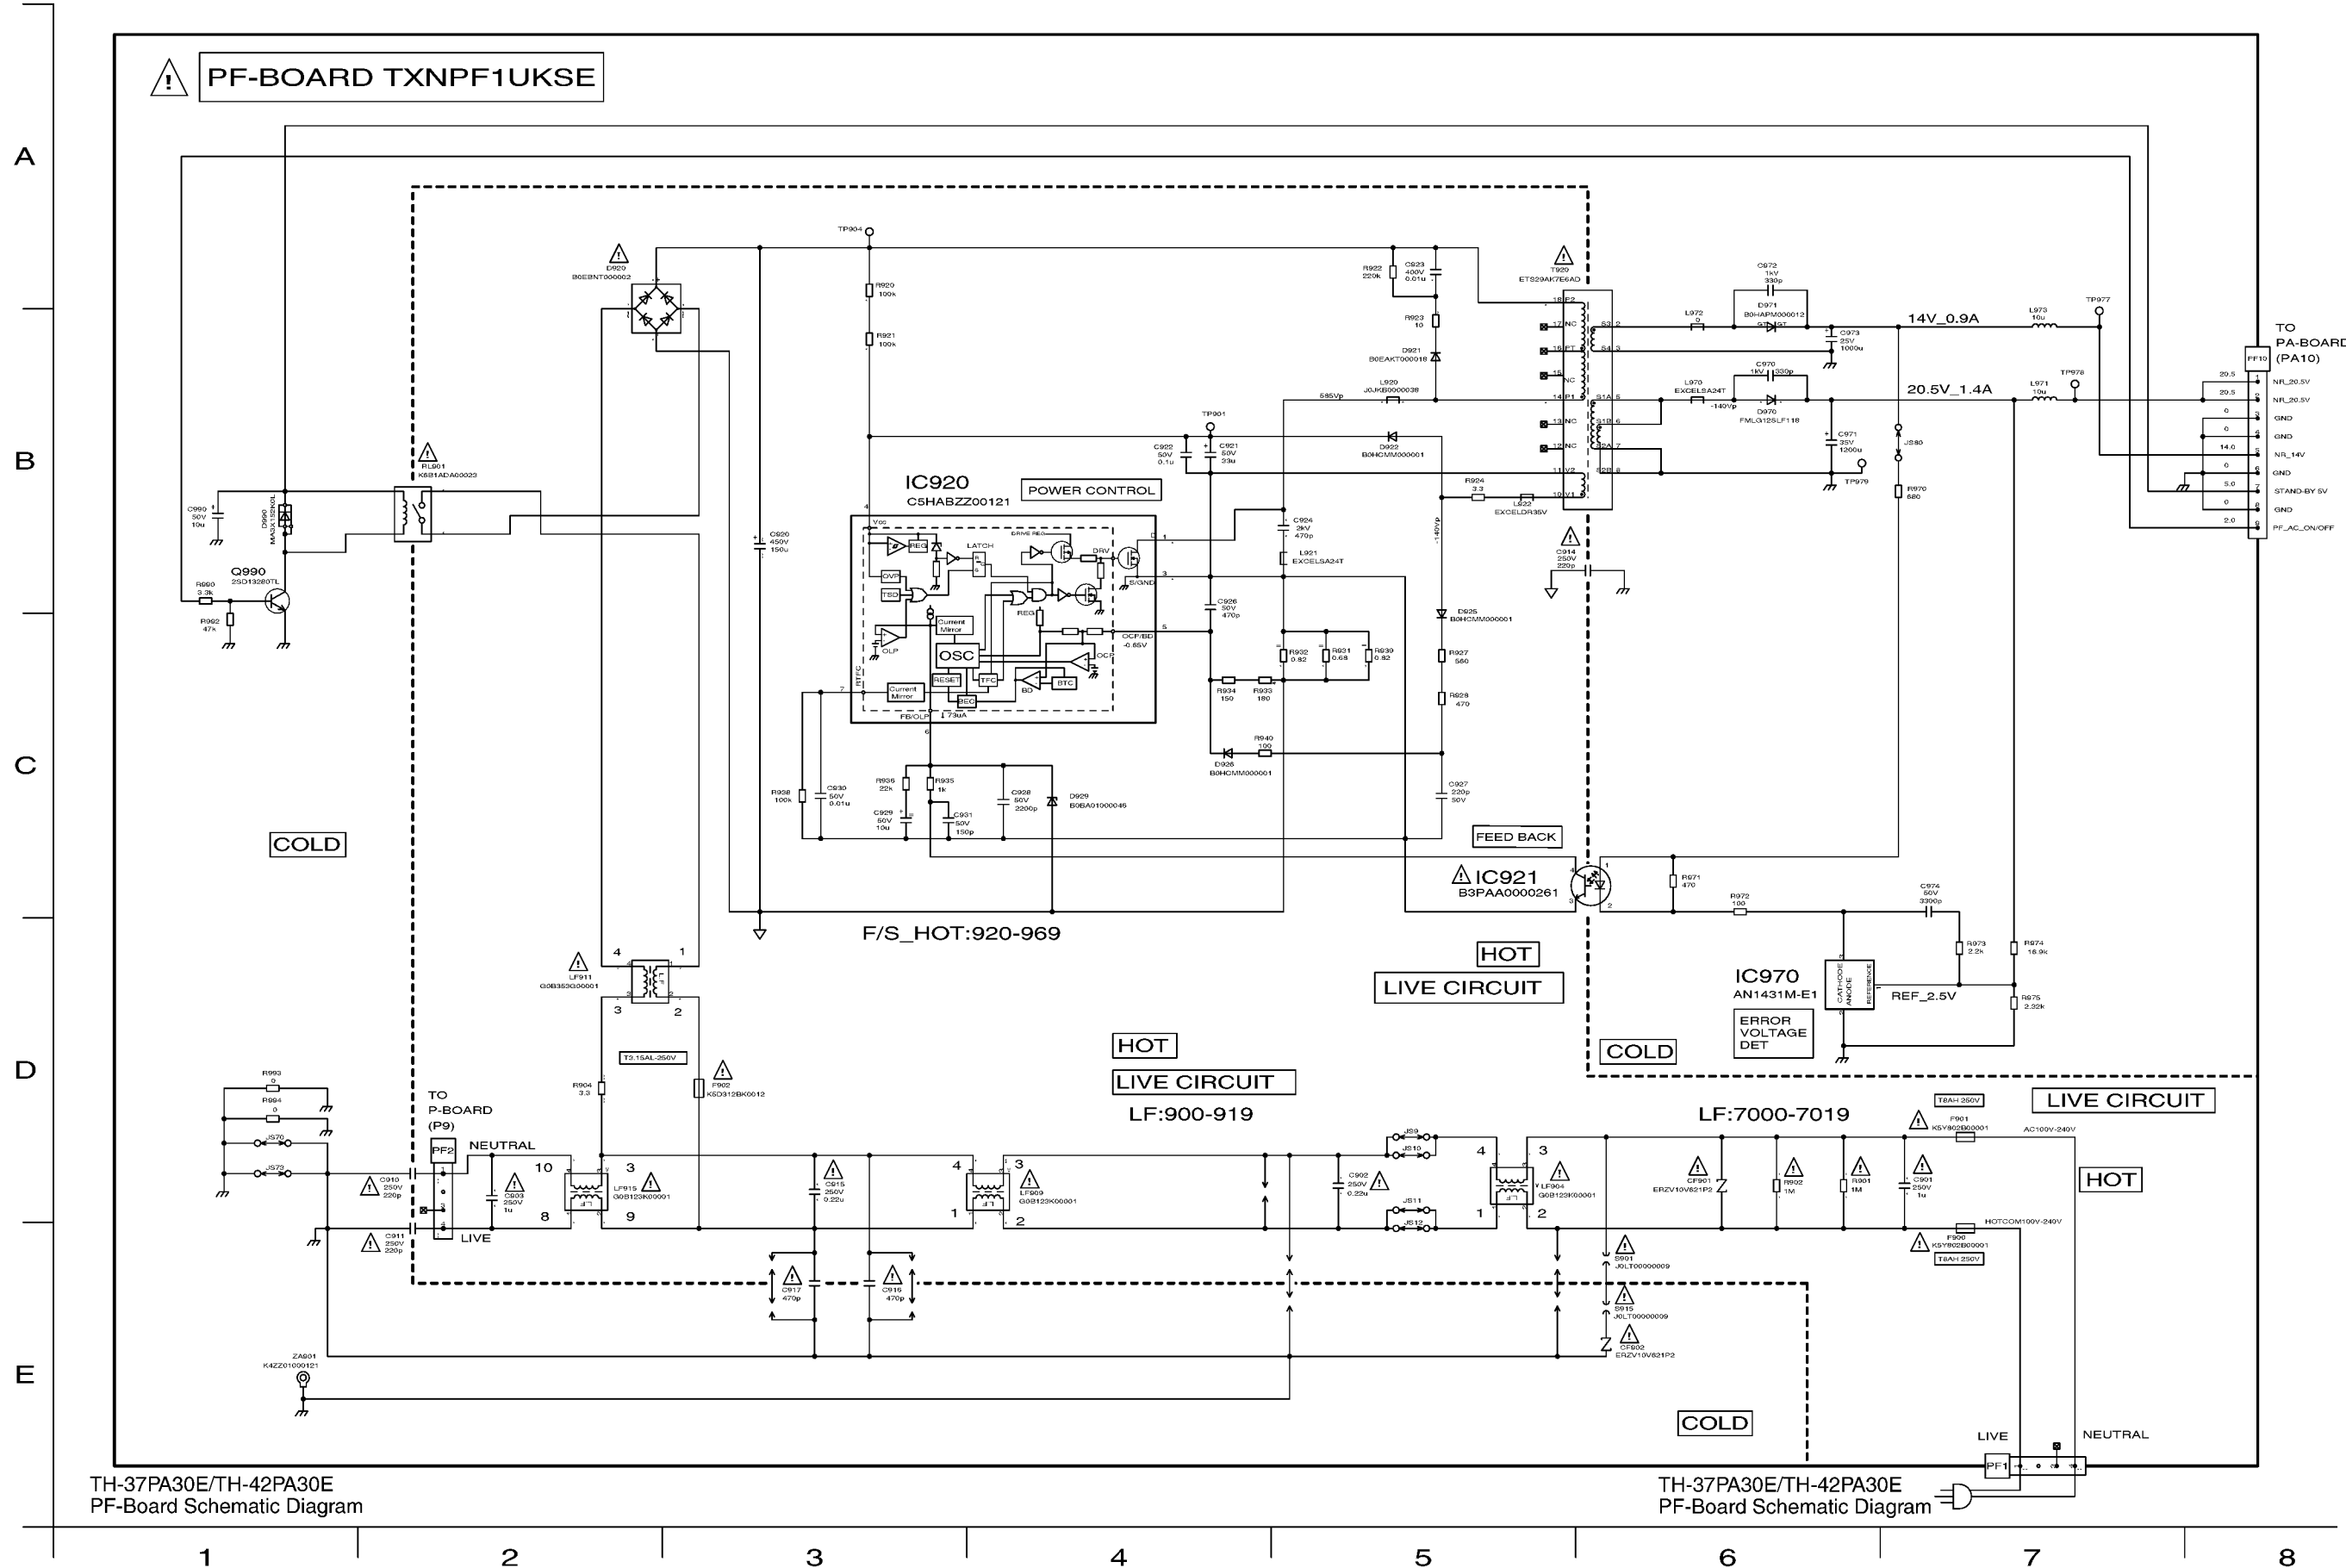

TH-37PA30E/TH-42PA30E
PF-Board Schematic Diagram

TH-37PA30E/TH-42PA30E
PF-Board Schematic Diagram


15.5. P-Board Block Diagram

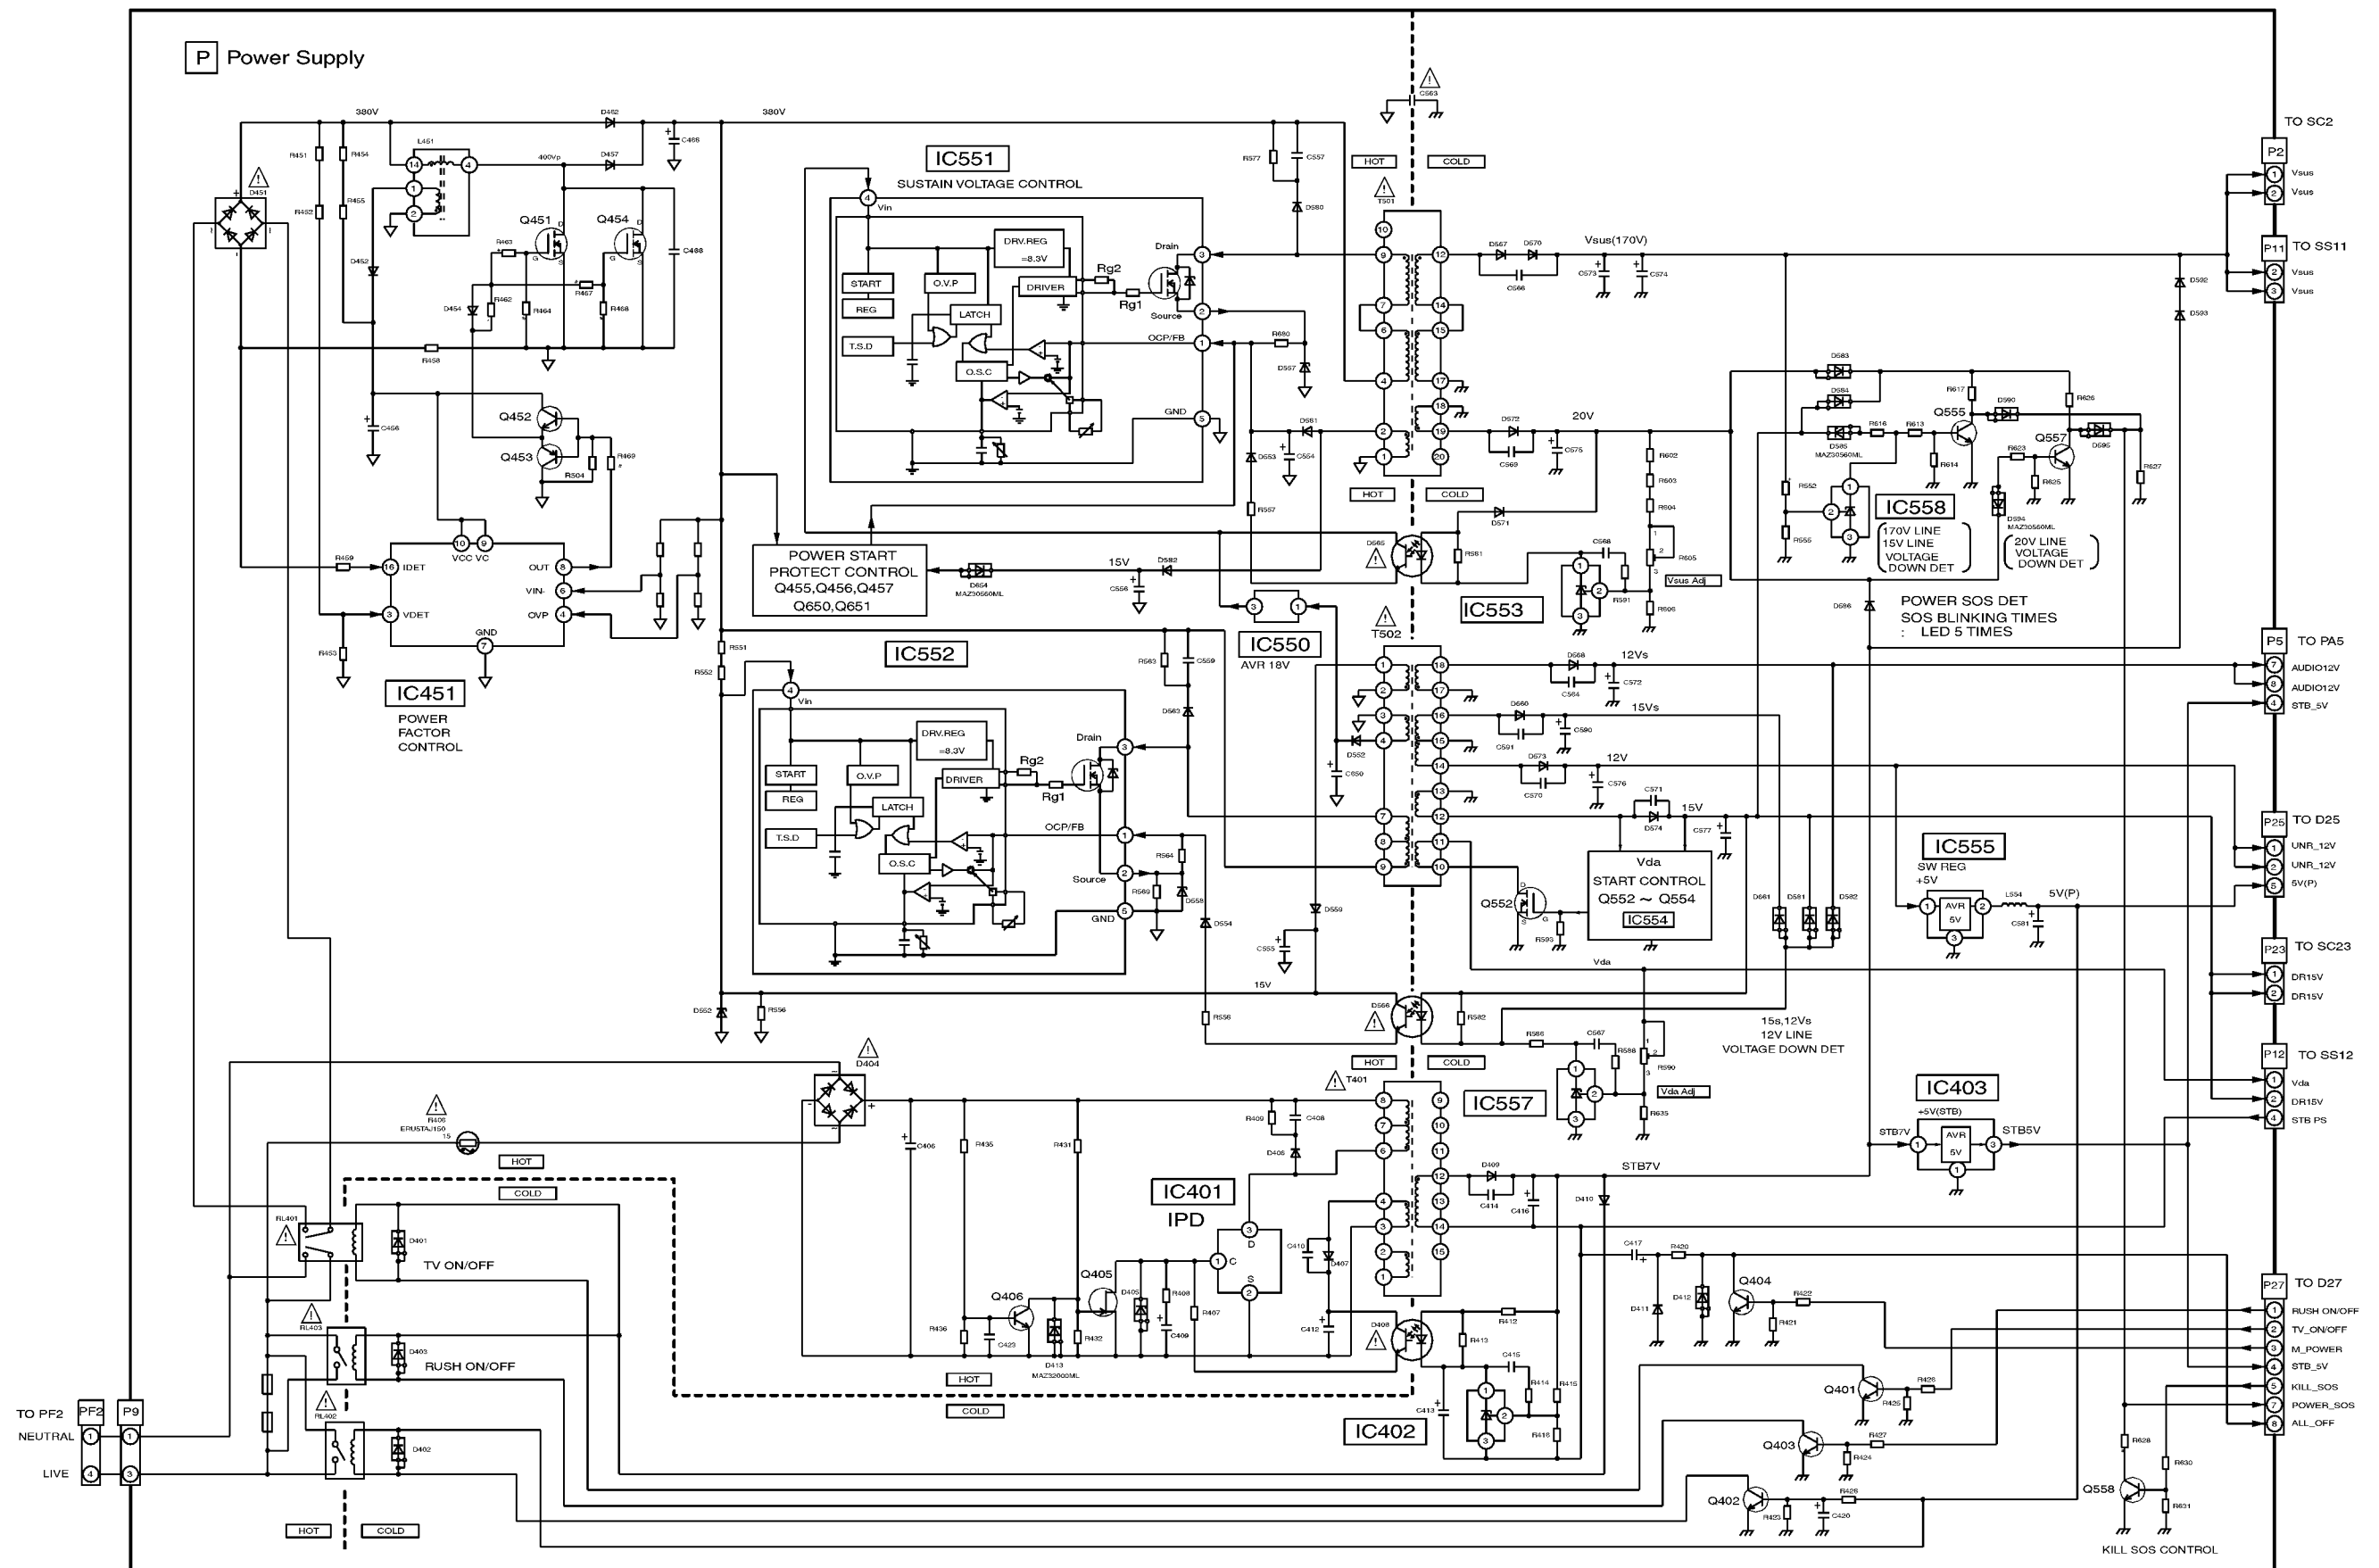


TH-37PA30E/TH-42PA30E P-Board Block Diagram

TH-37PA30E/TH-42PA30E P-Board Block Diagram

15.6. P-Board Schematic Diagram

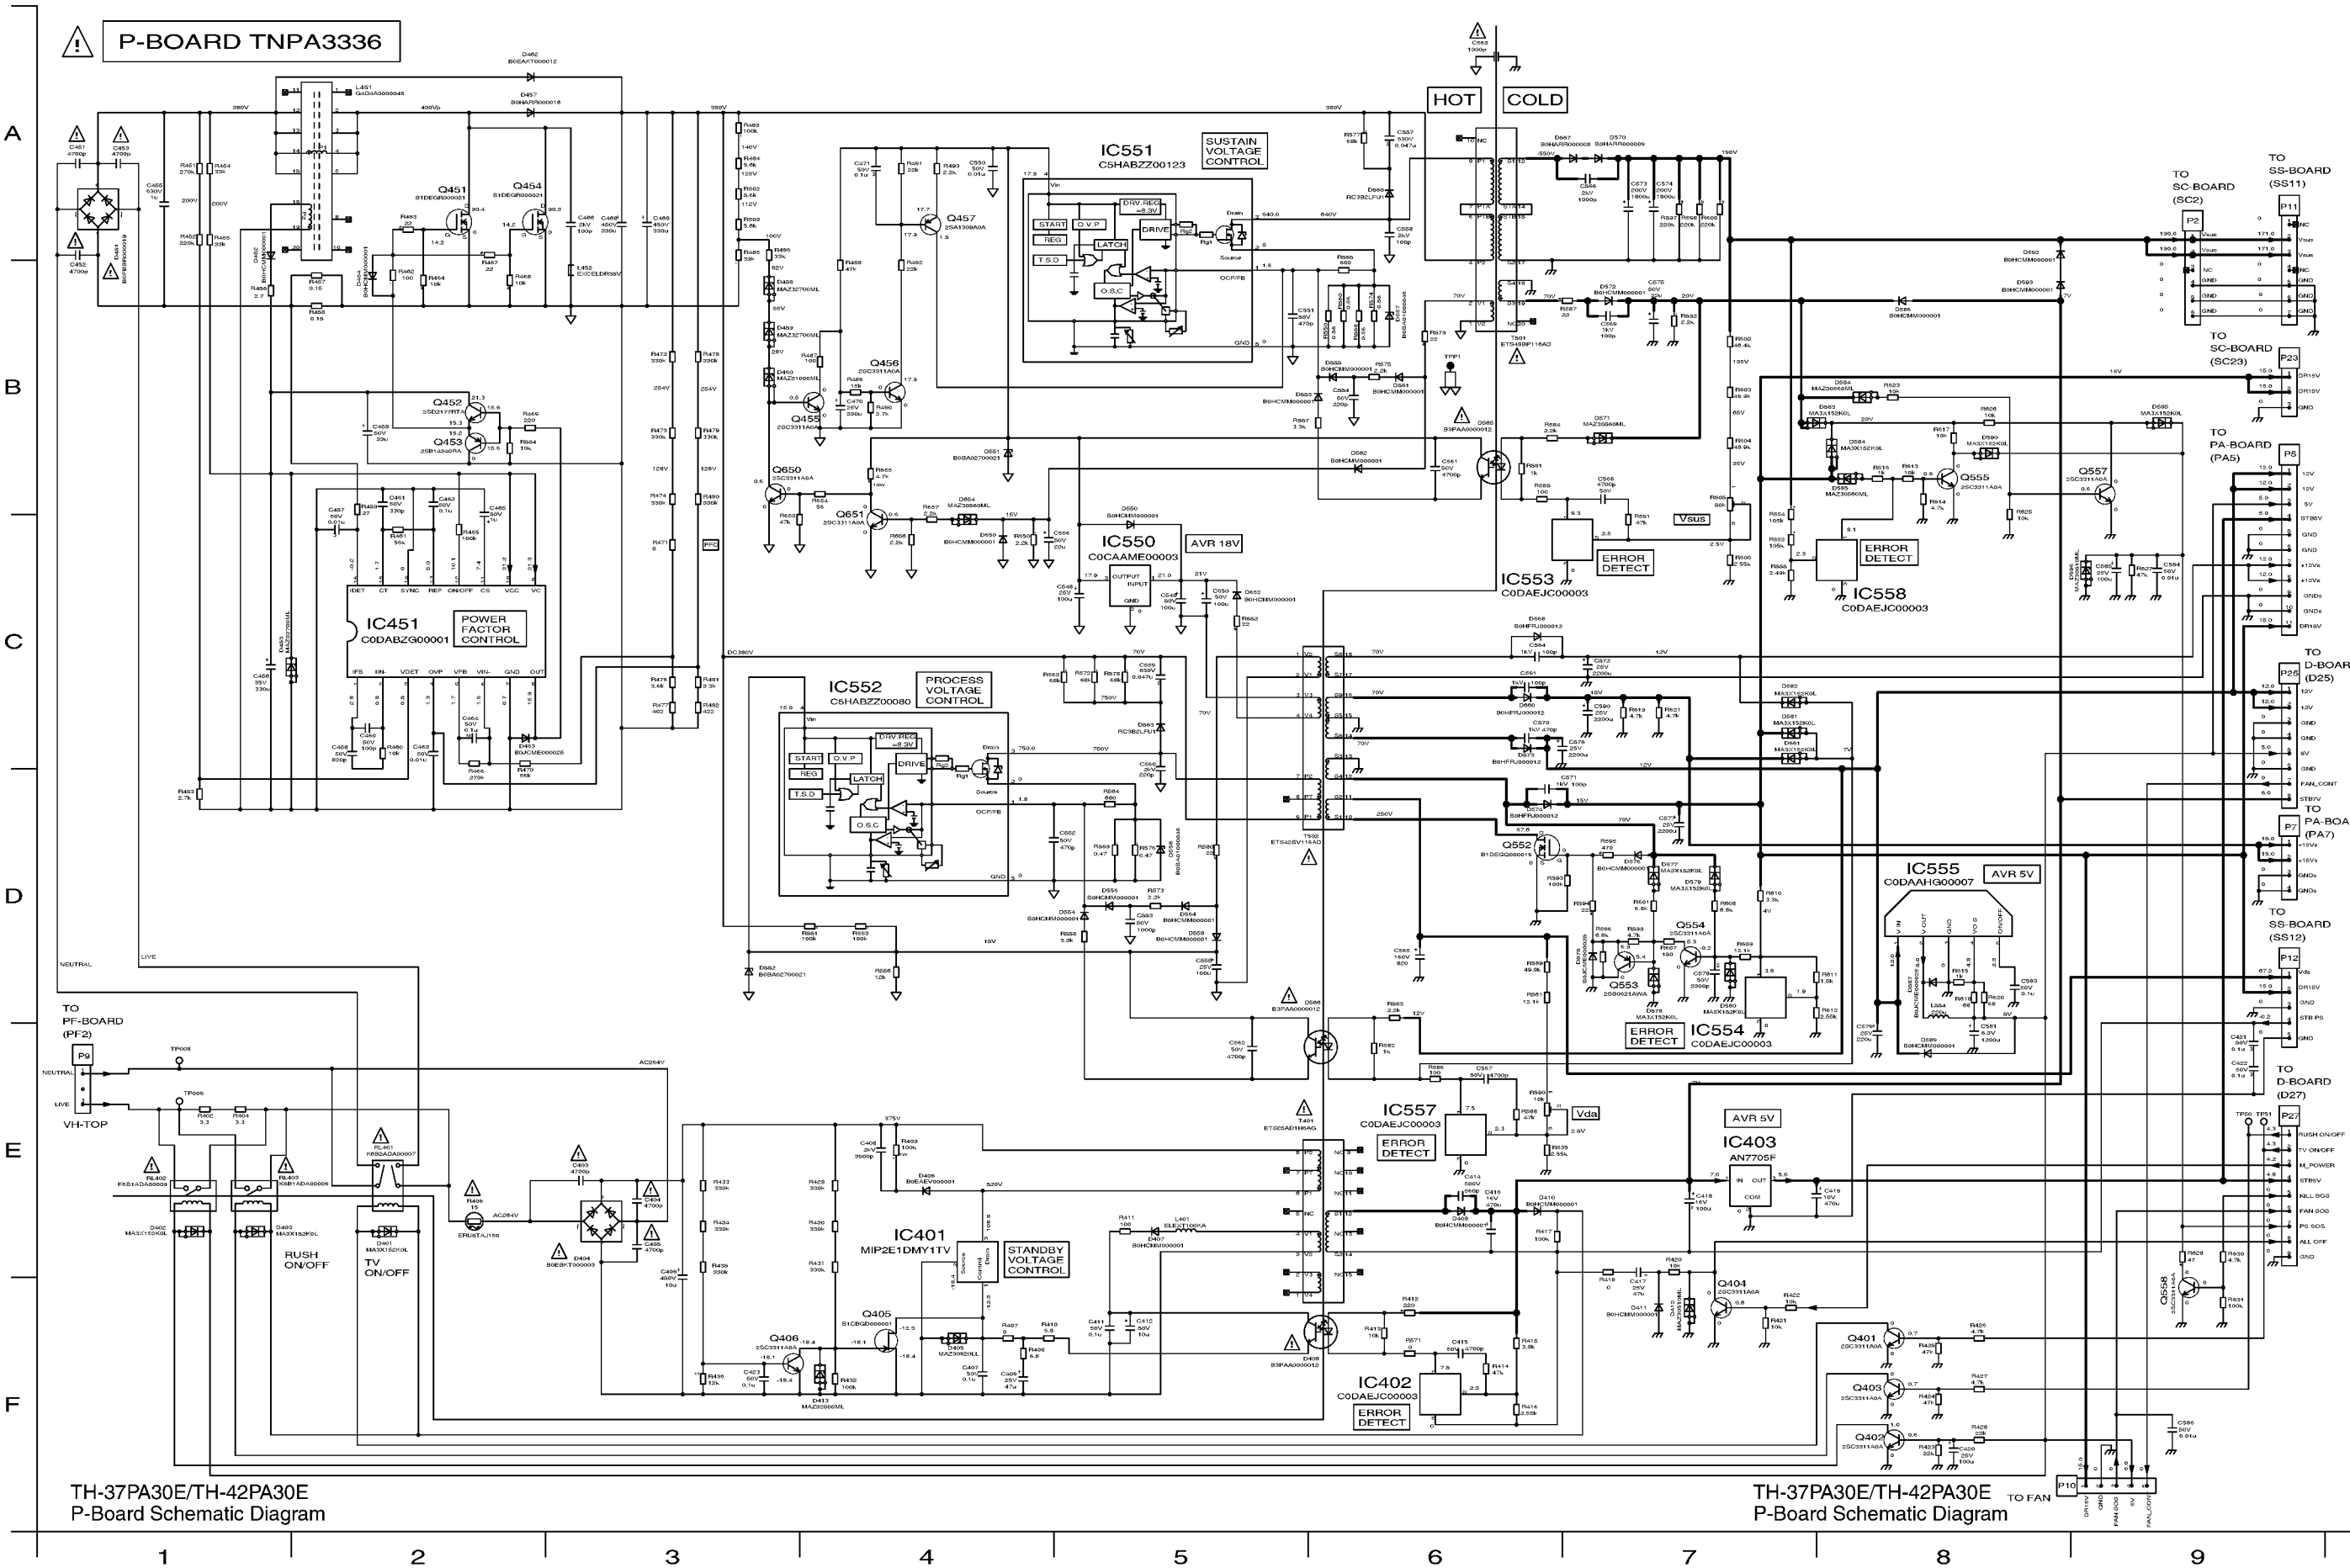


15.7. PA-Board Block Diagram

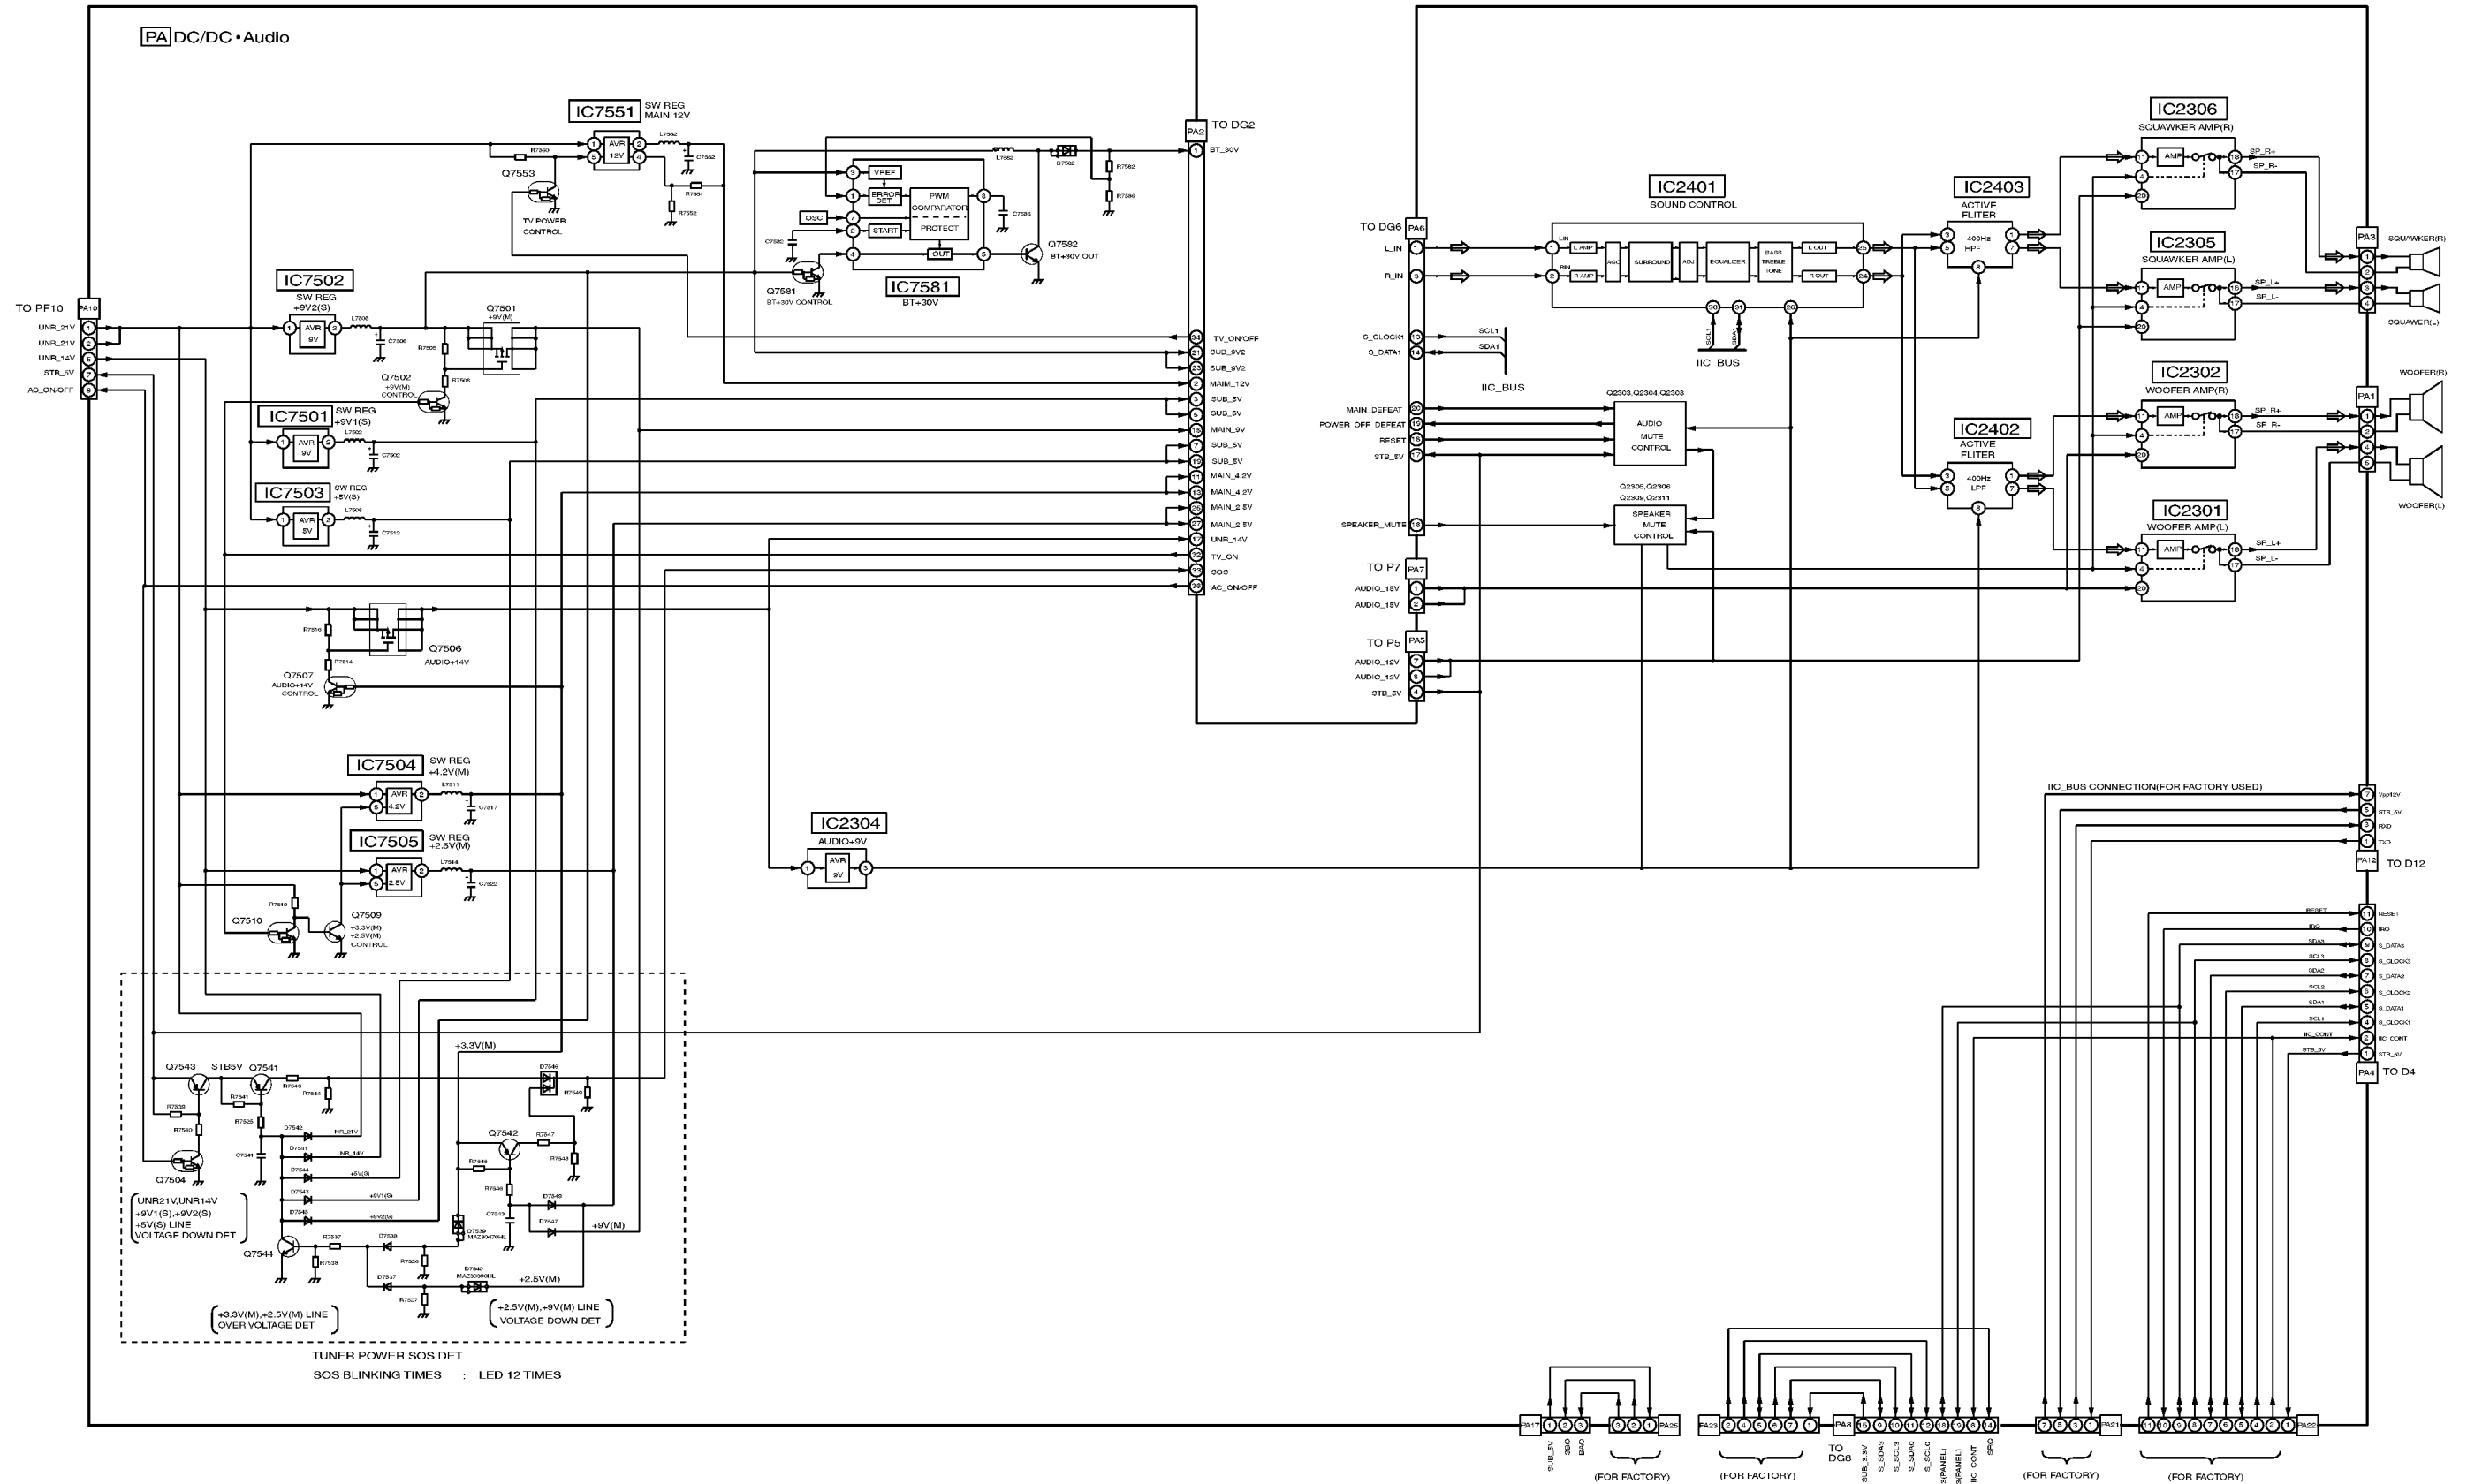


TH-37PA30E/TH-42PA30E PA-Board Block Diagram

TH-37PA30E/TH-42PA30E PA-Board Block Diagram


15.8. PA-Board (1 of 2) Schematic Diagram

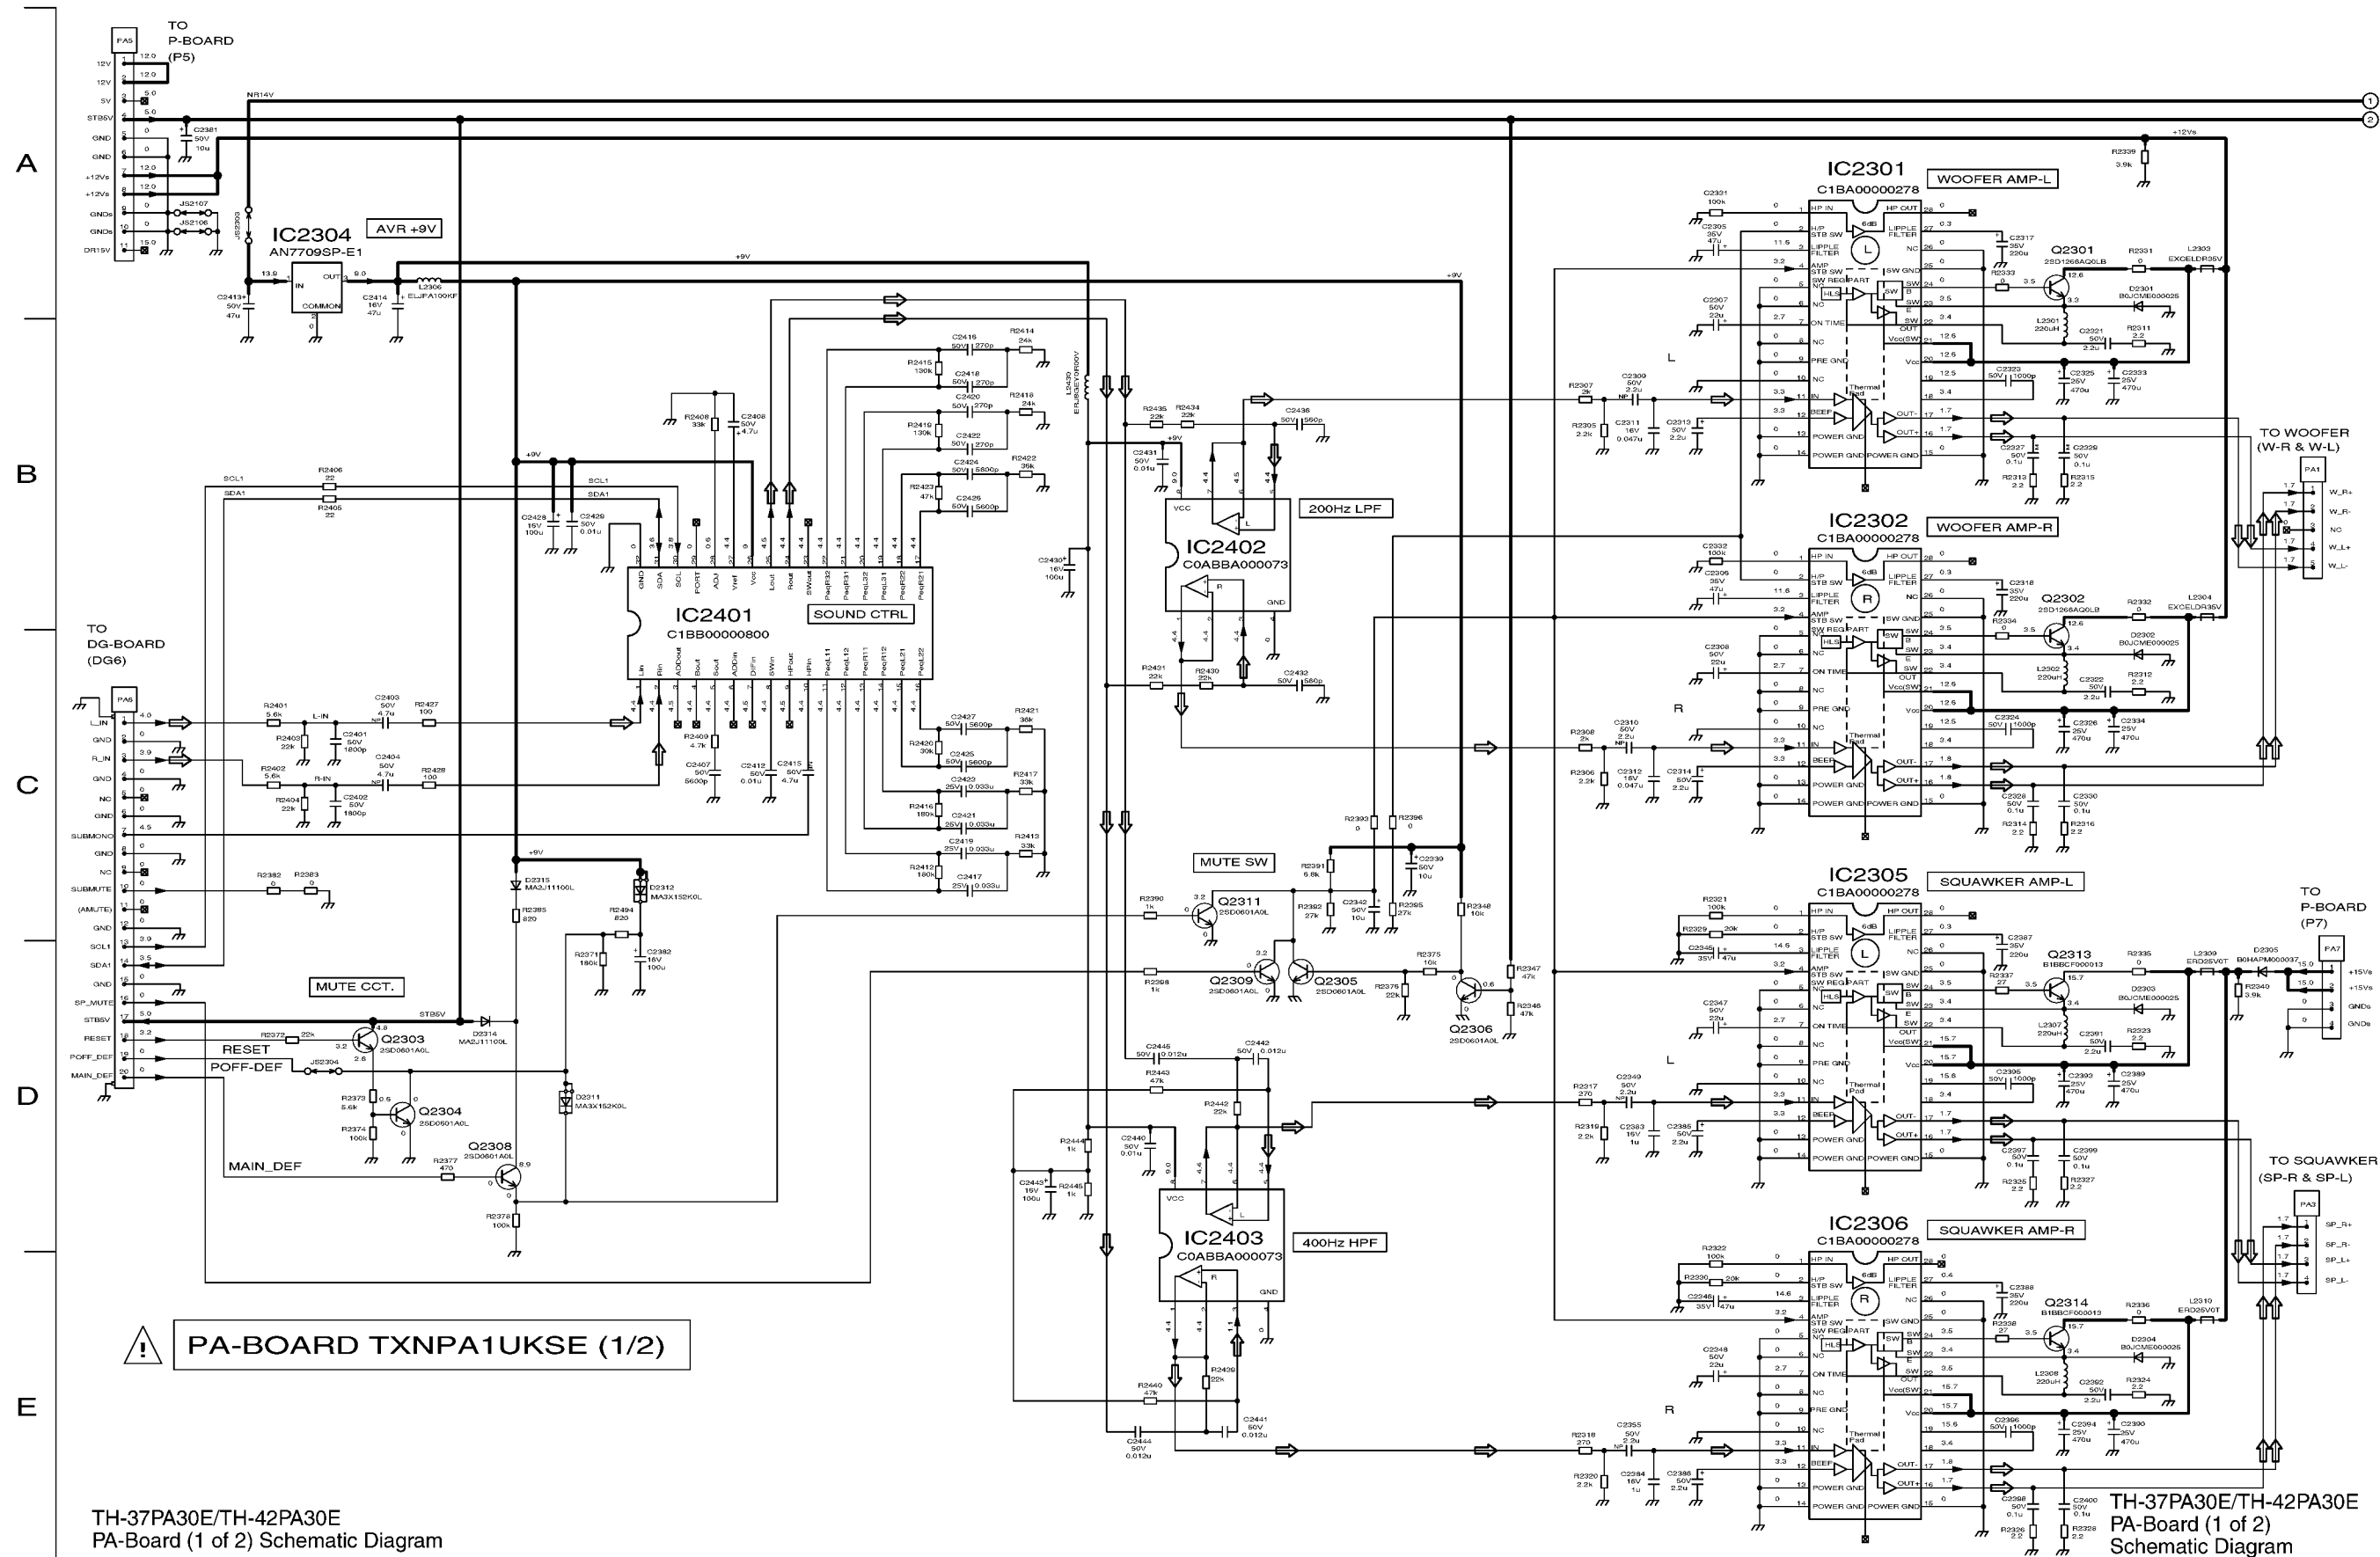



TH-37PA30E/TH-42PA30E
PA-Board (2 of 2) Schematic Diagram


15.10. H and T-Board Block Diagram

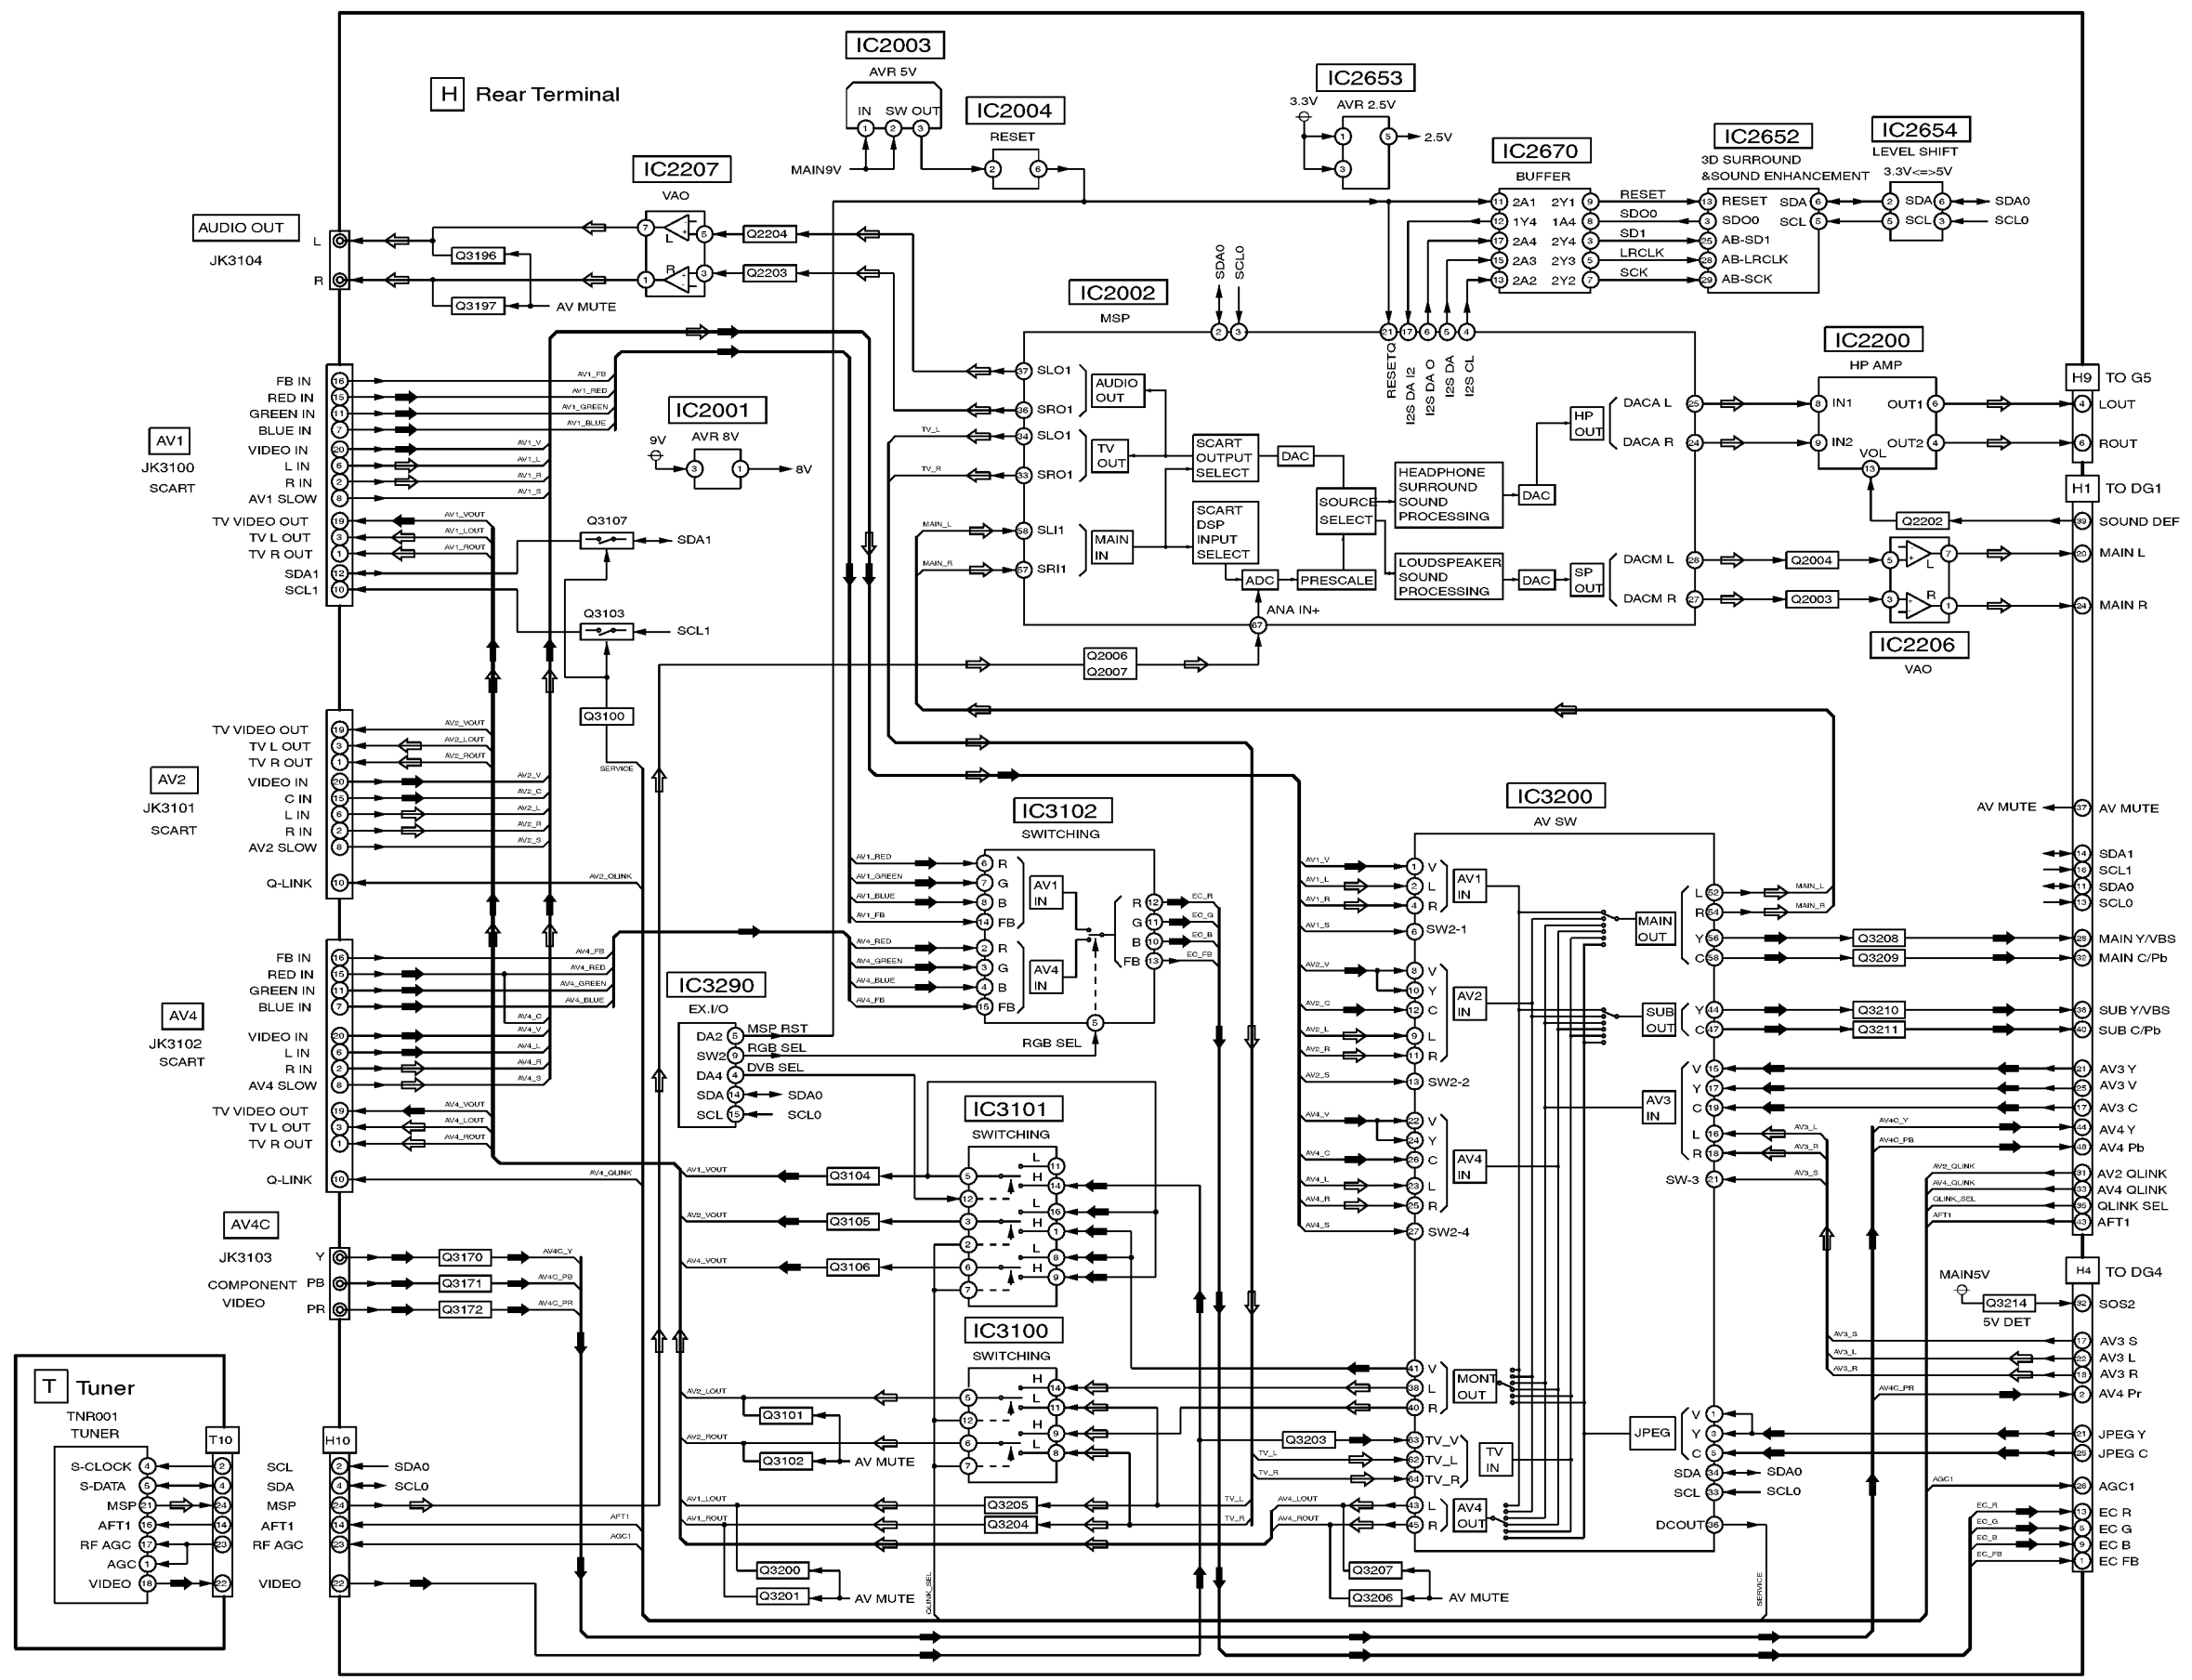


TH-37PA30E/TH-42PA30E
H and T-Board Block Diagram


TH-37PA30E/TH-42PA30E
H and T-Board Block Diagram

15.11. H-Board (1 of 2) Schematic Diagram

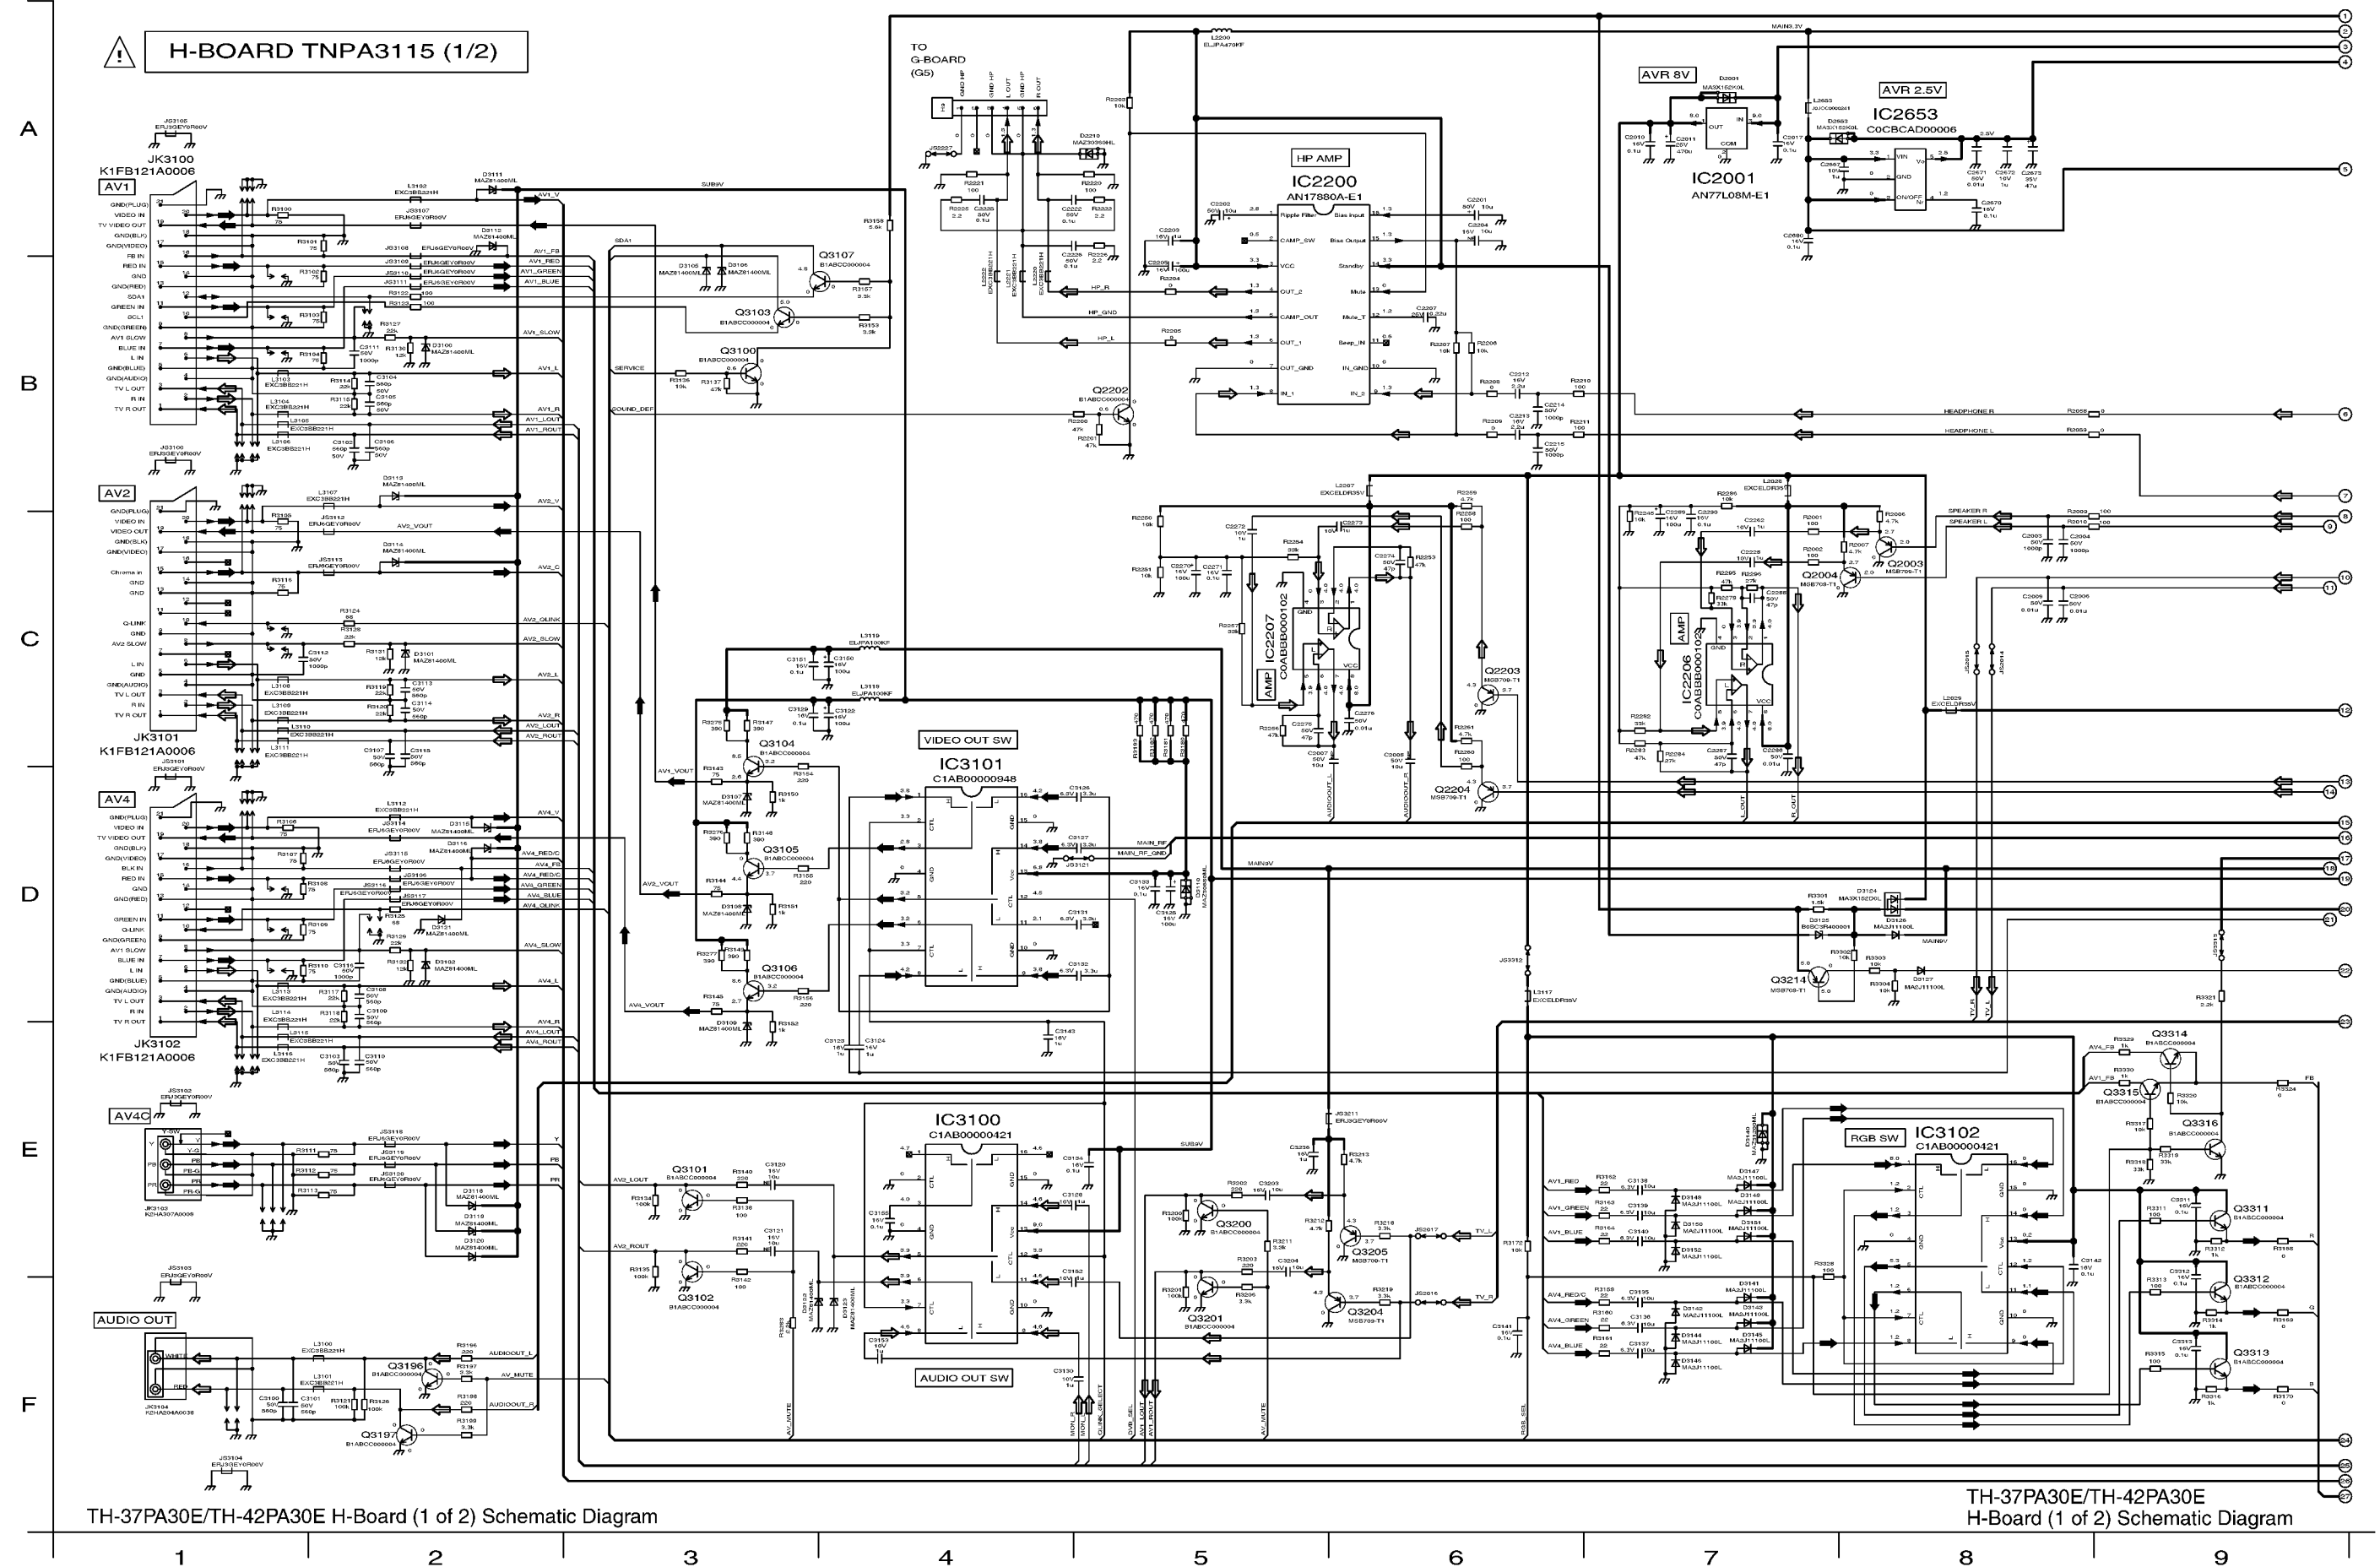




15.13. DG-Board (1 of 2) Block Diagram

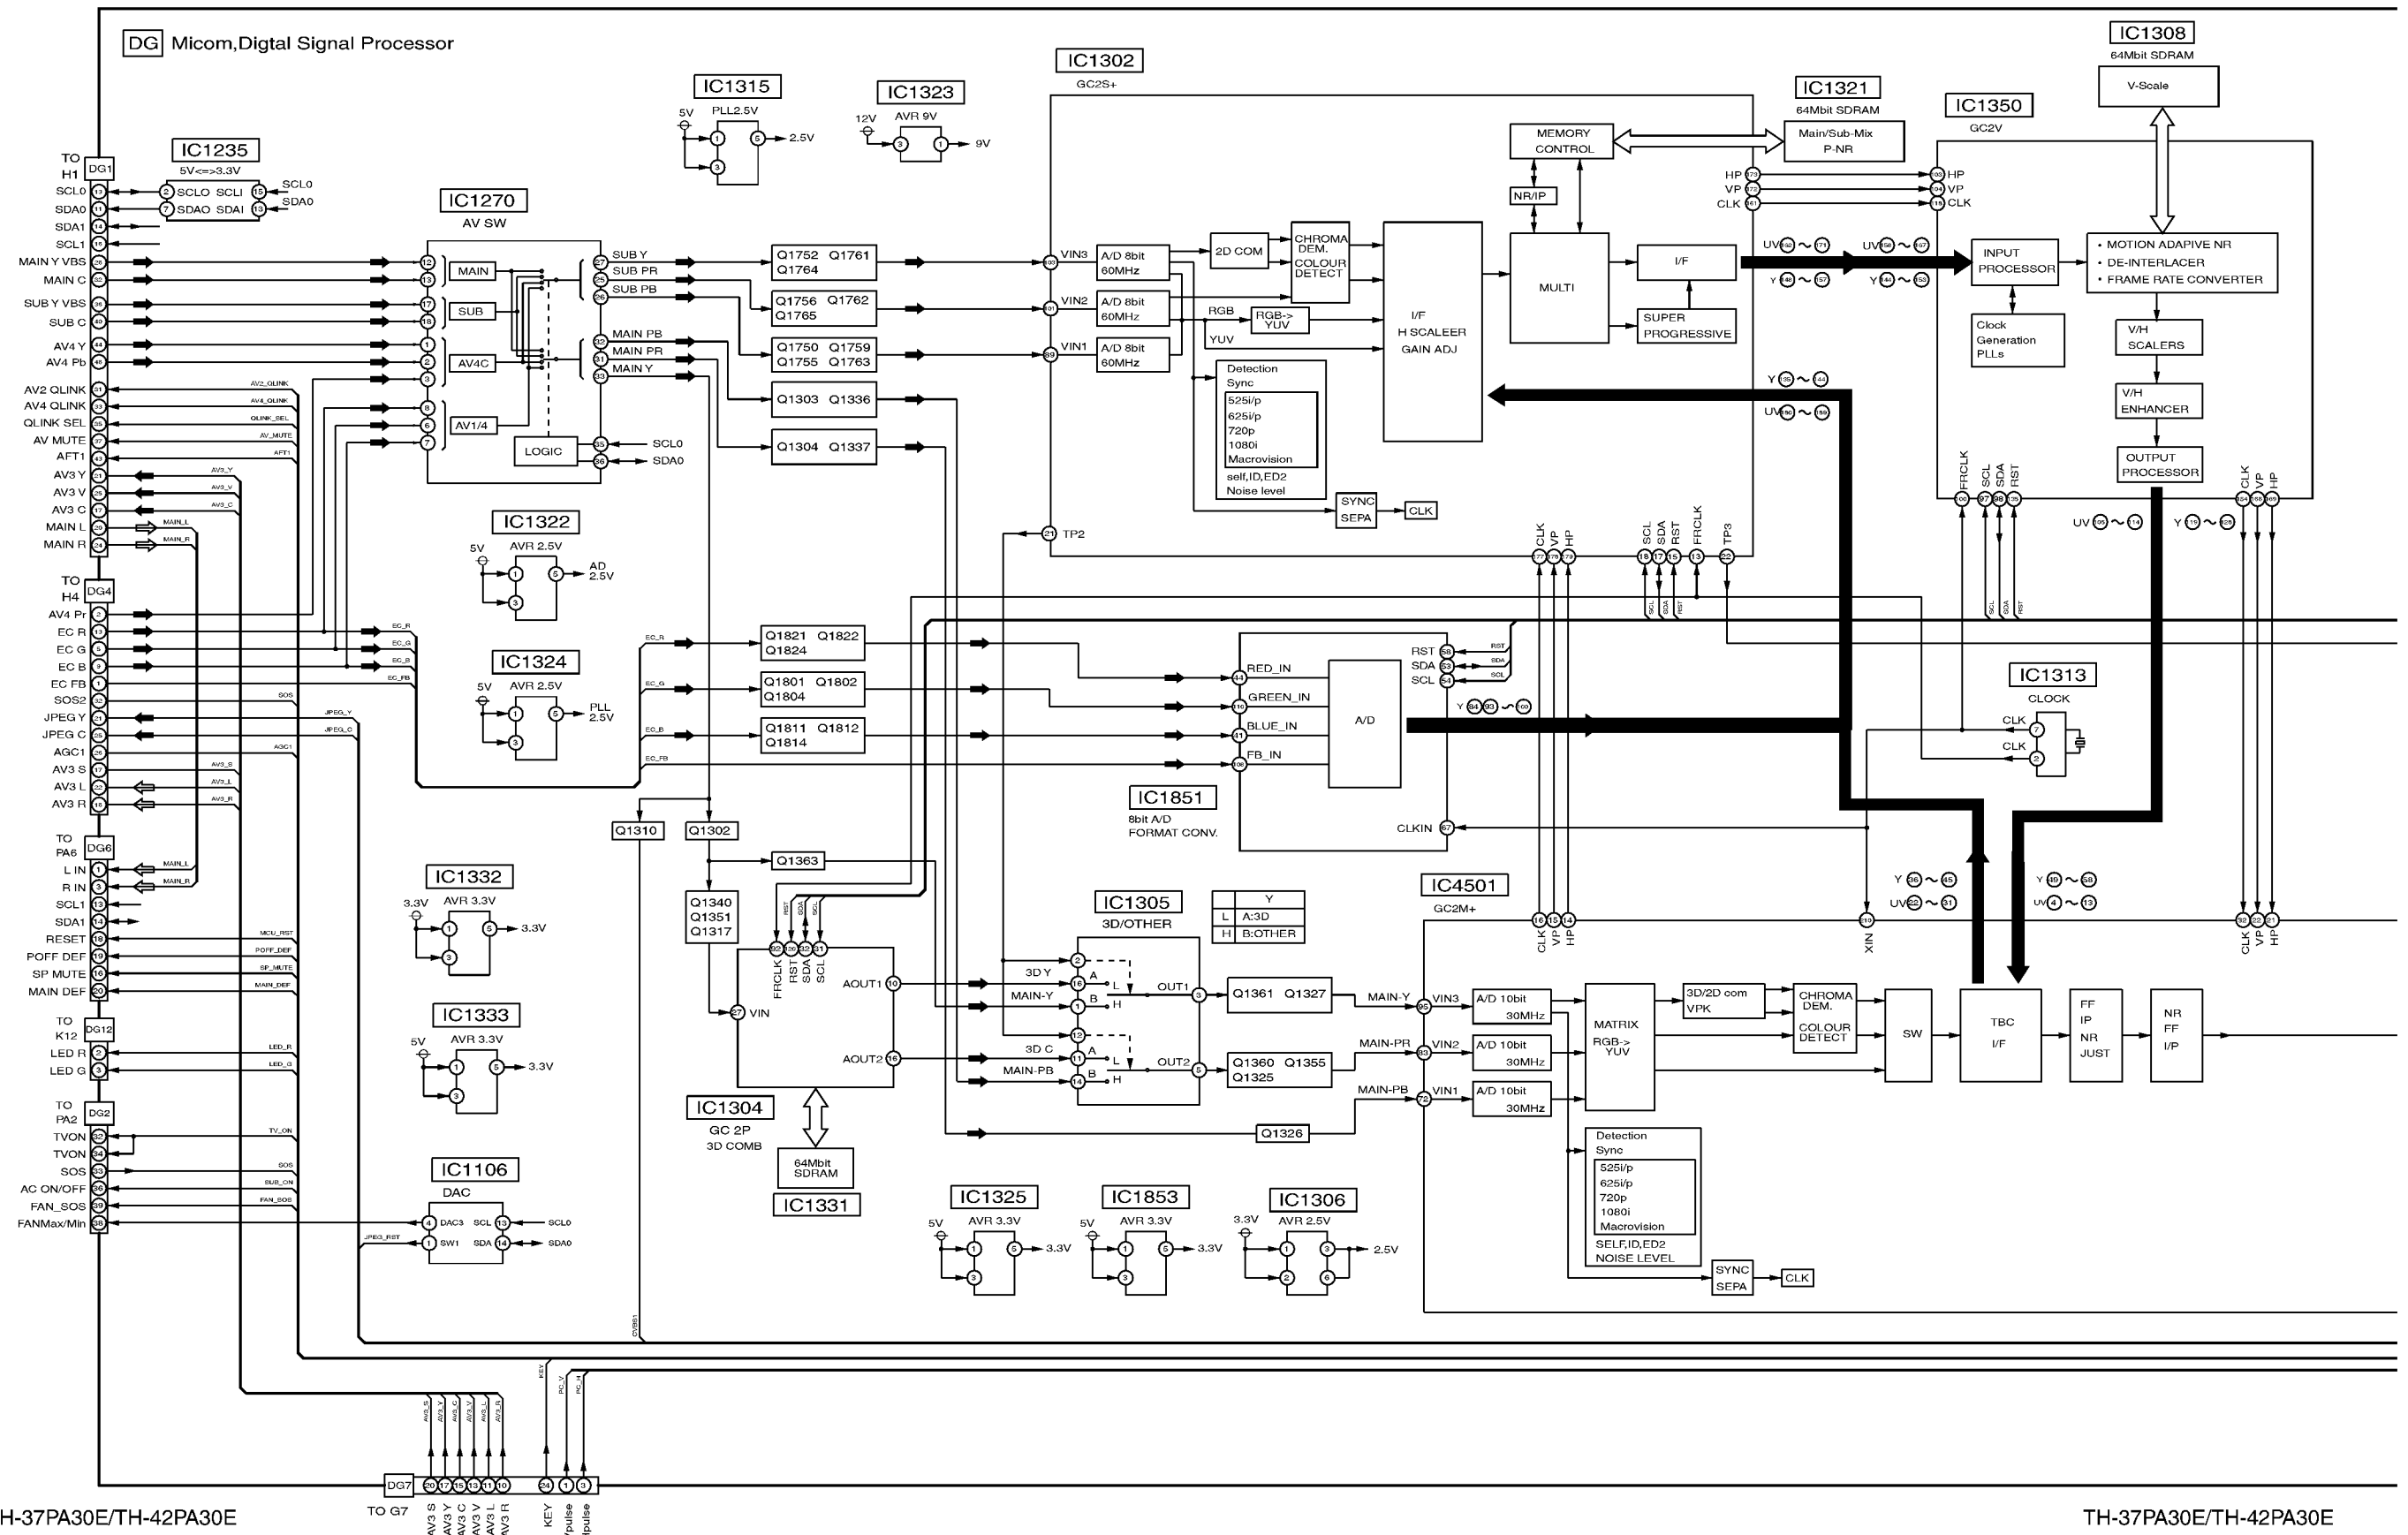


15.14. DG-Board (2 of 2) Block Diagram

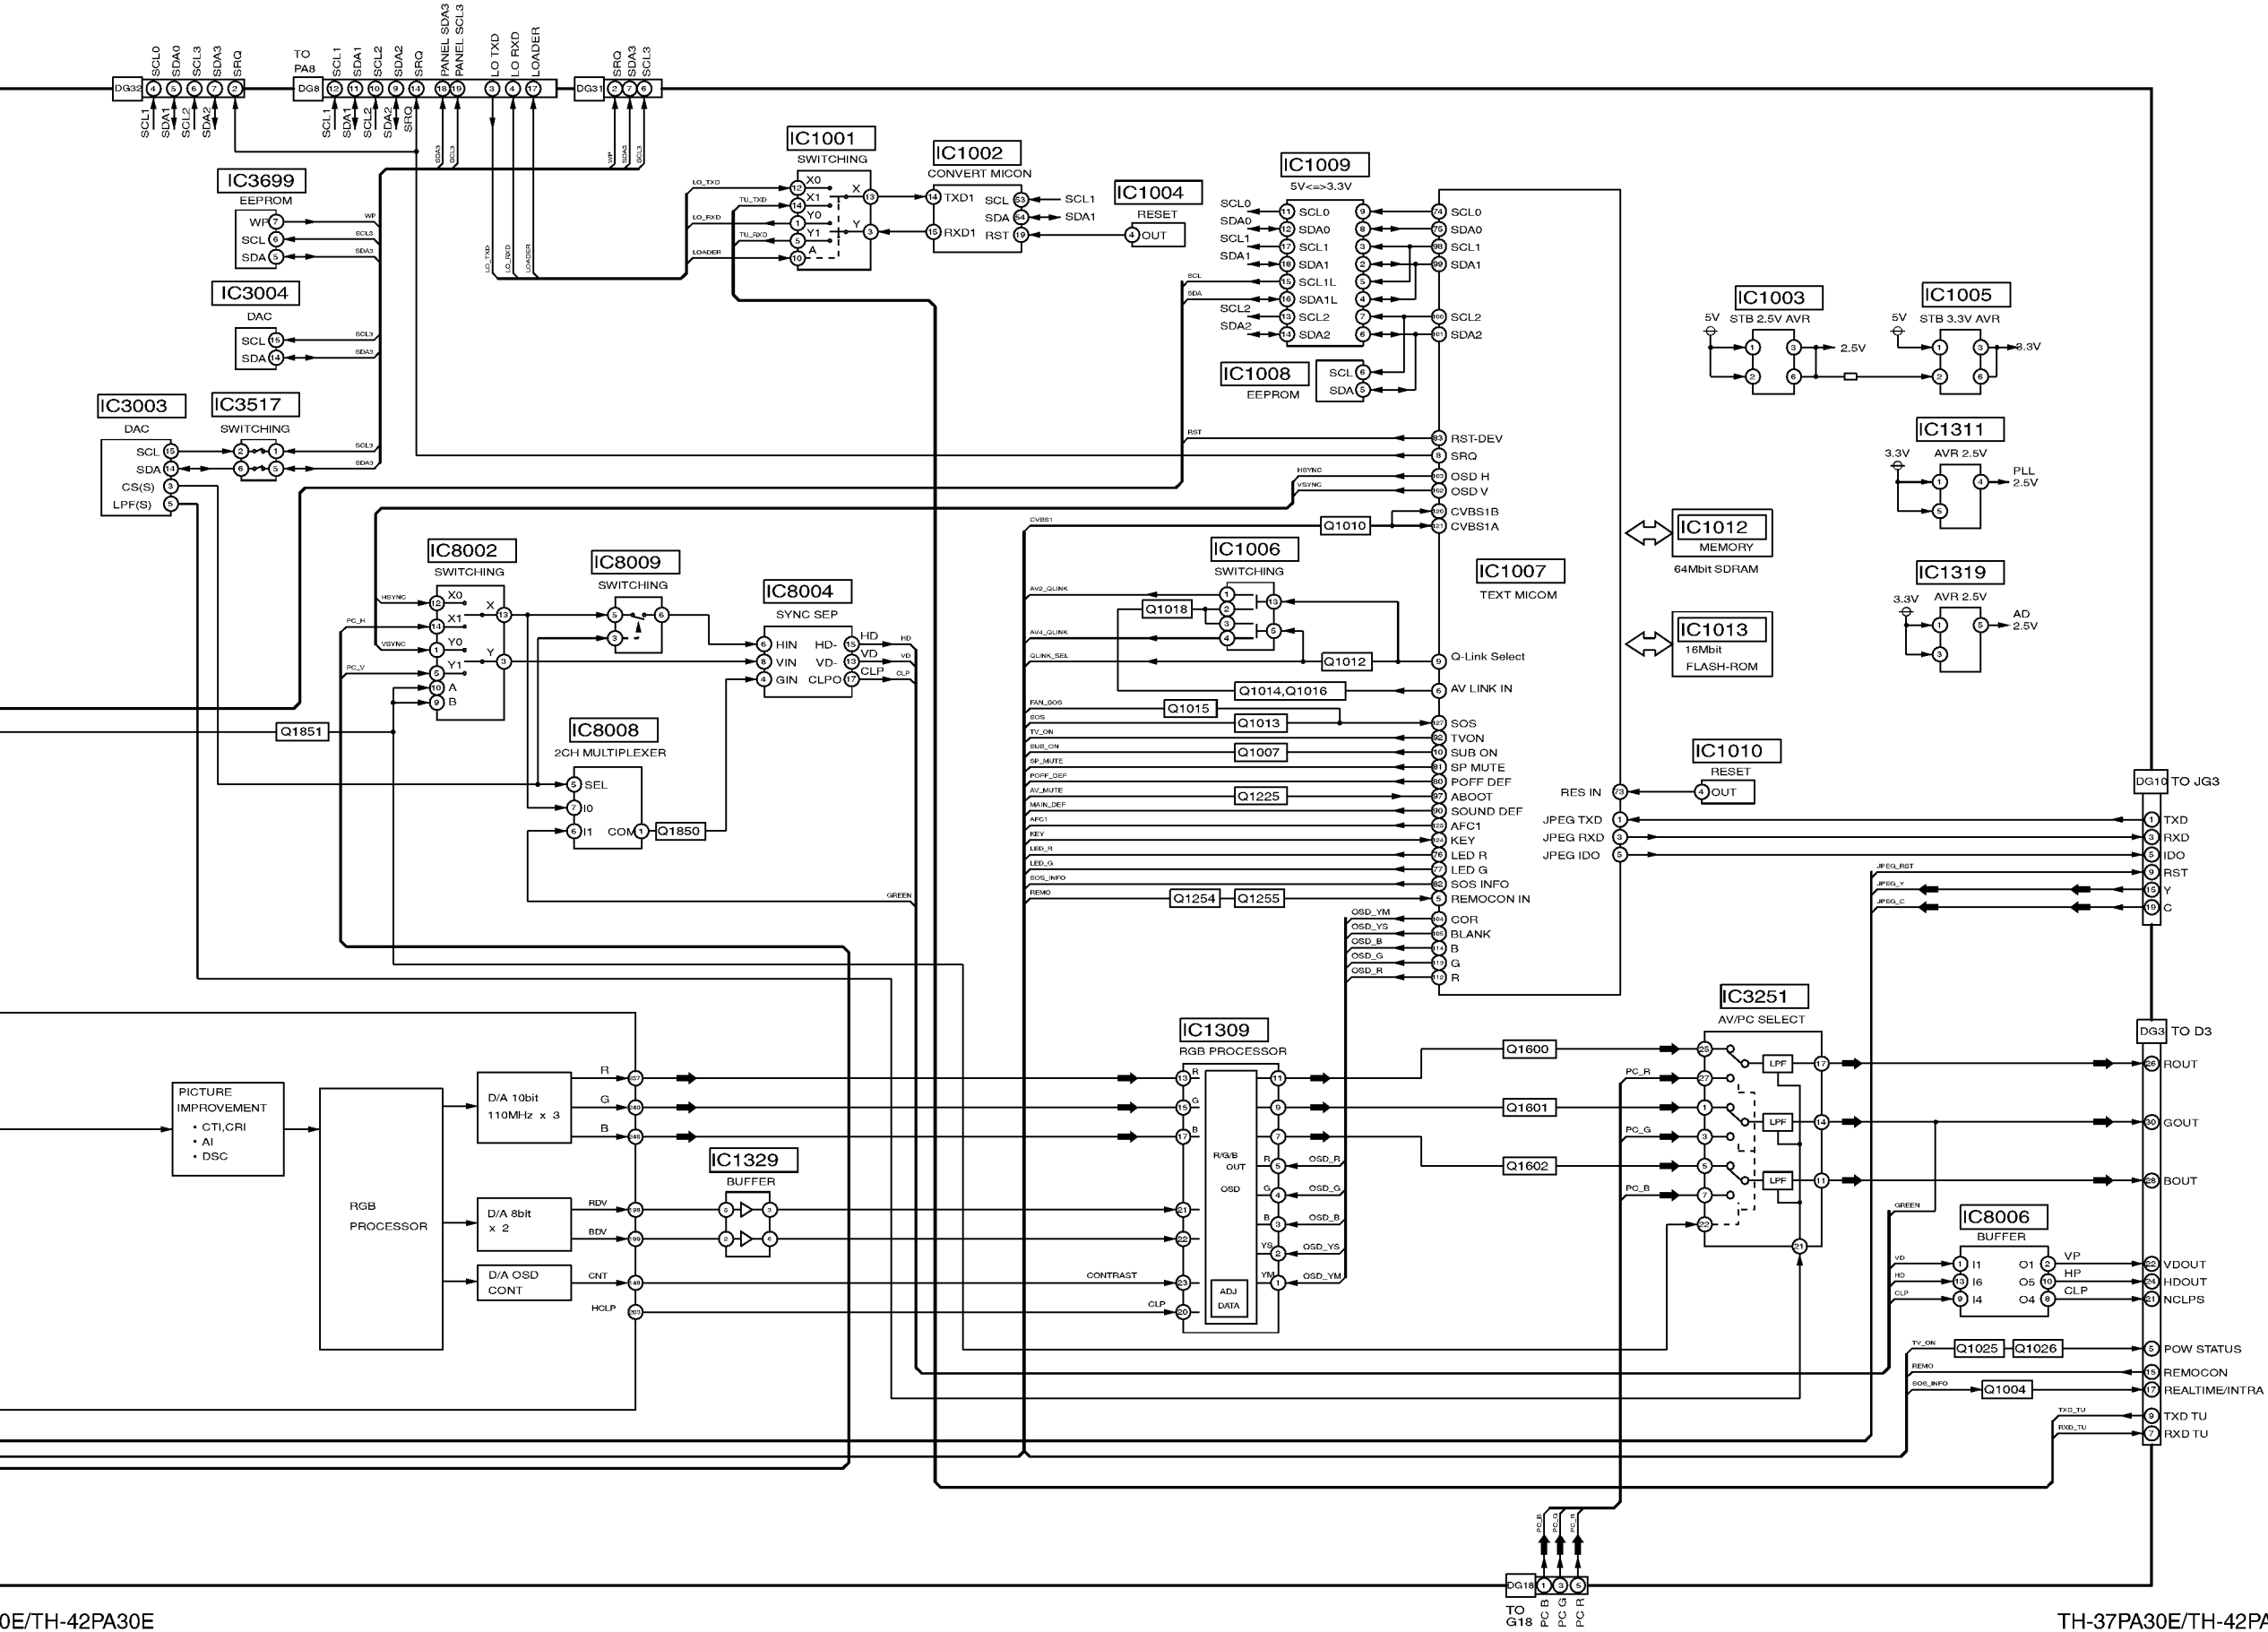


TH-37PA30E/TH-42PA30E
DG-Board (2 of 2) Block Diagram

TH-37PA30E/TH-42PA30E
DG-Board (2 of 2) Block Diagram


15.15. DG-Board (1 of 9) Schematic Diagram

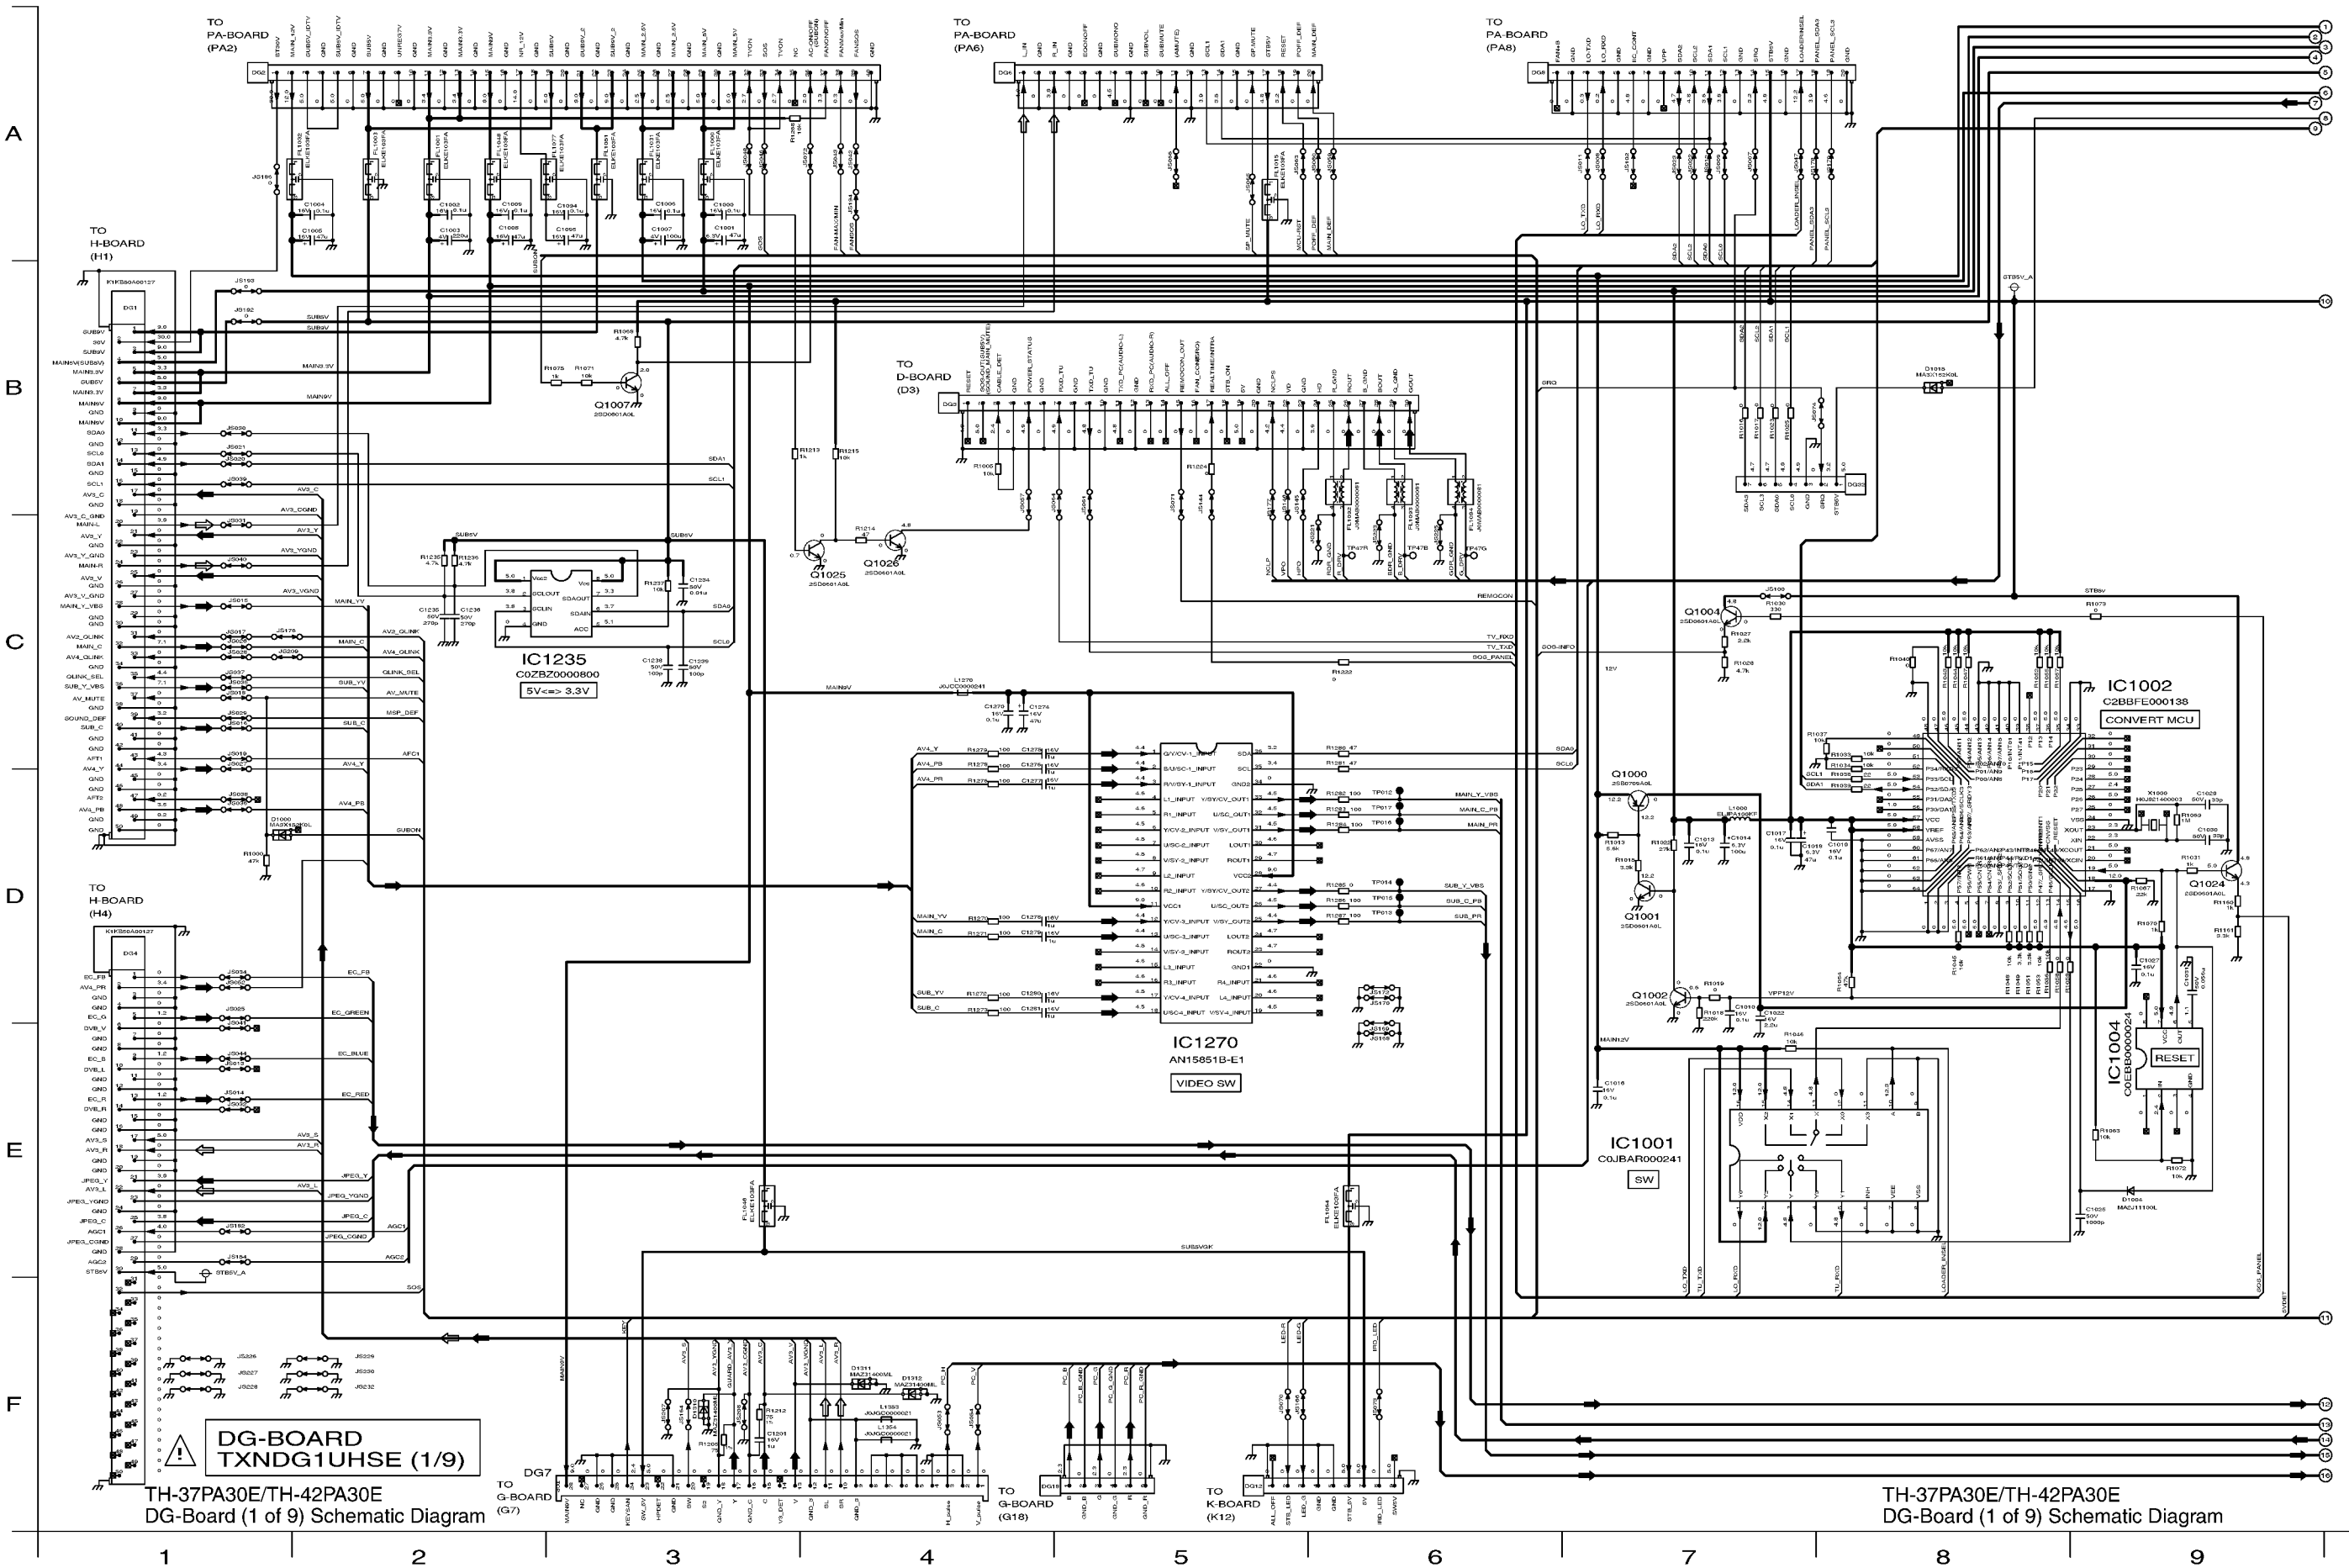

15.17. DG-Board (3 of 9) Schematic Diagram

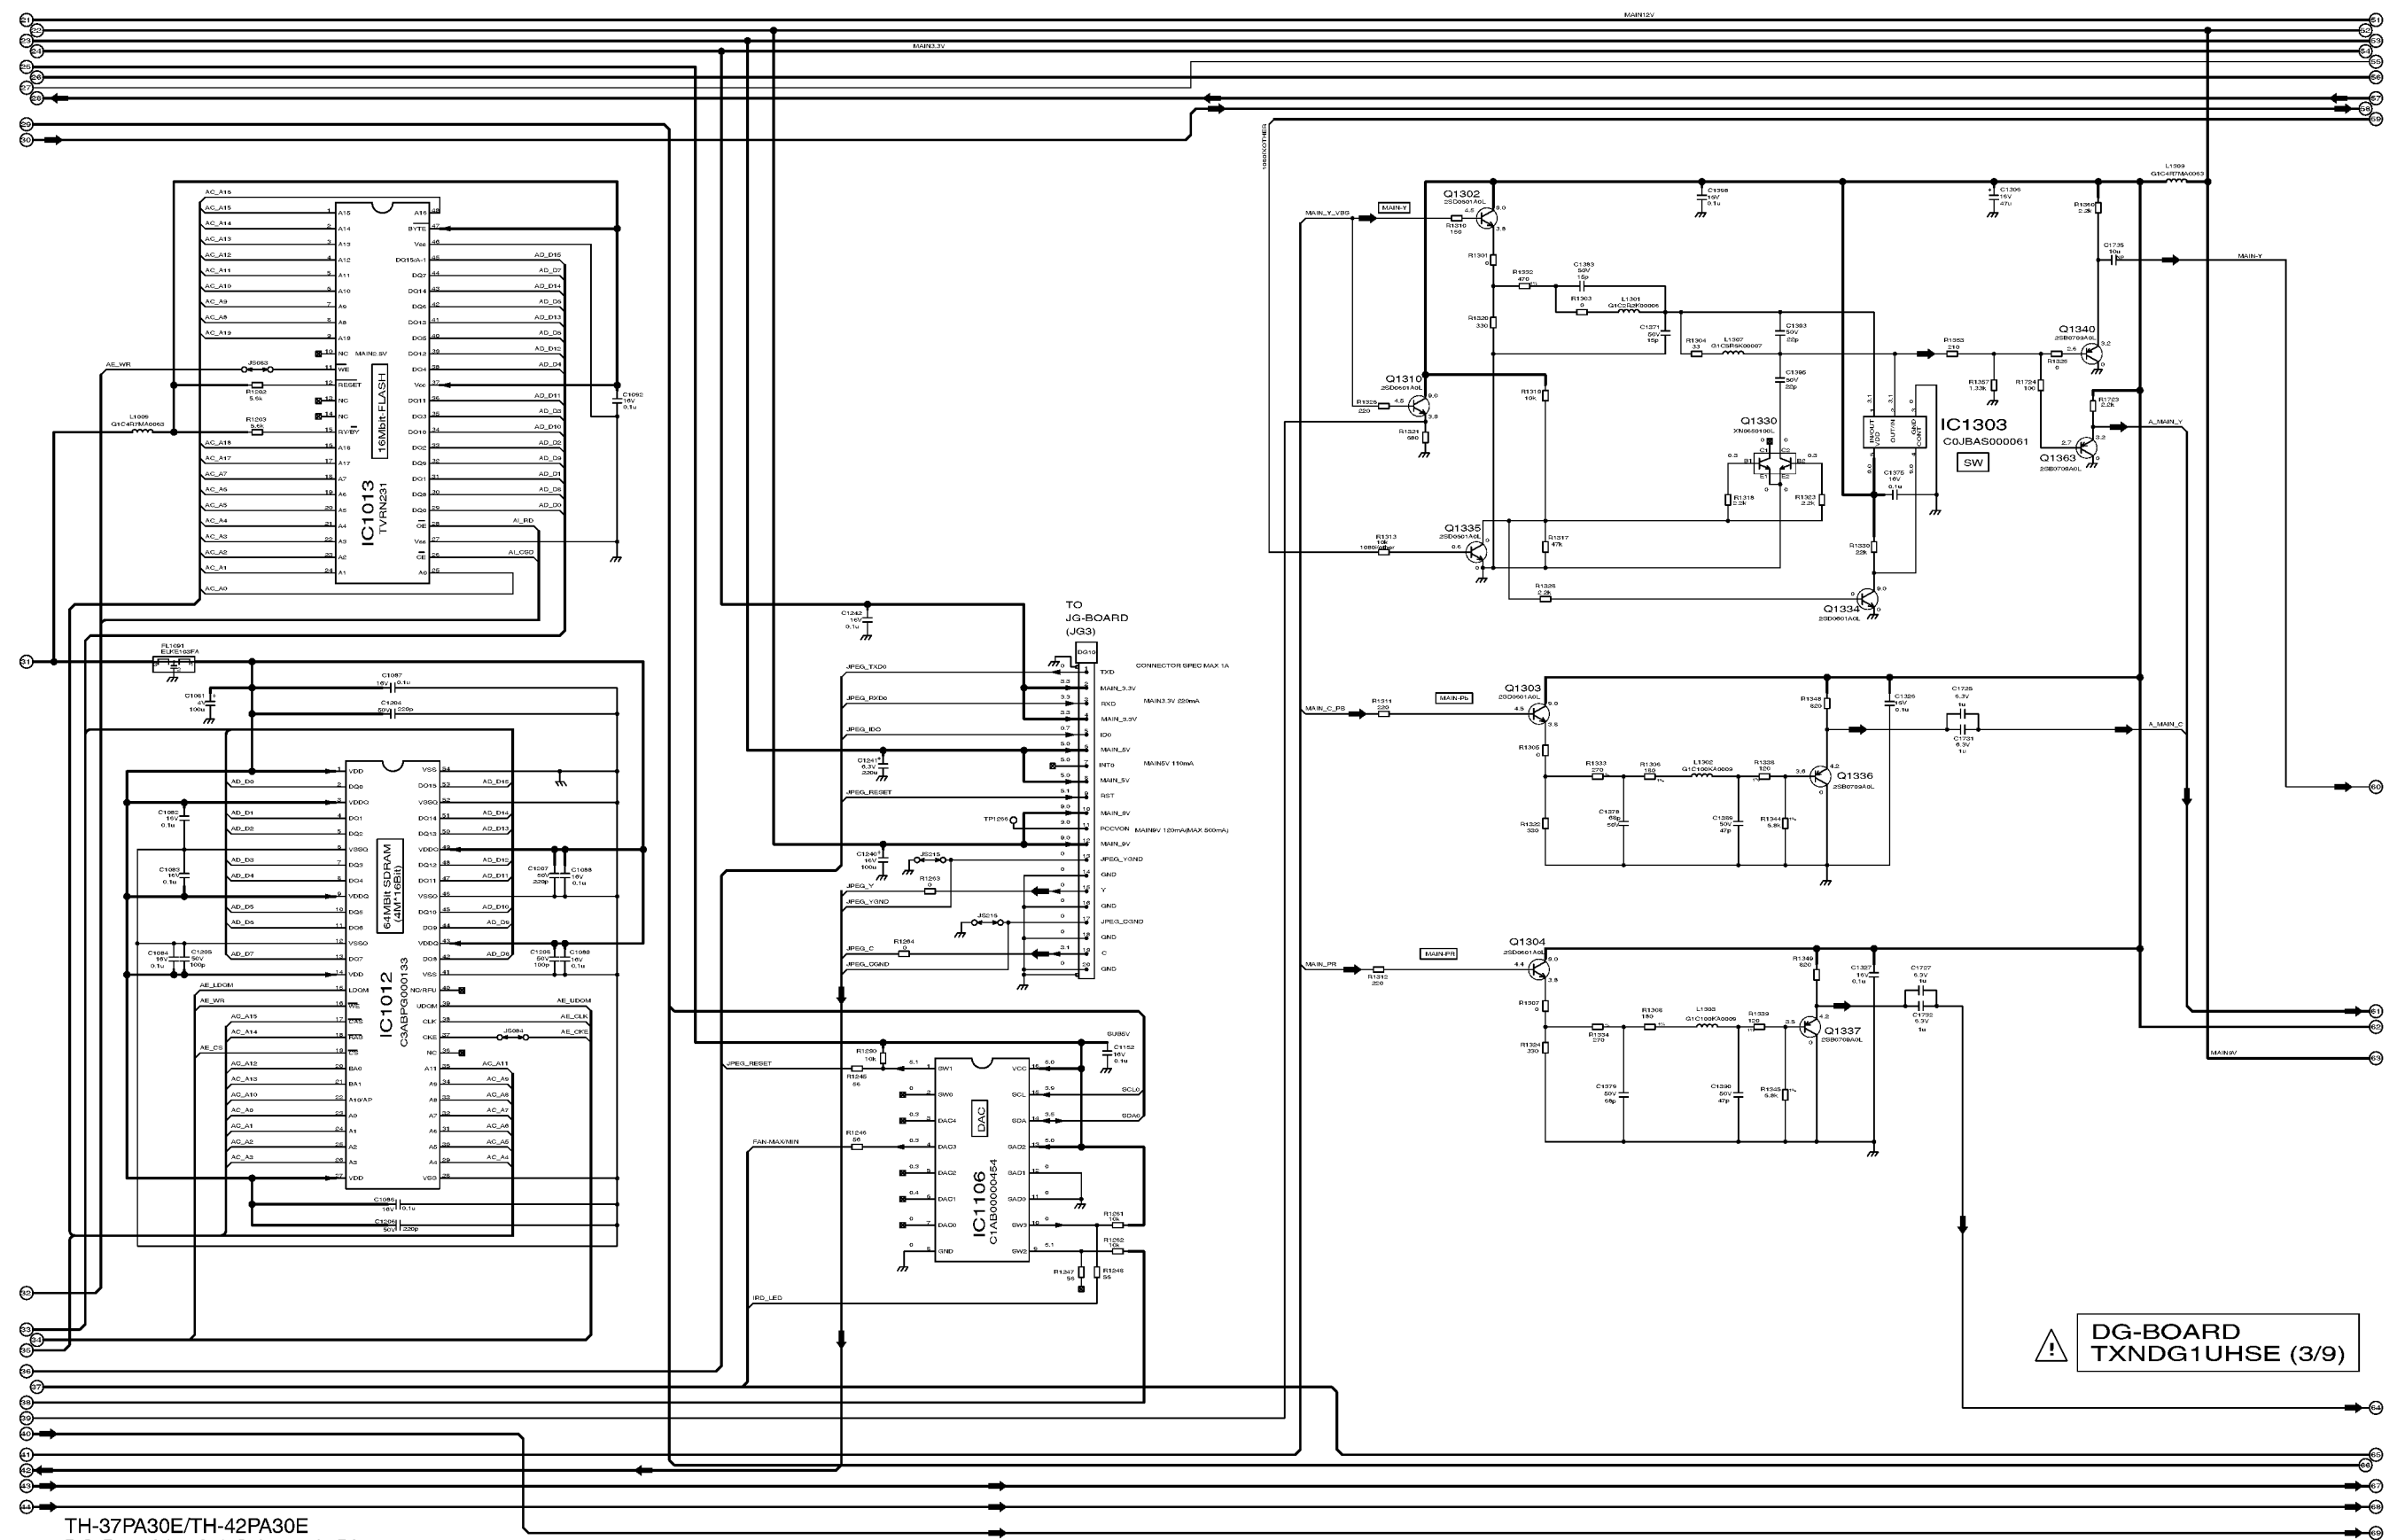


15.18. DG-Board (4 of 9) Schematic Diagram

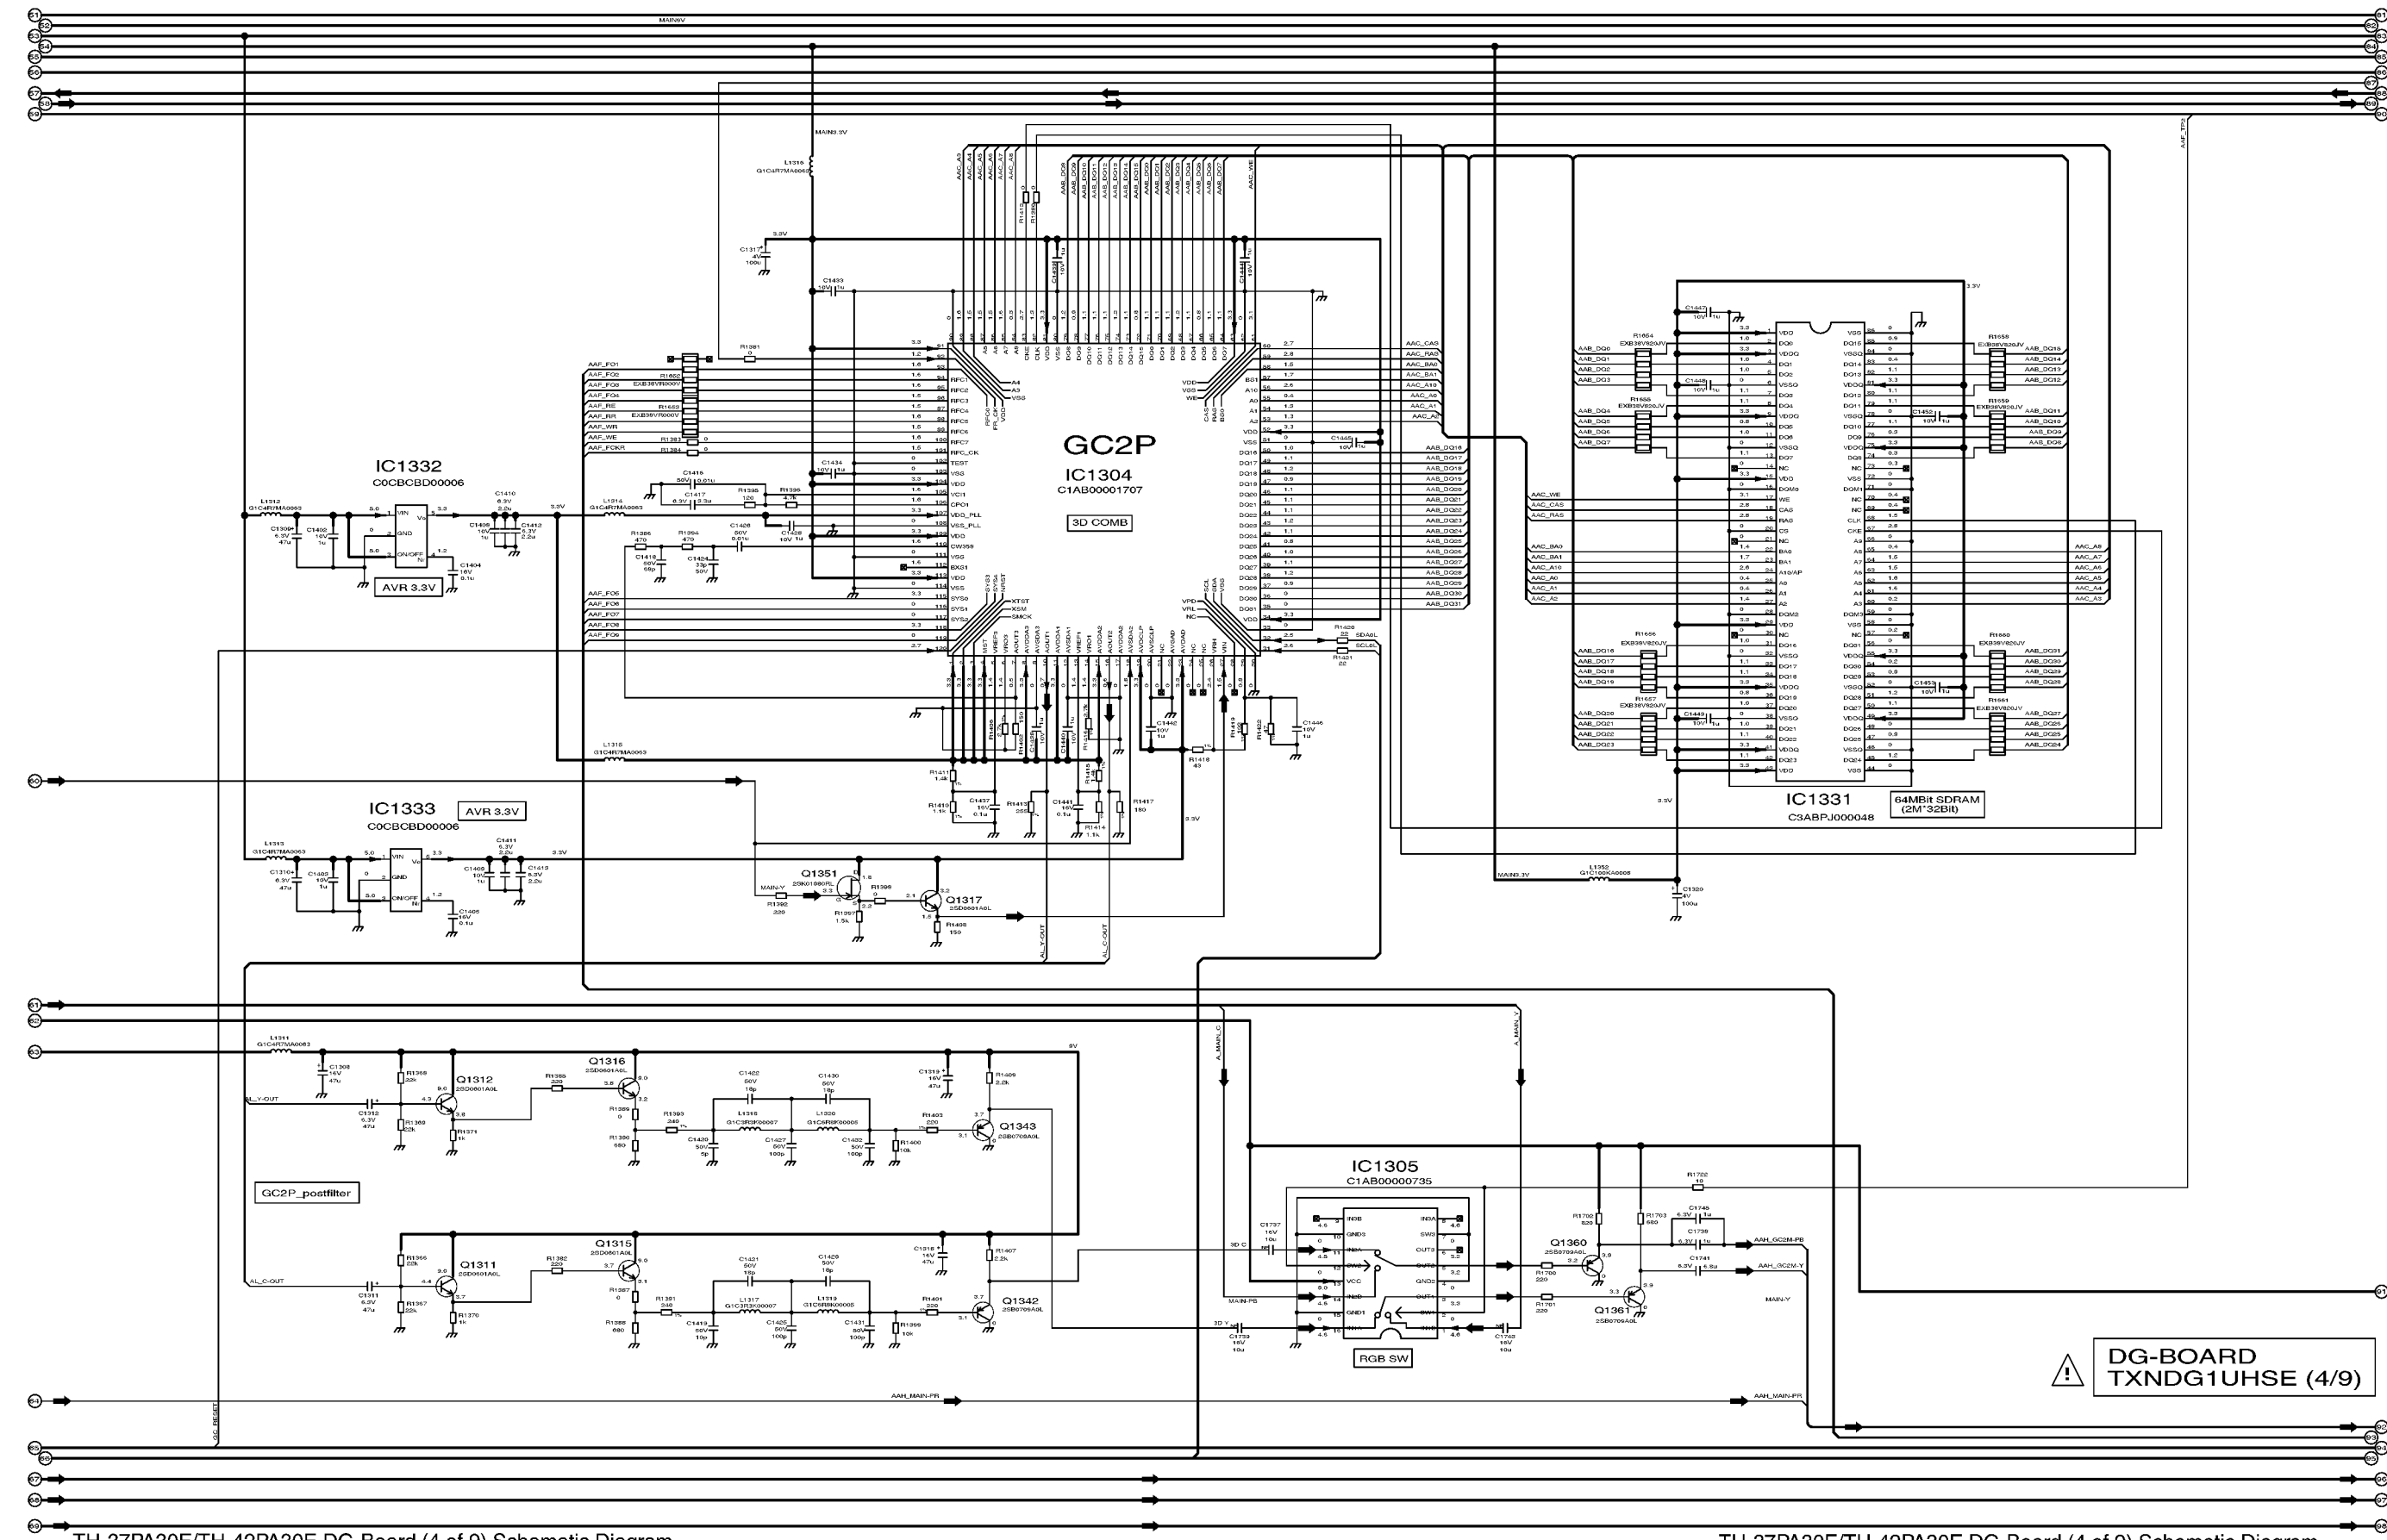

TH-37PA30E/TH-42PA30E DG-Board (4 of 9) Schematic Diagram

TH-37PA30E/TH-42PA30E DG-Board (4 of 9) Schematic Diagram

15.19. DG-Board (5 of 9) Schematic Diagram

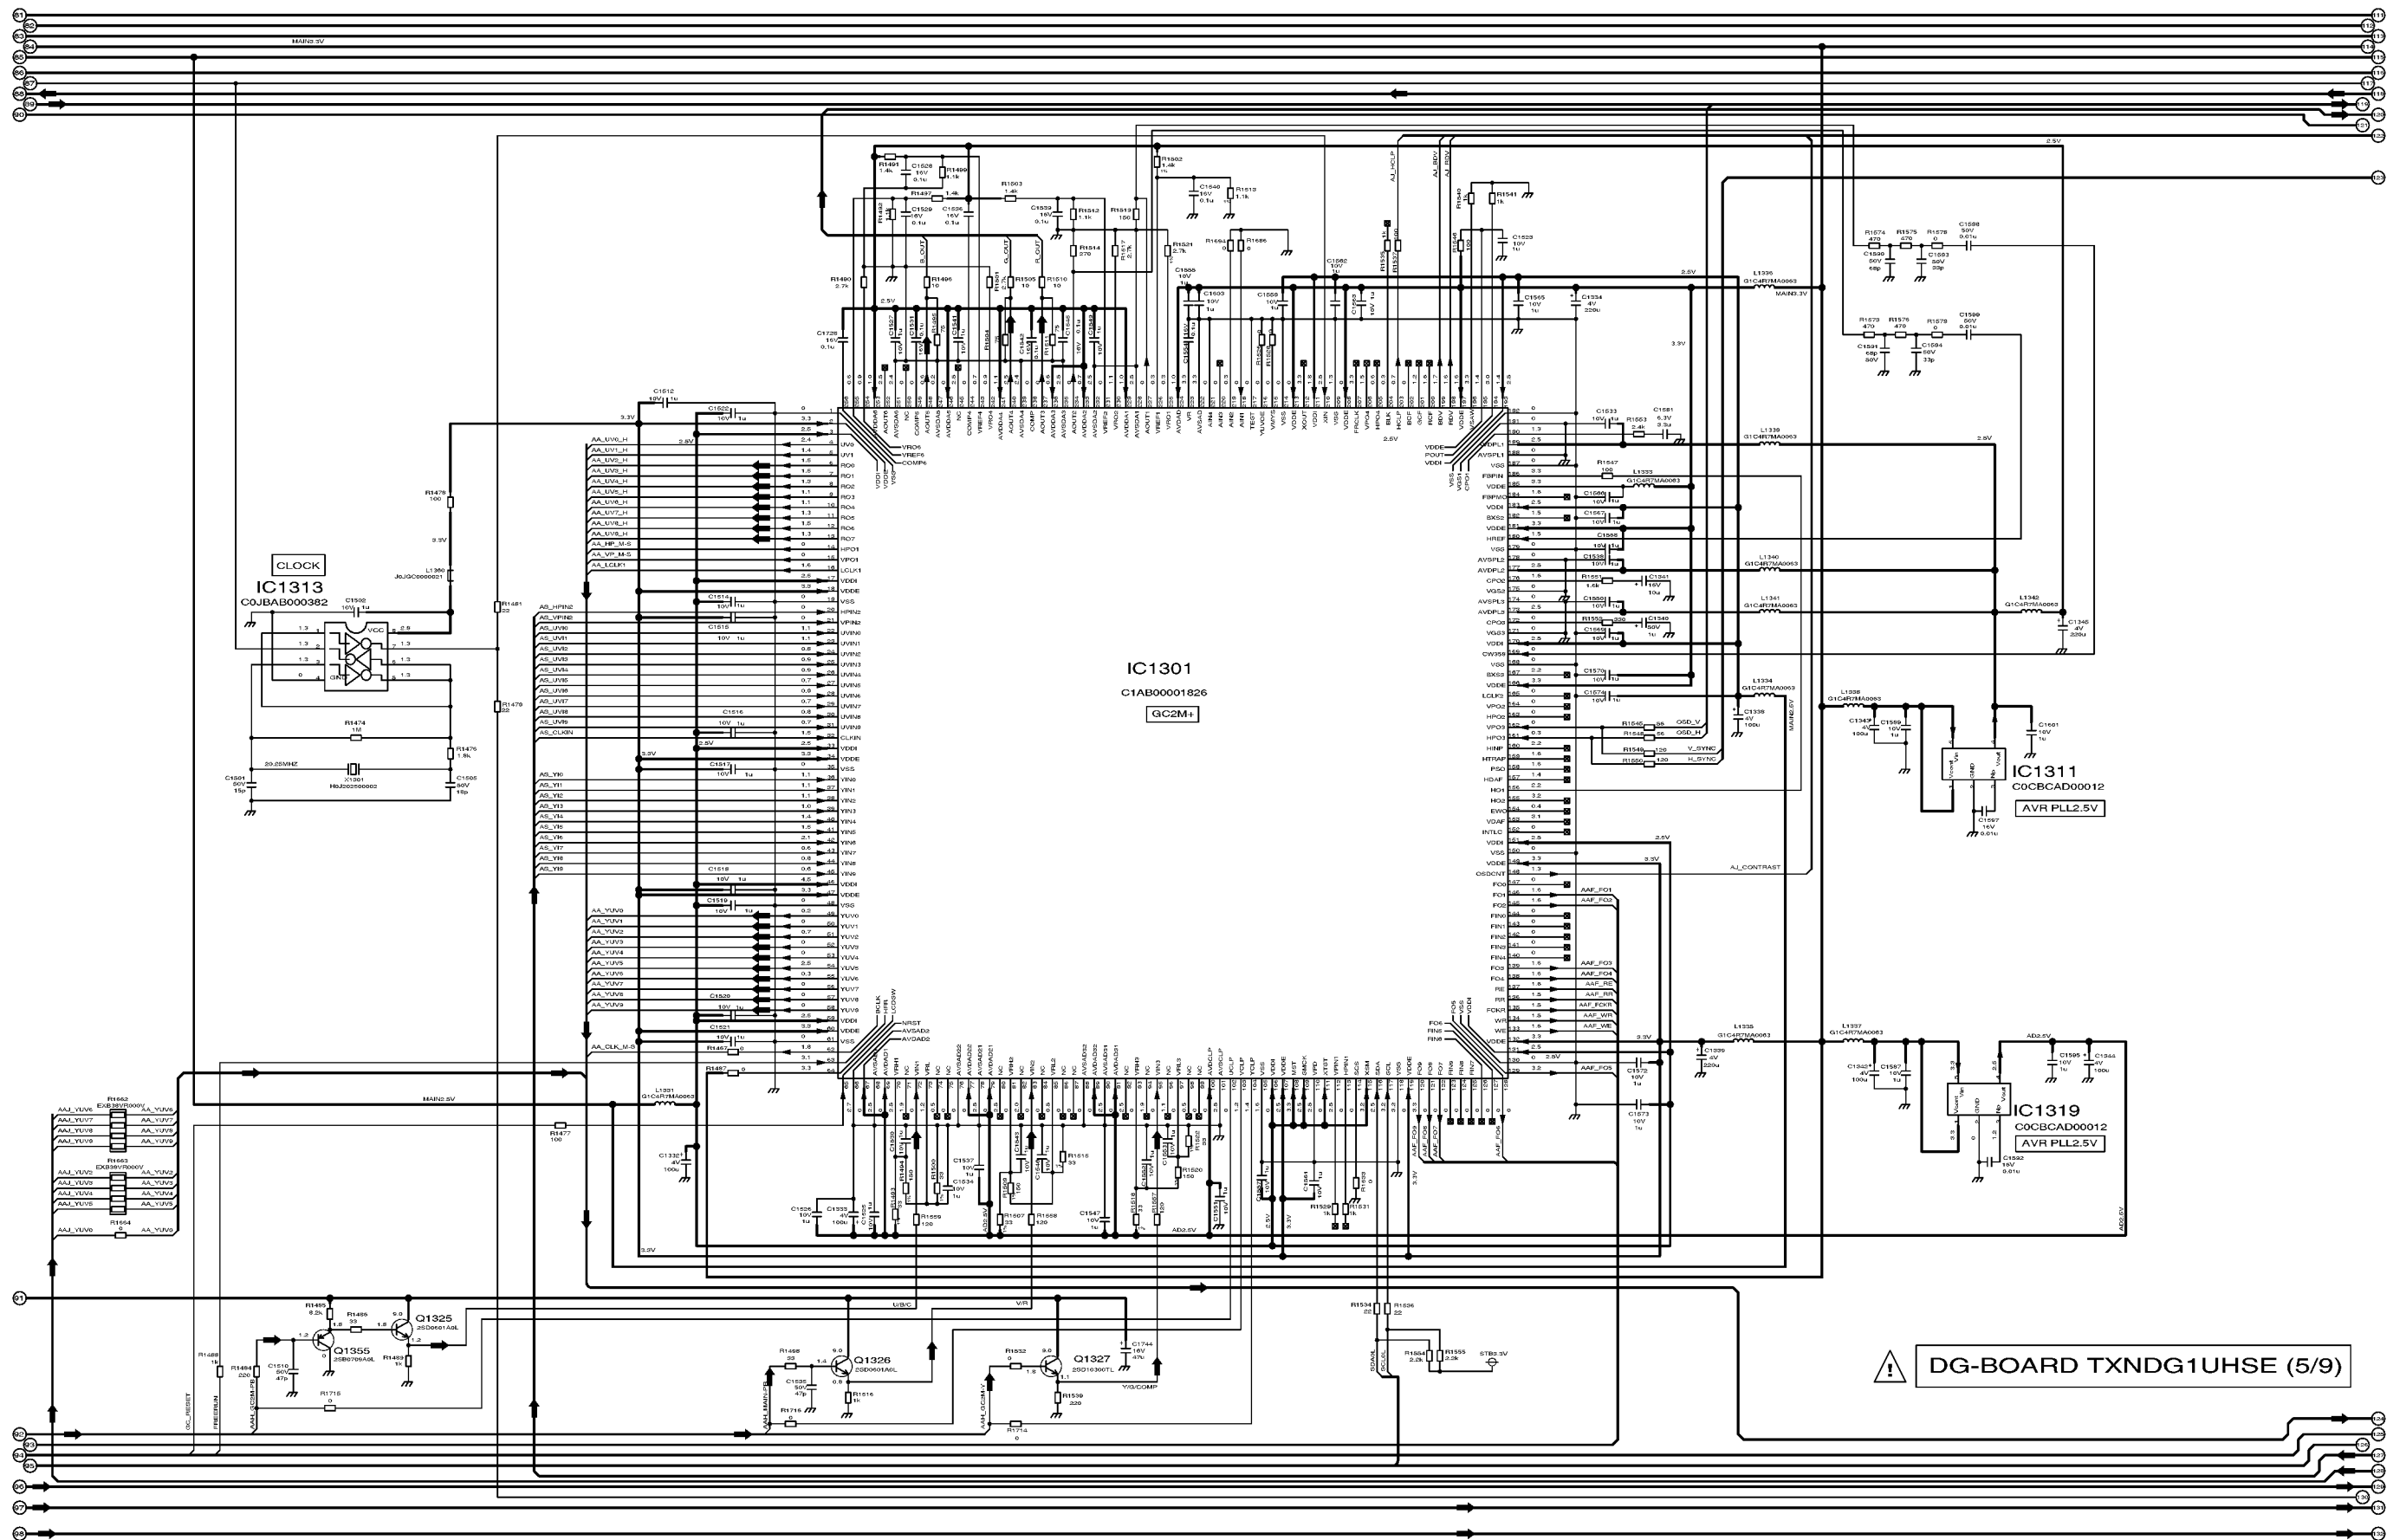

TH-37PA30E/TH-42PA30E DG-Board (5 of 9) Schematic Diagram

TH-37PA30E/TH-42PA30E DG-Board (5 of 9) Schematic Diagram

37

38

39

40


41

42


43

44


45




15.21. DG-Board (7 of 9) Schematic Diagram

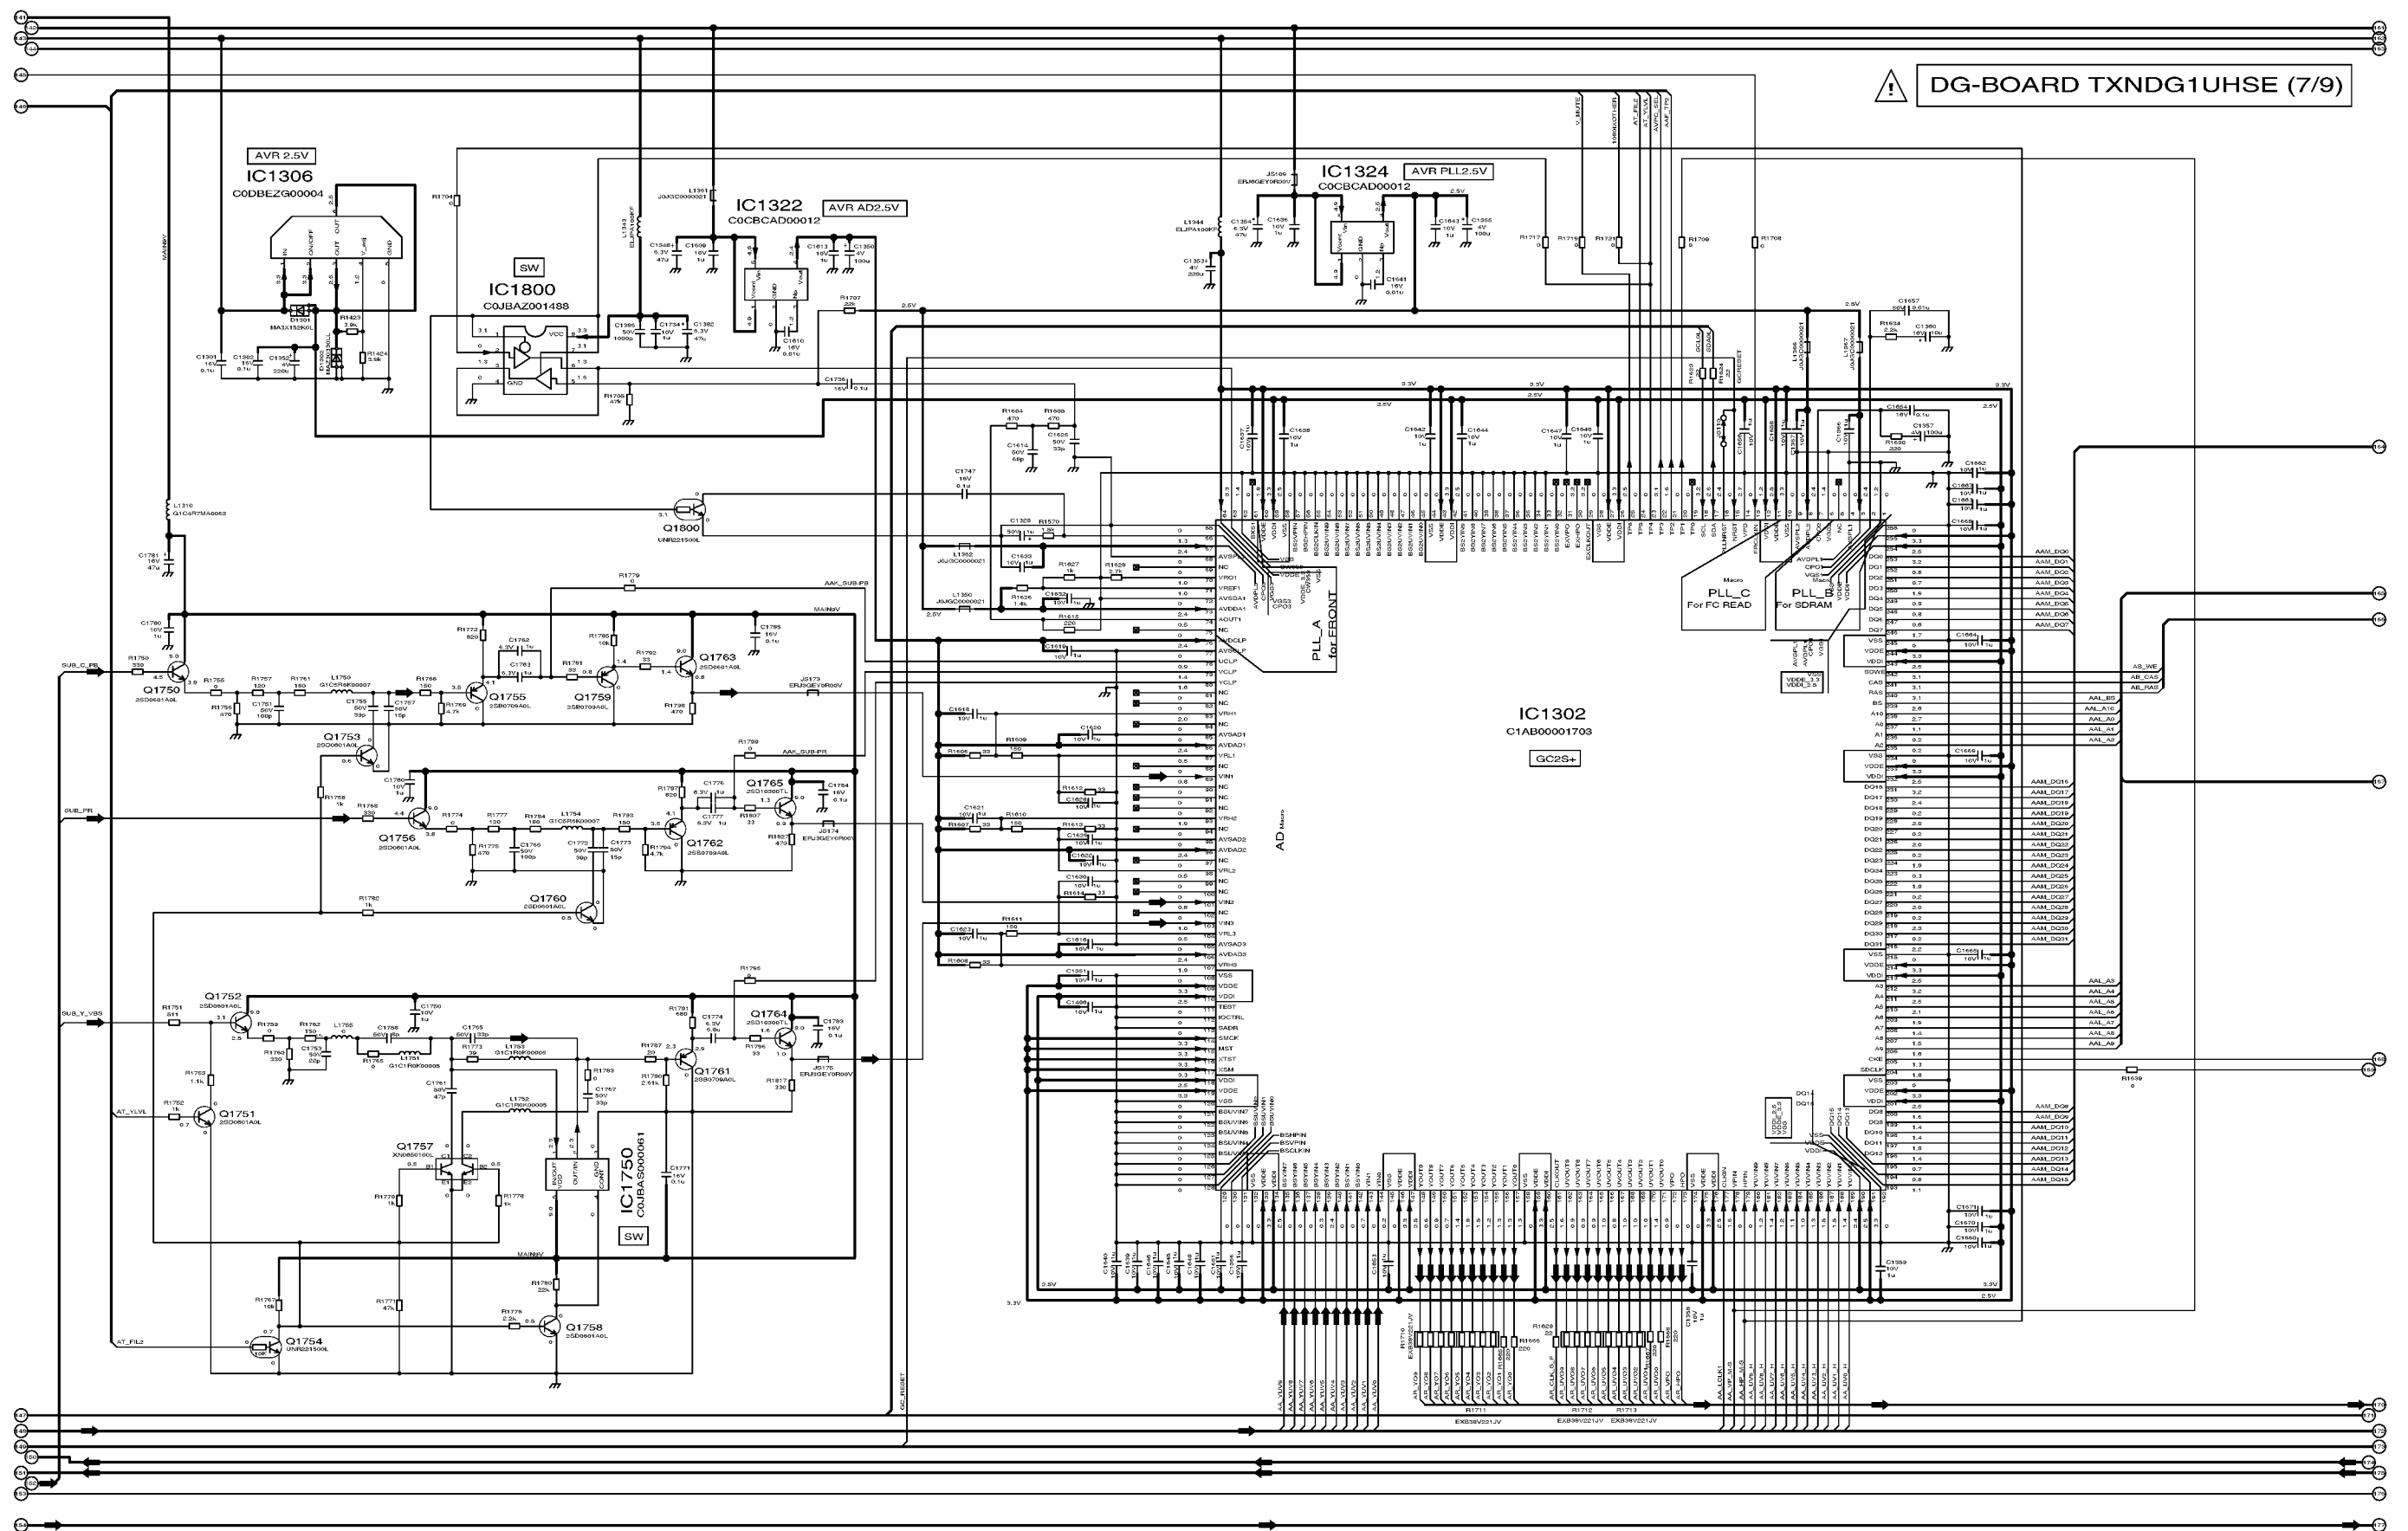

15.22. DG-Board (8 of 9) Schematic Diagram

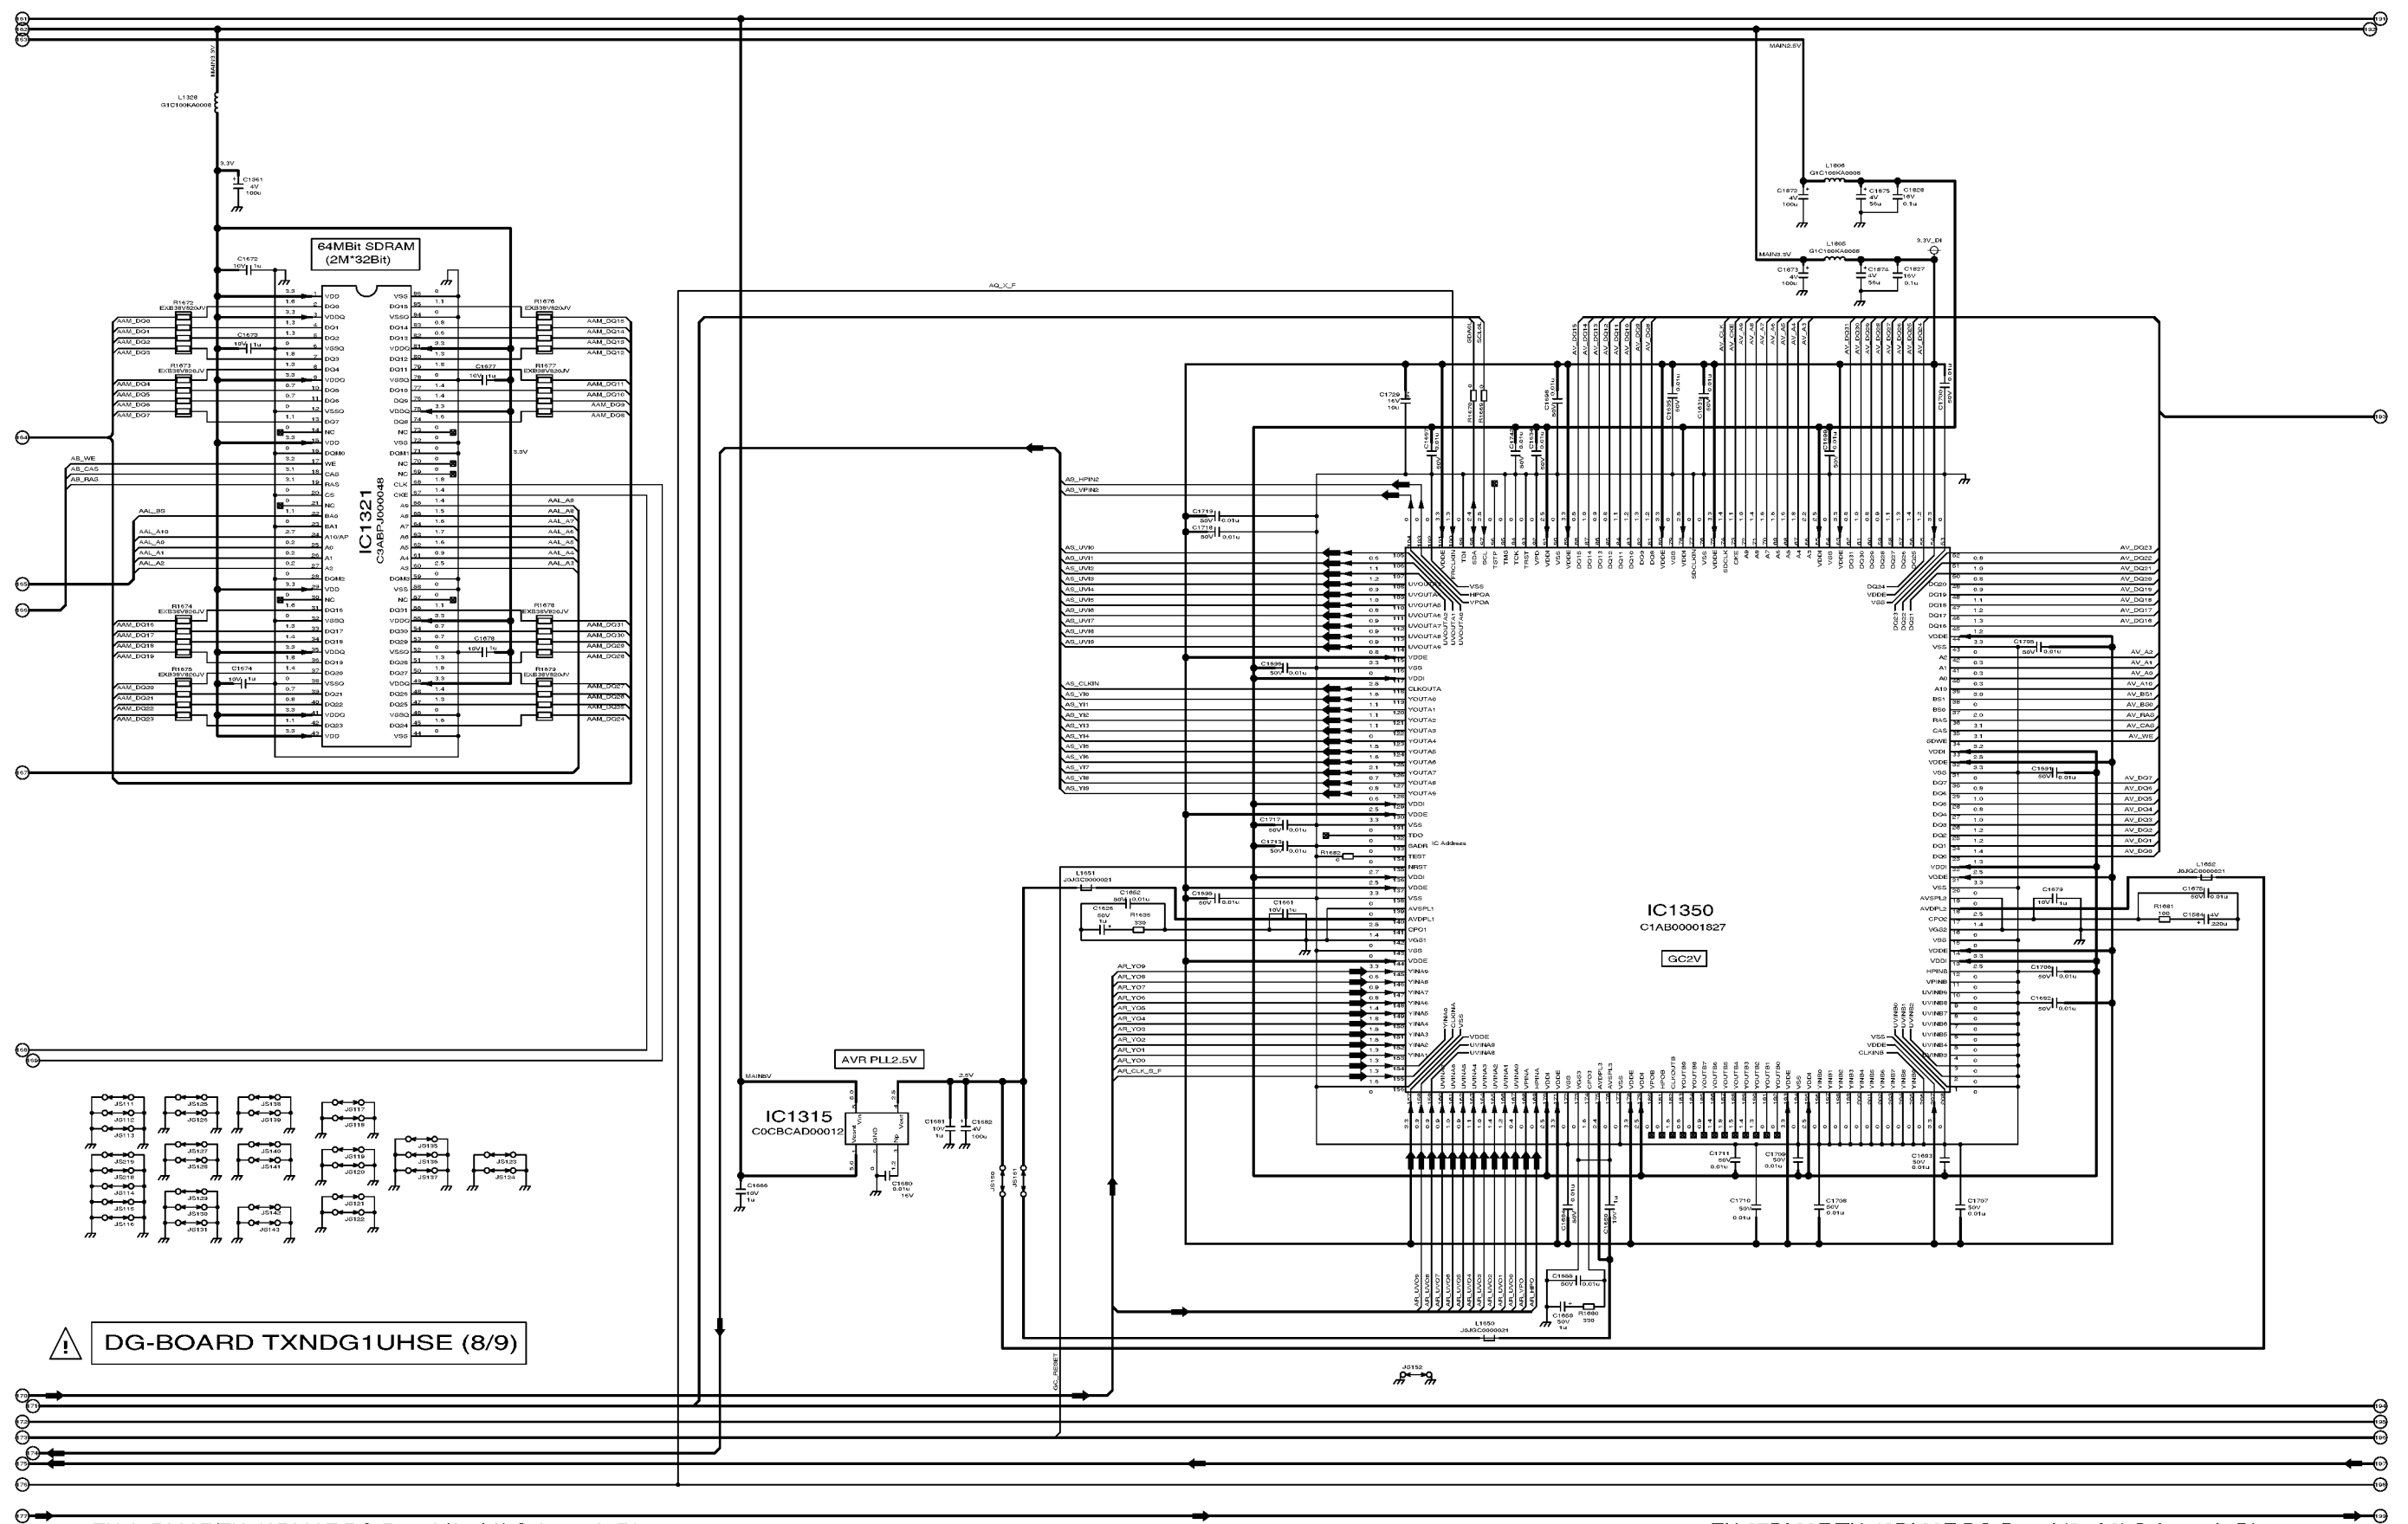


15.23. DG-Board (9 of 9) Schematic Diagram

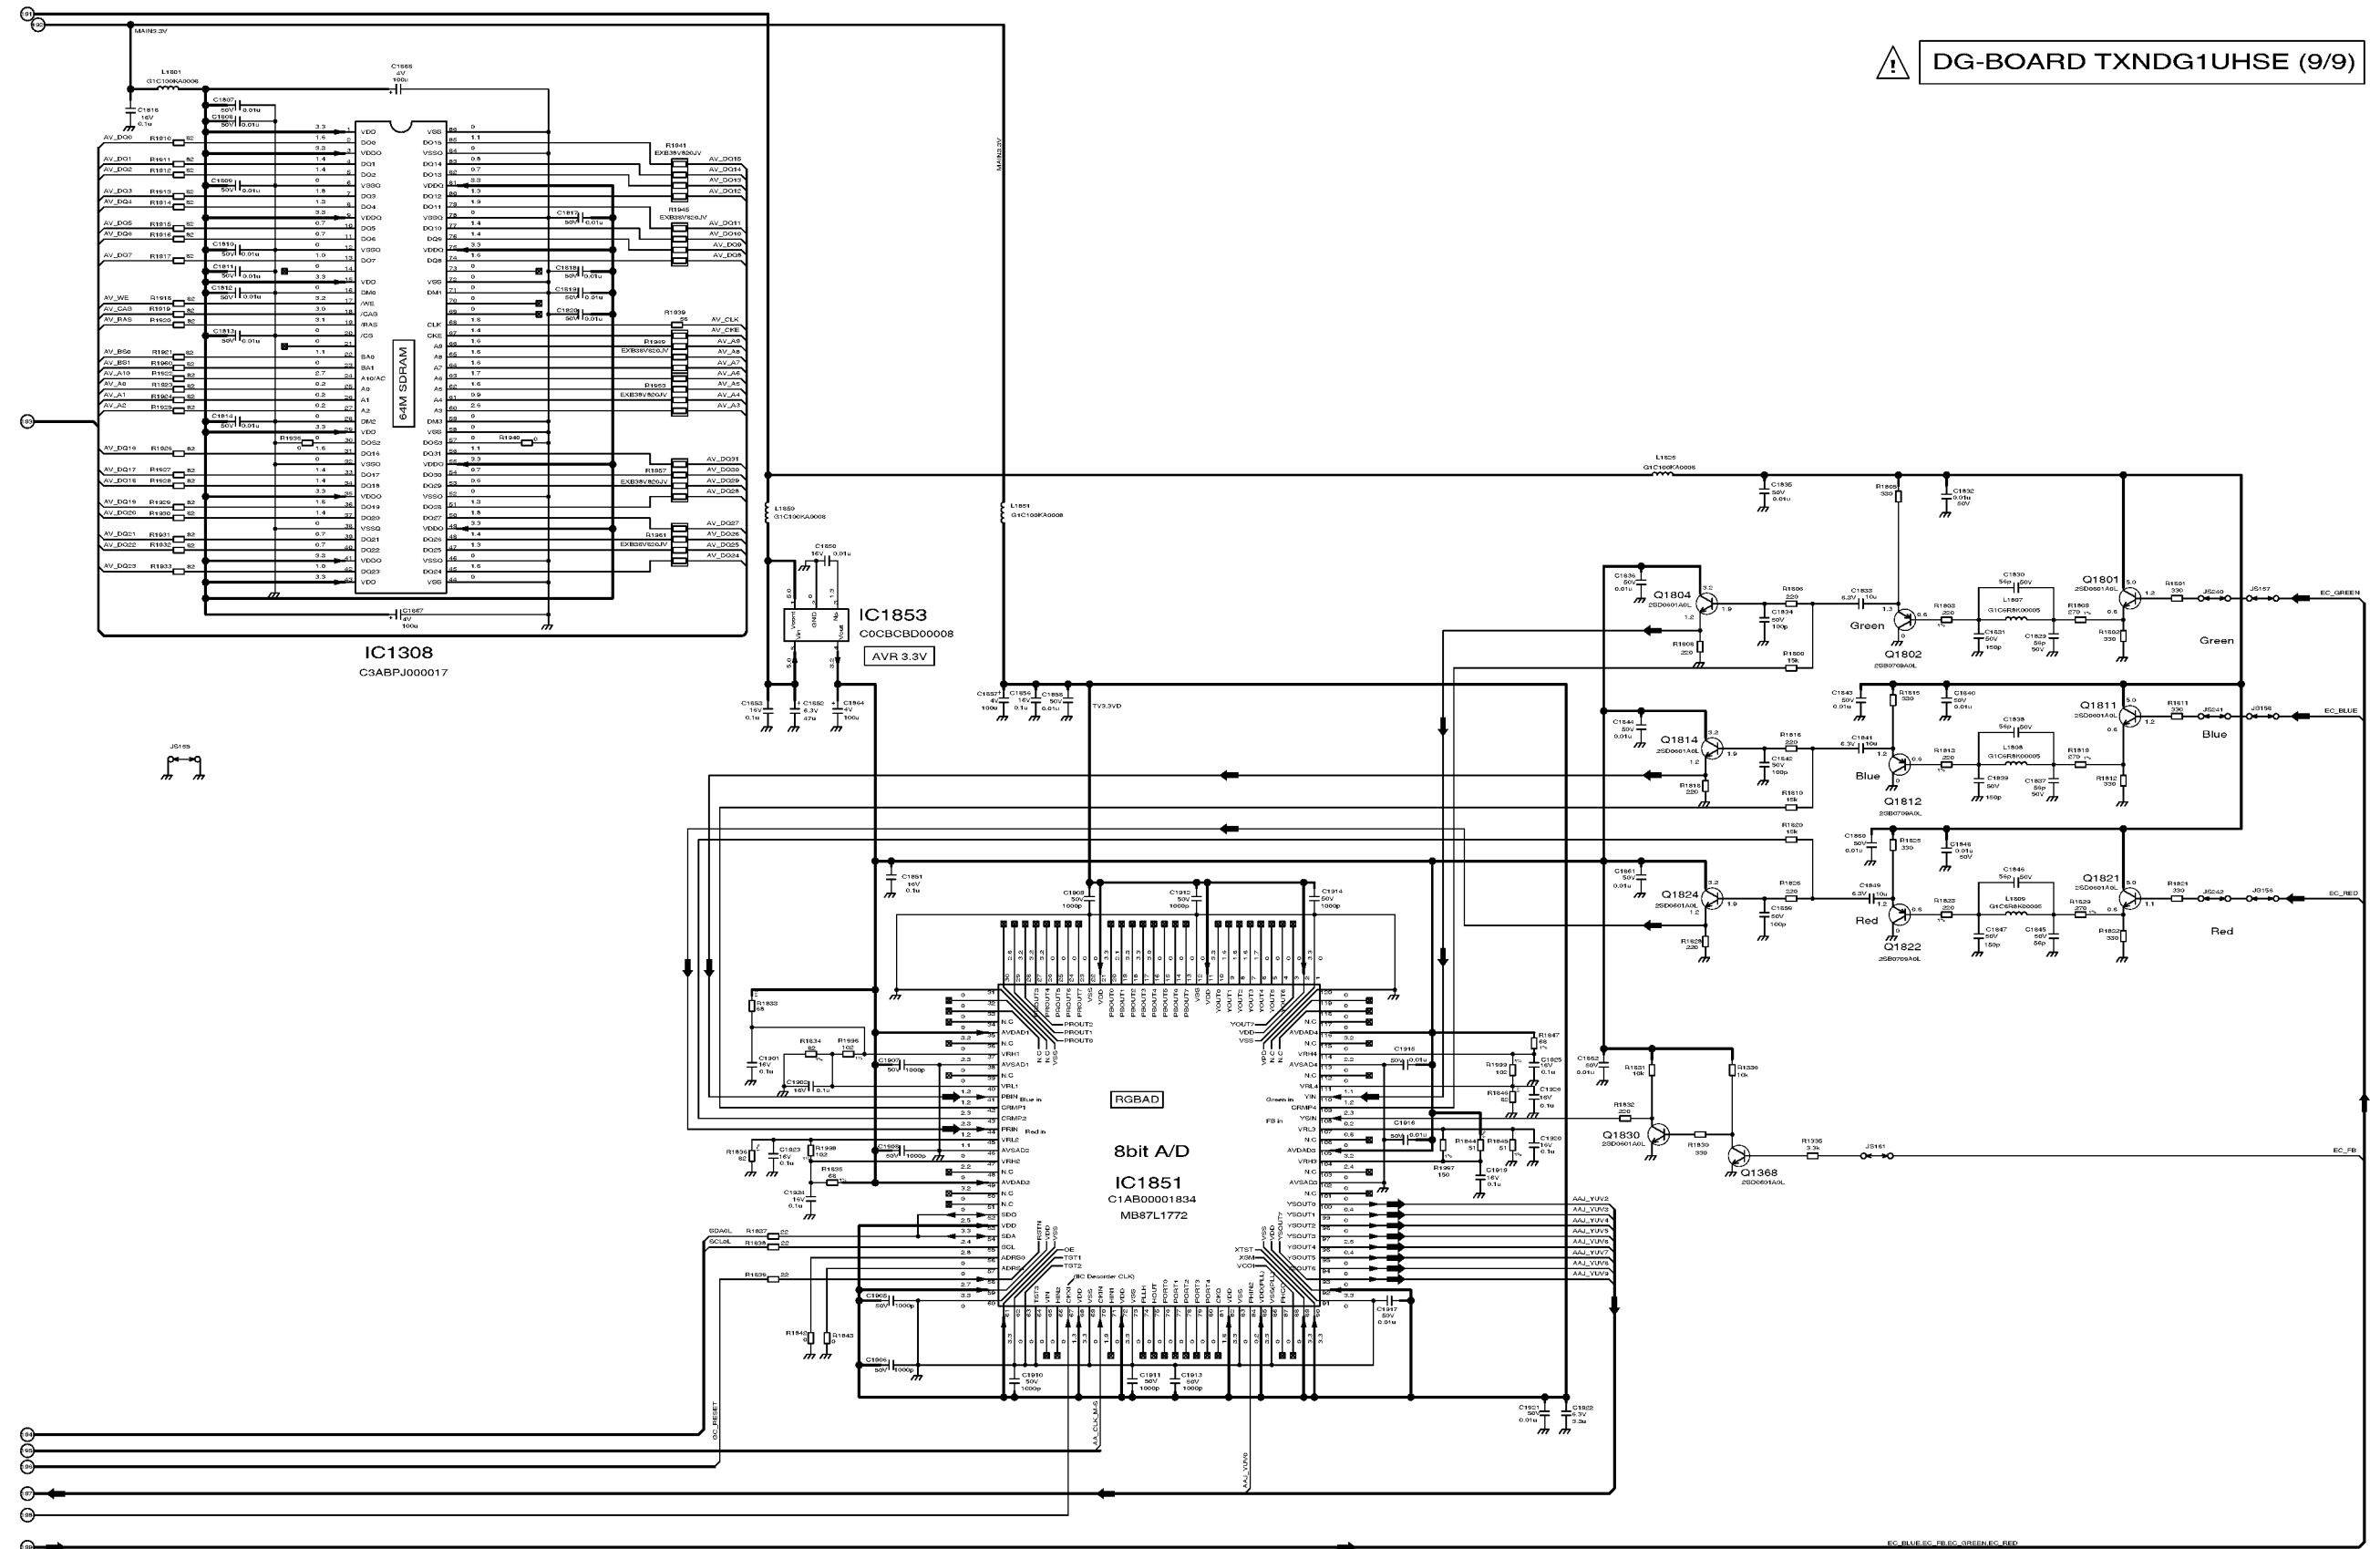

TH-37PA30E/TH-42PA30E DG-Board (9 of 9) Schematic Diagram

TH-37PA30E/TH-42PA30E DG-Board (9 of 9) Schematic Diagram


15.24. D-Board Block Diagram

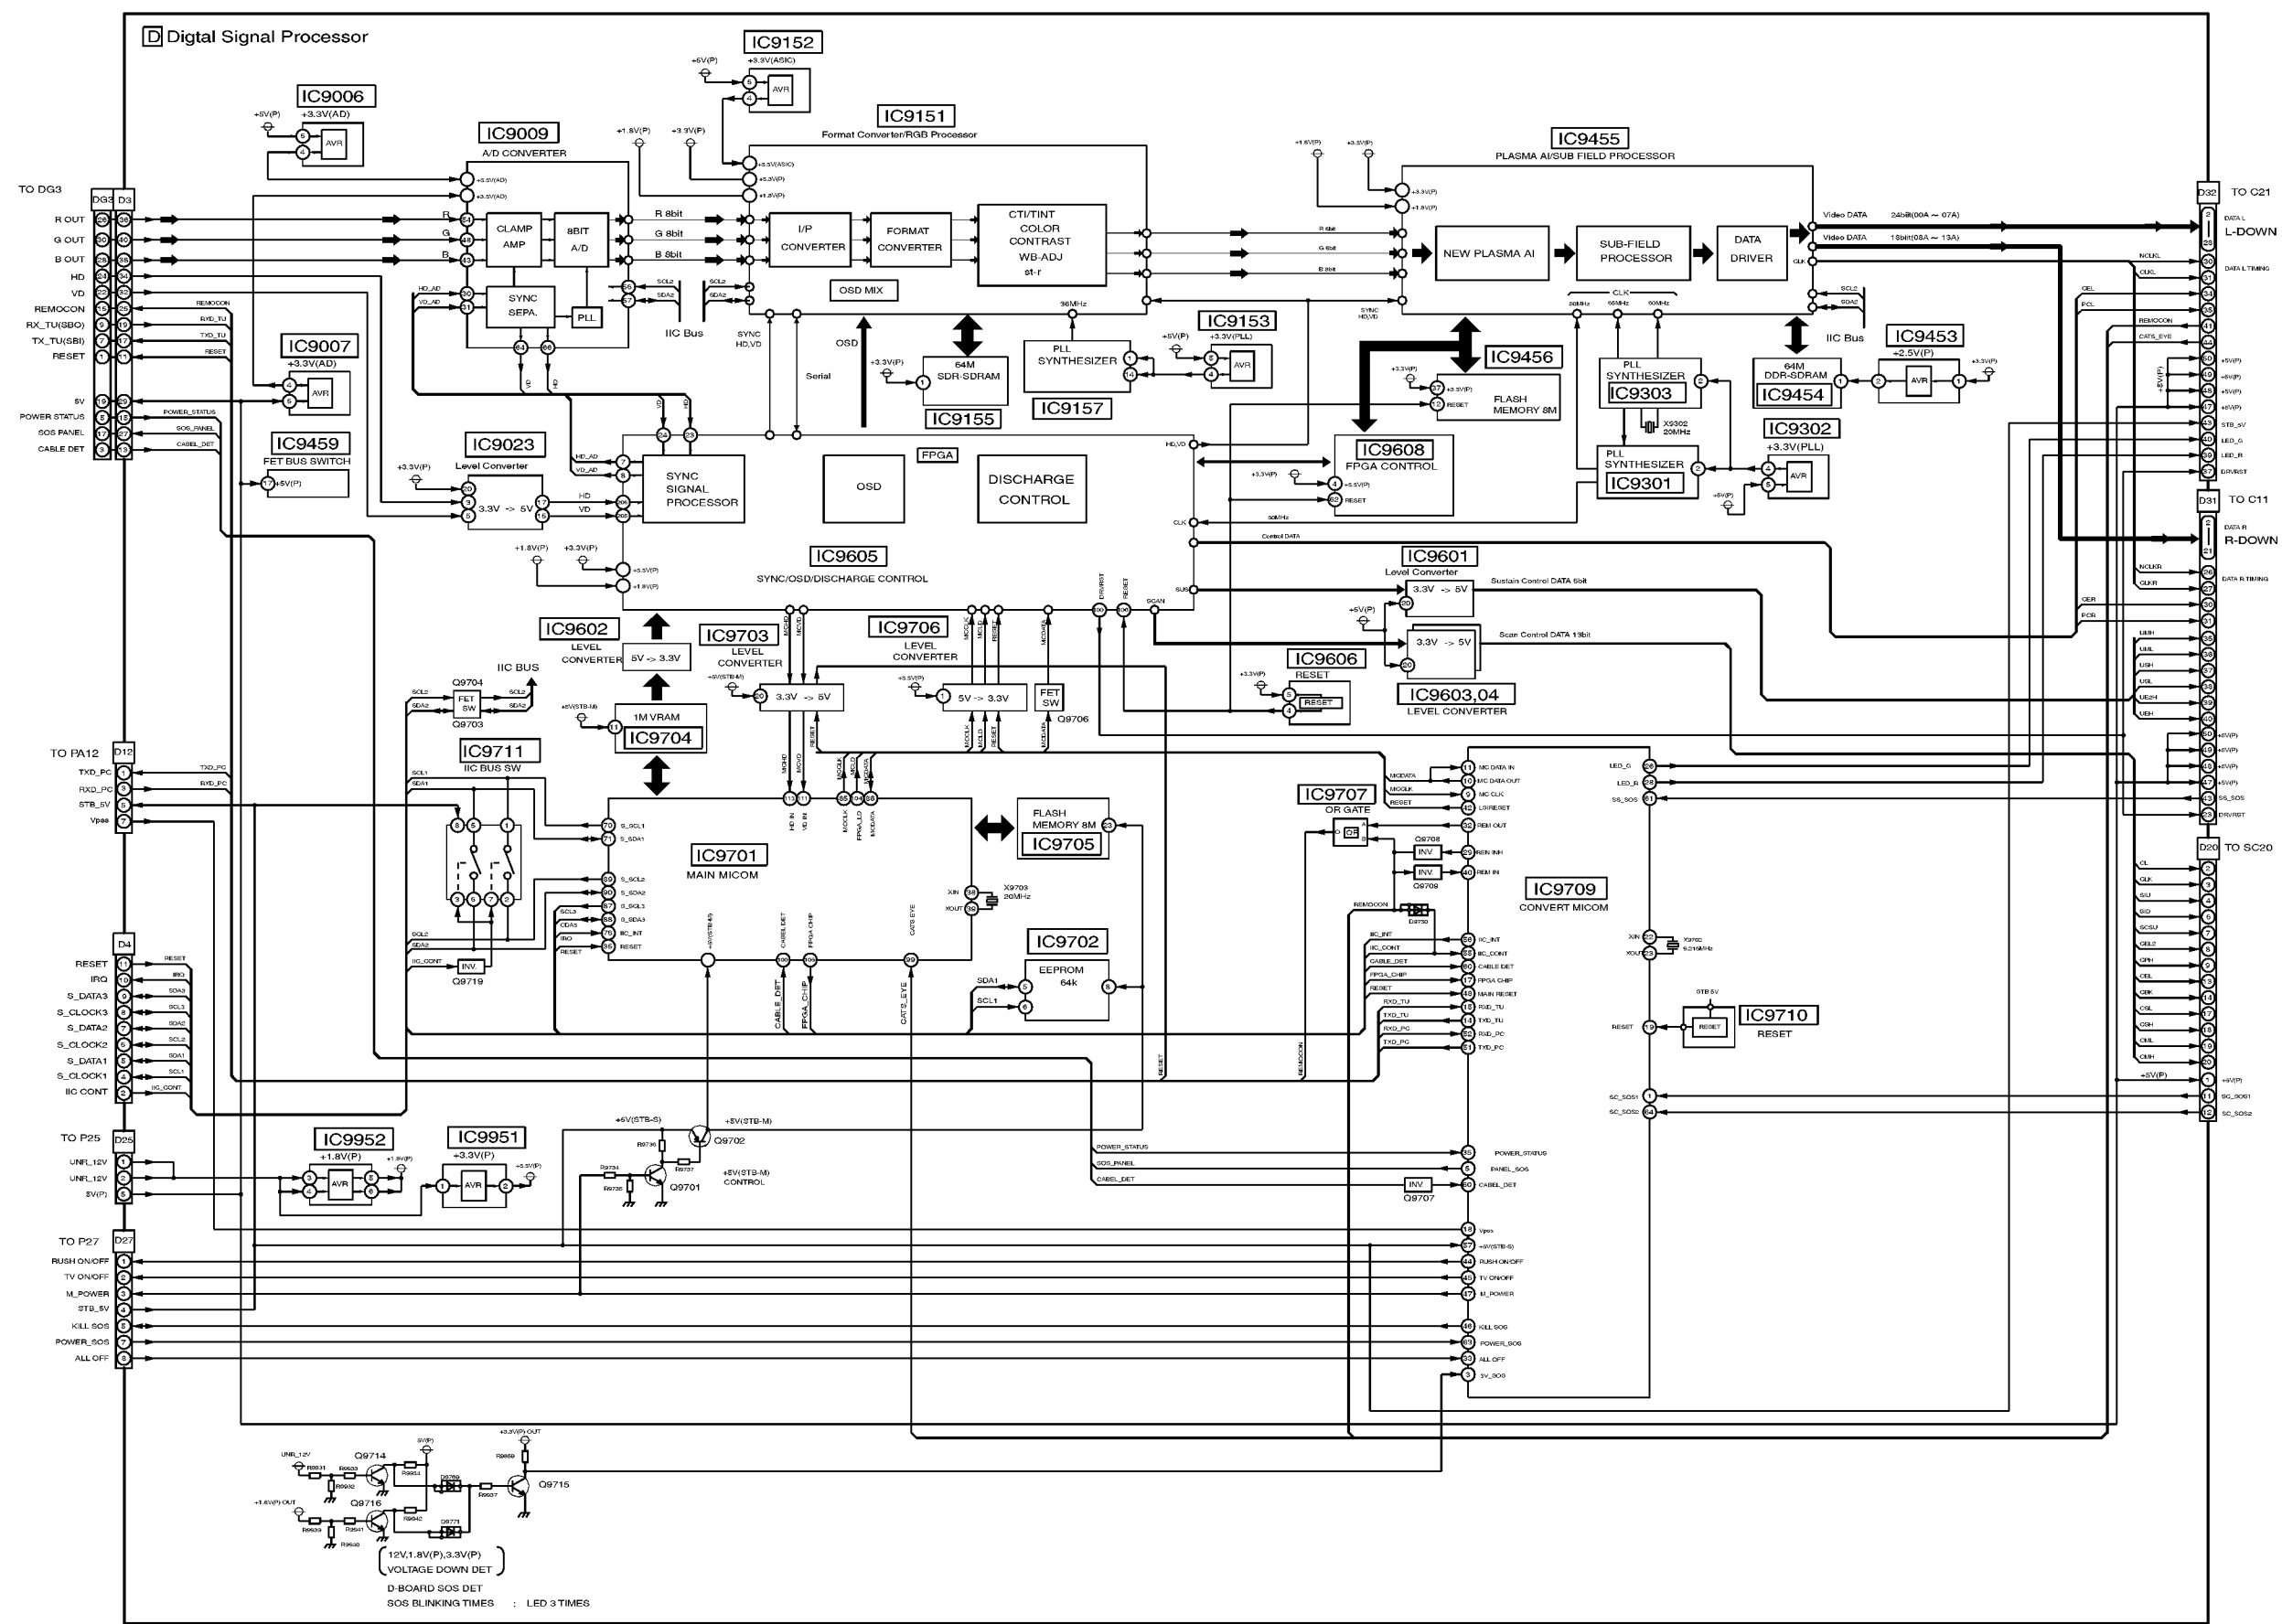

TH-37PA30E/TH-42PA30E
D-Board Block Diagram

TH-37PA30E/TH-42PA30E
D-Board Block Diagram

15.25. D-Board (1 of 12) Schematic Diagram

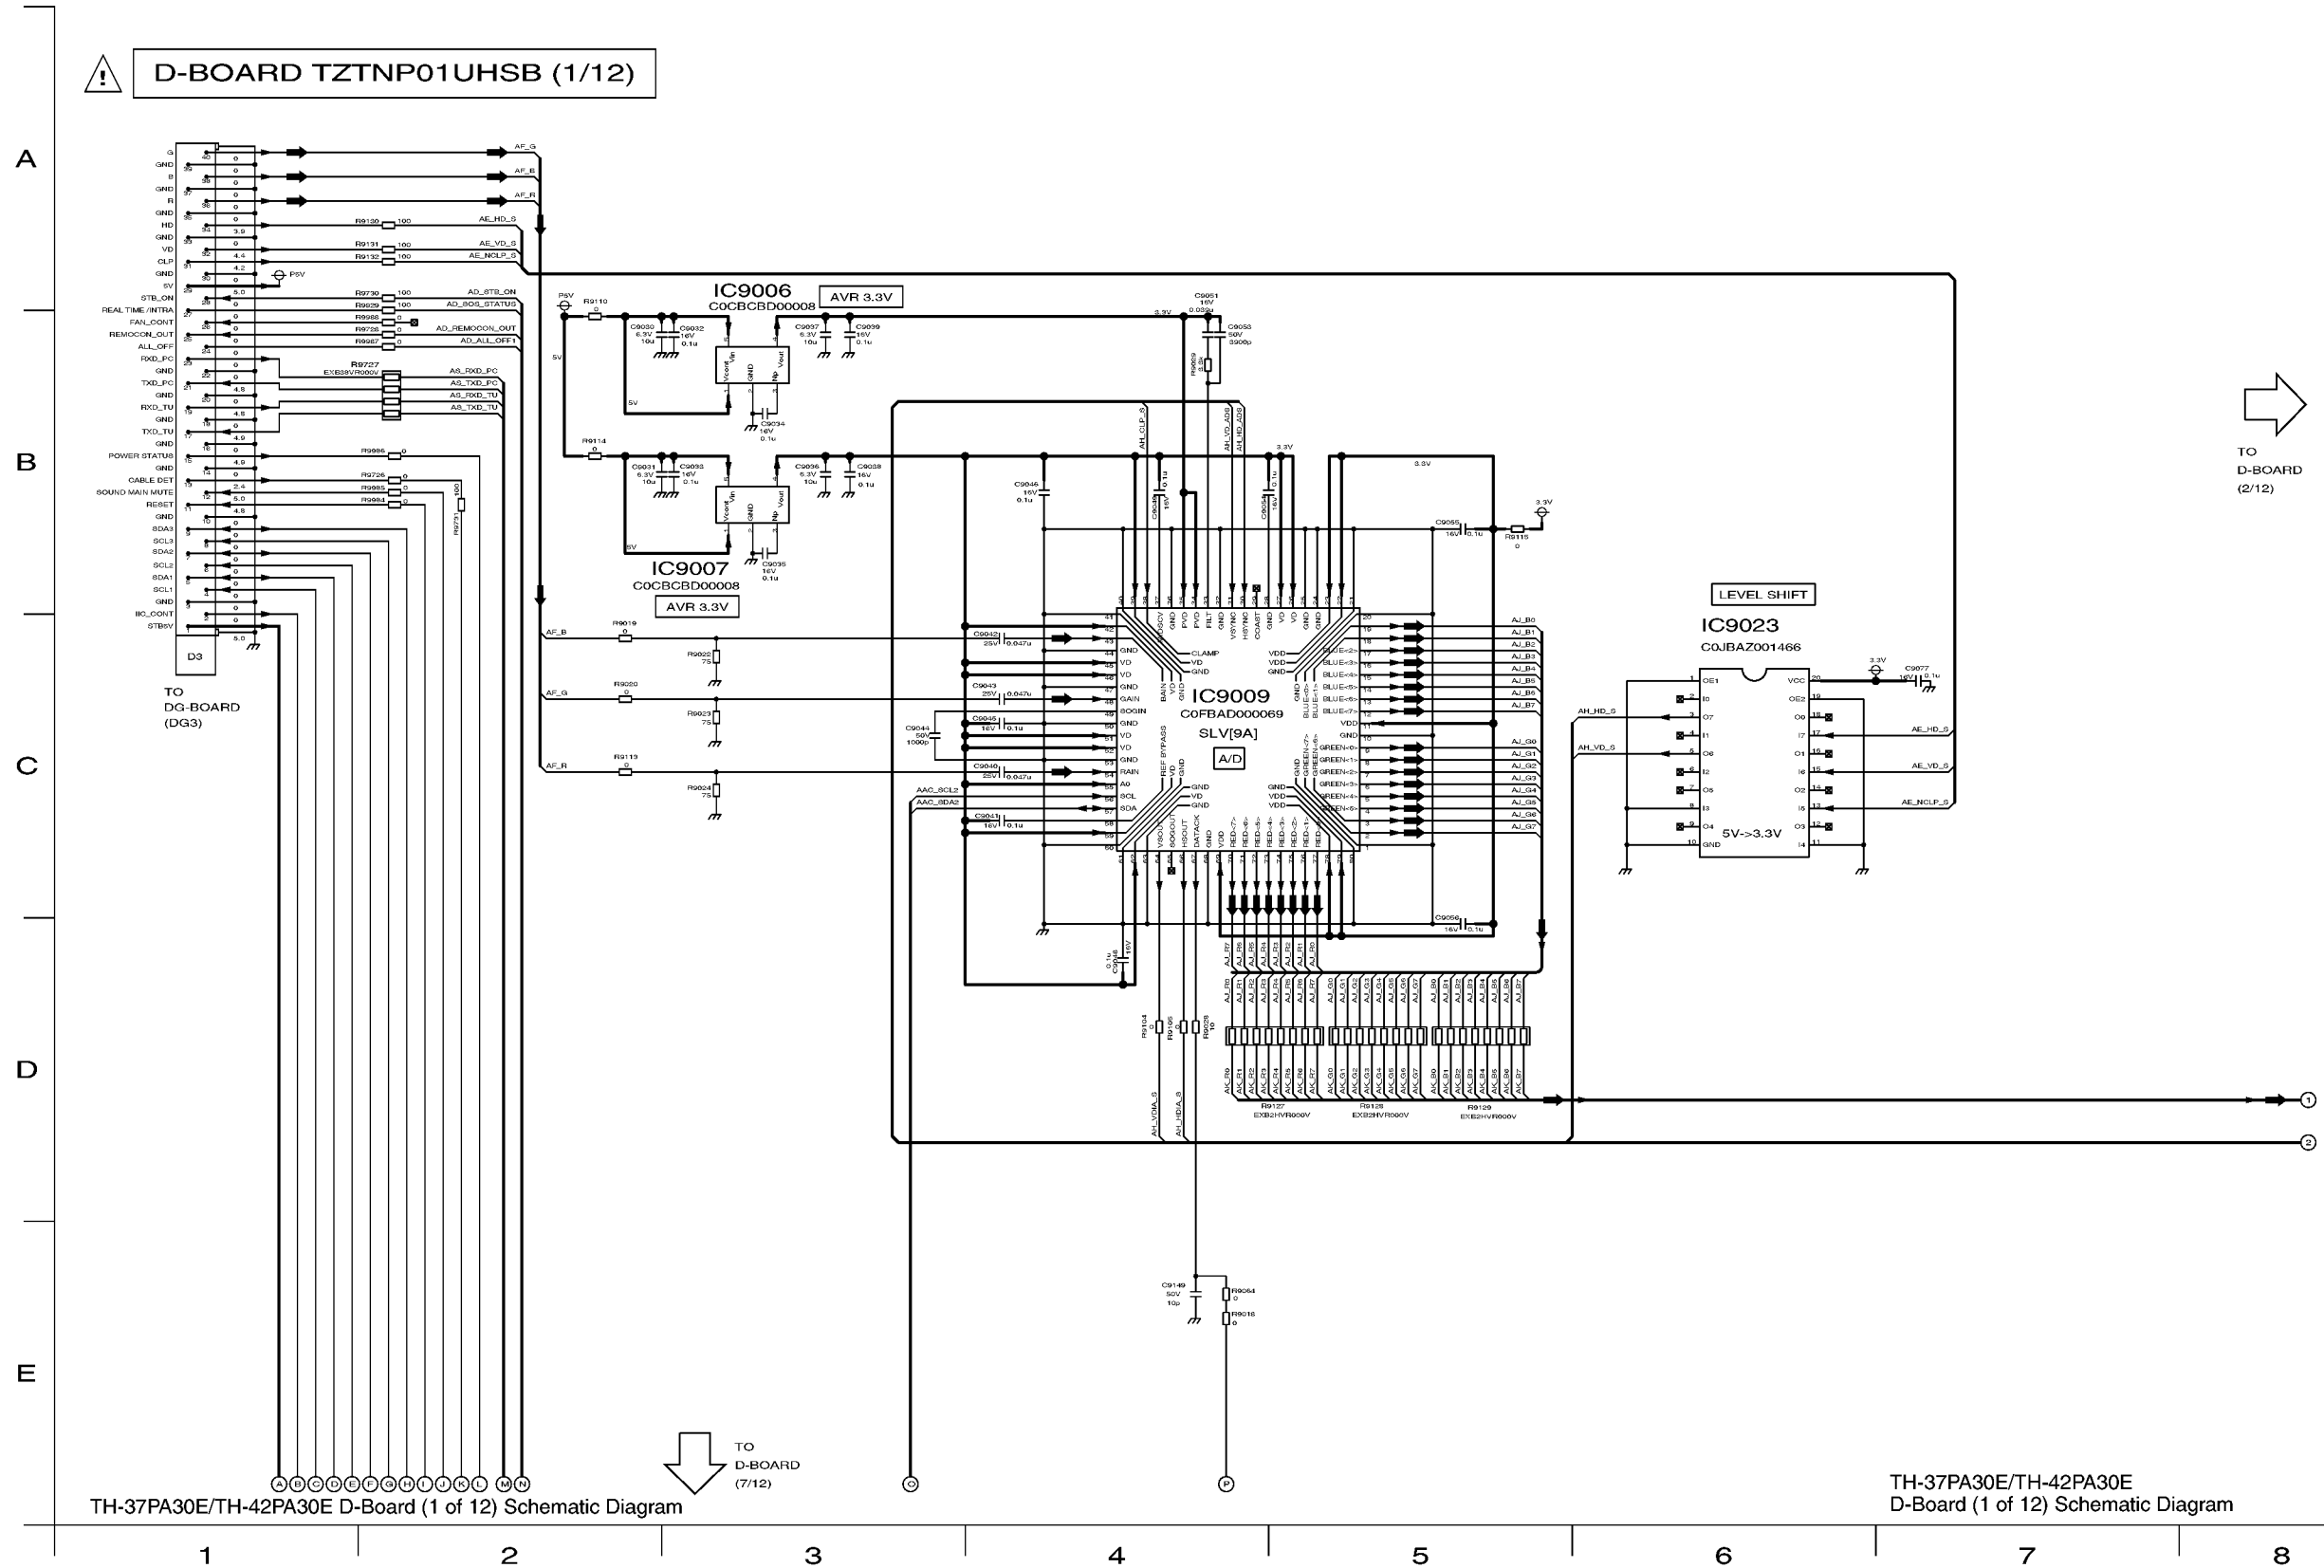

15.26. D-Board (2 of 12) Schematic Diagram





D-BOARD TZTNP01UHSB (2/12)



TO
D-BOARD
(1/12)



TO
D-BOARD
(3/12)

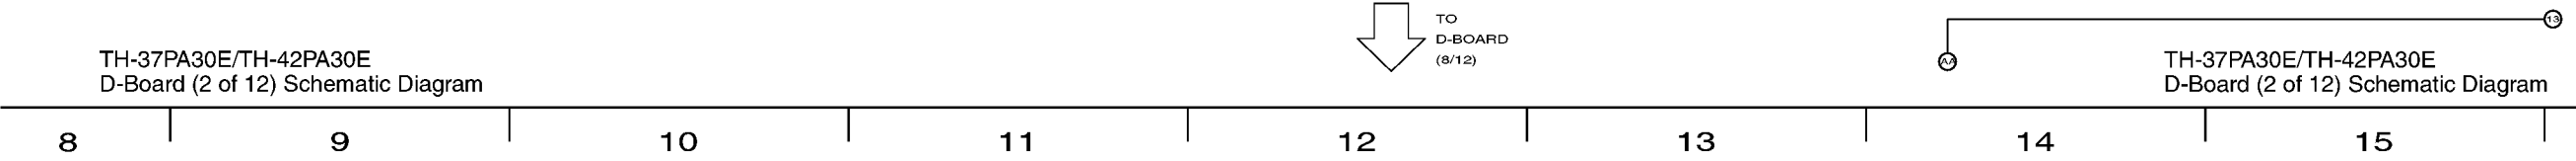



15.27. D-Board (3 of 12) Schematic Diagram


 D-BOARD TZTNP01UHSB (3/12)

TO
D-BOARD
(2/12)

TO
D-BORD
(4/12)

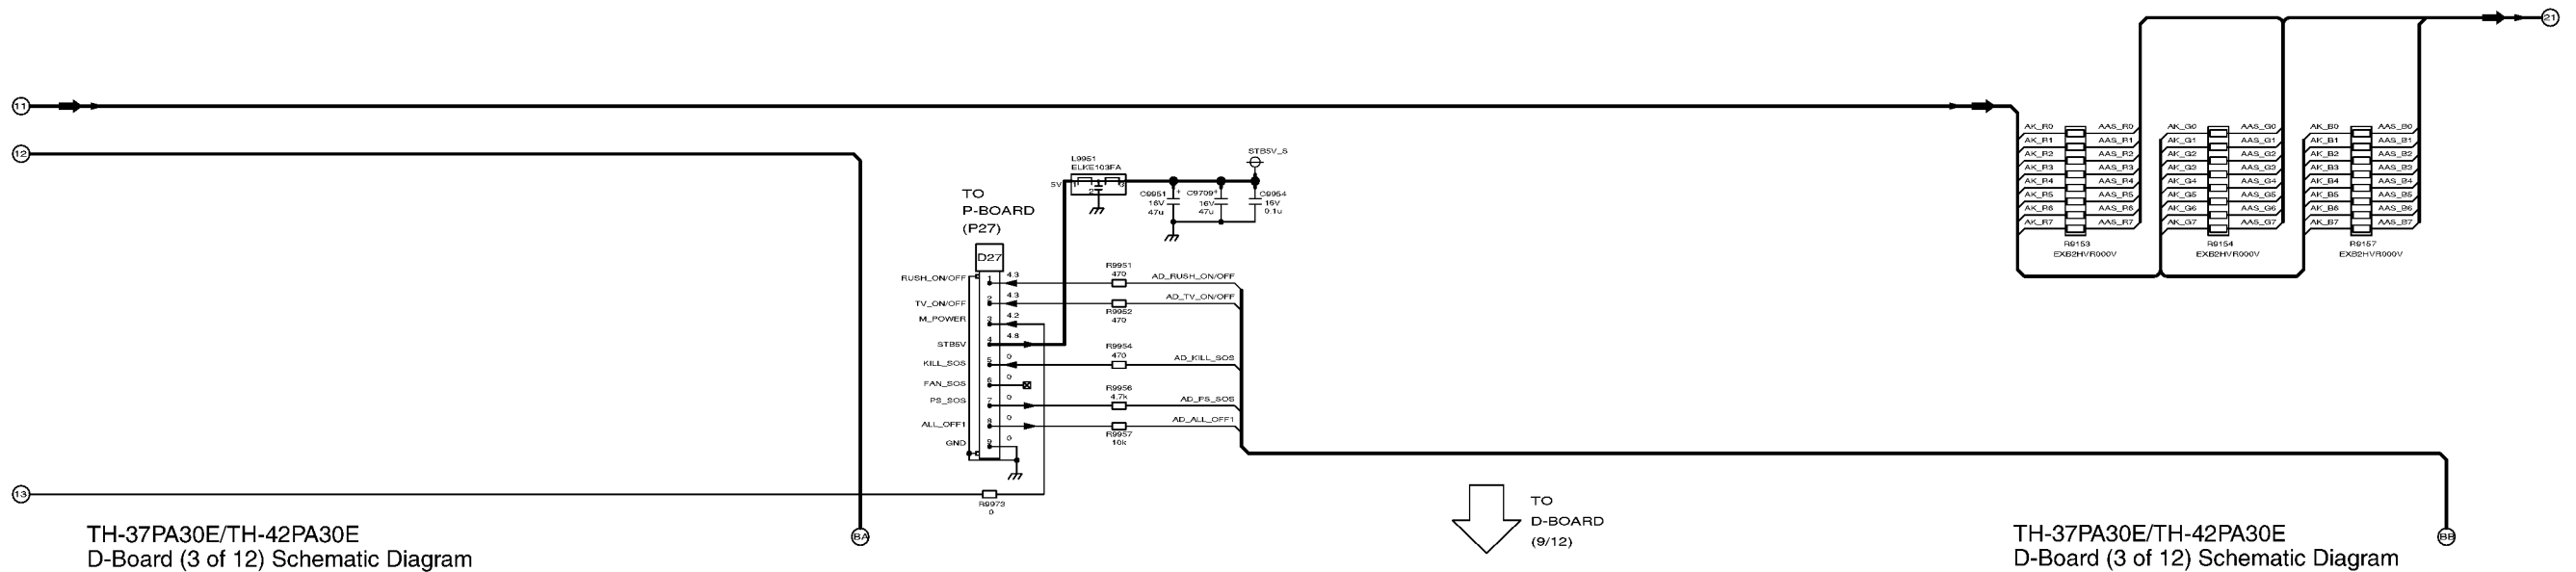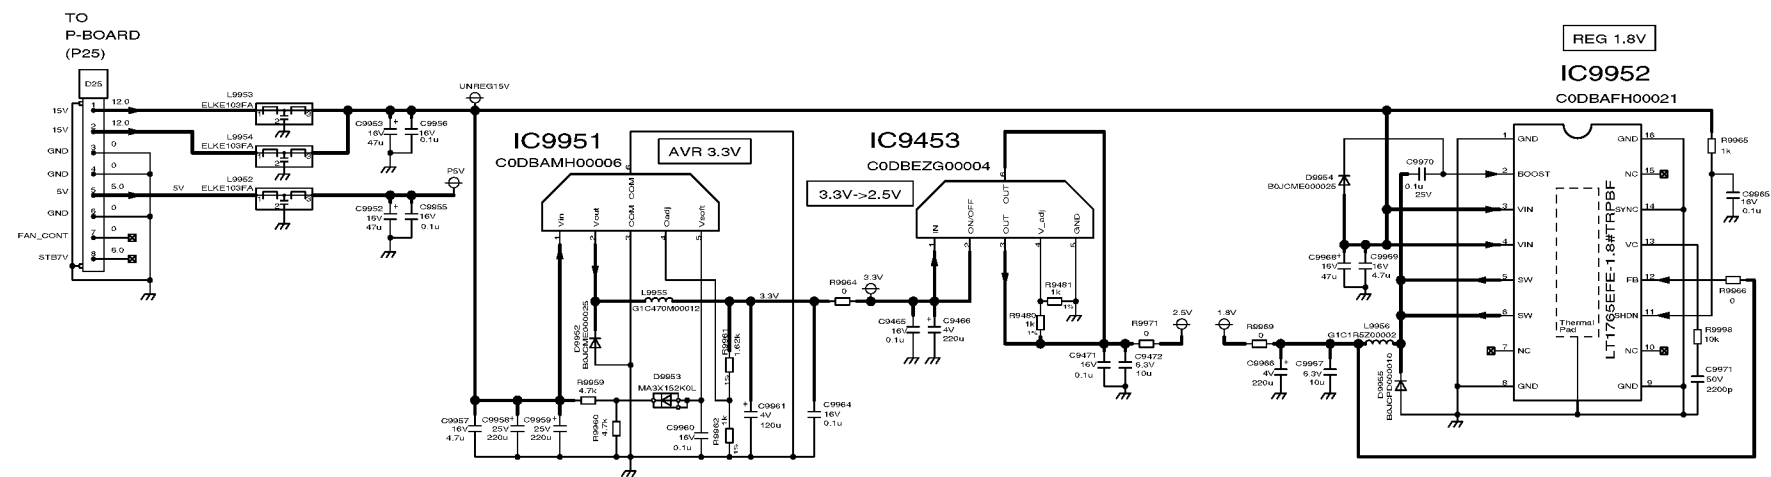


15.28. D-Board (4 of 12) Schematic Diagram

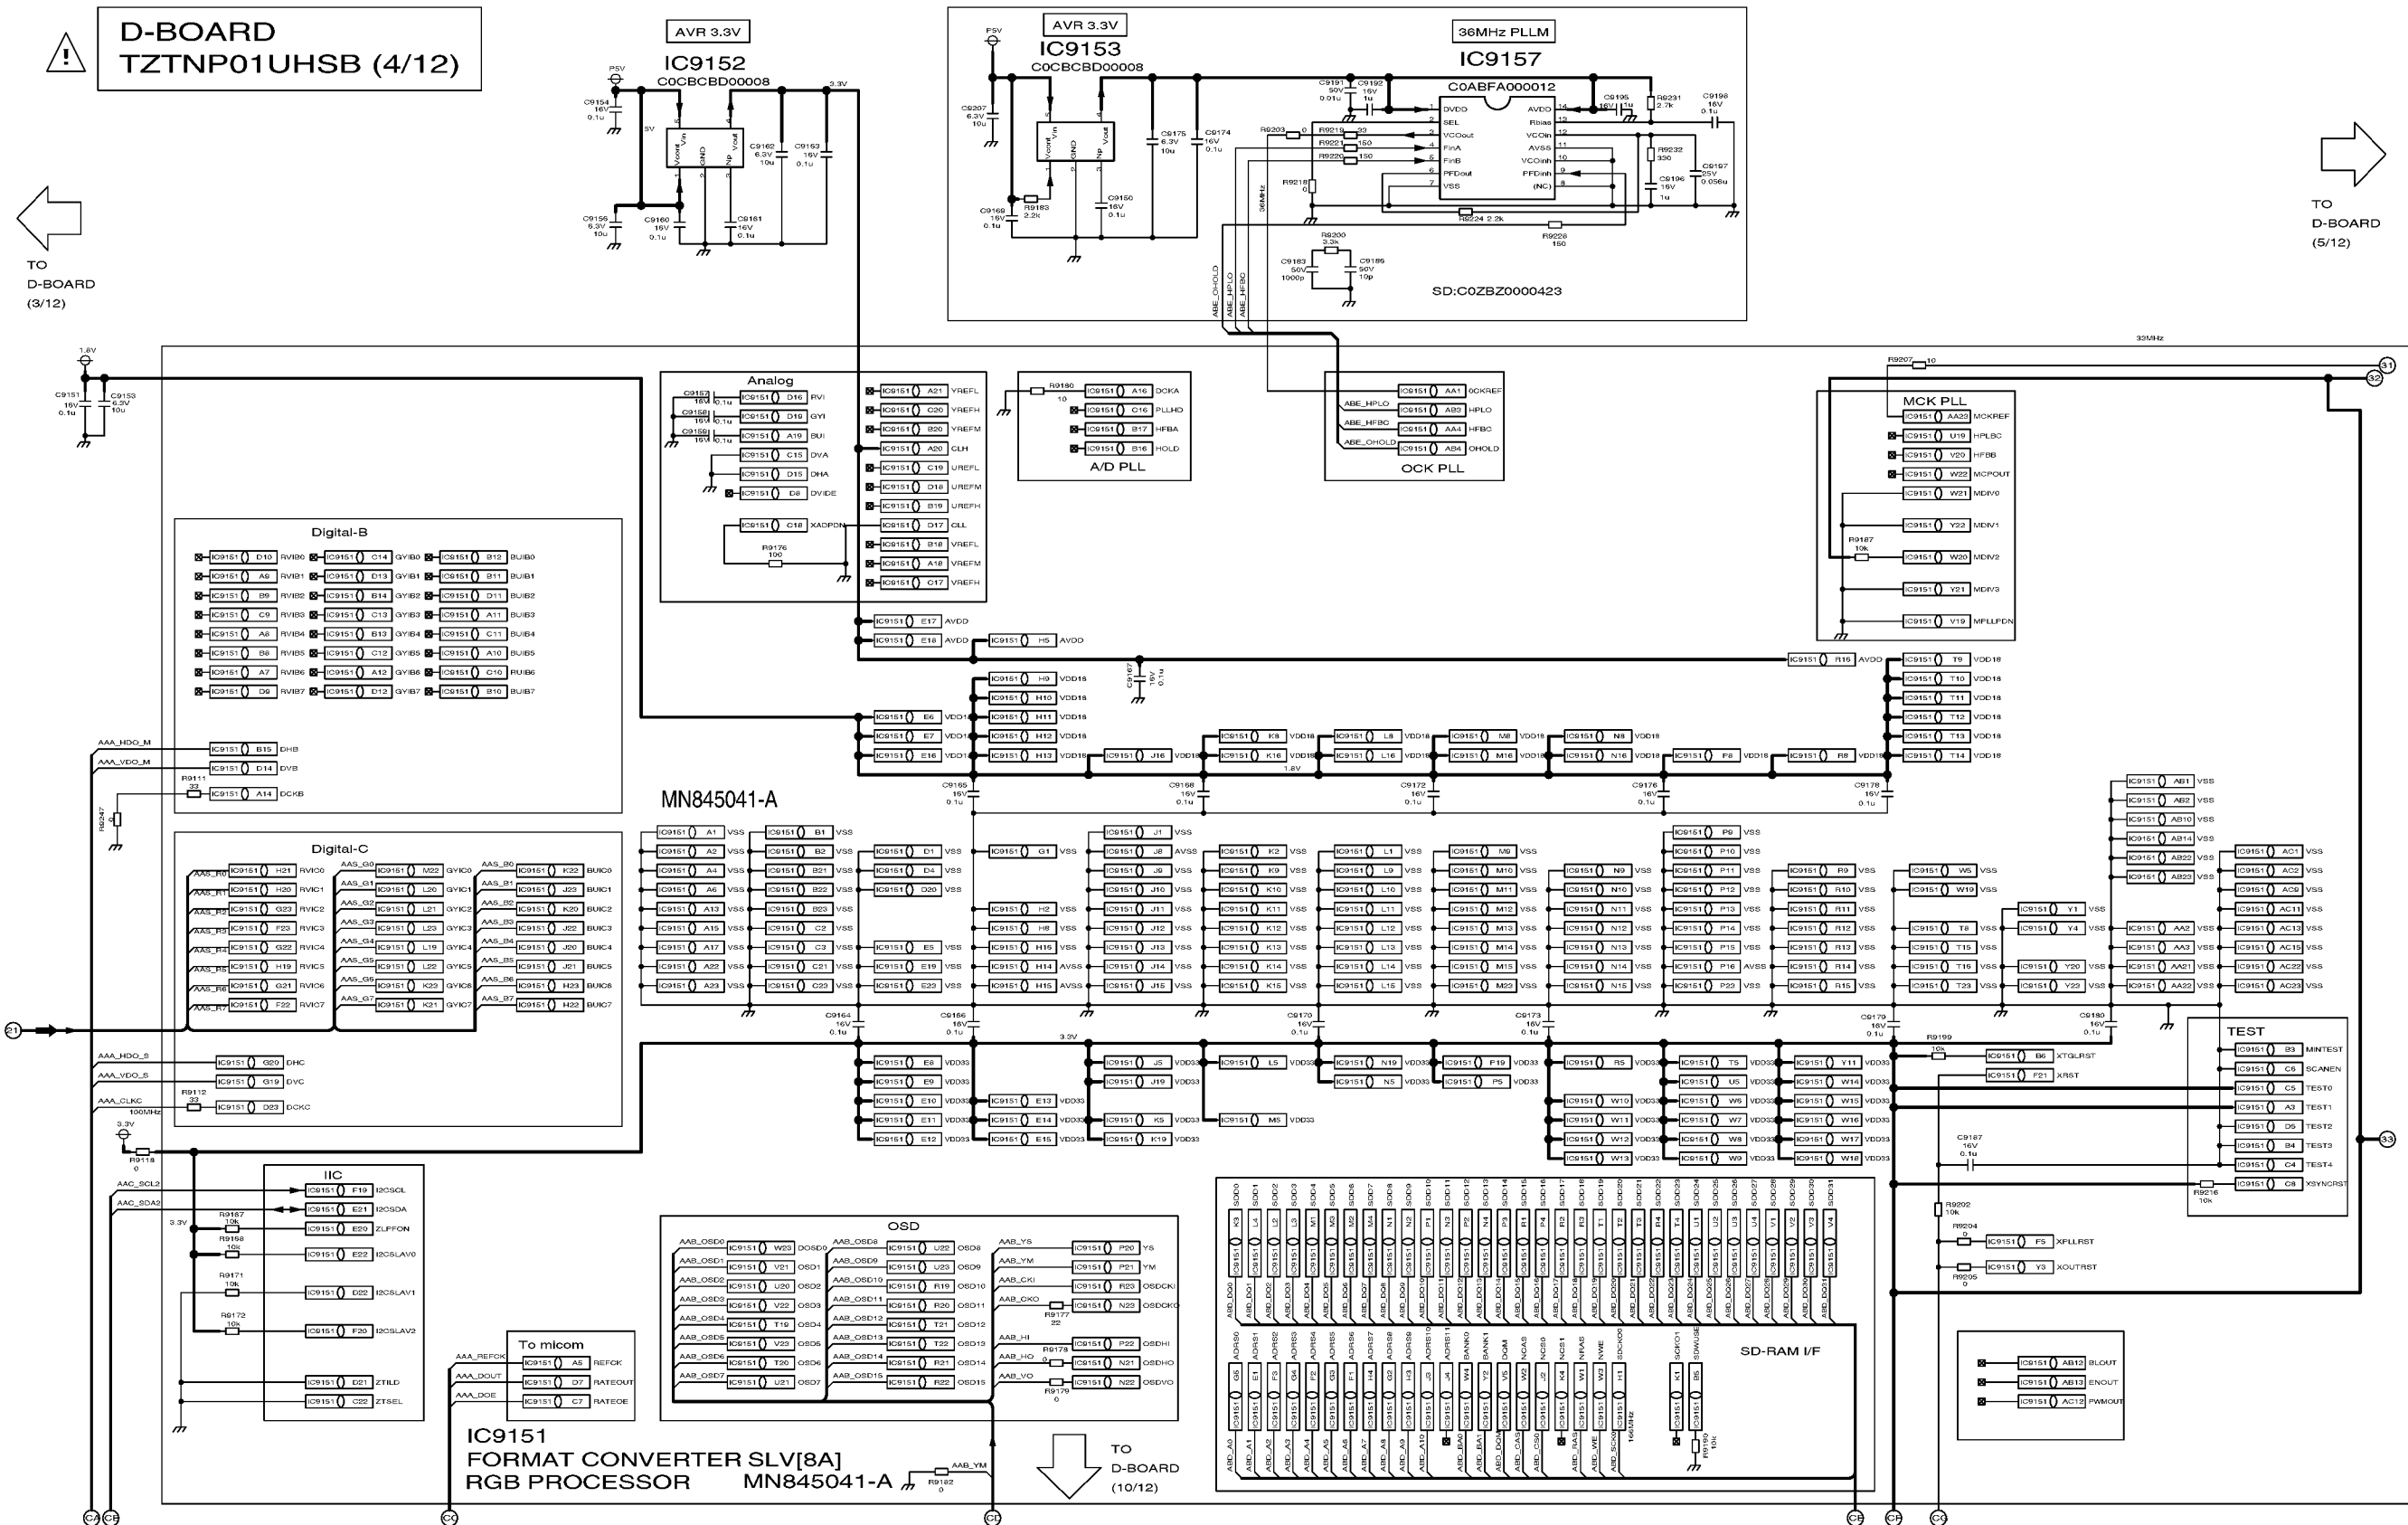




15.30. D-Board (6 of 12) Schematic Diagram

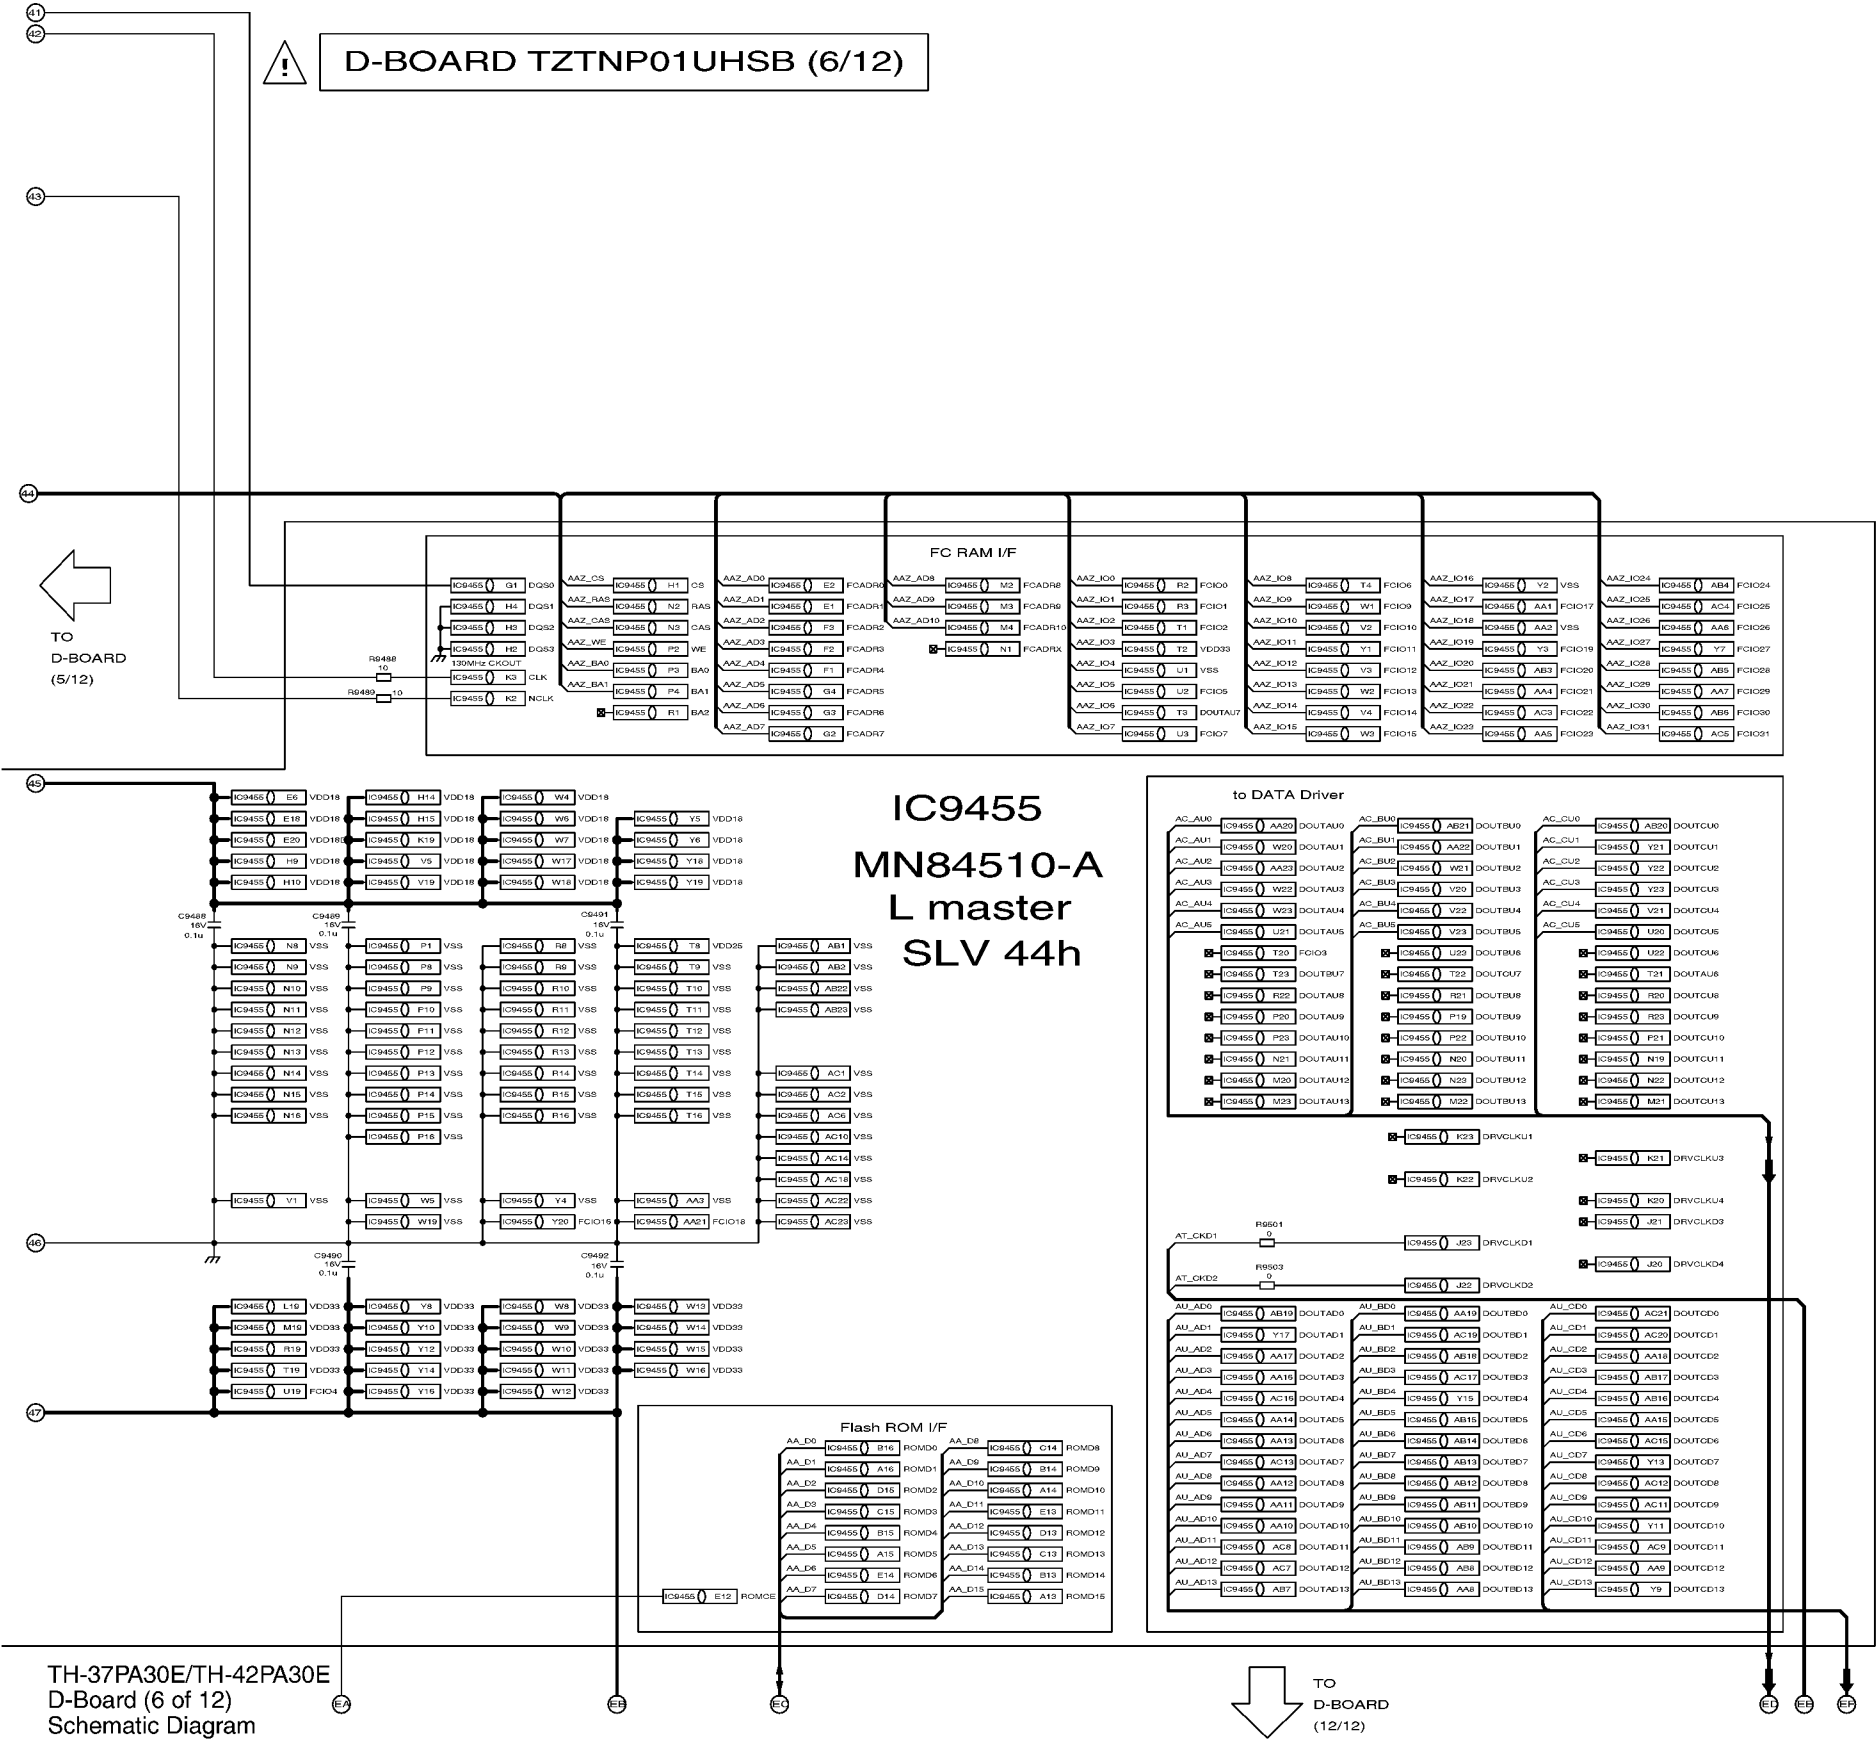




15.32. D-Board (8 of 12) Schematic Diagram

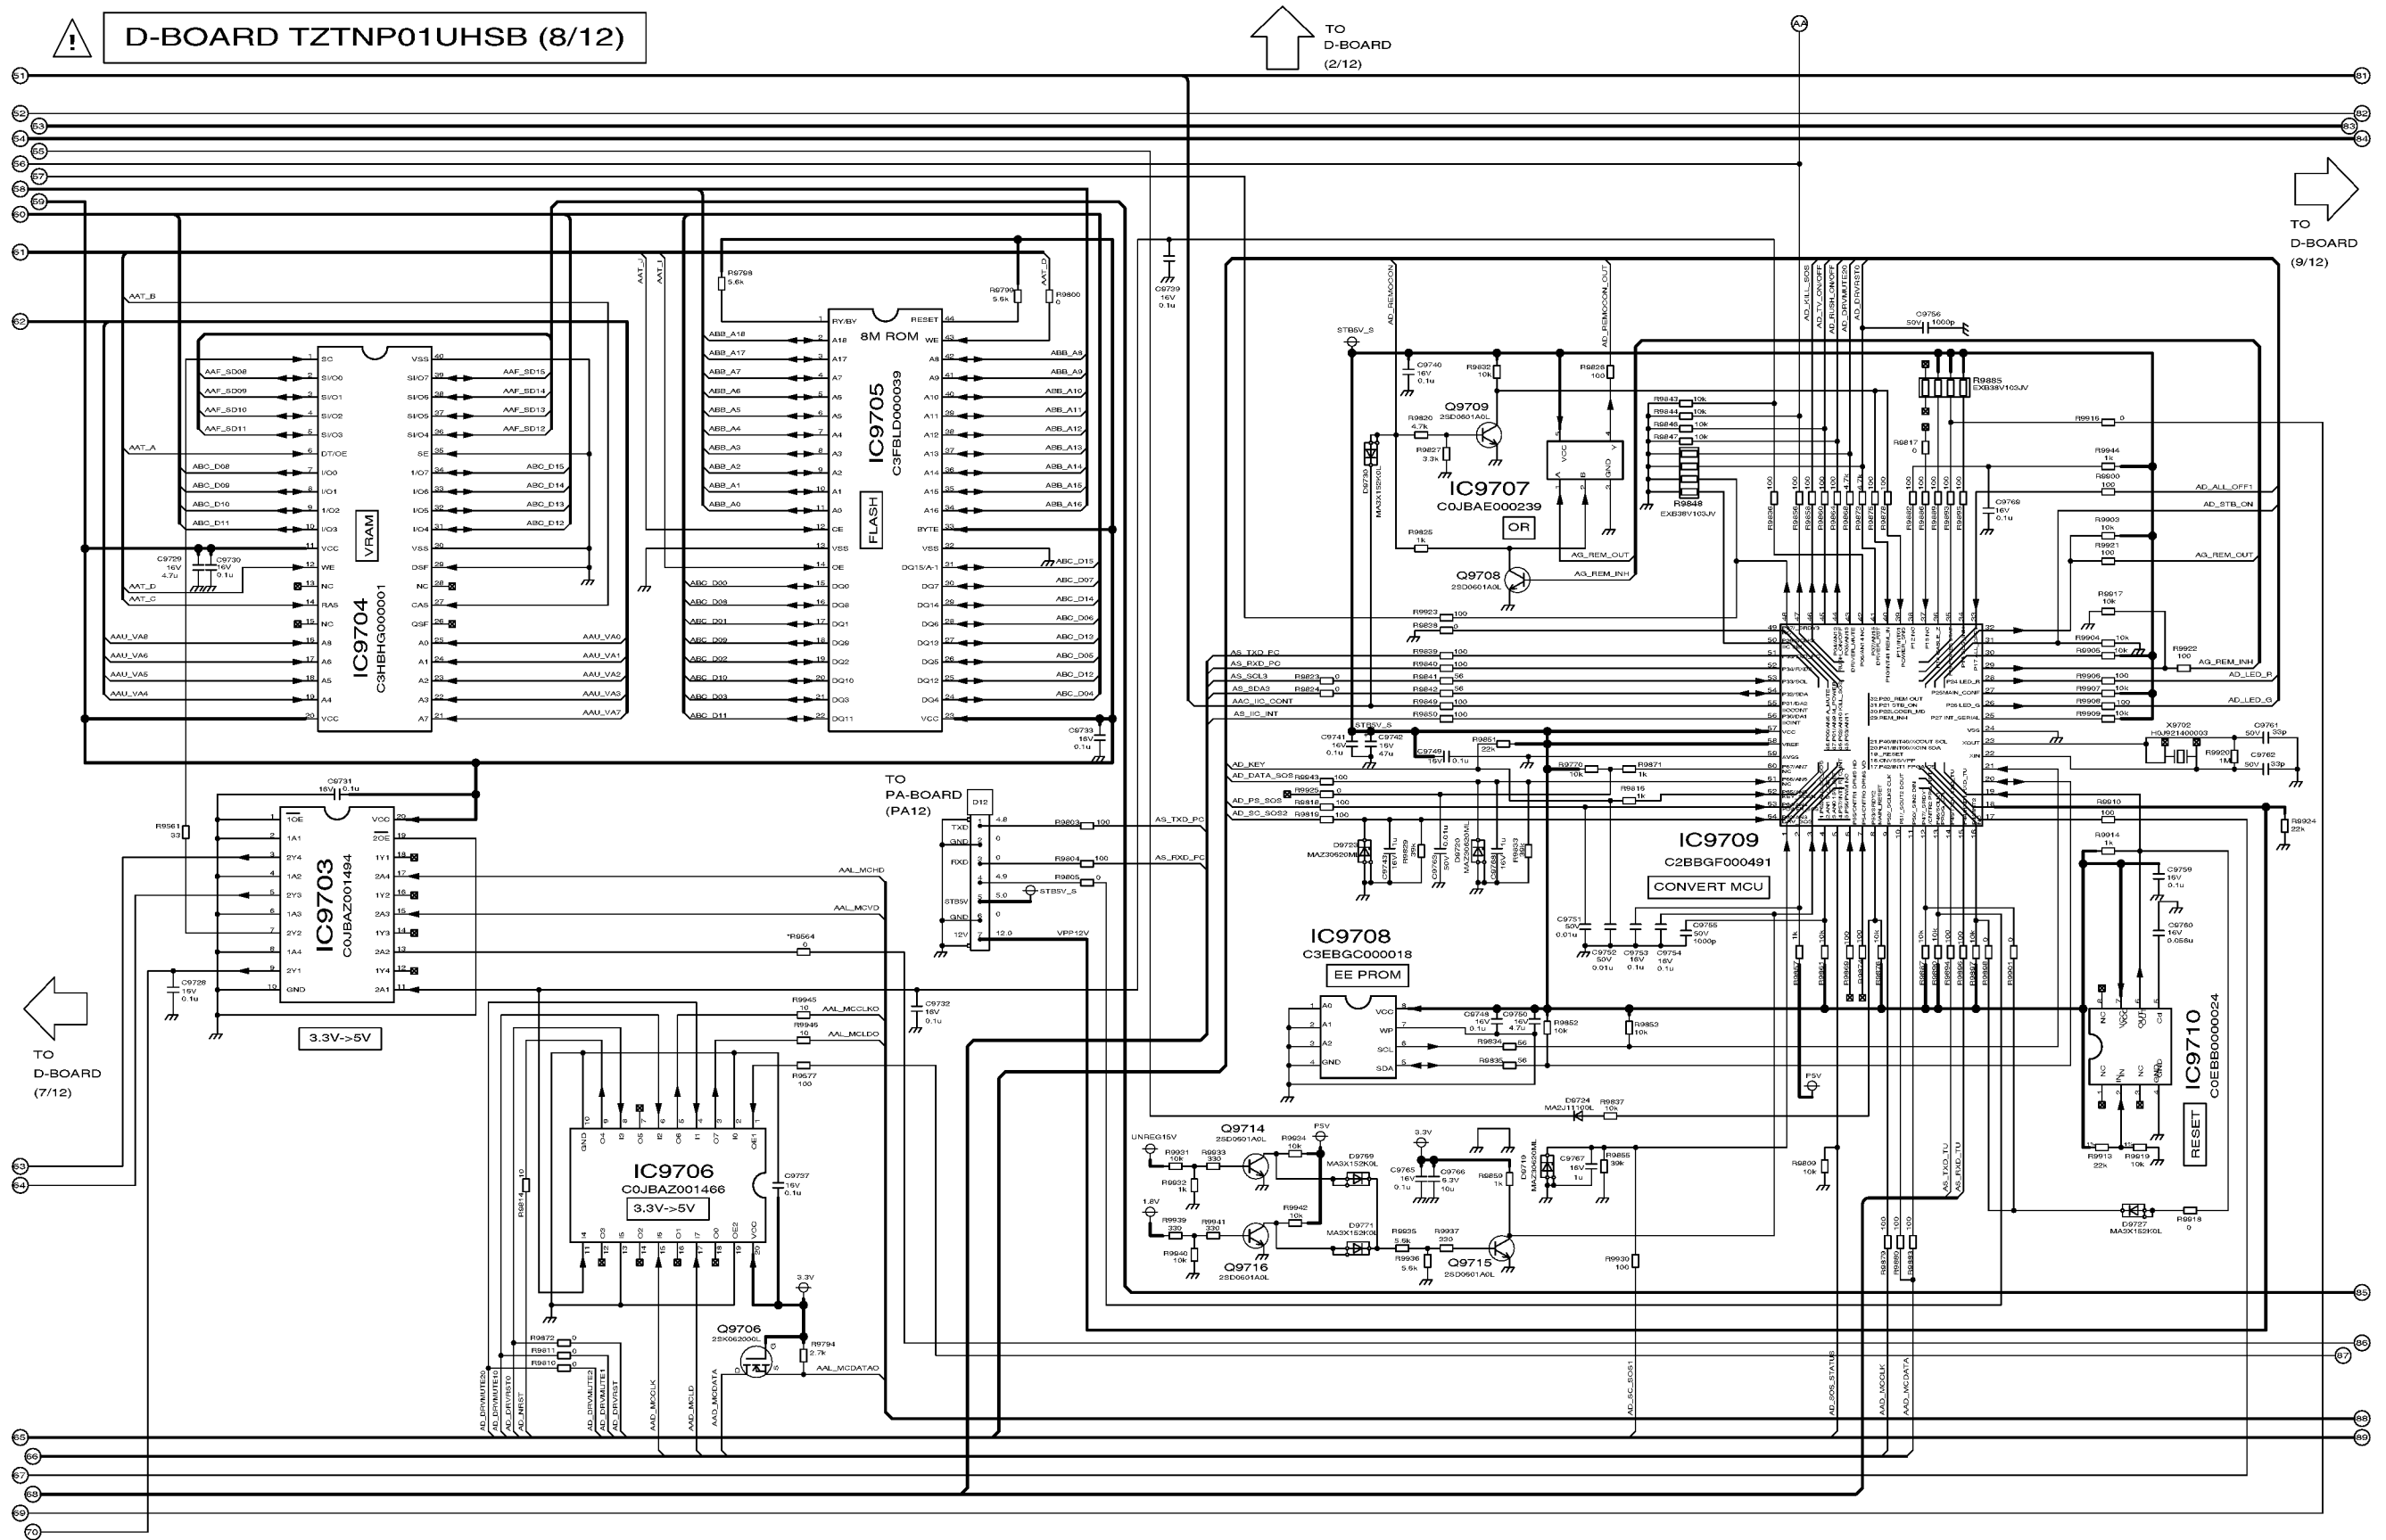

TH-37PA30E/TH-42PA30E D-Board (8 of 12) Schematic Diagram

TH-37PA30E/TH-42PA30E D-Board (8 of 12) Schematic Diagram

15.33. D-Board (9 of 12) Schematic Diagram

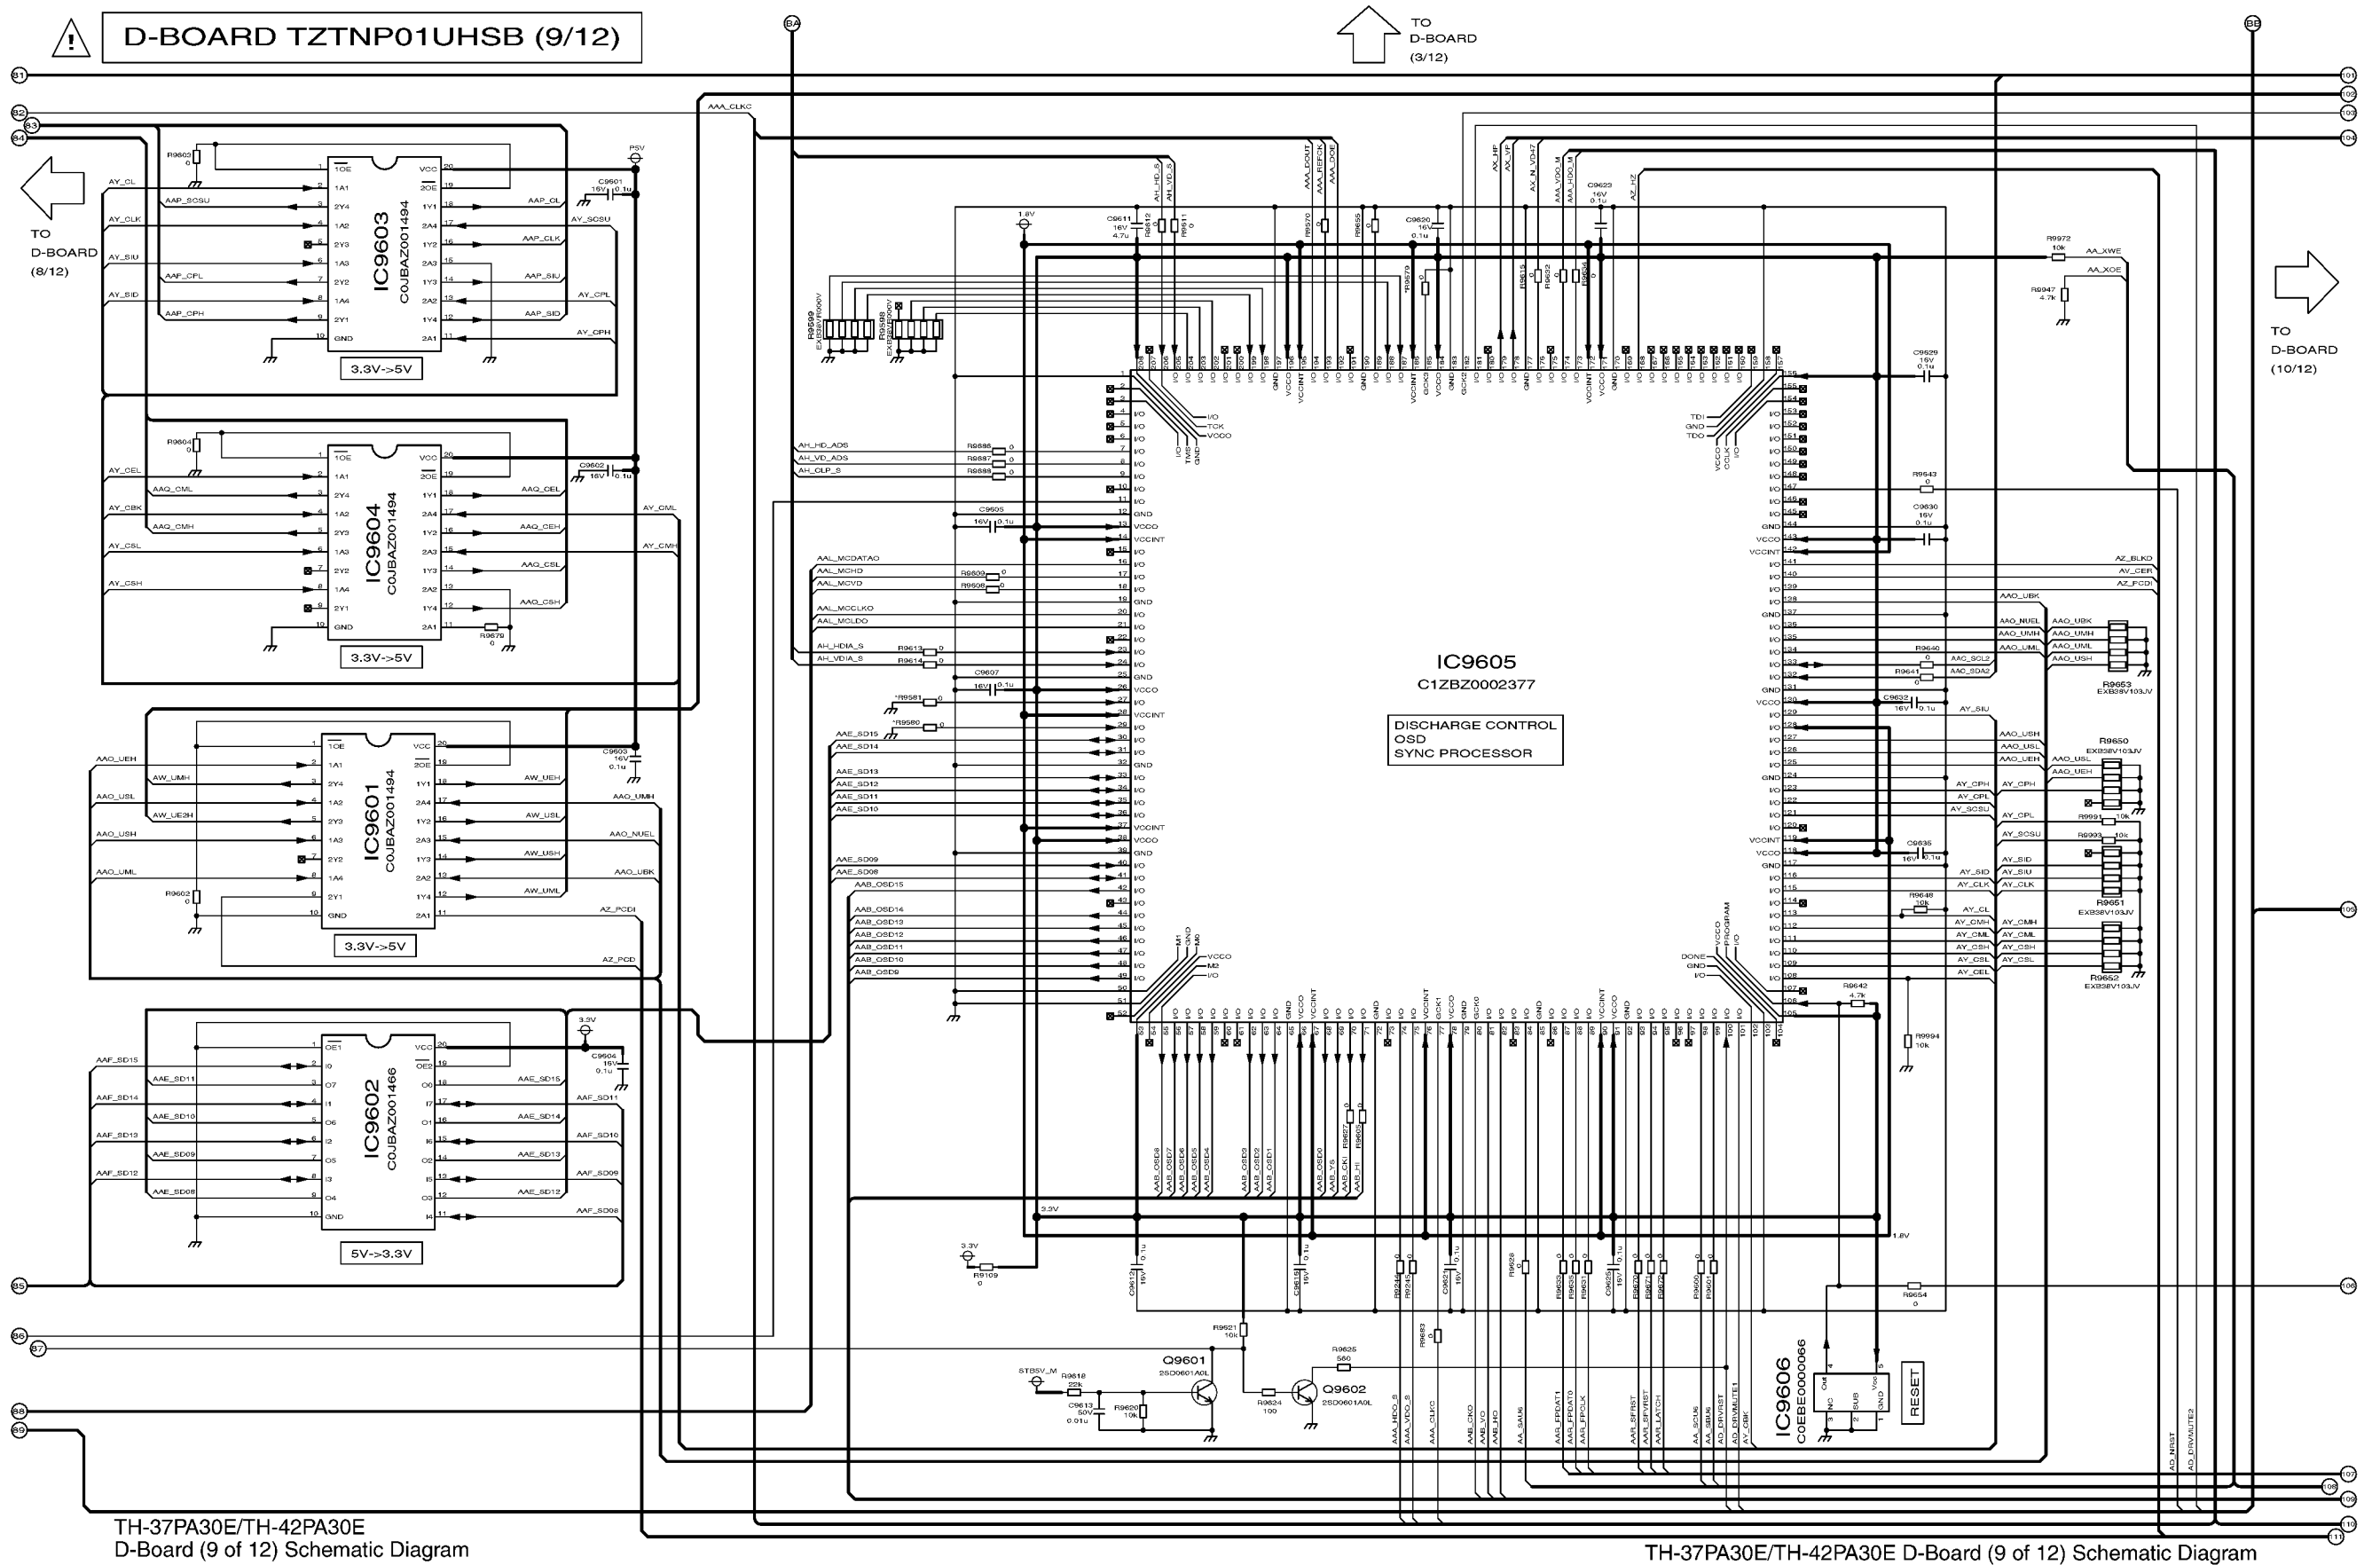

16

17

18

19


20

21


22

23

15.34. D-Board (10 of 12) Schematic Diagram

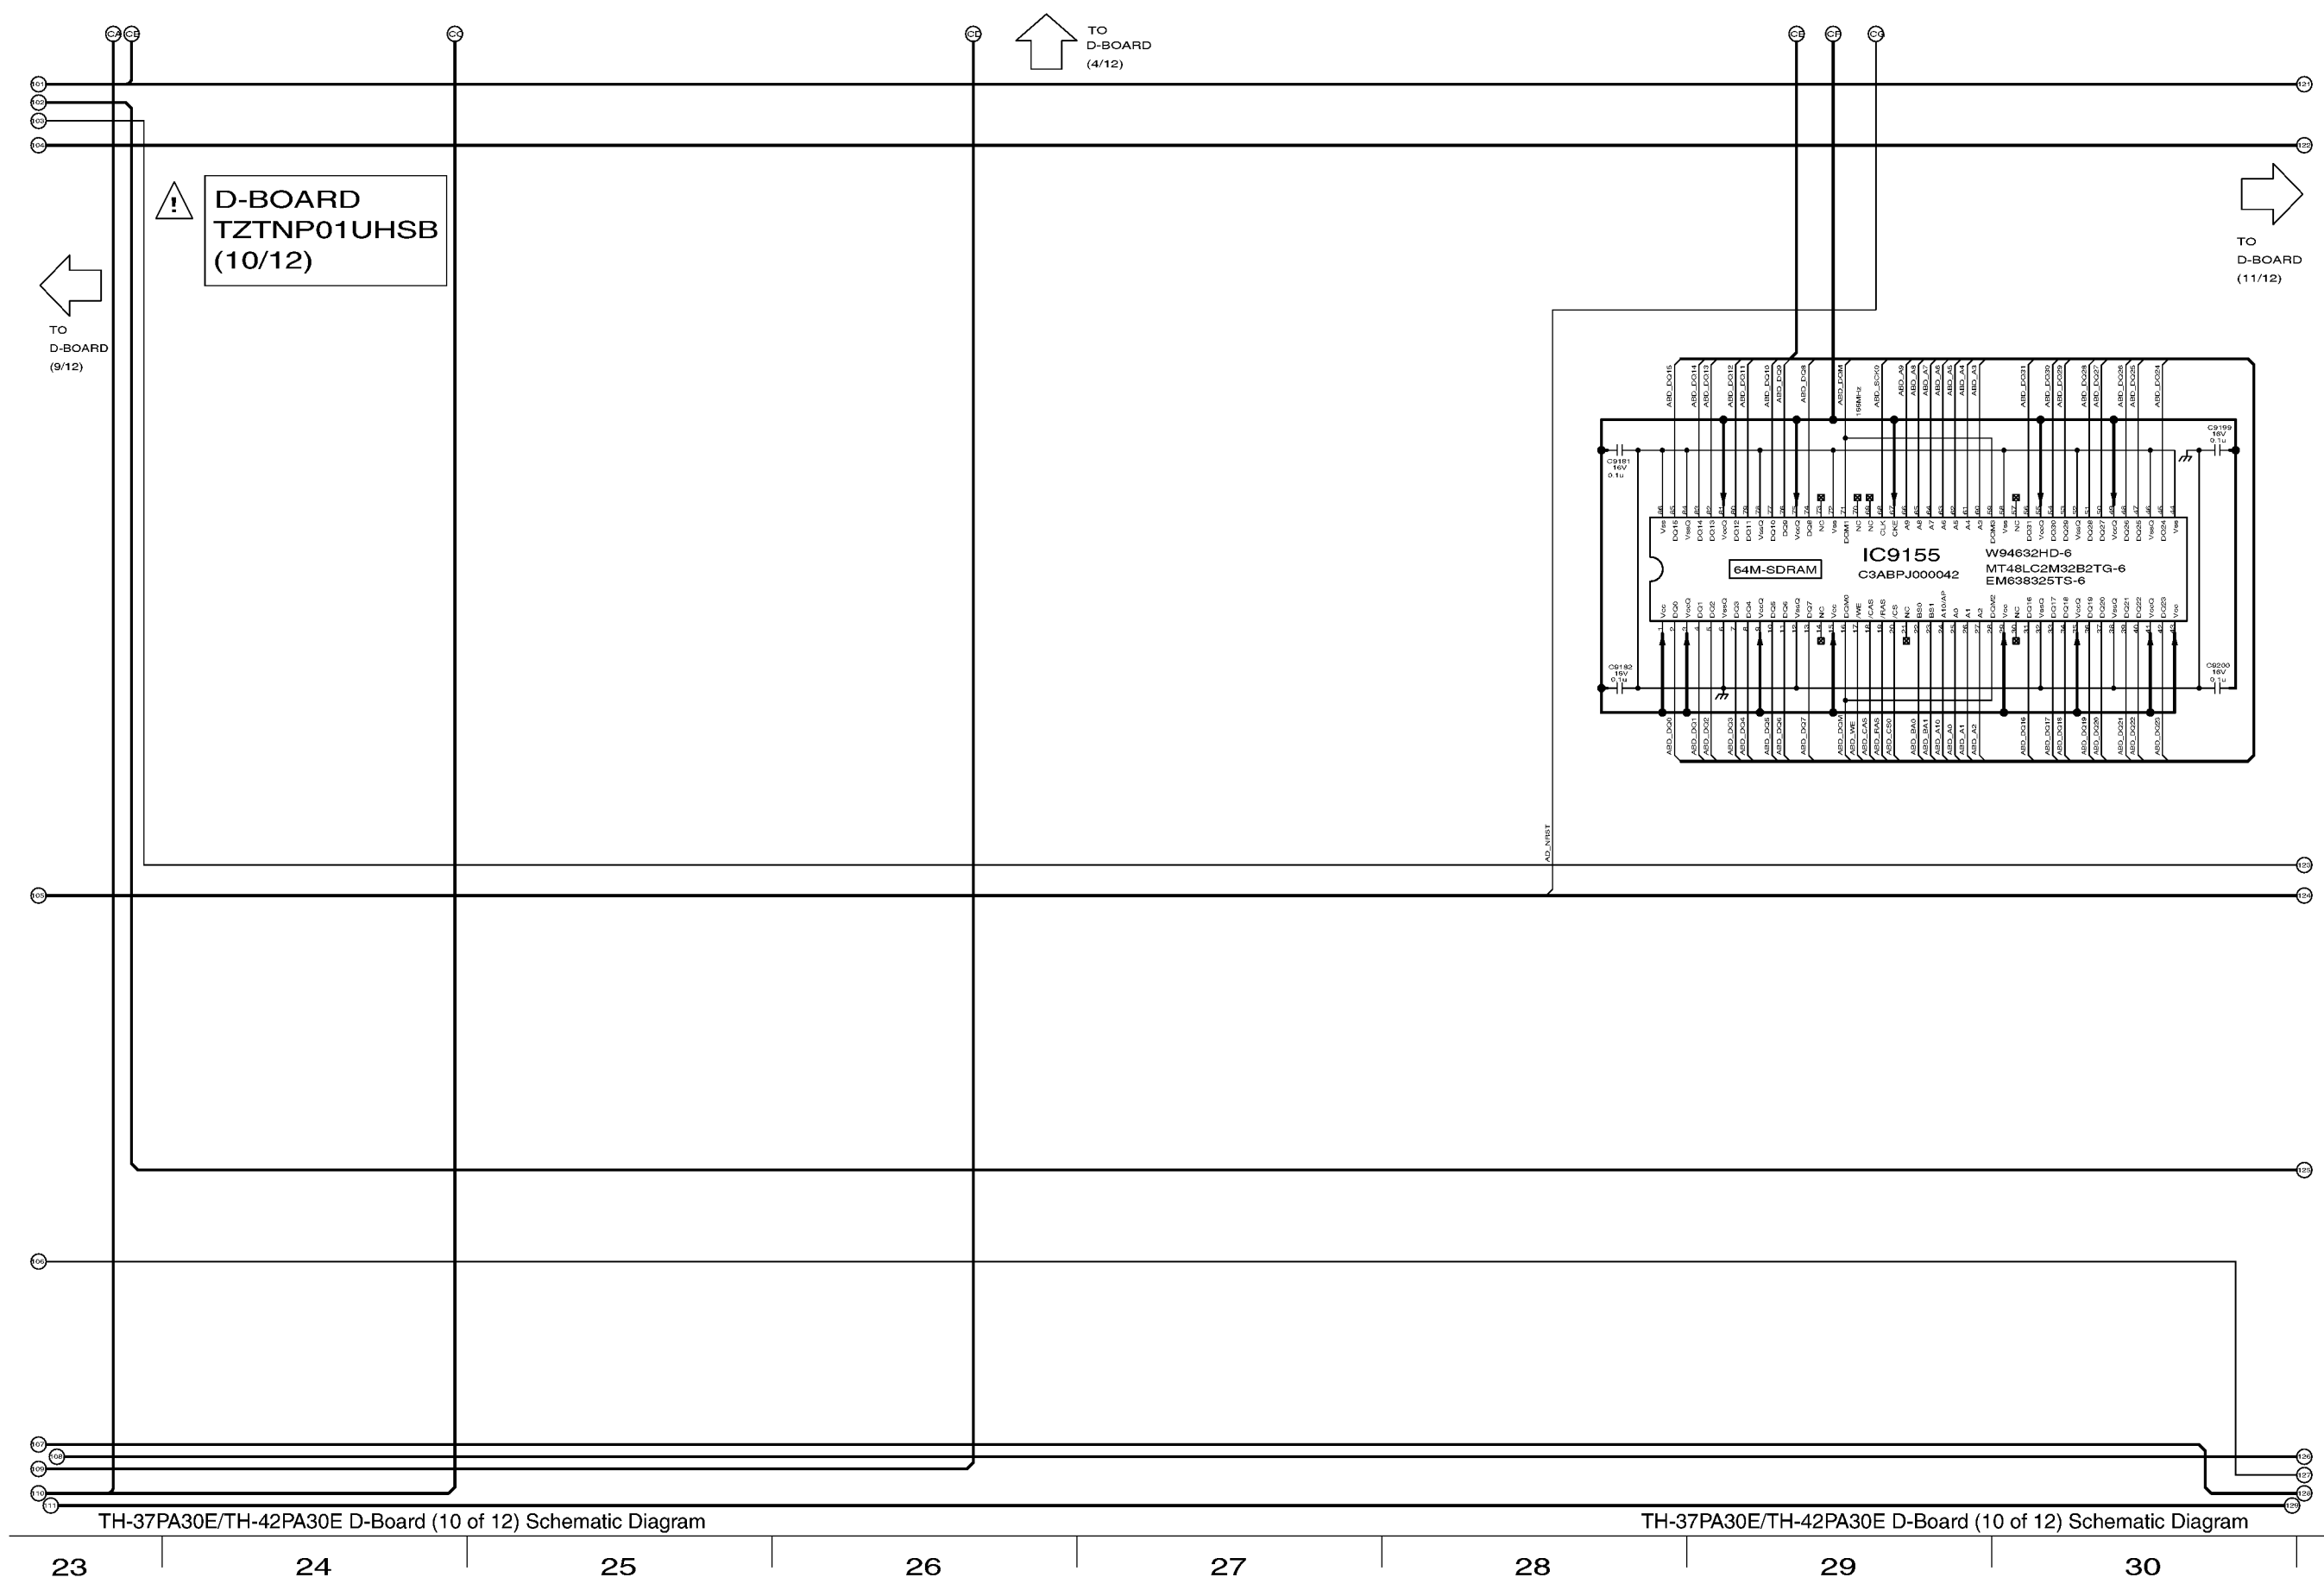


15.35. D-Board (11 of 12) Schematic Diagram

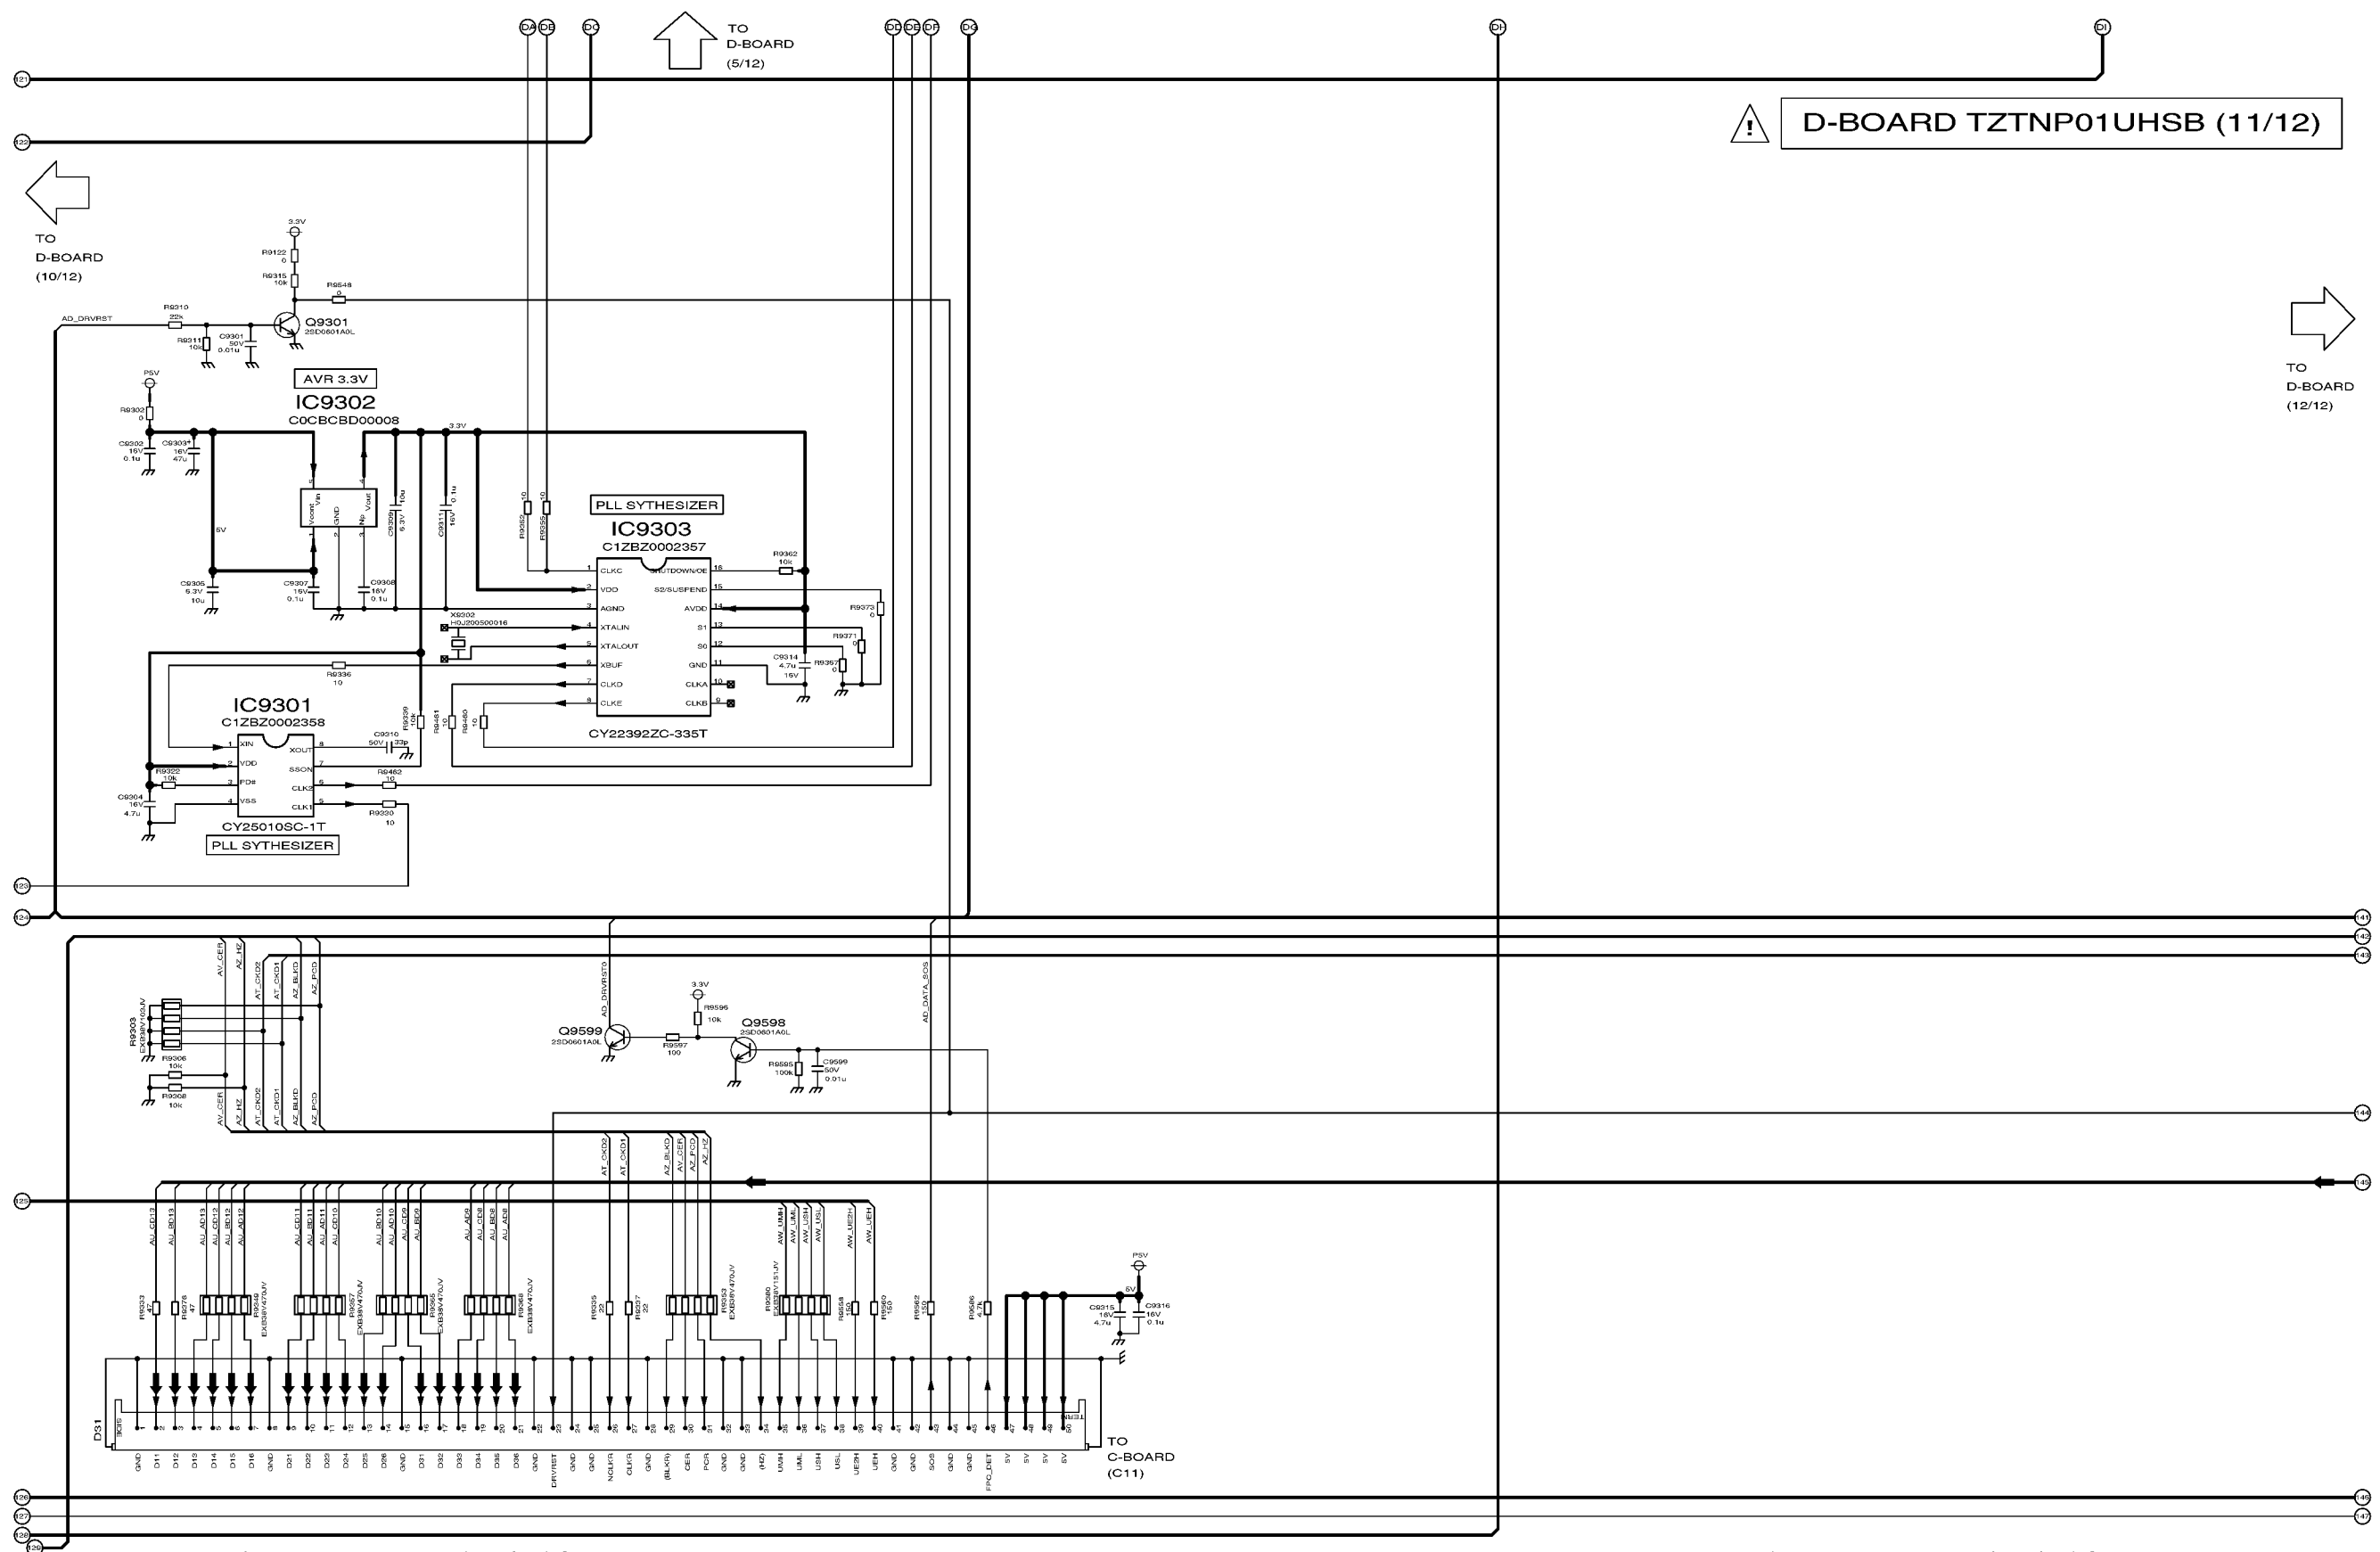


TH-37PA30E/TH-42PA30E D-Board (11 of 12) Schematic Diagram

TH-37PA30E/TH-42PA30E D-Board (11 of 12) Schematic Diagram


15.37. C1, C2, G and K-Board Block Diagram

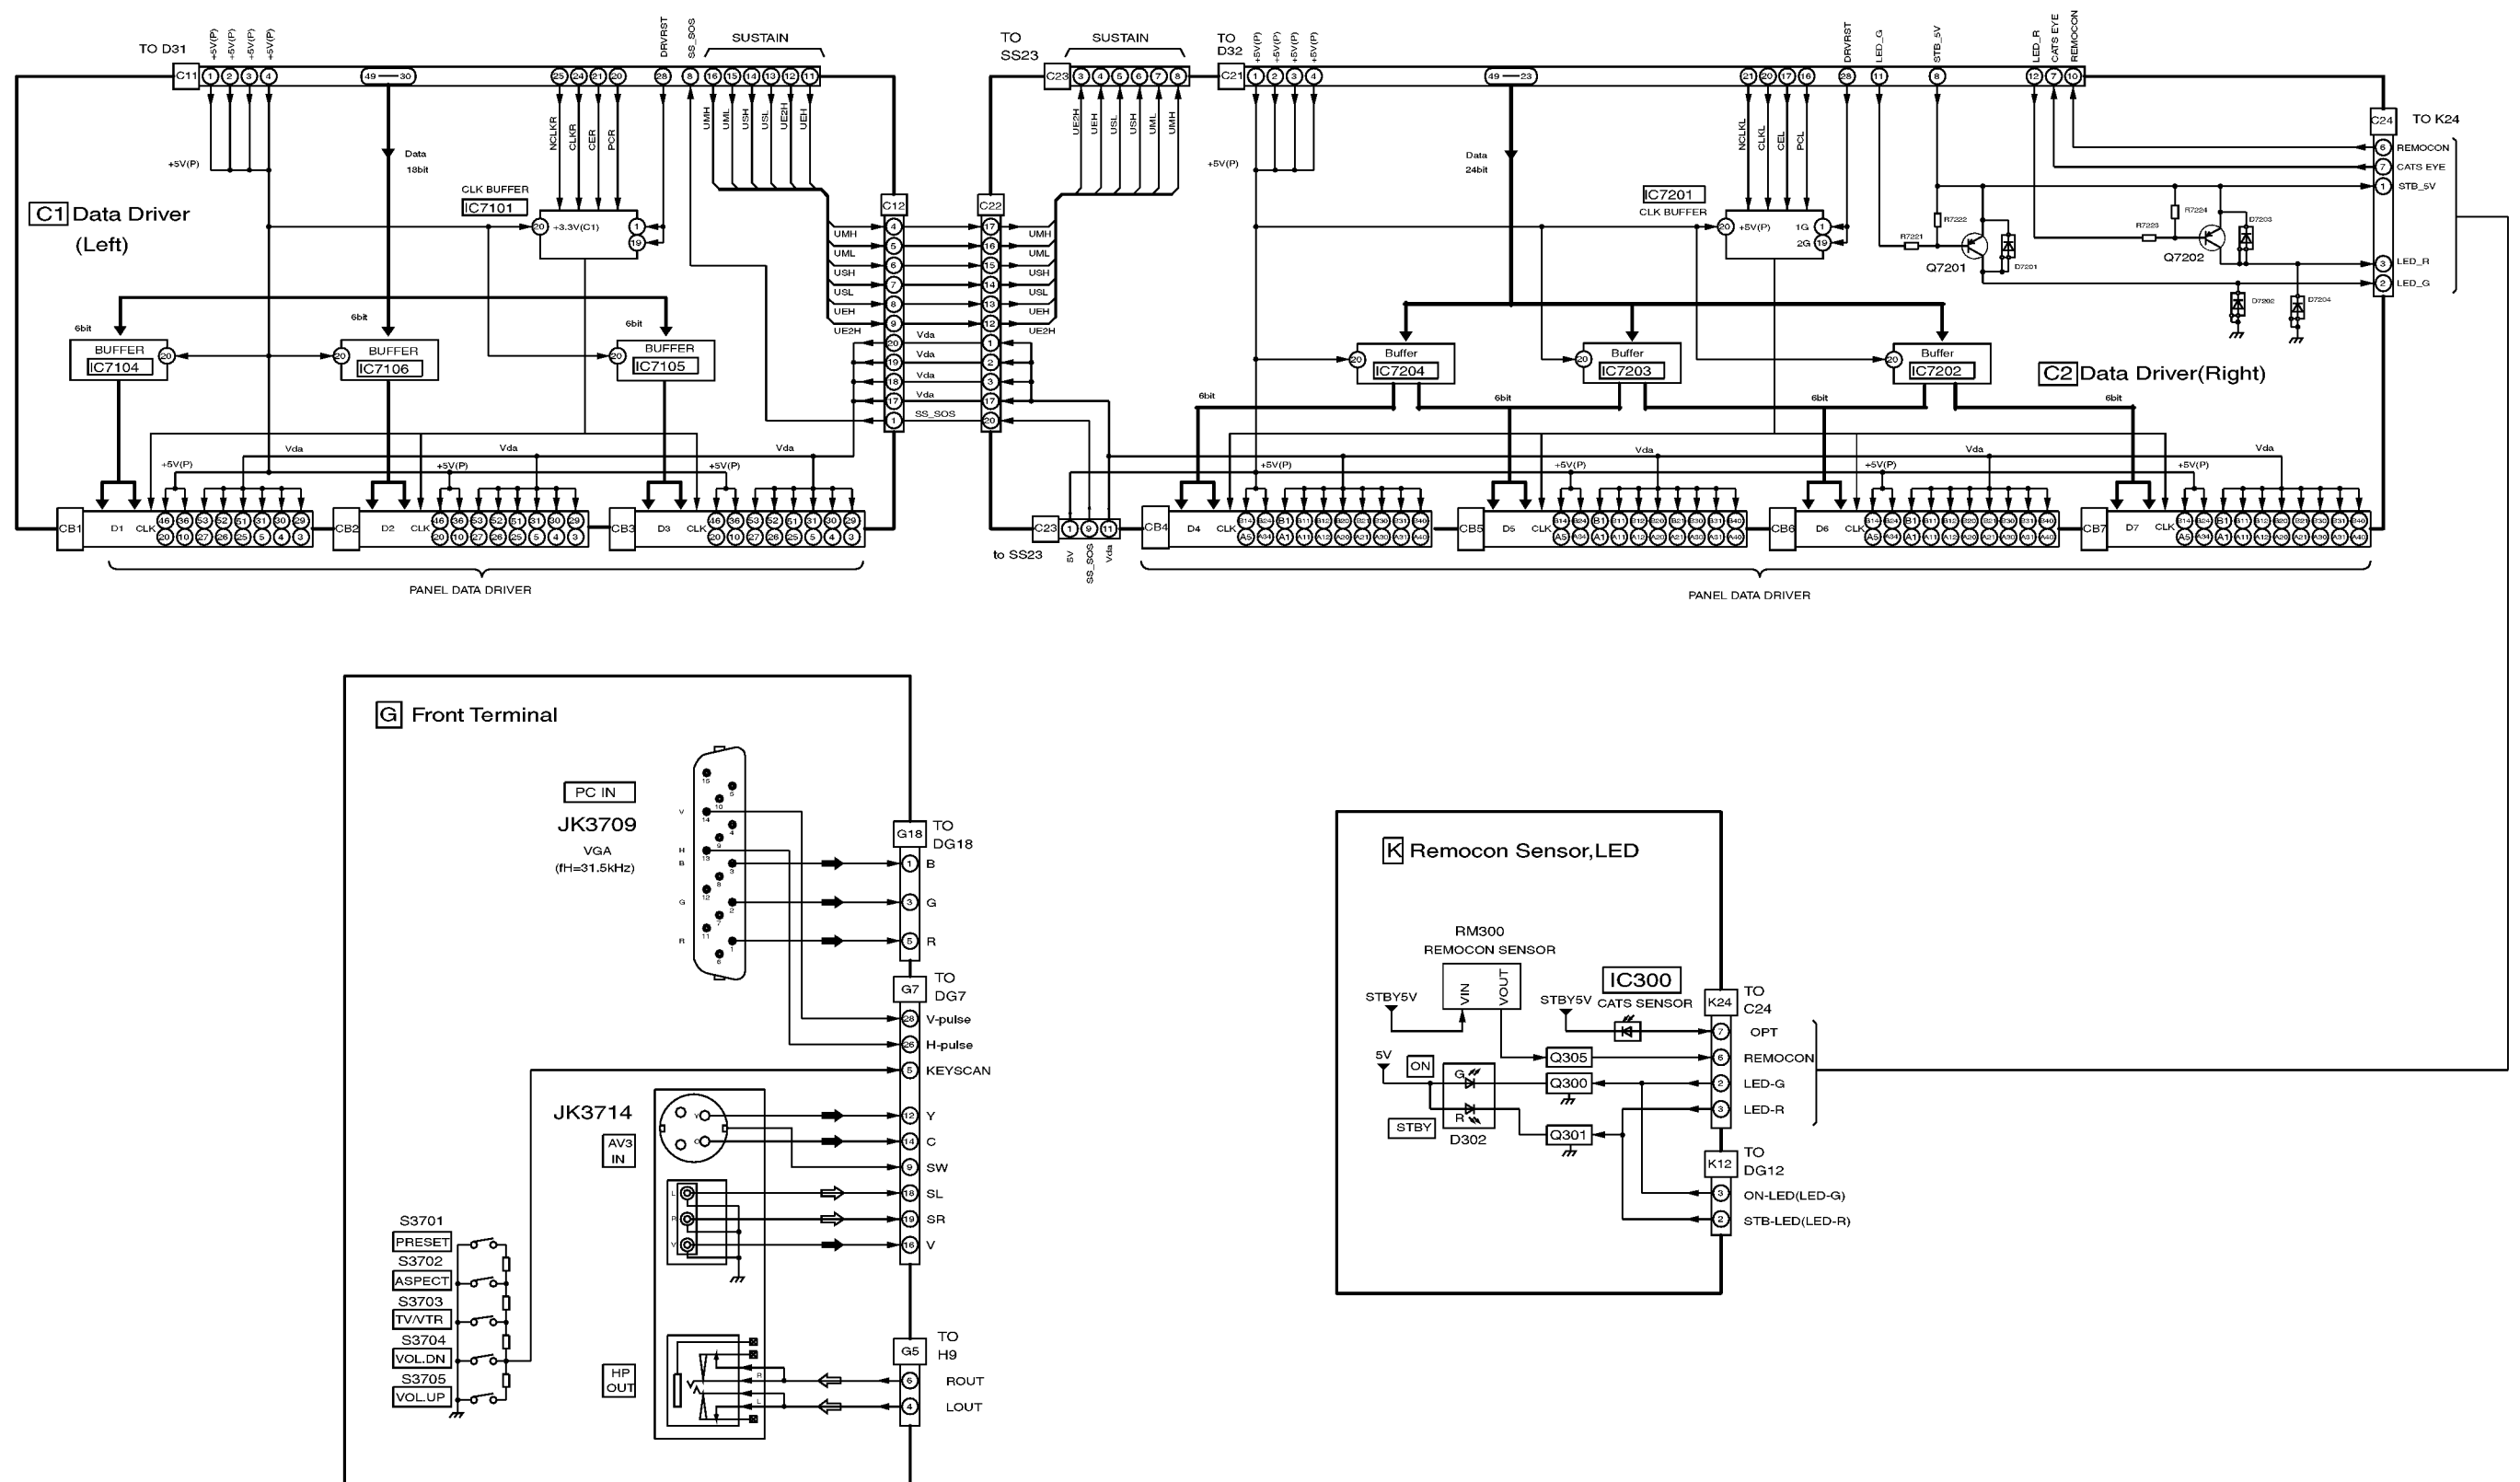


15.38. C1-Board Schematic Diagram (TH-37PA30E)

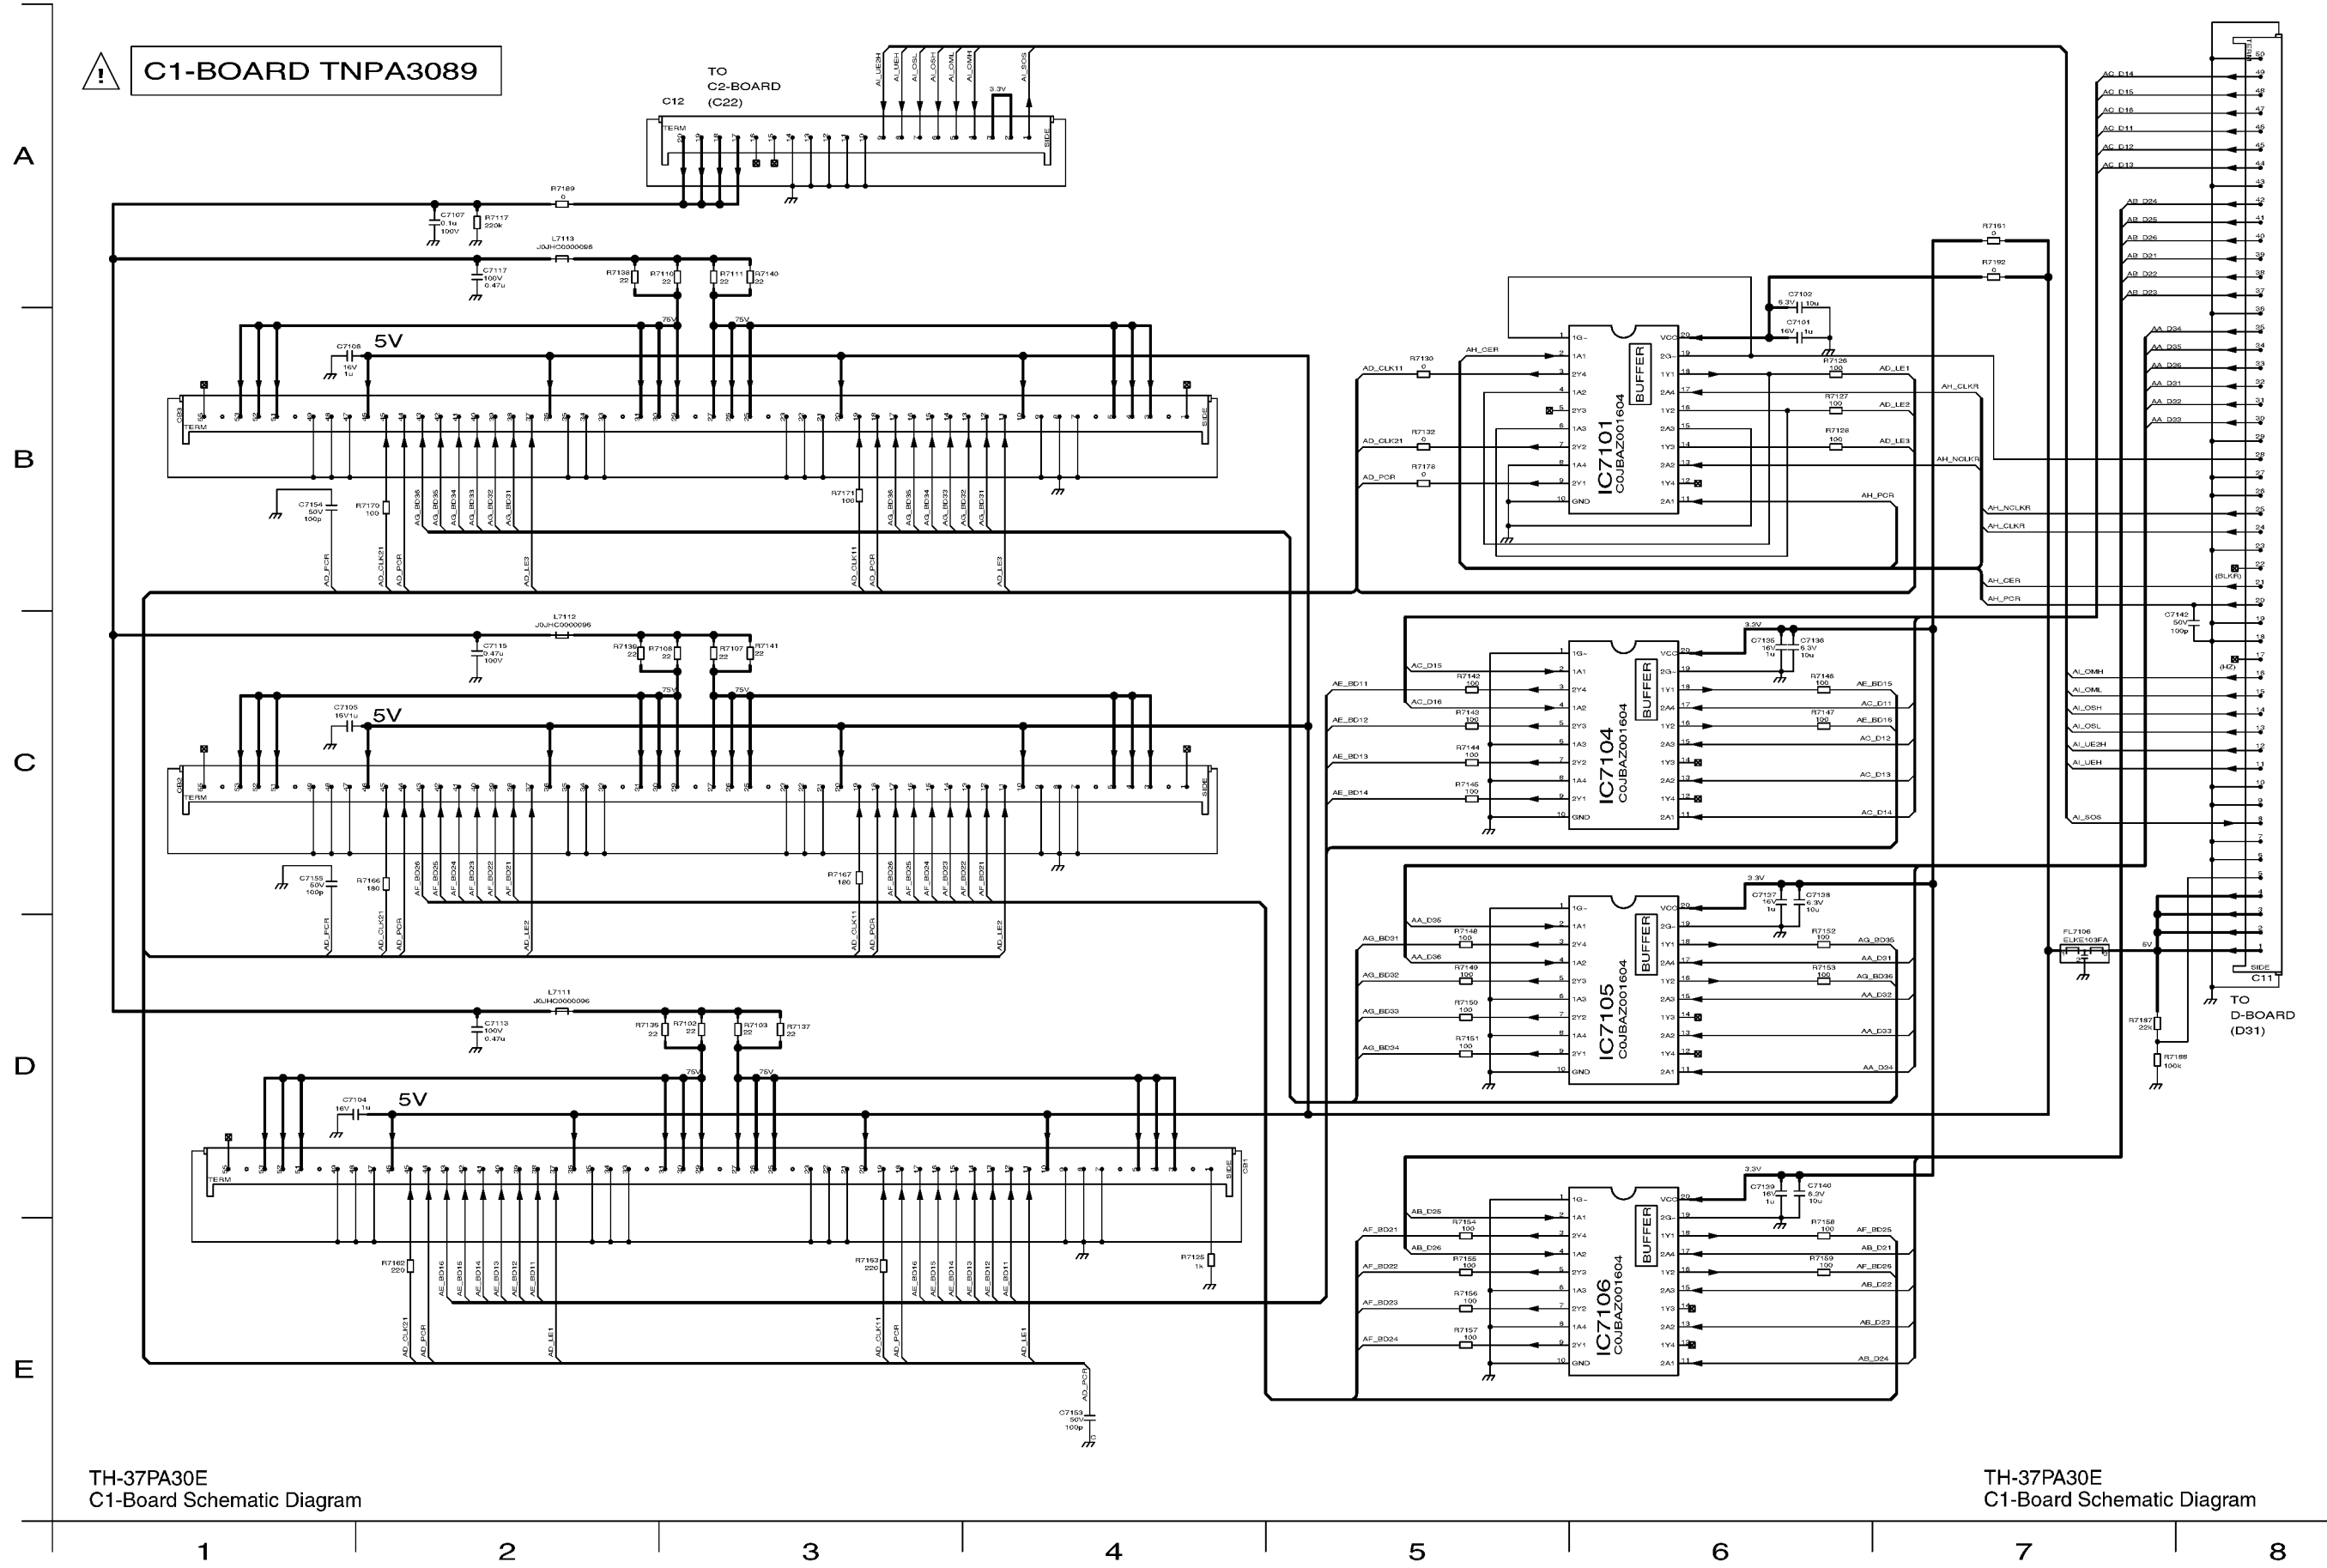


15.39. C1-Board Schematic Diagram (TH-42PA30E)

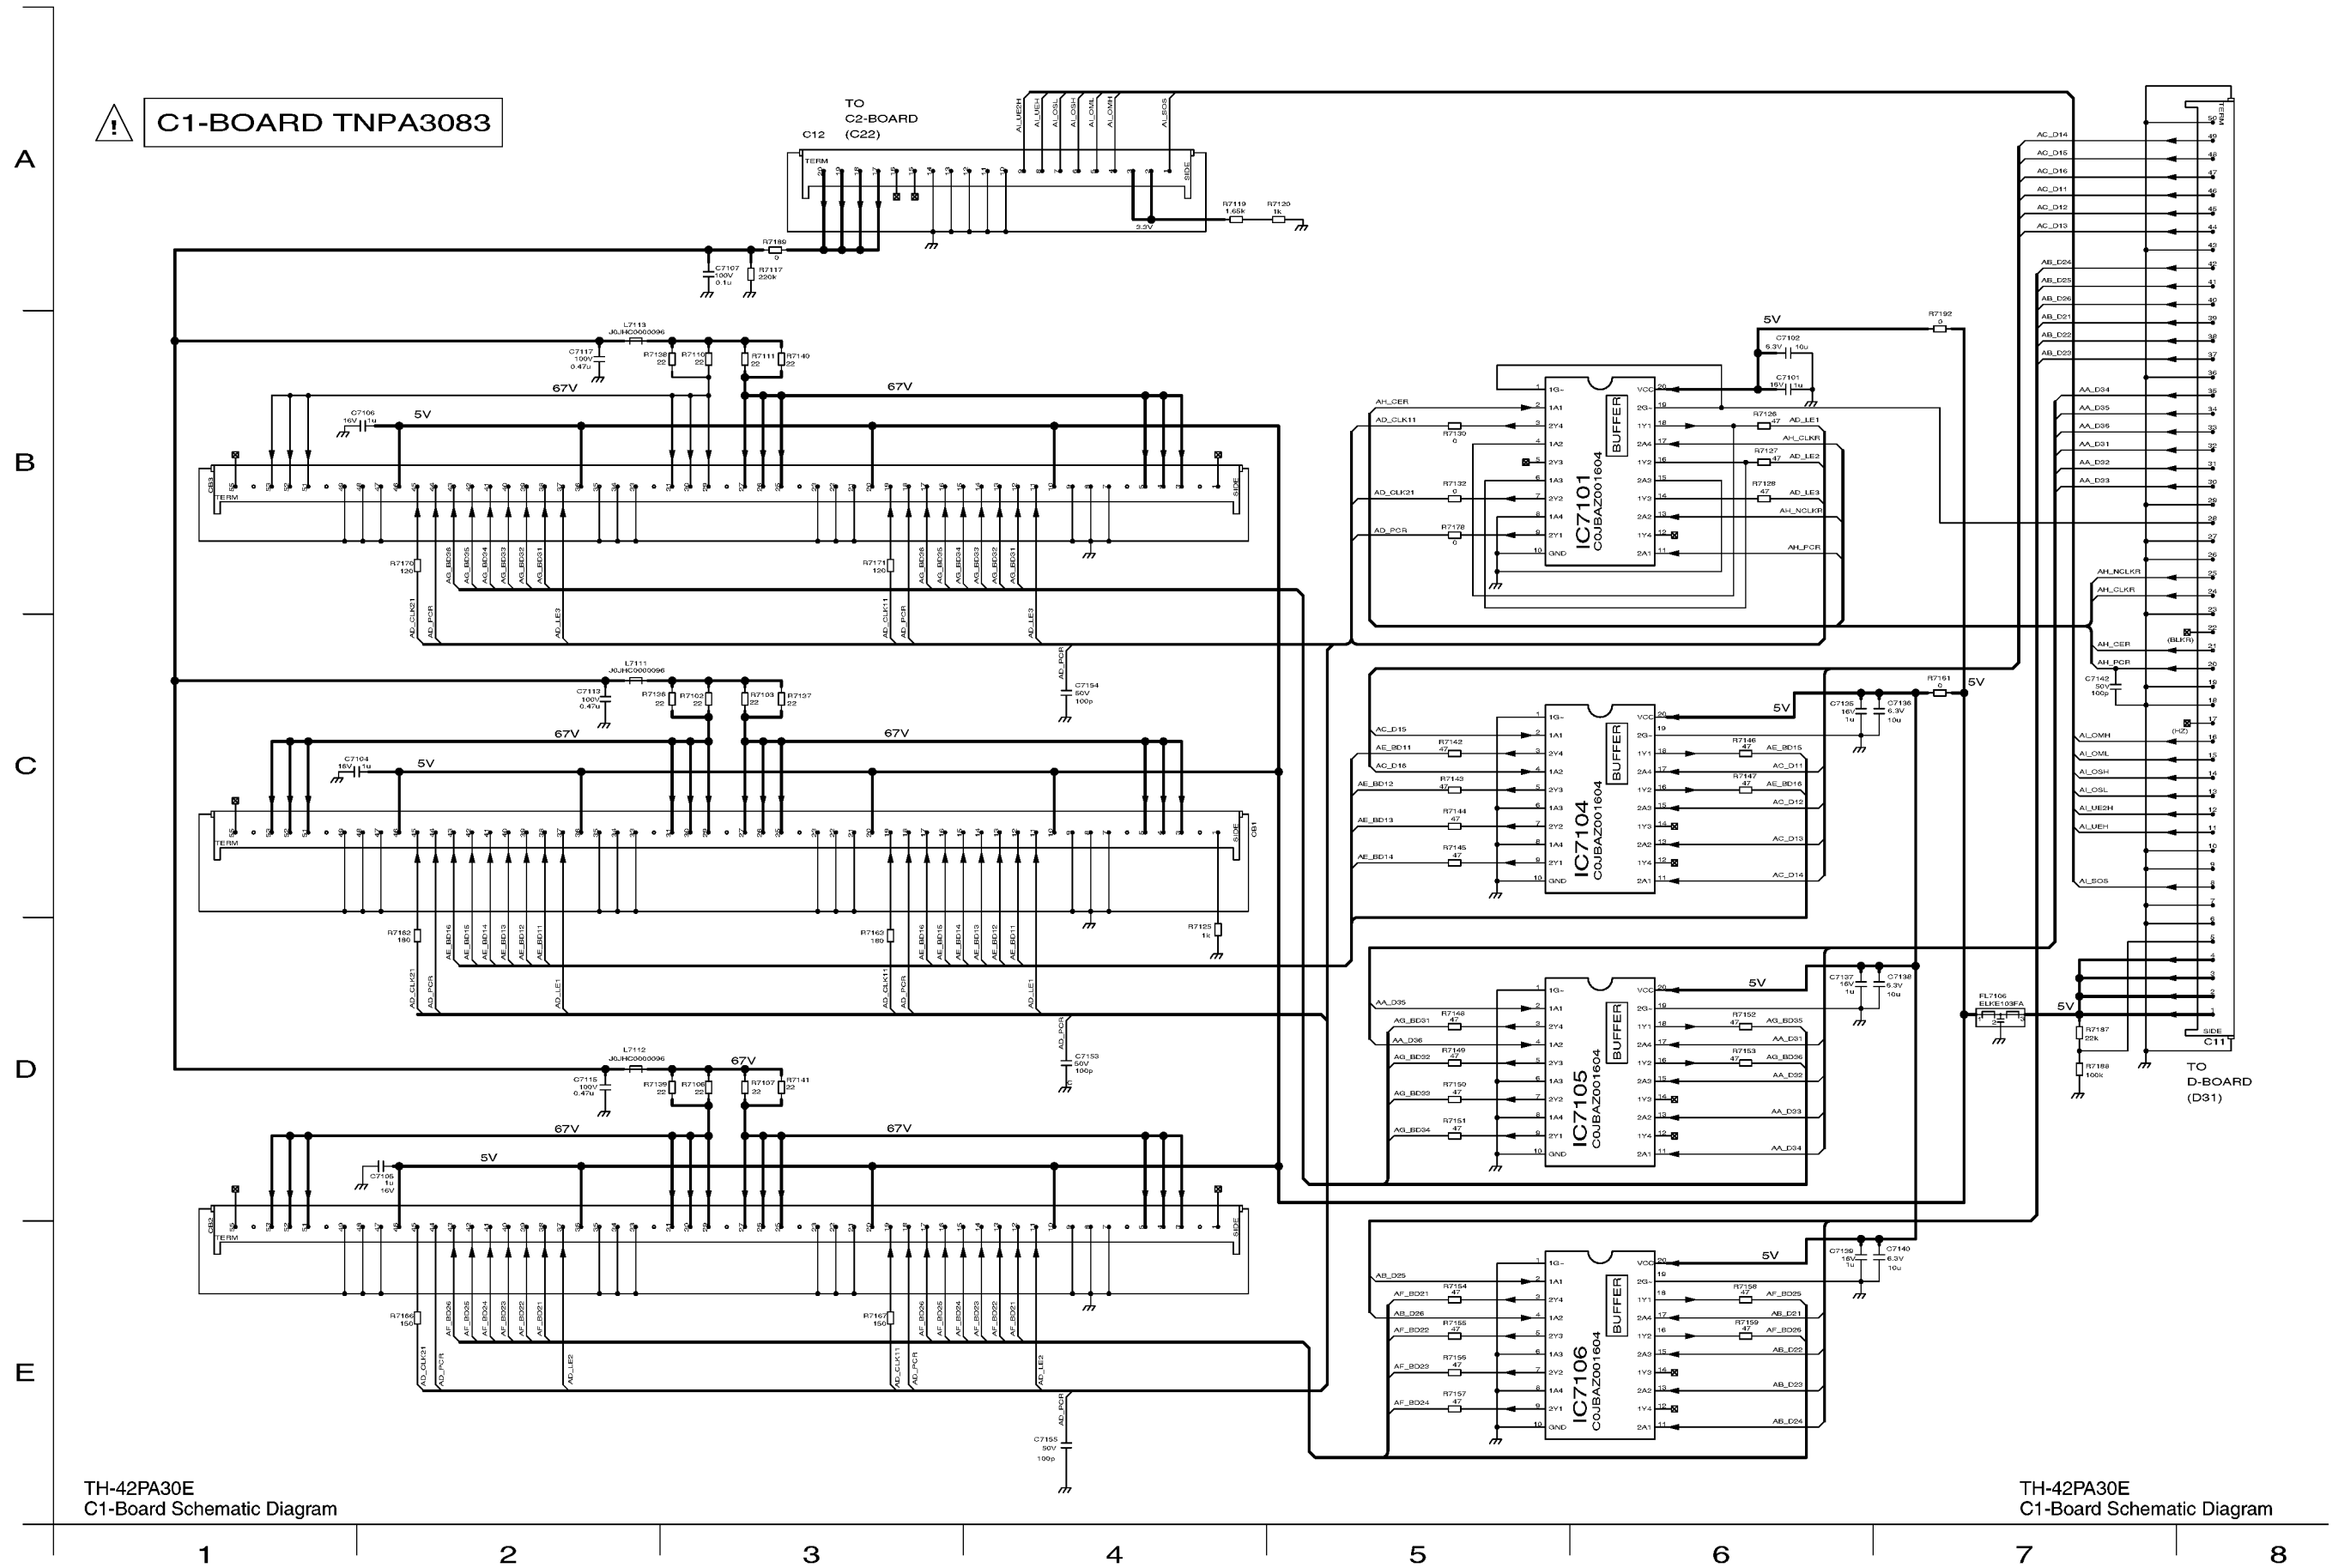

15.40. C2-Board (1 of 2) Schematic Diagram (TH-37PA30E)

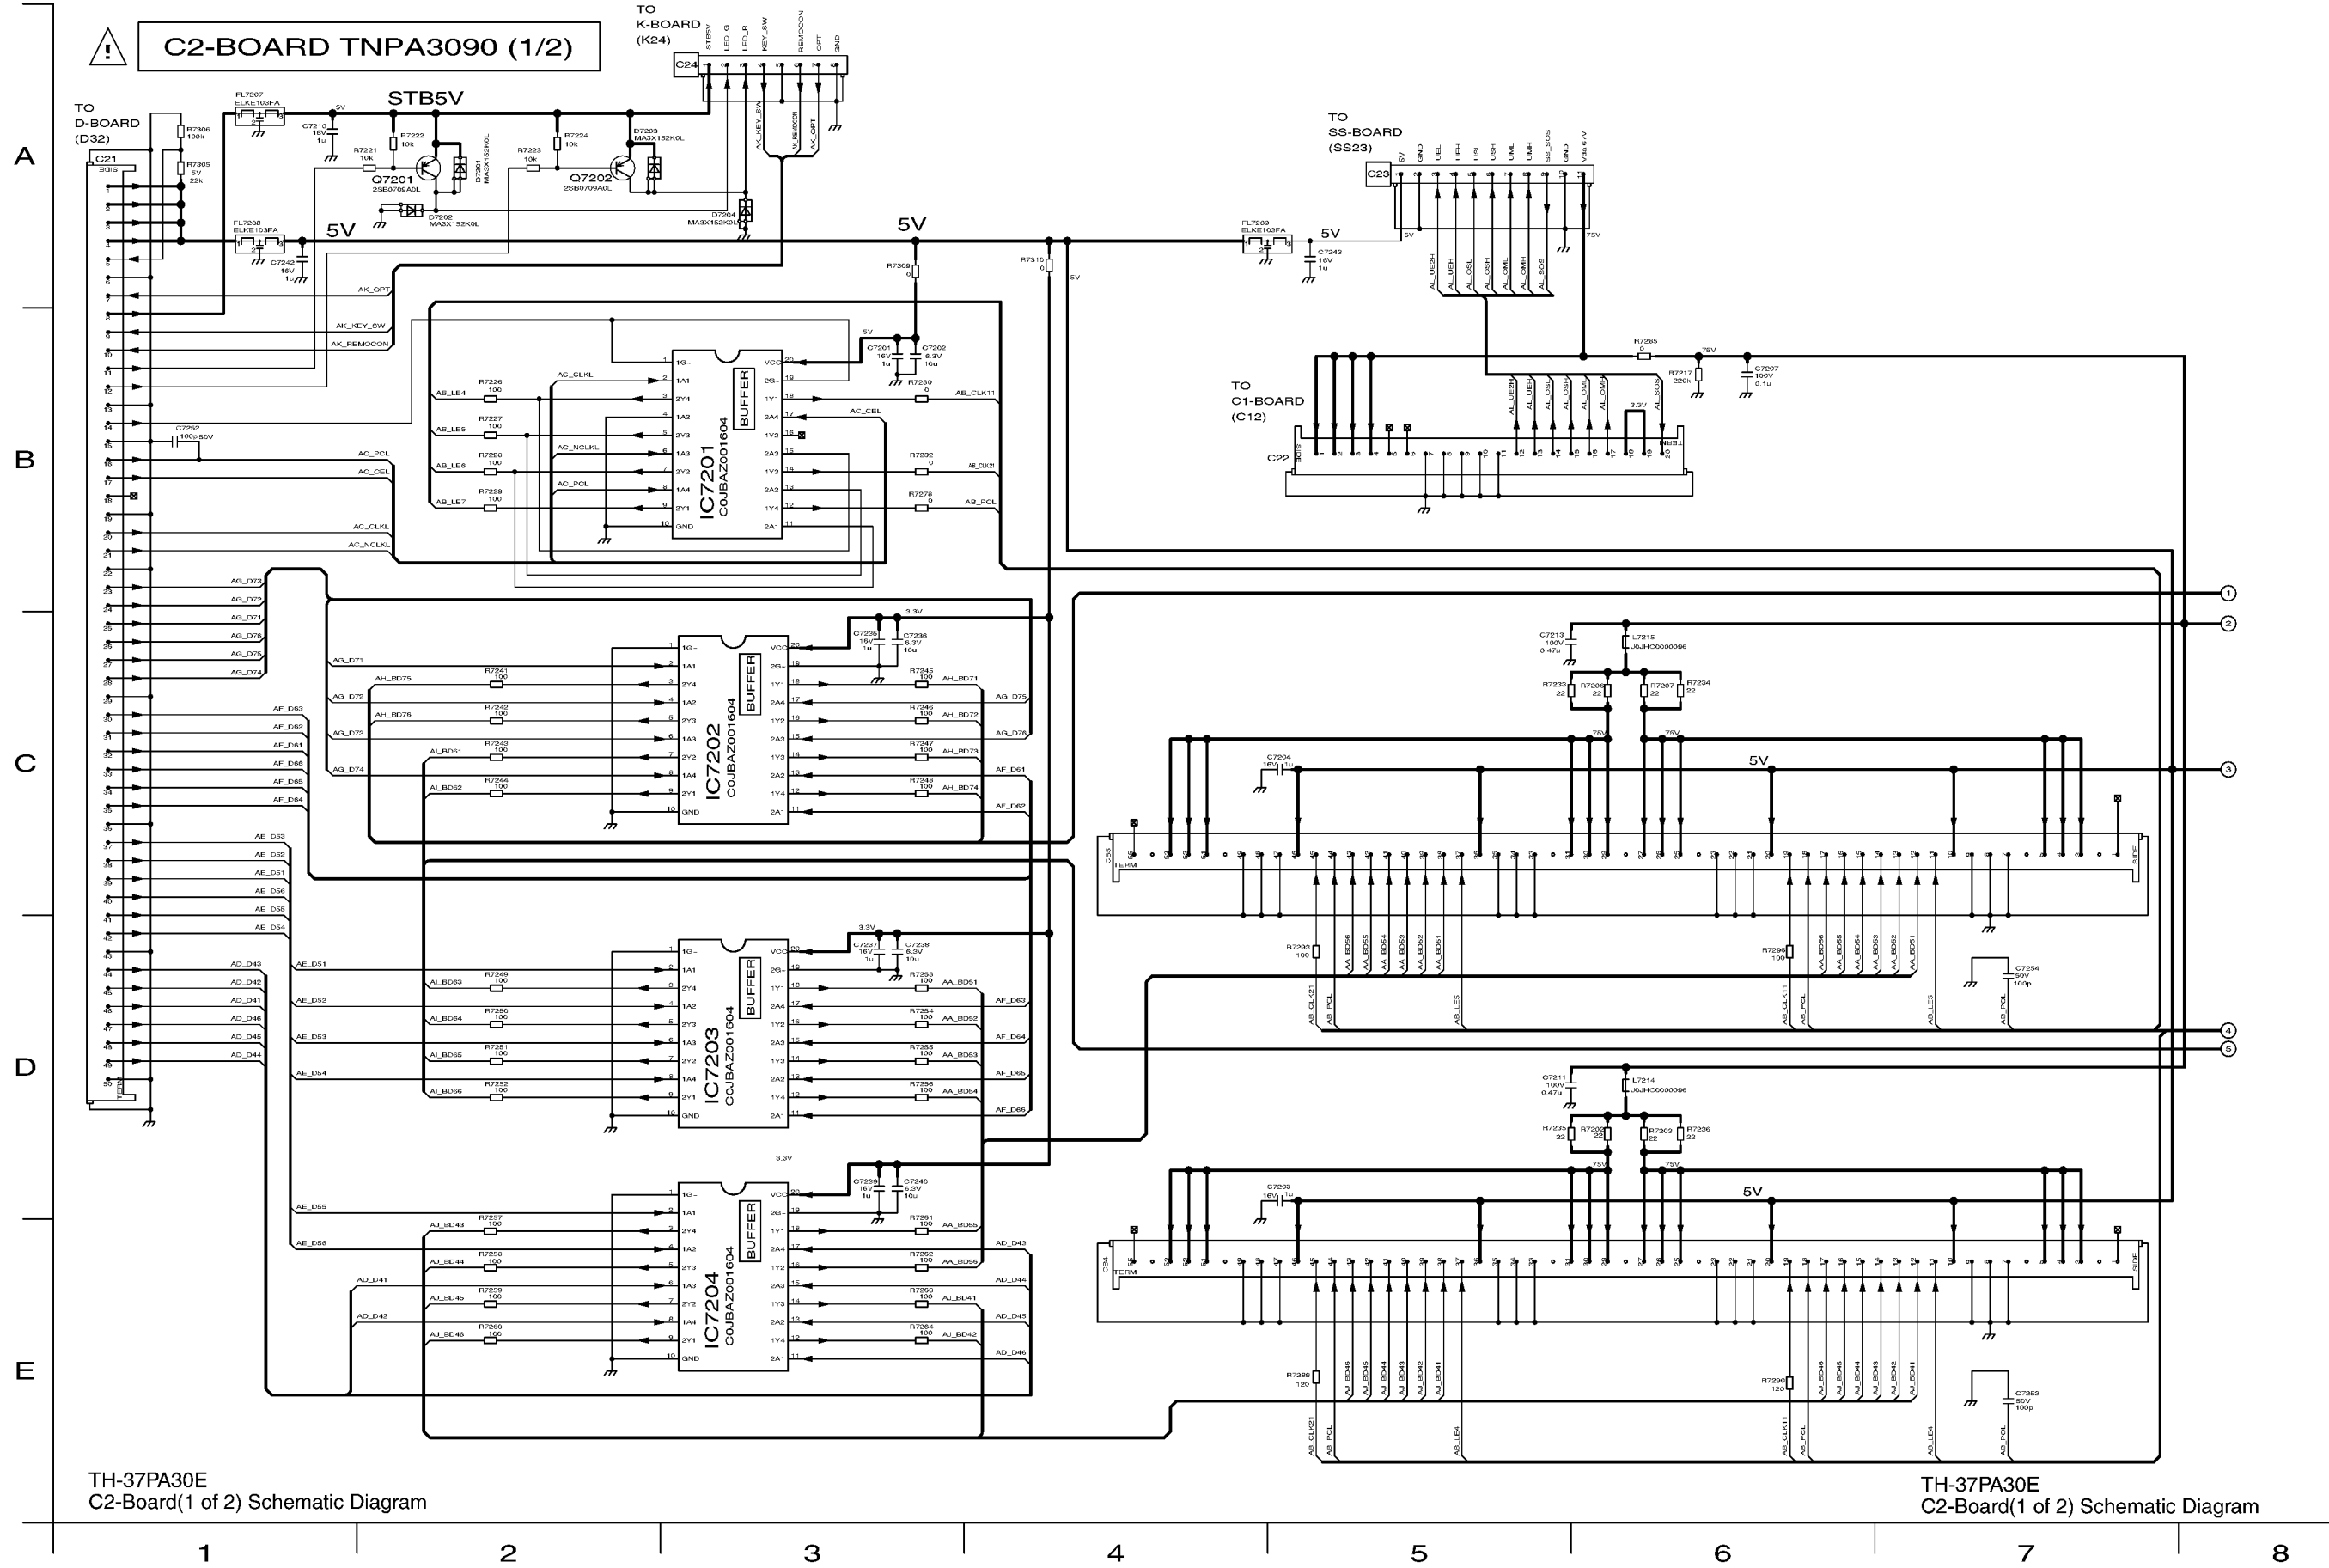


C2-BOARD TNPA3090 (2/2)




TH-37PA30E
C2-Board(2 of 2) Schematic Diagram


15.42. C2-Board Schematic Diagram (TH-42PA30E)

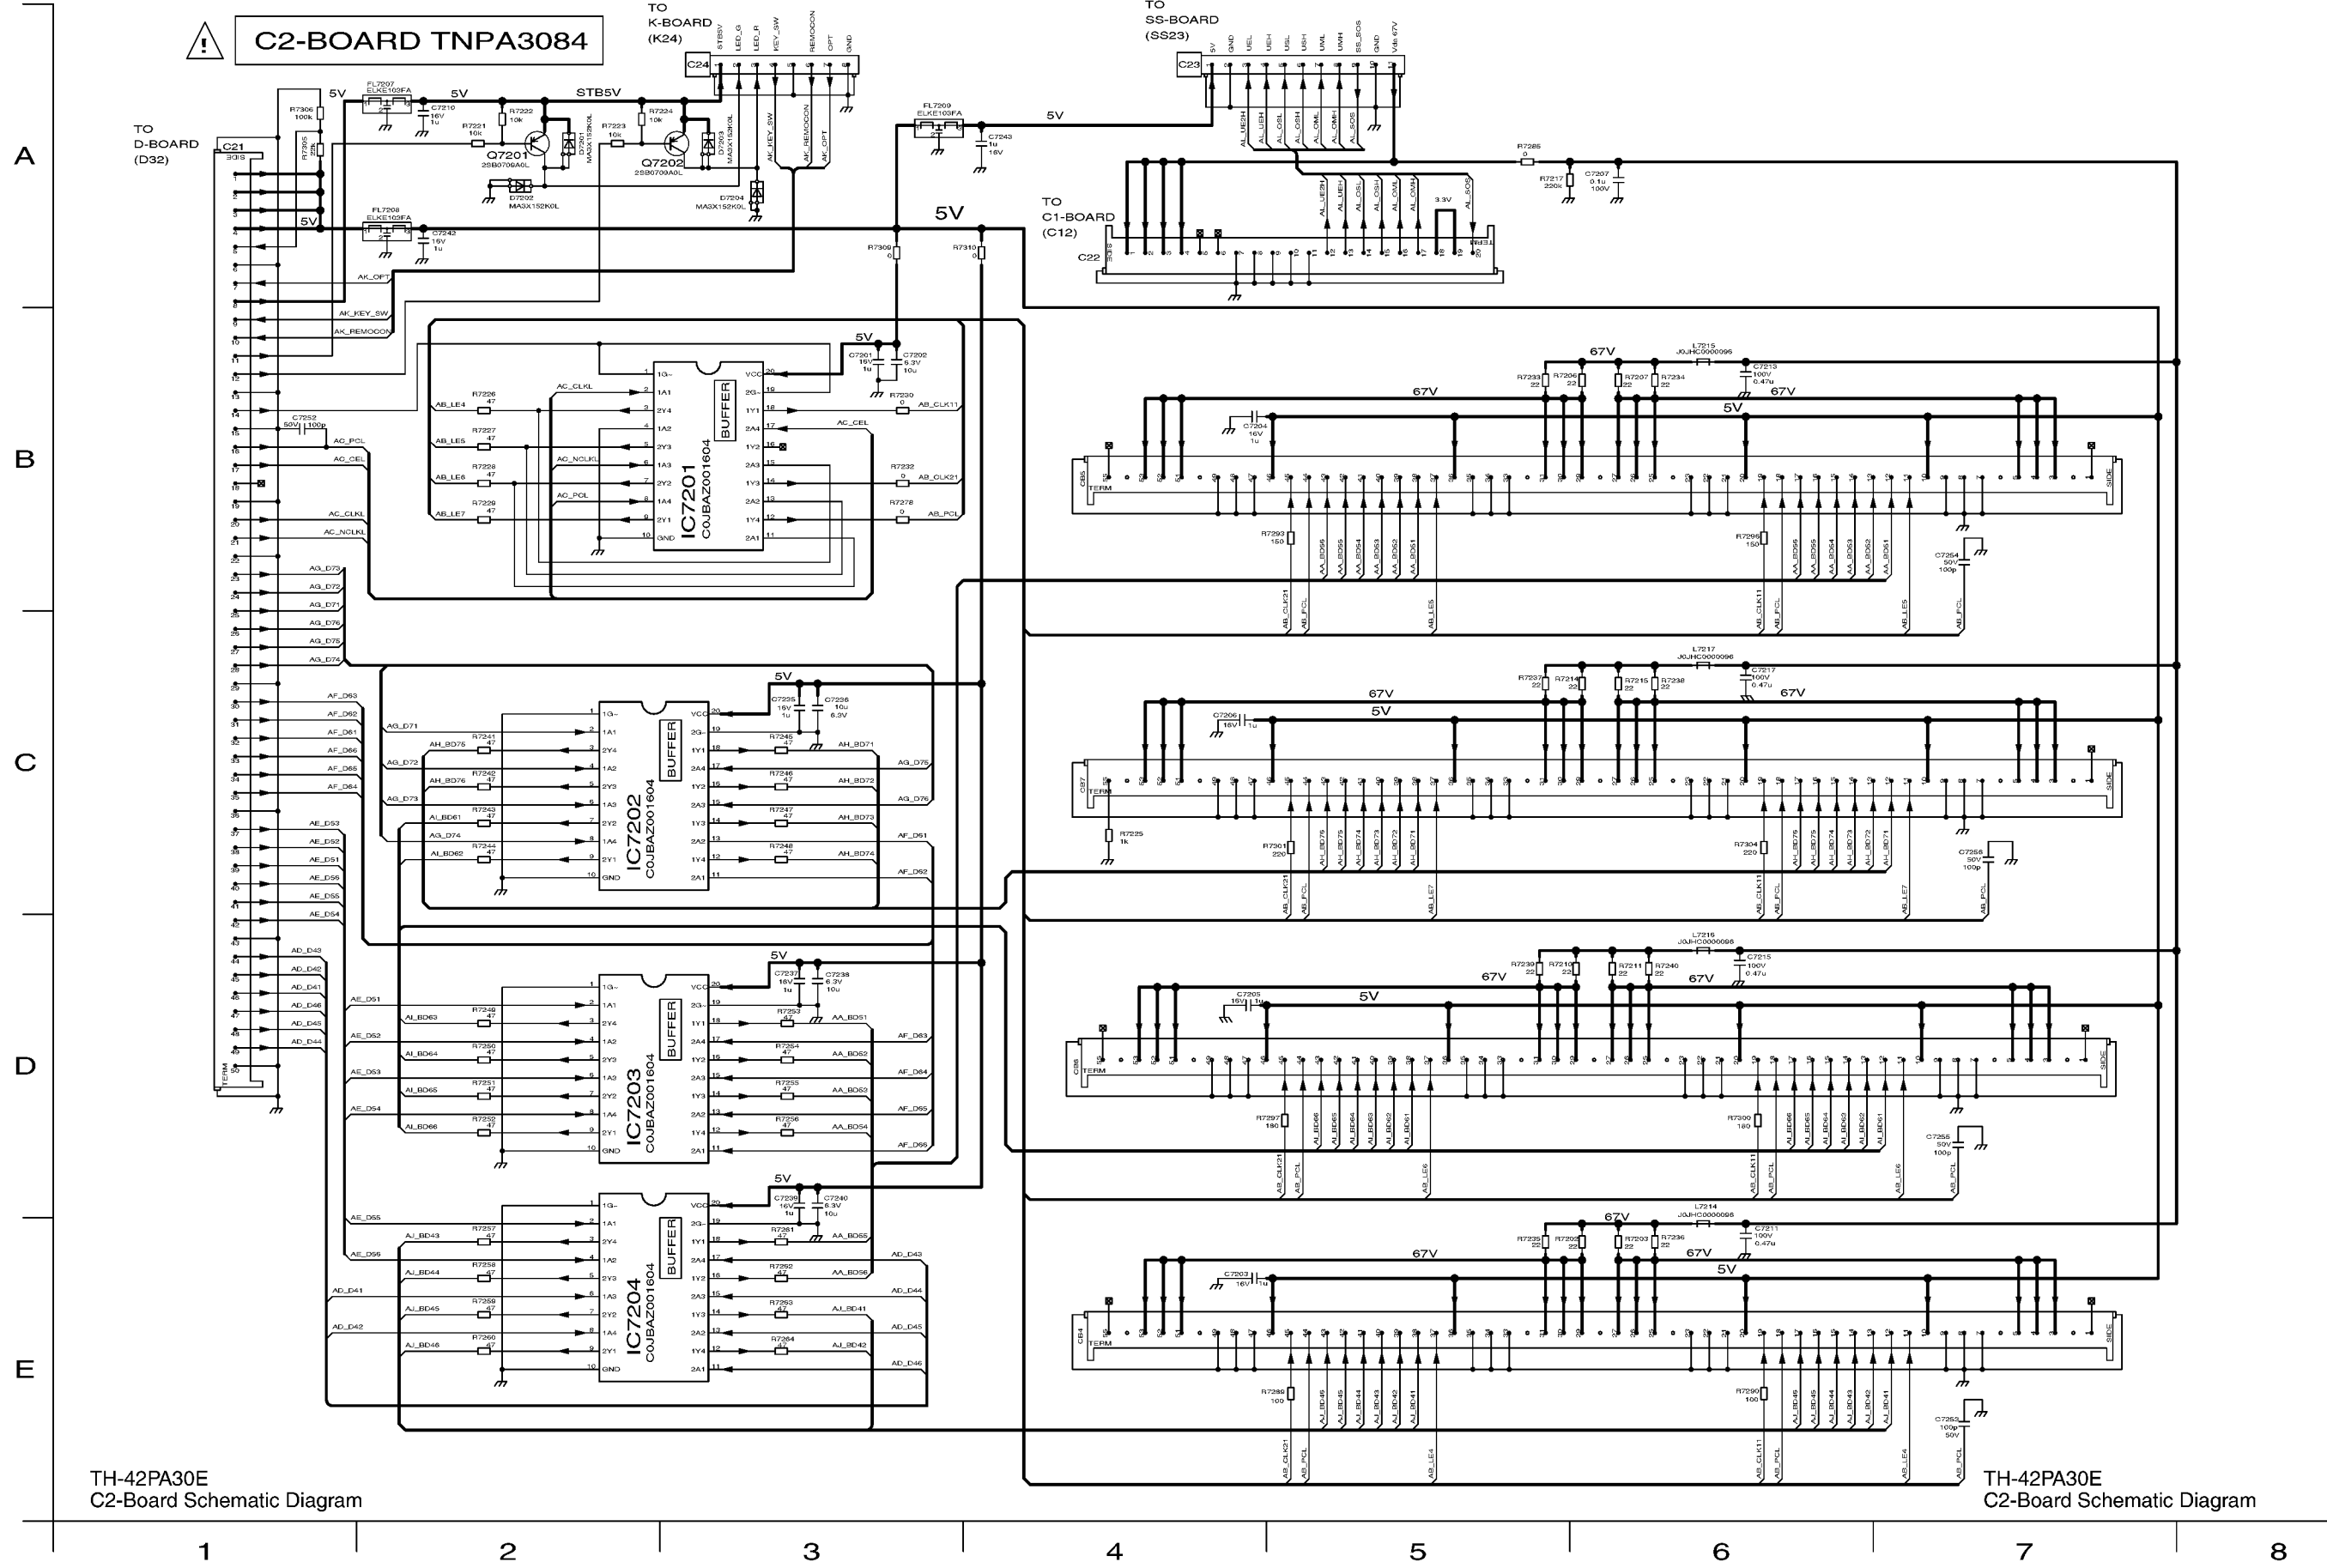


15.43. G-Board Schematic Diagram

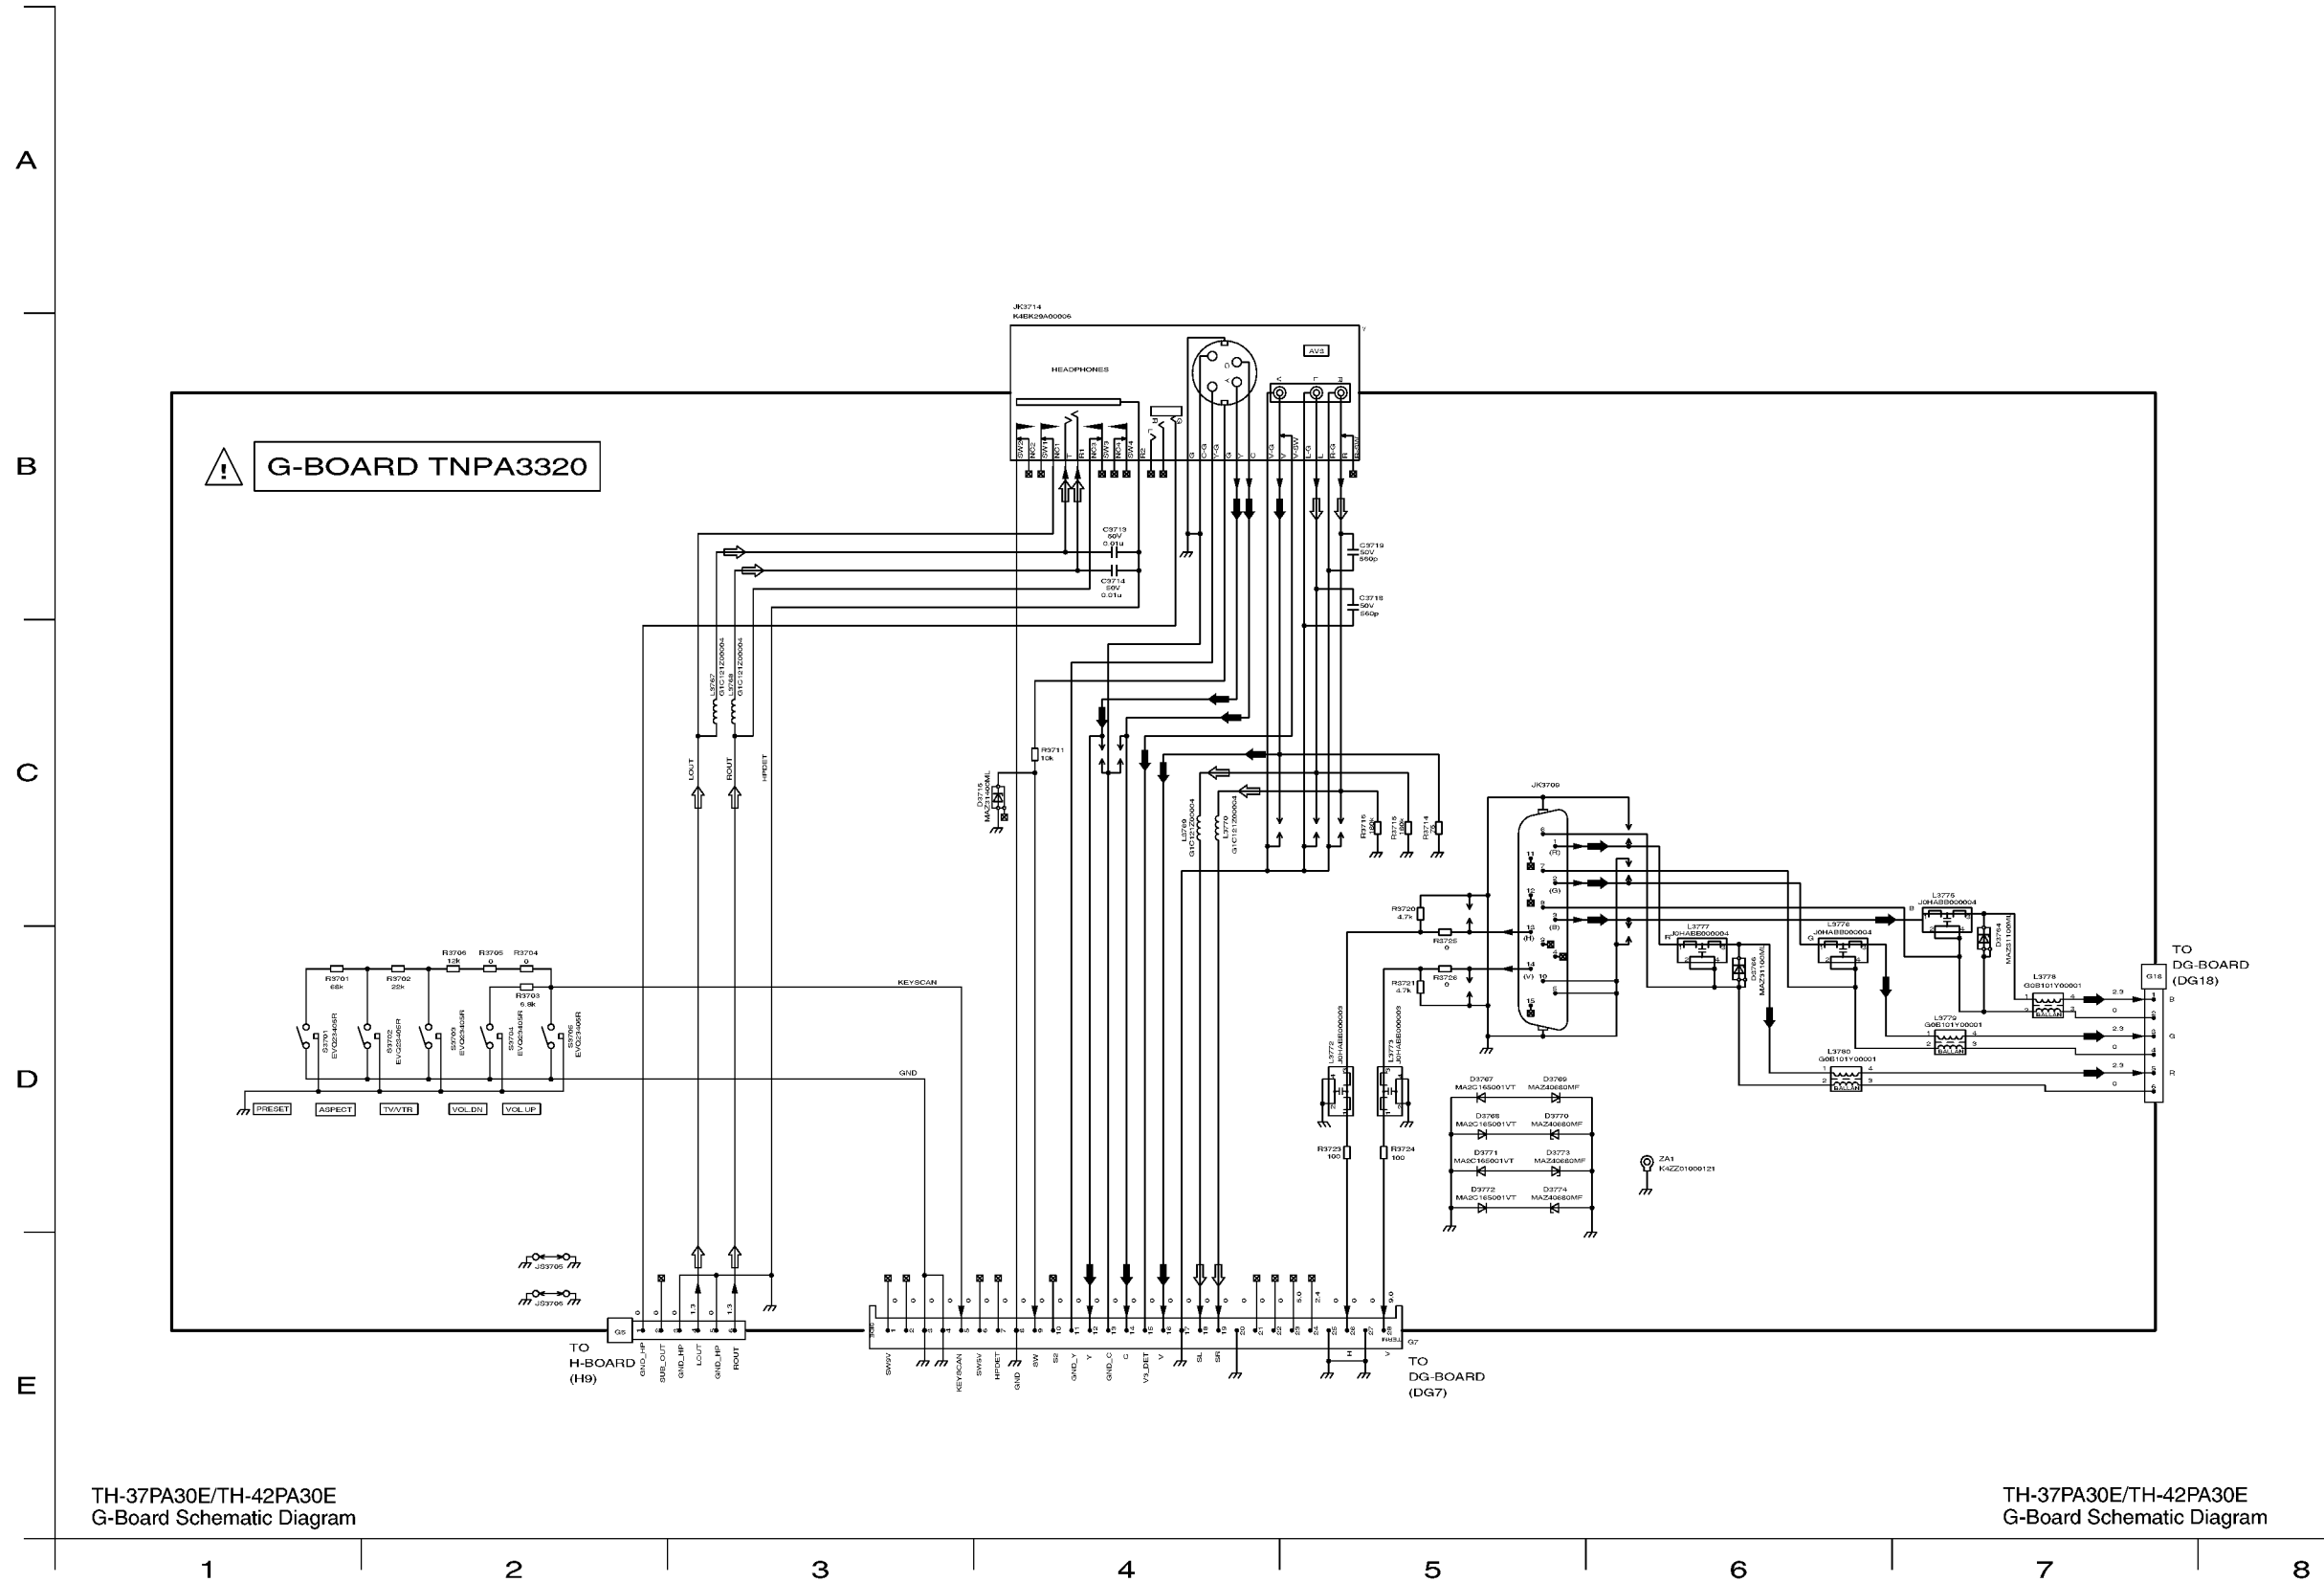TH-37PA30E/TH-42PA30E
G-Board Schematic DiagramTH-37PA30E/TH-42PA30E
G-Board Schematic Diagram

15.45. SC-Board Block Diagram

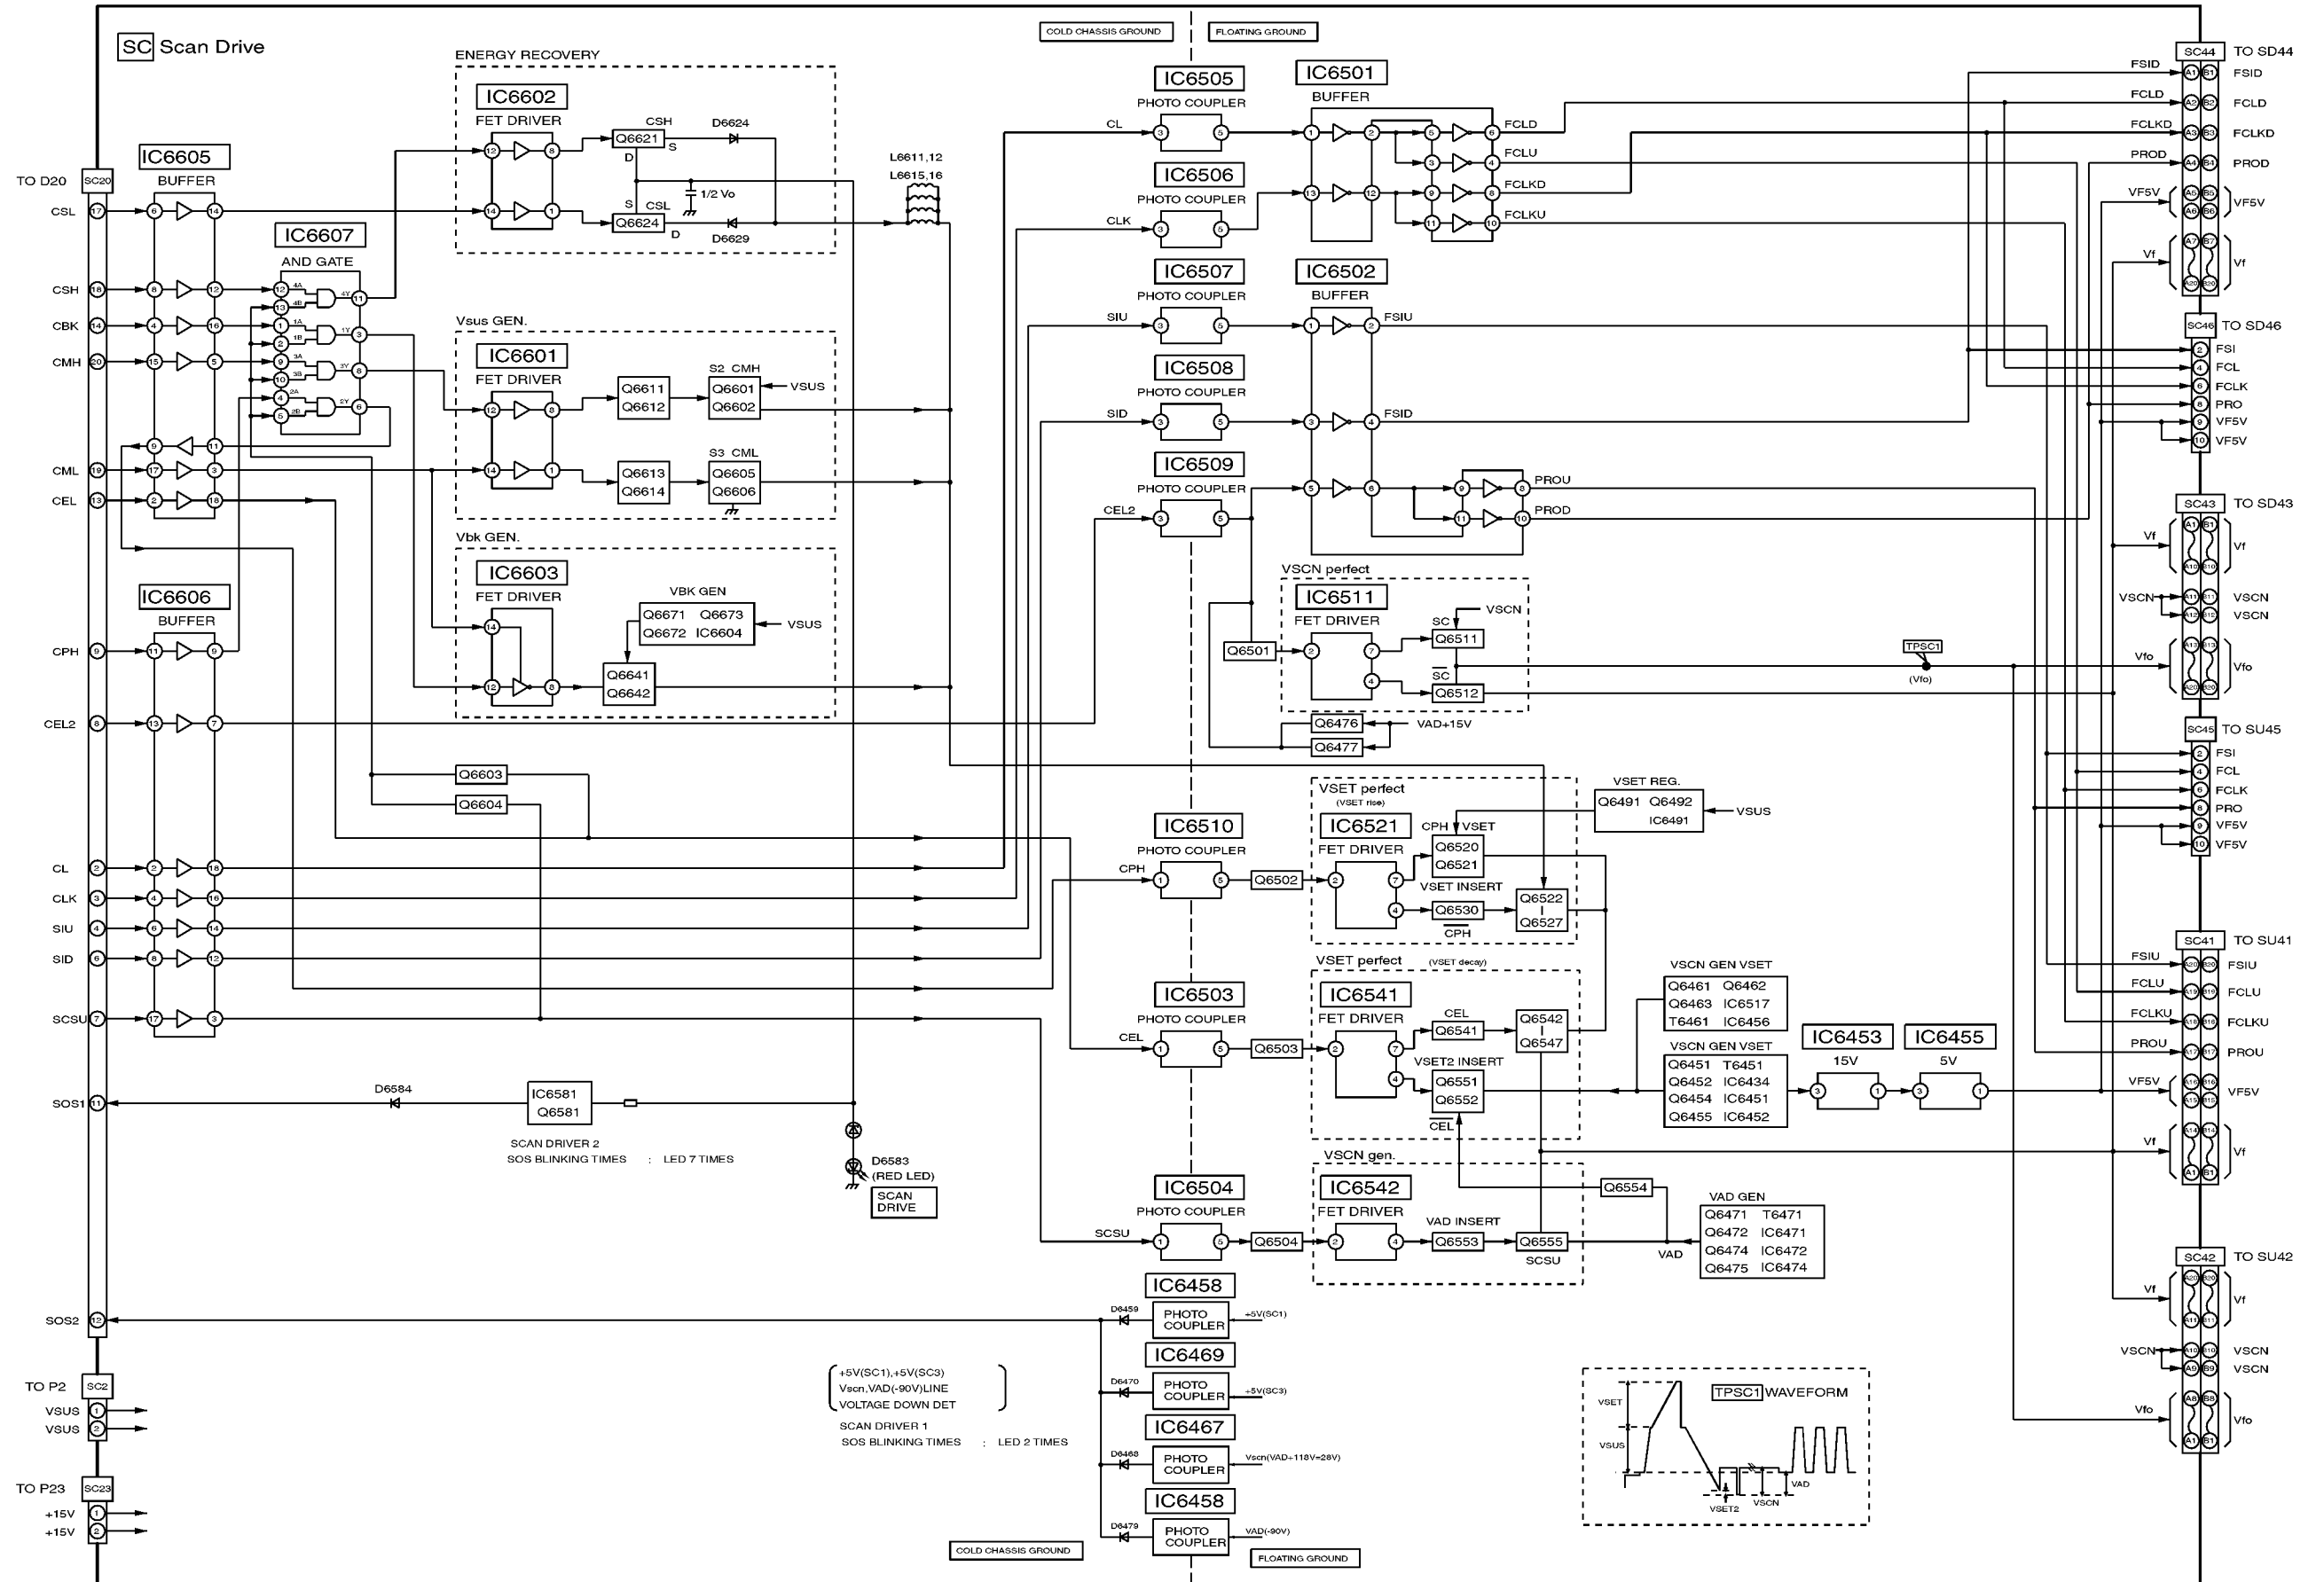
TH-37PA30E/TH-42PA30E
SC-Board Block DiagramTH-37PA30E/TH-42PA30E
SC-Board Block Diagram

15.46. SC-Board (1 of 3) Schematic Diagram

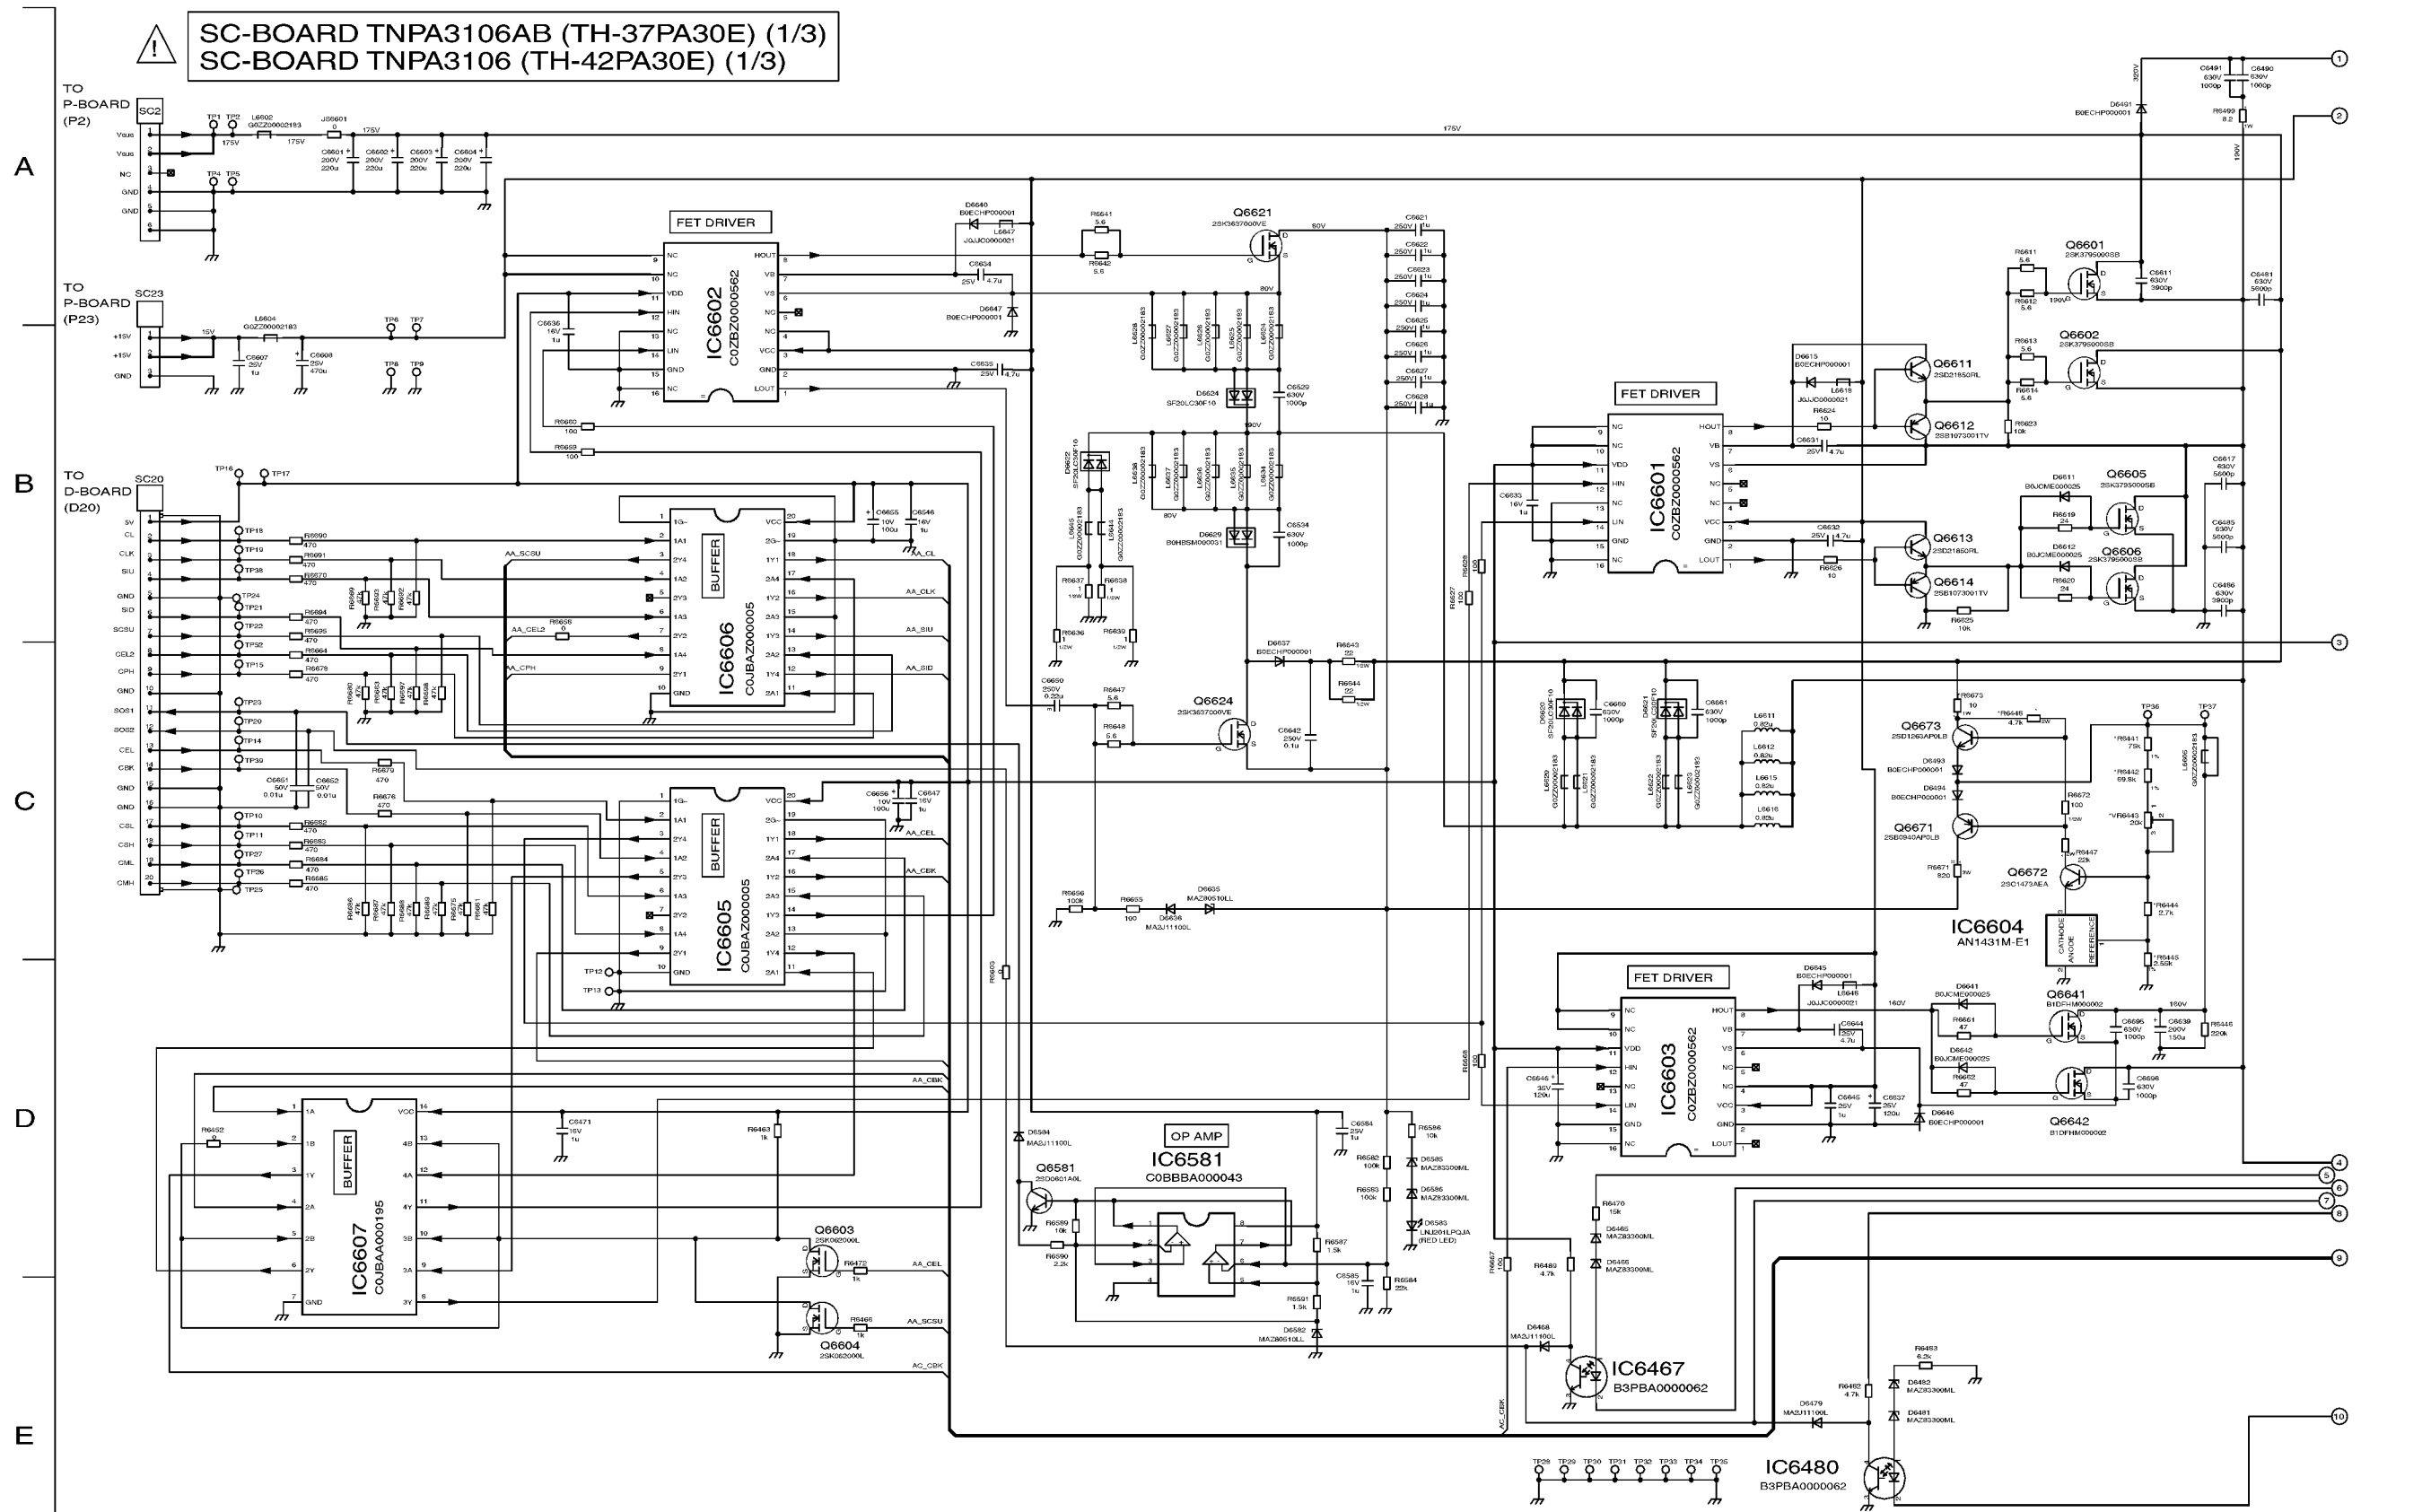


TH-37PA30E/TH-42PA30E
SC-Board (1 of 3) Schematic Diagram


TH-37PA30E/TH-42PA30E
SC-Board (1 of 3) Schematic Diagram



15.48. SC-Board (3 of 3) Schematic Diagram

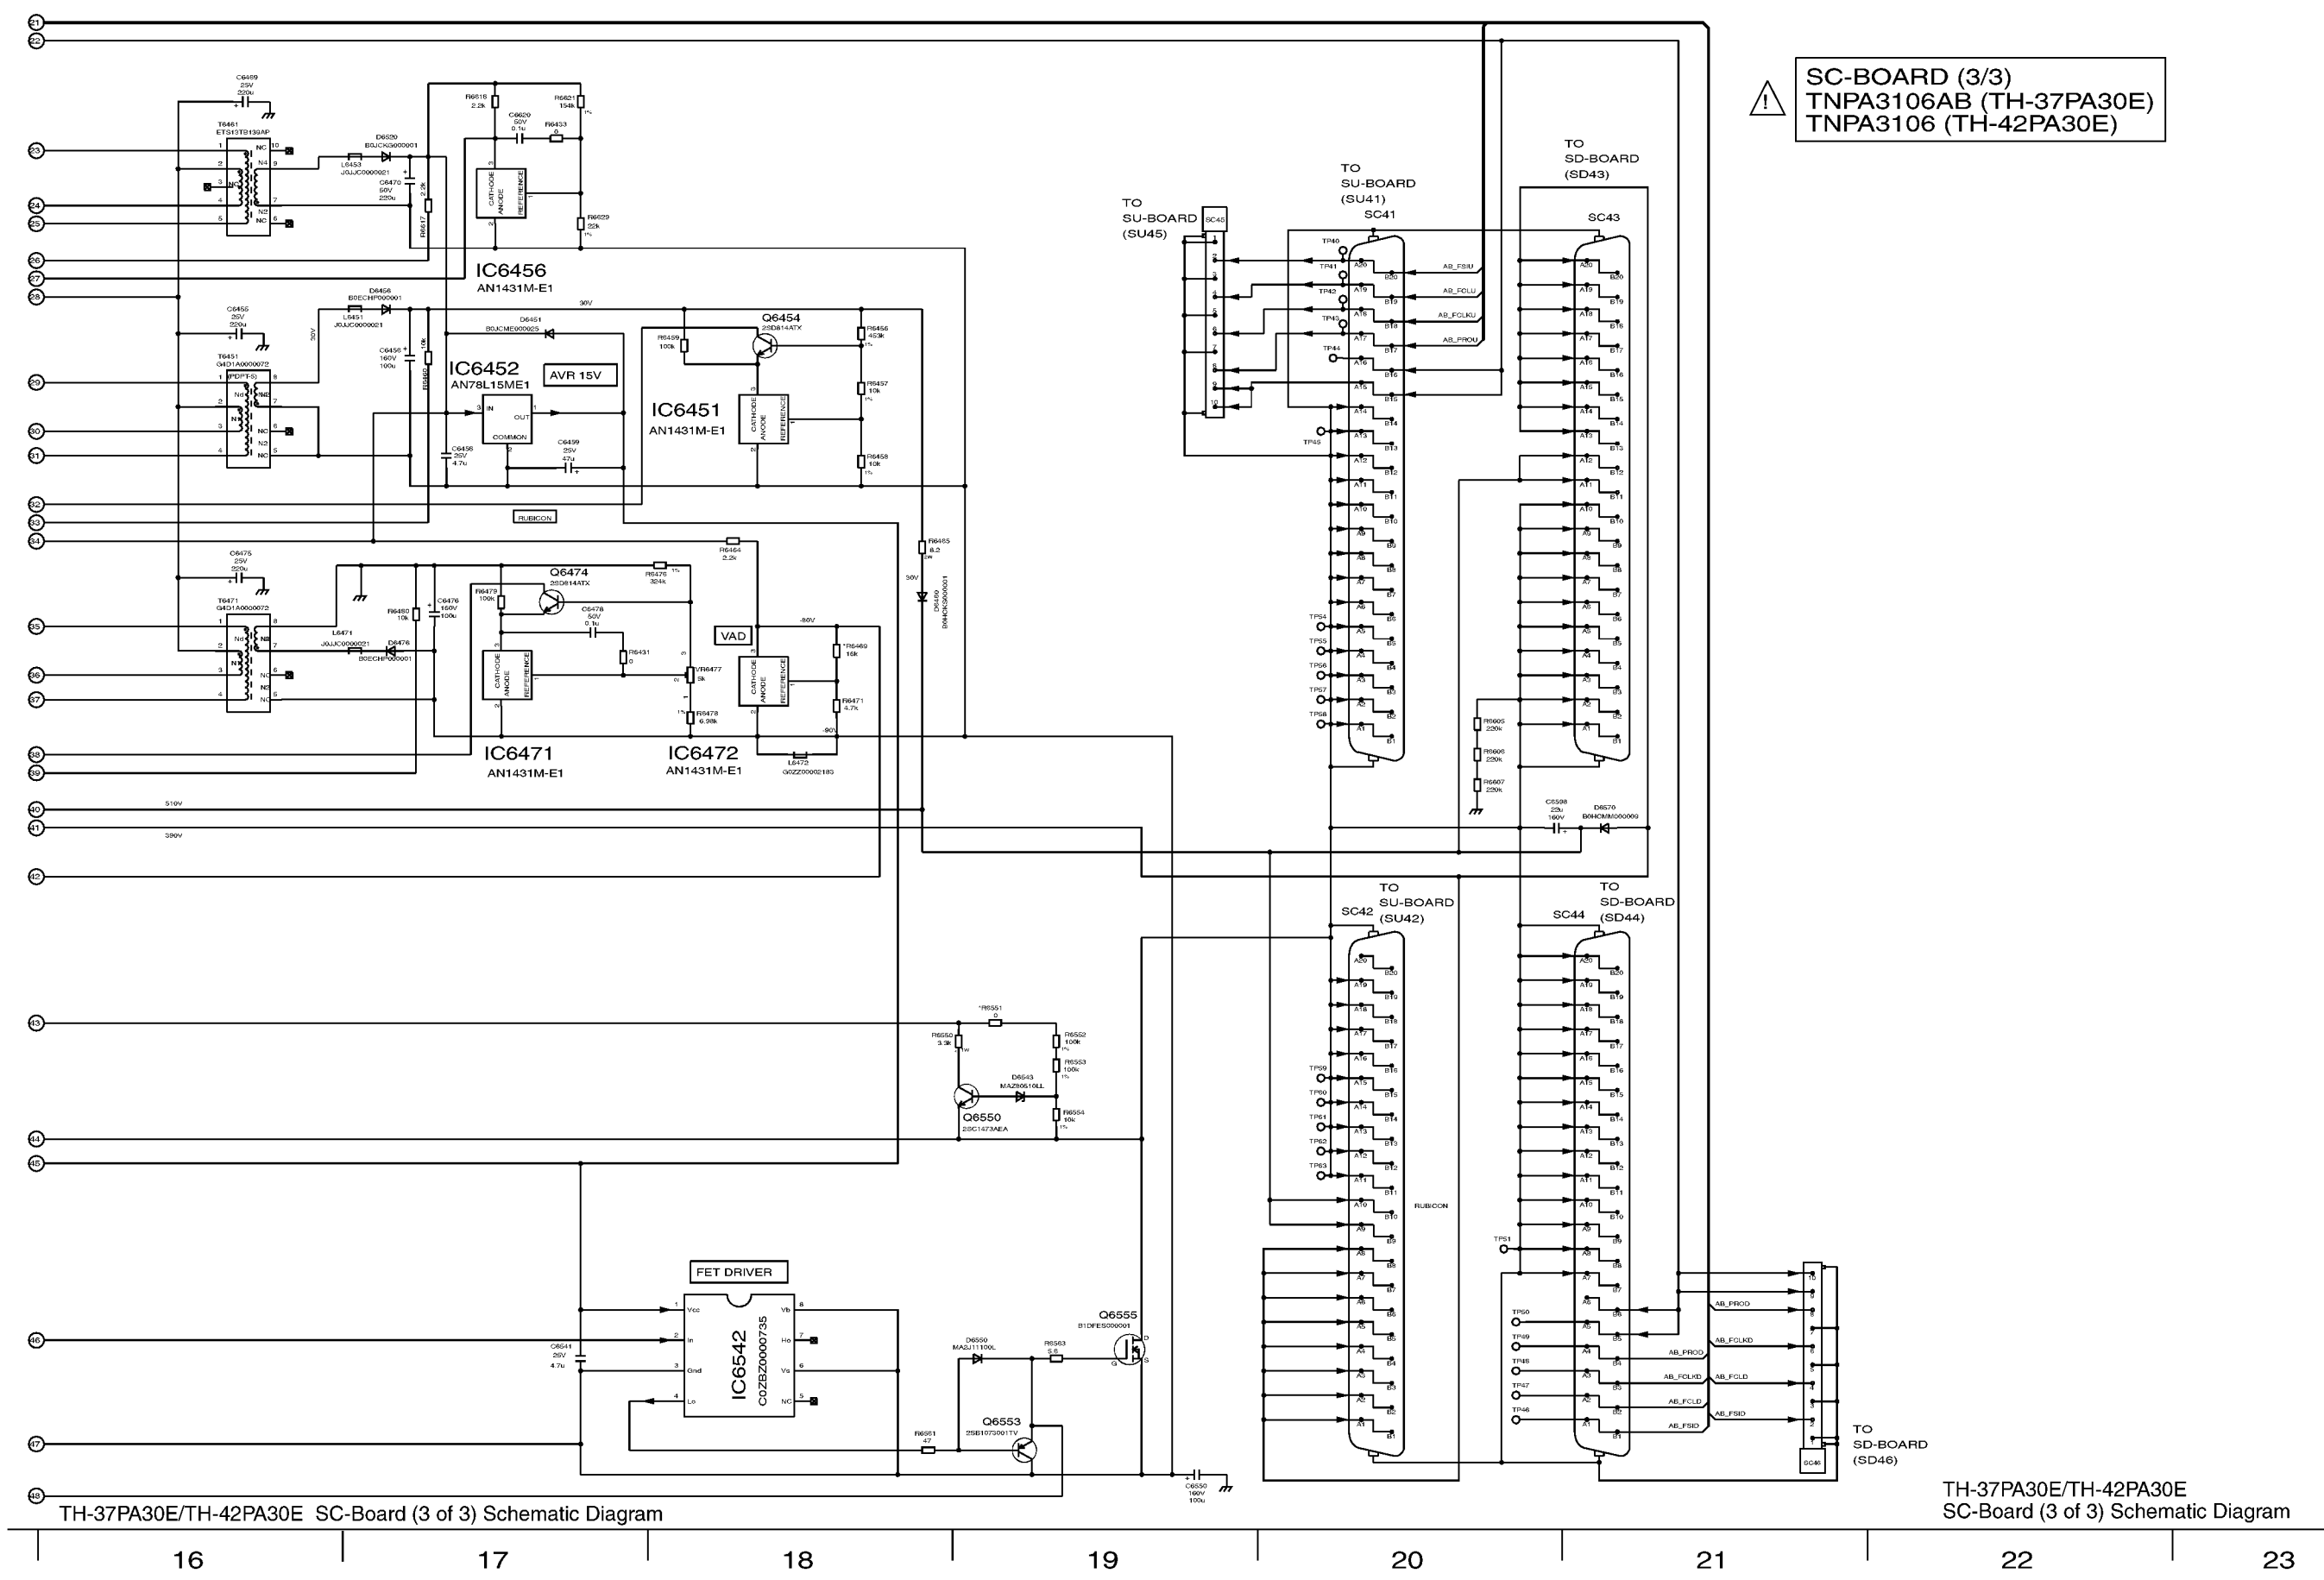


15.49. SU-Board Block Diagram

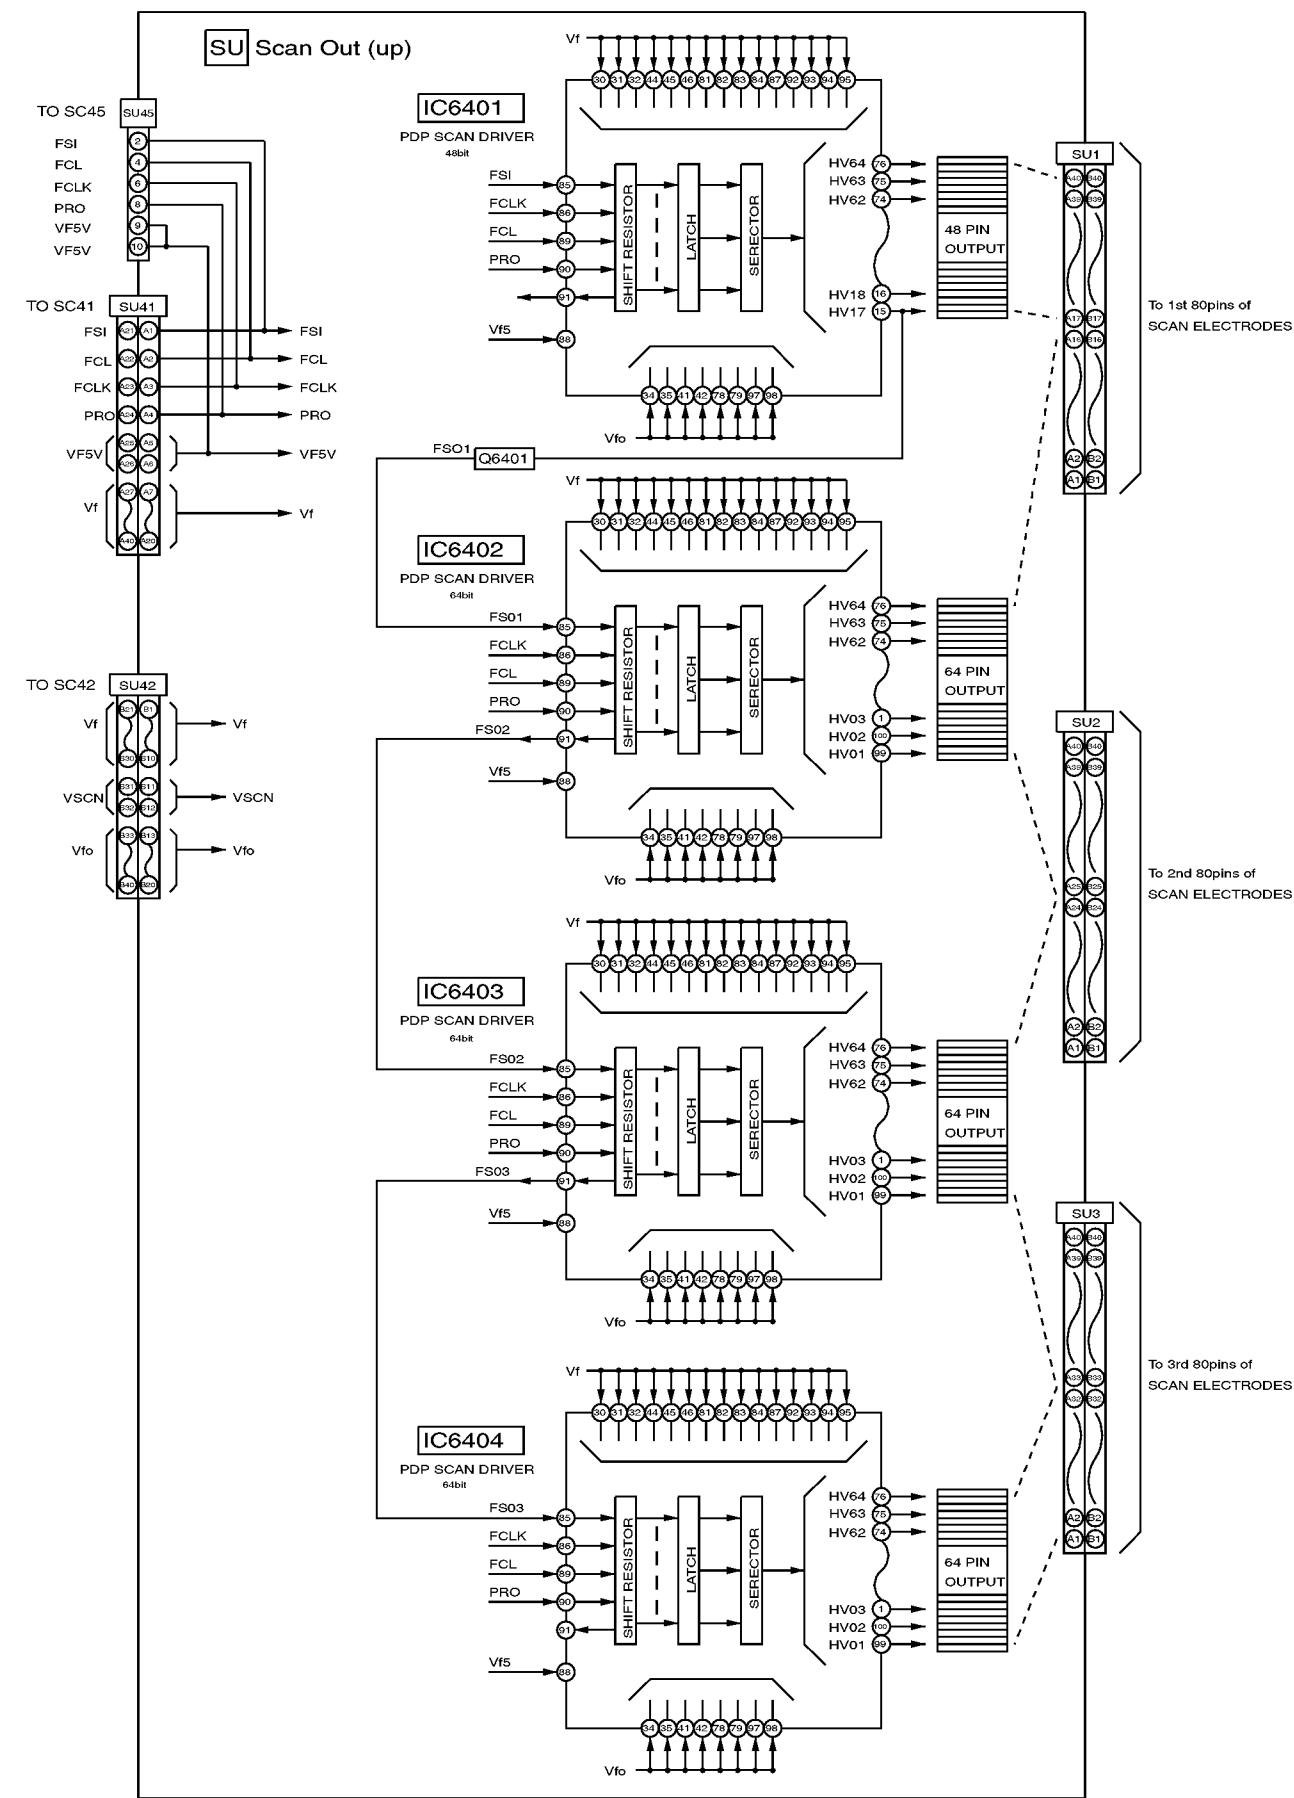

TH-37PA30E/TH-42PA30E
SU-Board Block Diagram

TH-37PA30E/TH-42PA30E
SU-Board Block Diagram


15.50. SU-Board Schematic Diagram (TH-37PA30E)

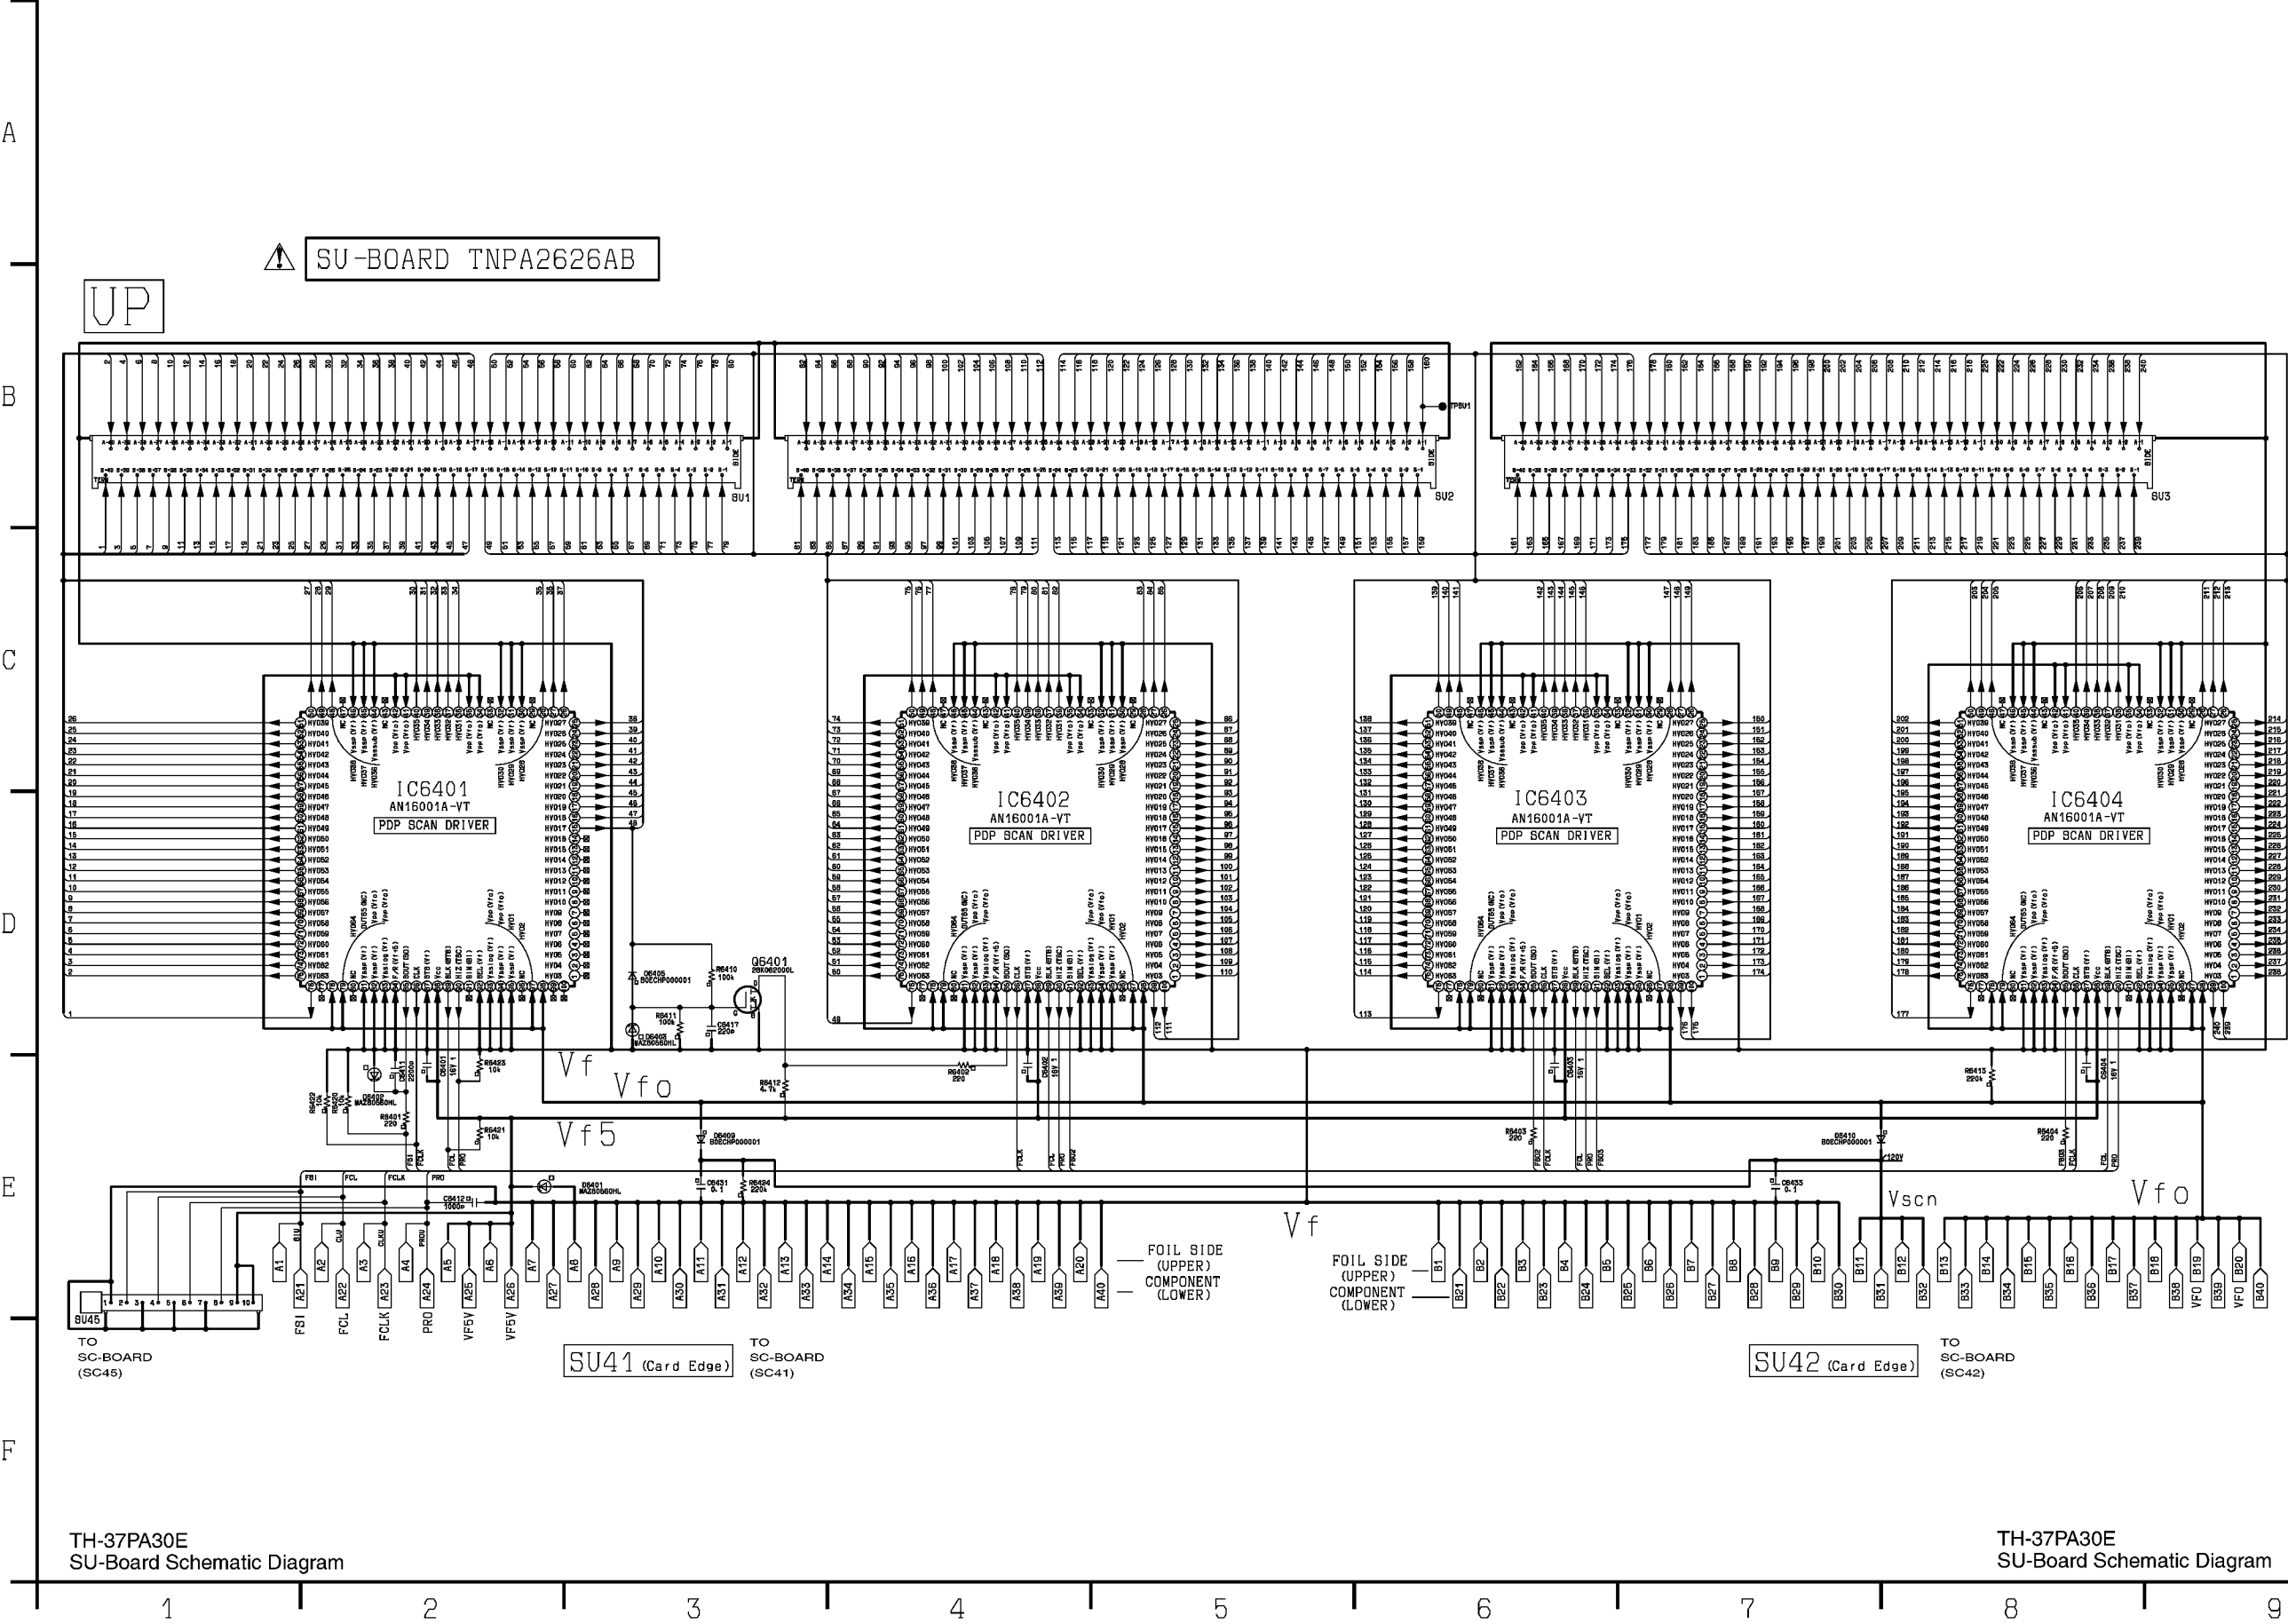


TH-37PA30E
SU-Board Schematic Diagram

TH-37PA30E
SU-Board Schematic Diagram

15.51. SU-Board Schematic Diagram (TH-42PA30E)

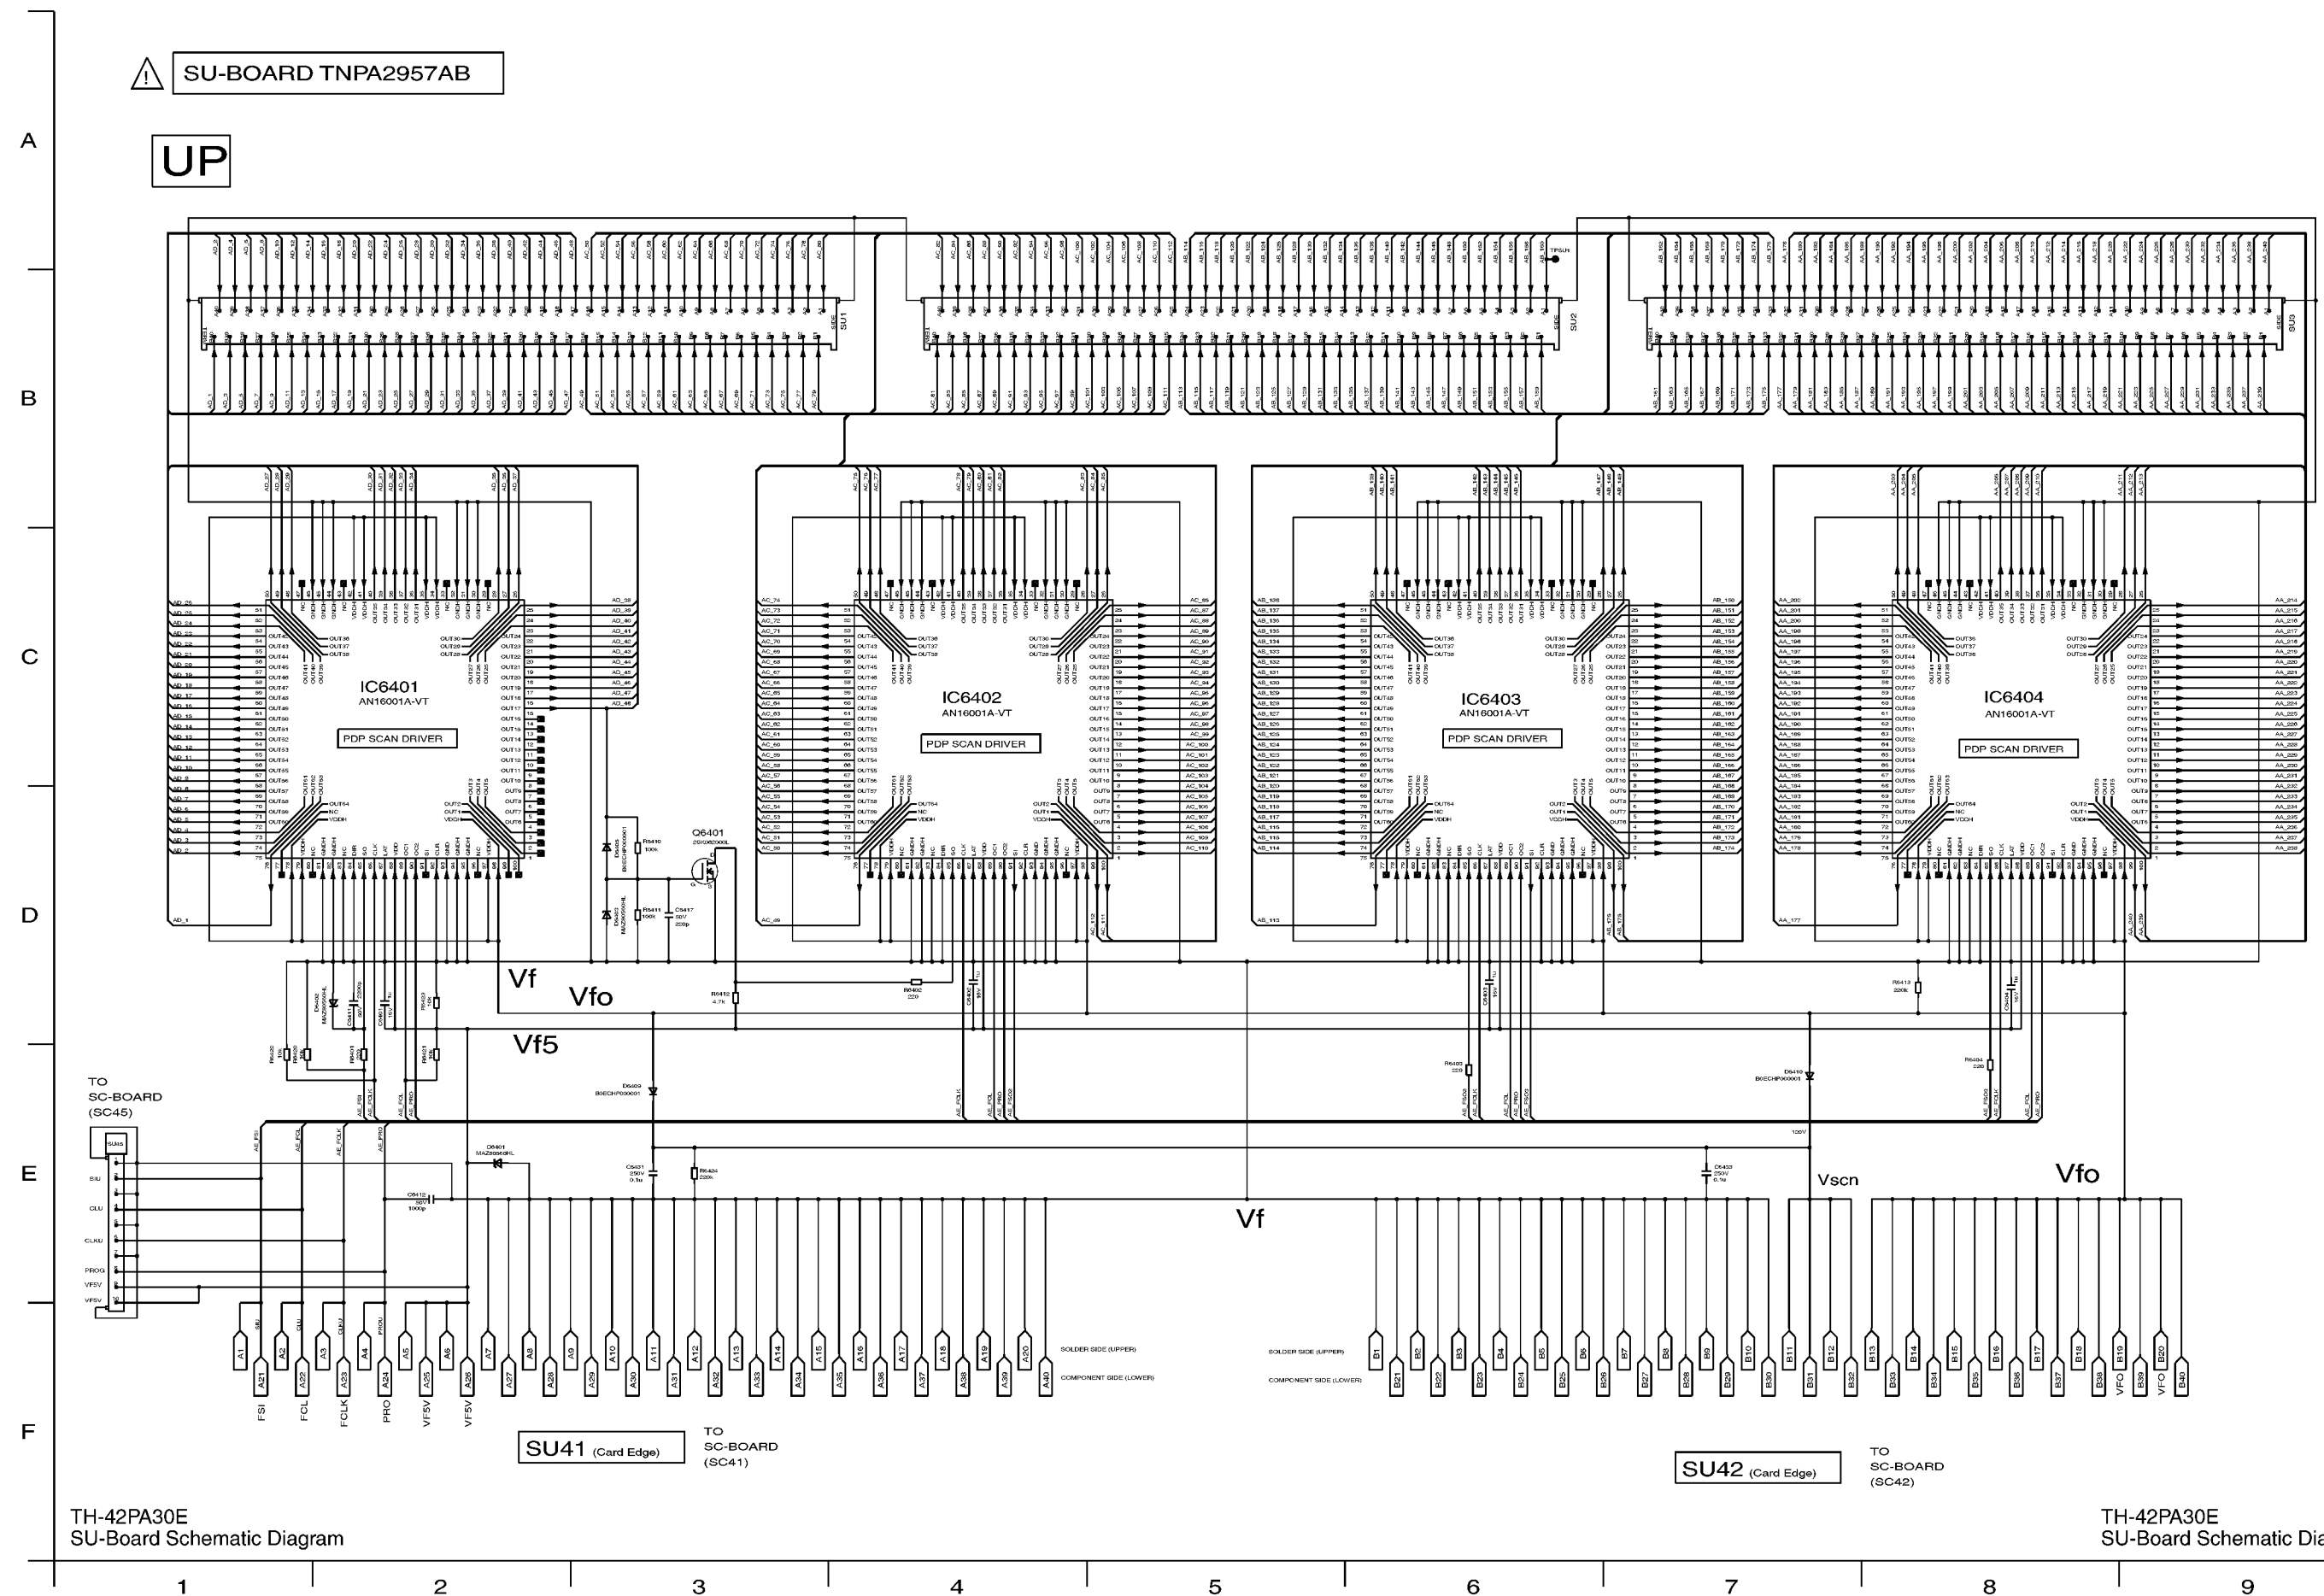


15.52. SD-Board Block Diagram

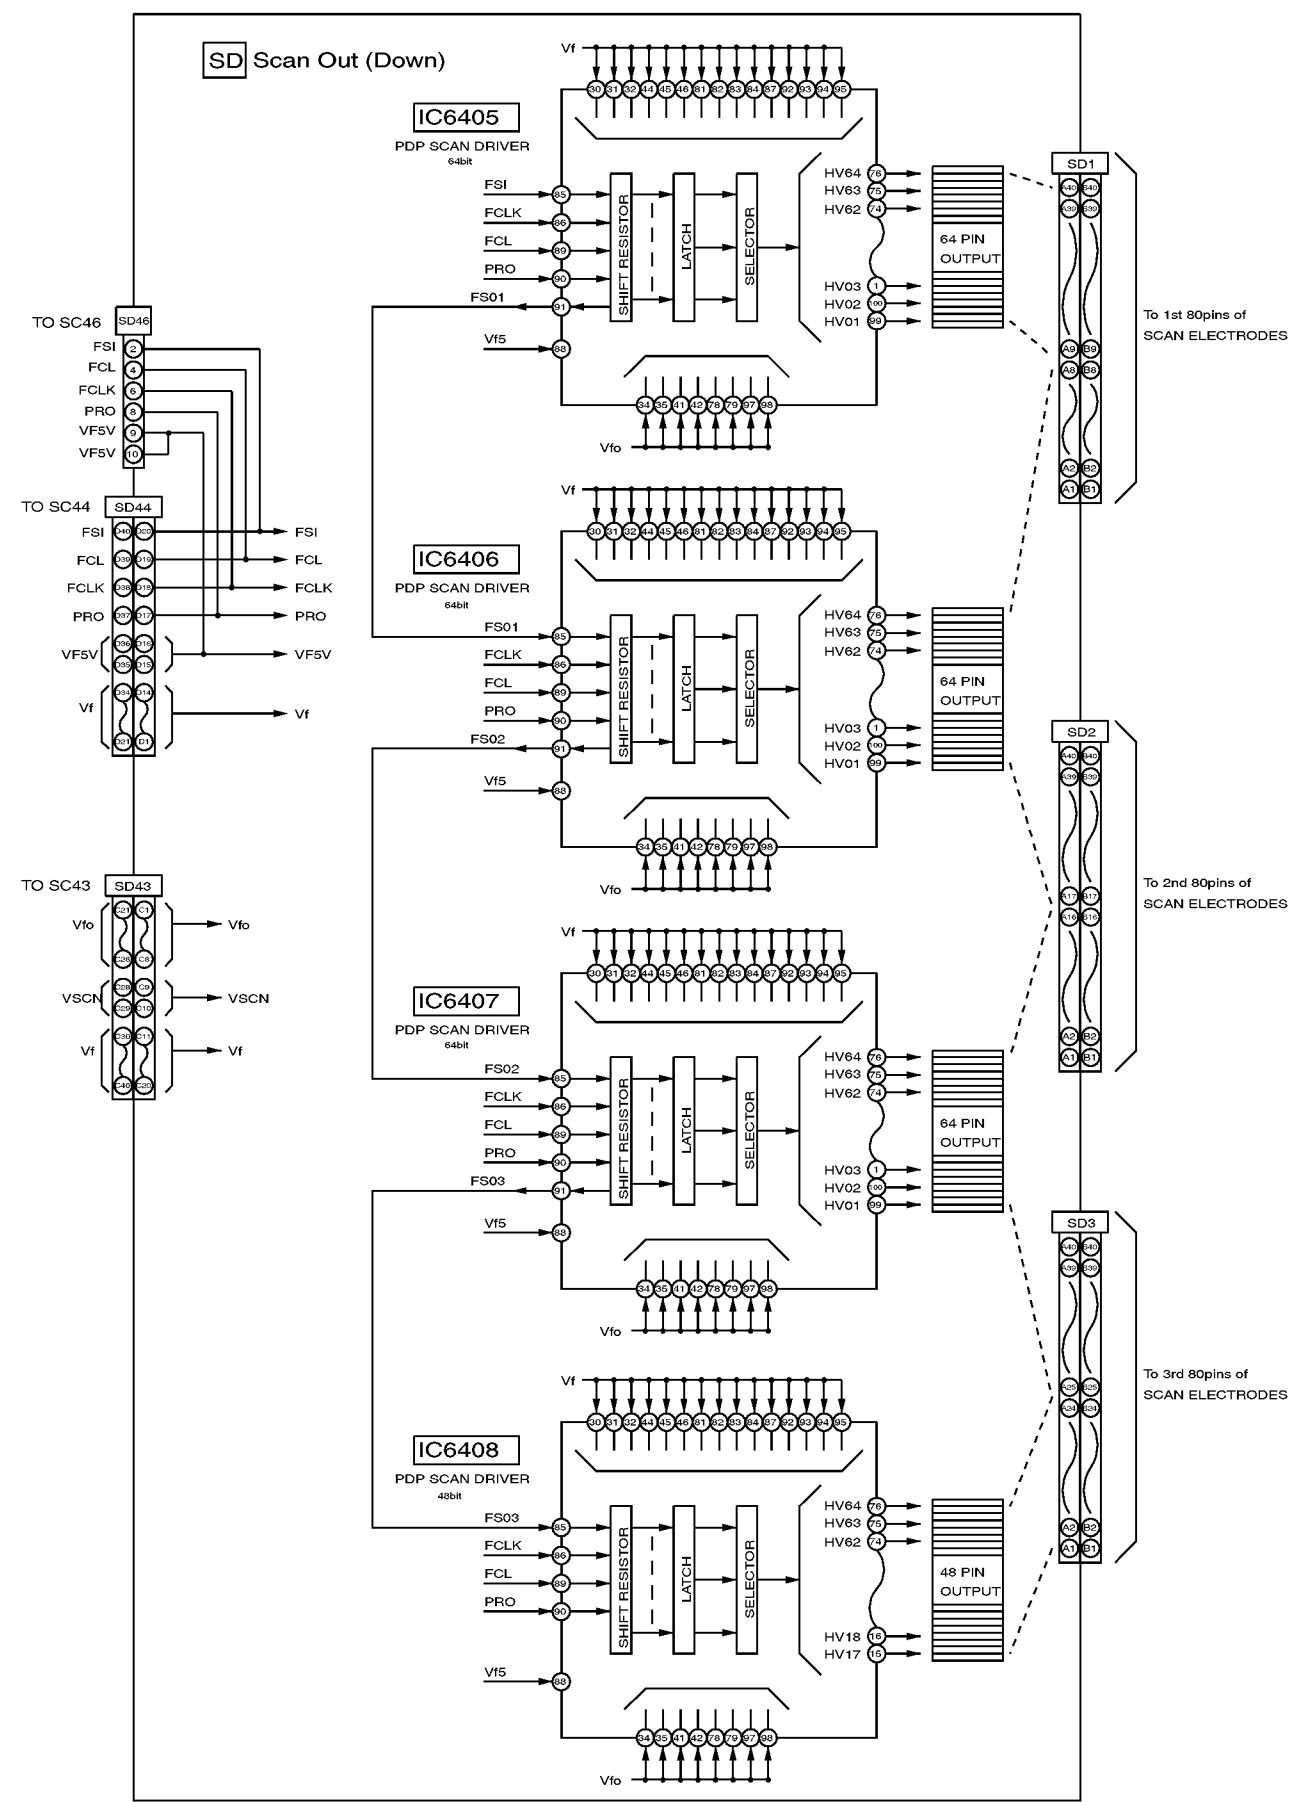


TH-37PA30E/TH-42PA30E SD-Board Block Diagram

TH-37PA30E/TH-42PA30E
SD-Board Block Diagram


15.53. SD-Board Schematic Diagram (TH-37PA30E)

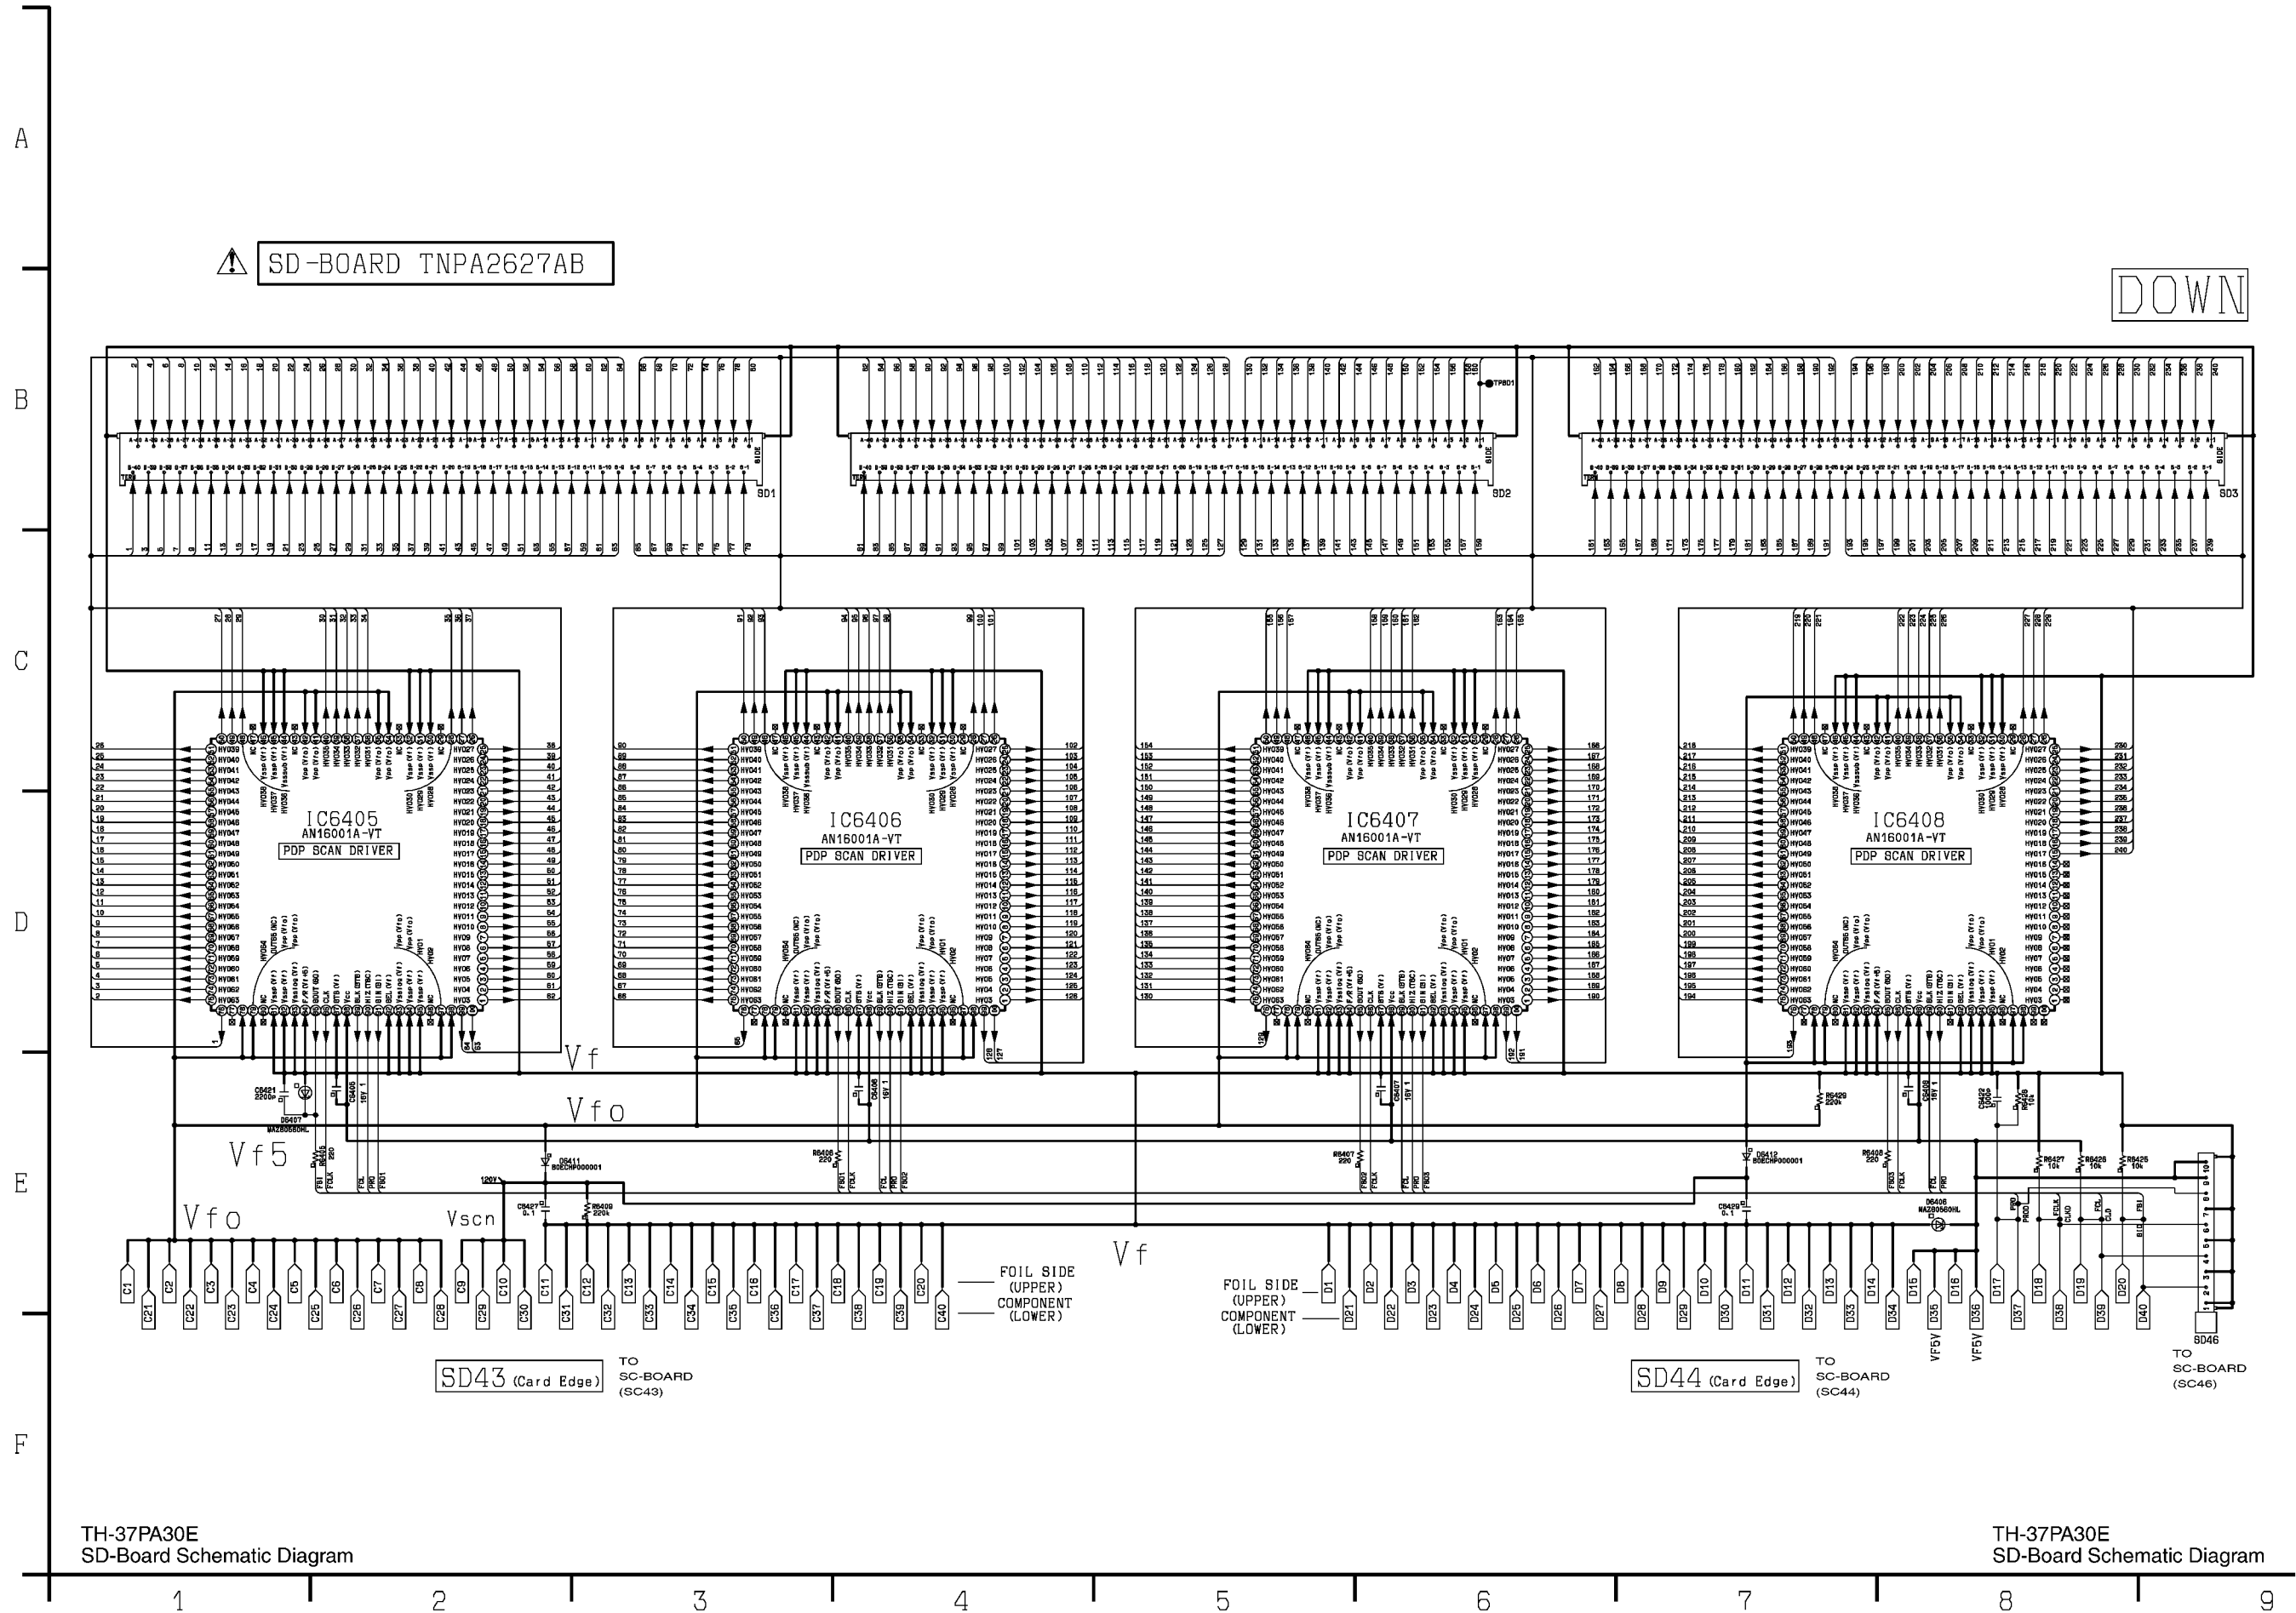


15.54. SD-Board Schematic Diagram (TH-42PA30E)

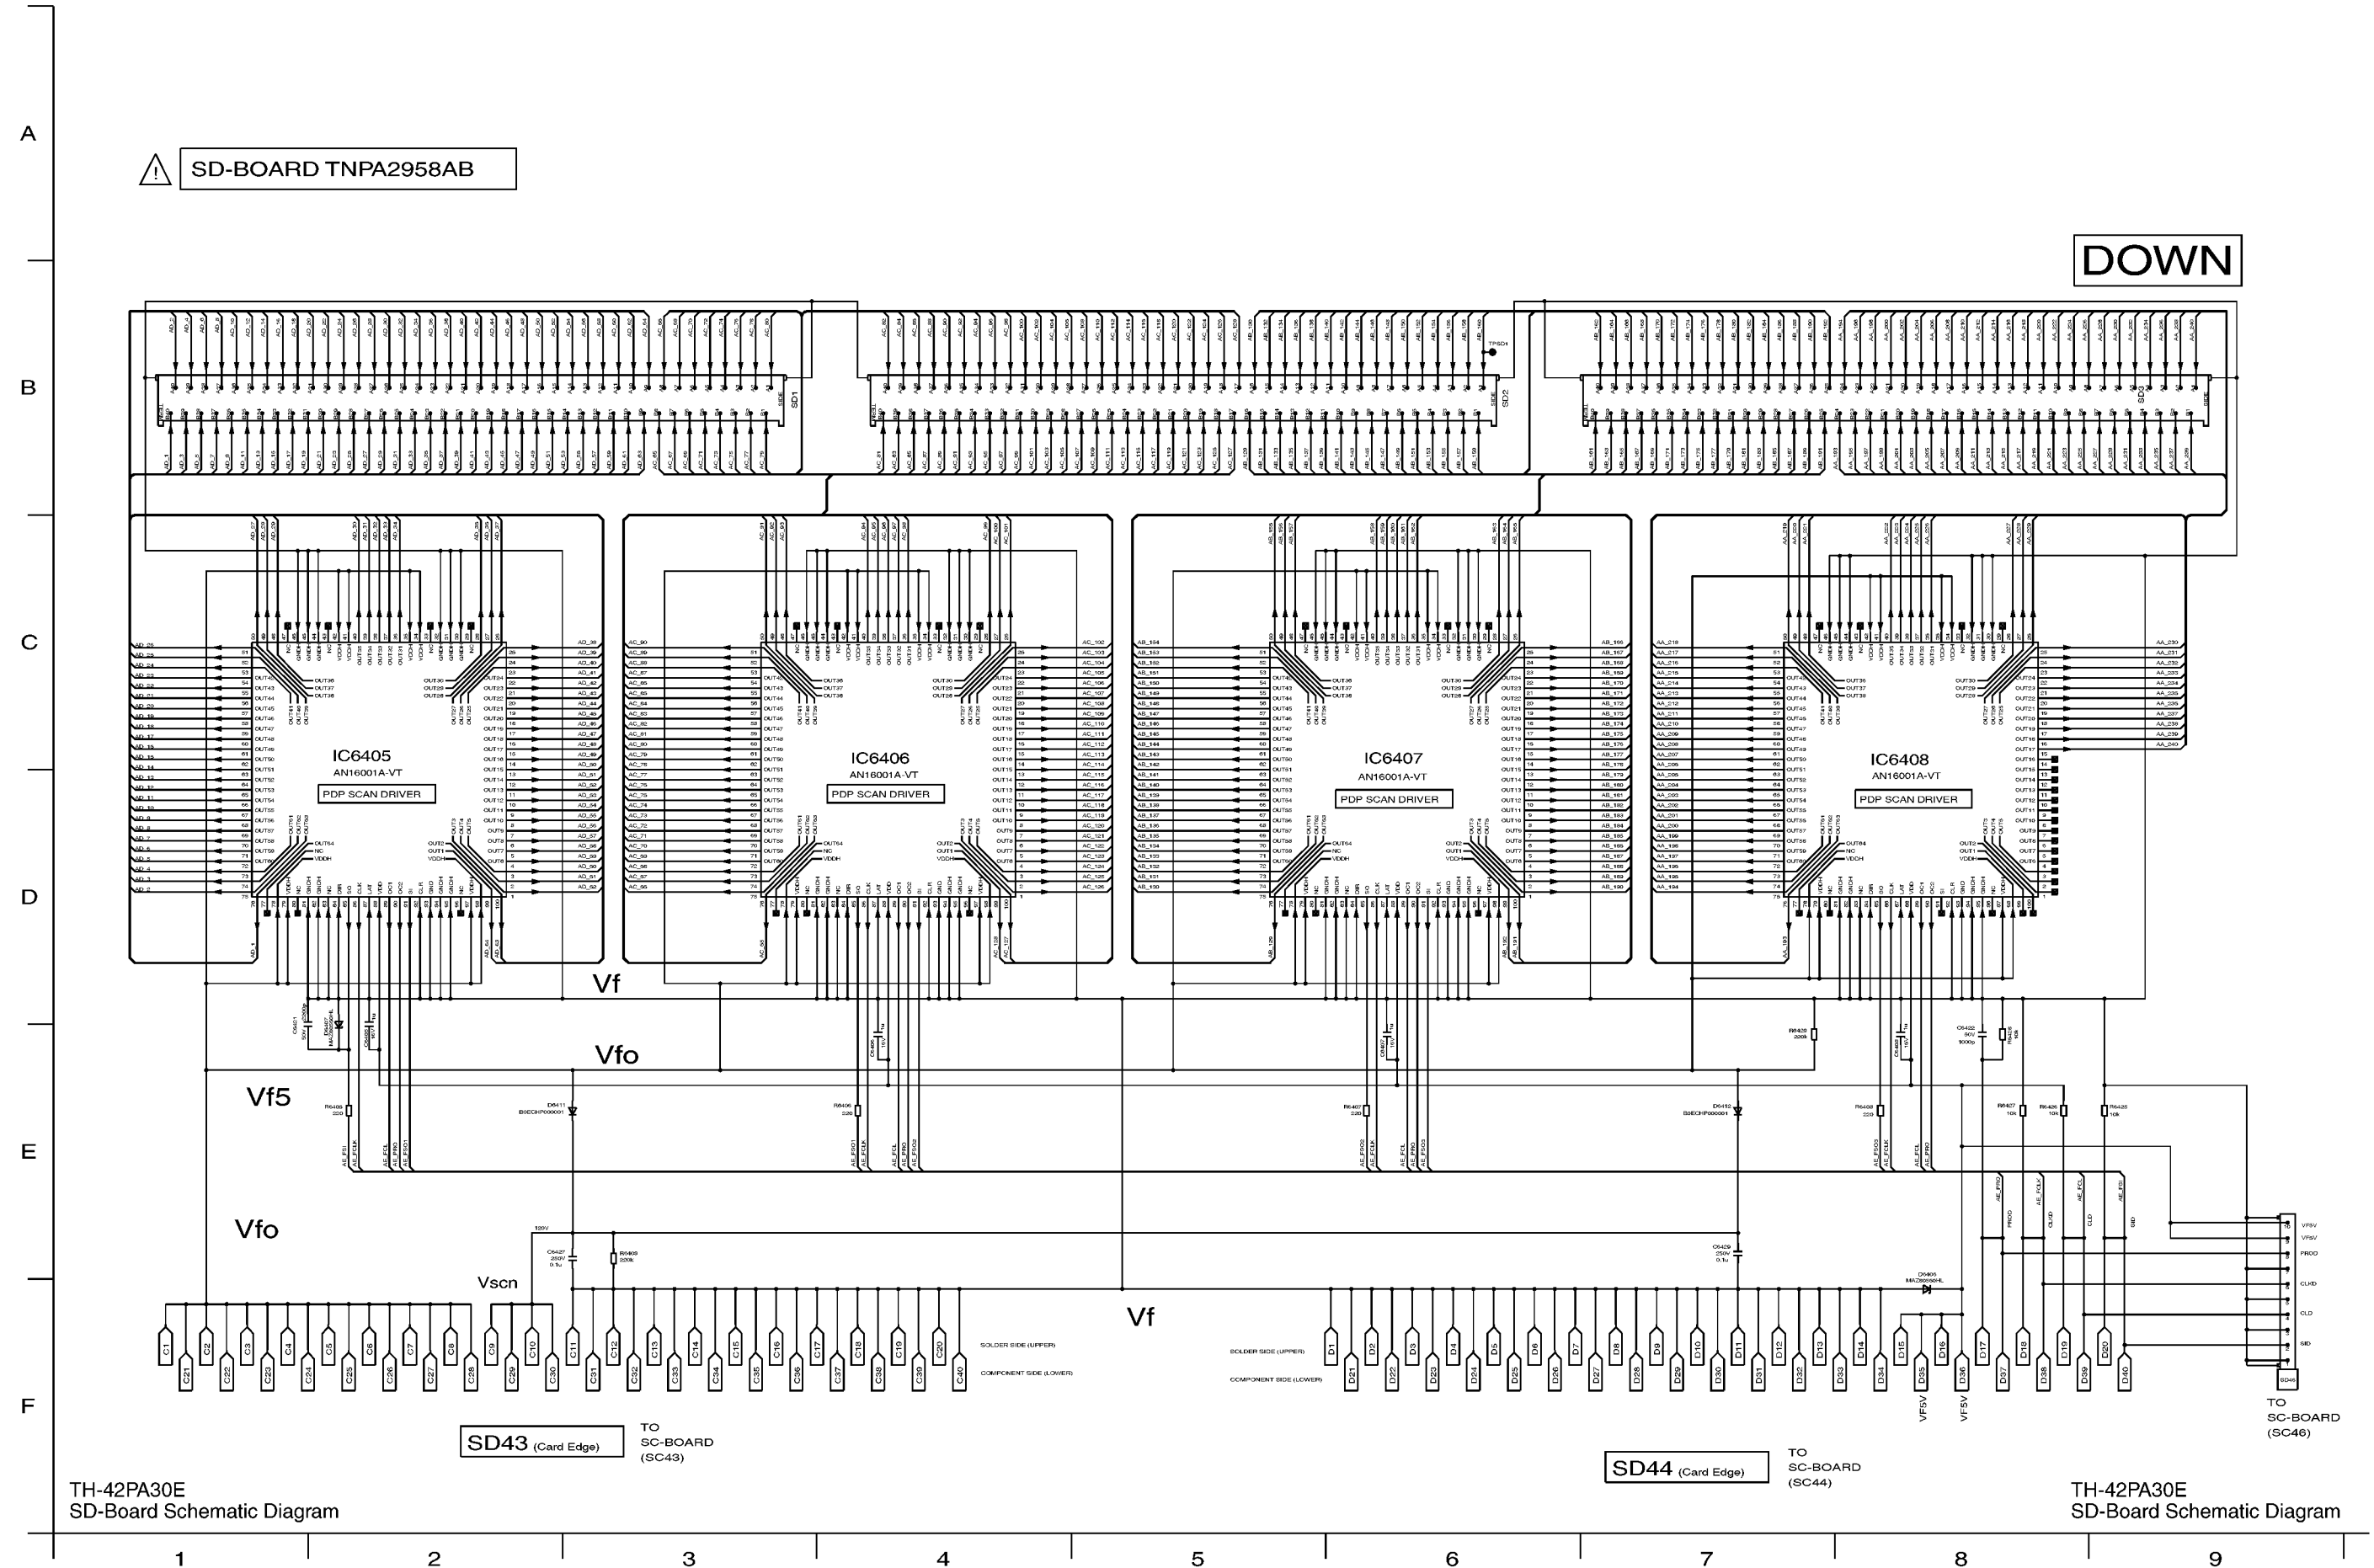


15.55. SS, S, SS2, SS3, SS4 and SS5-Board Block Diagram

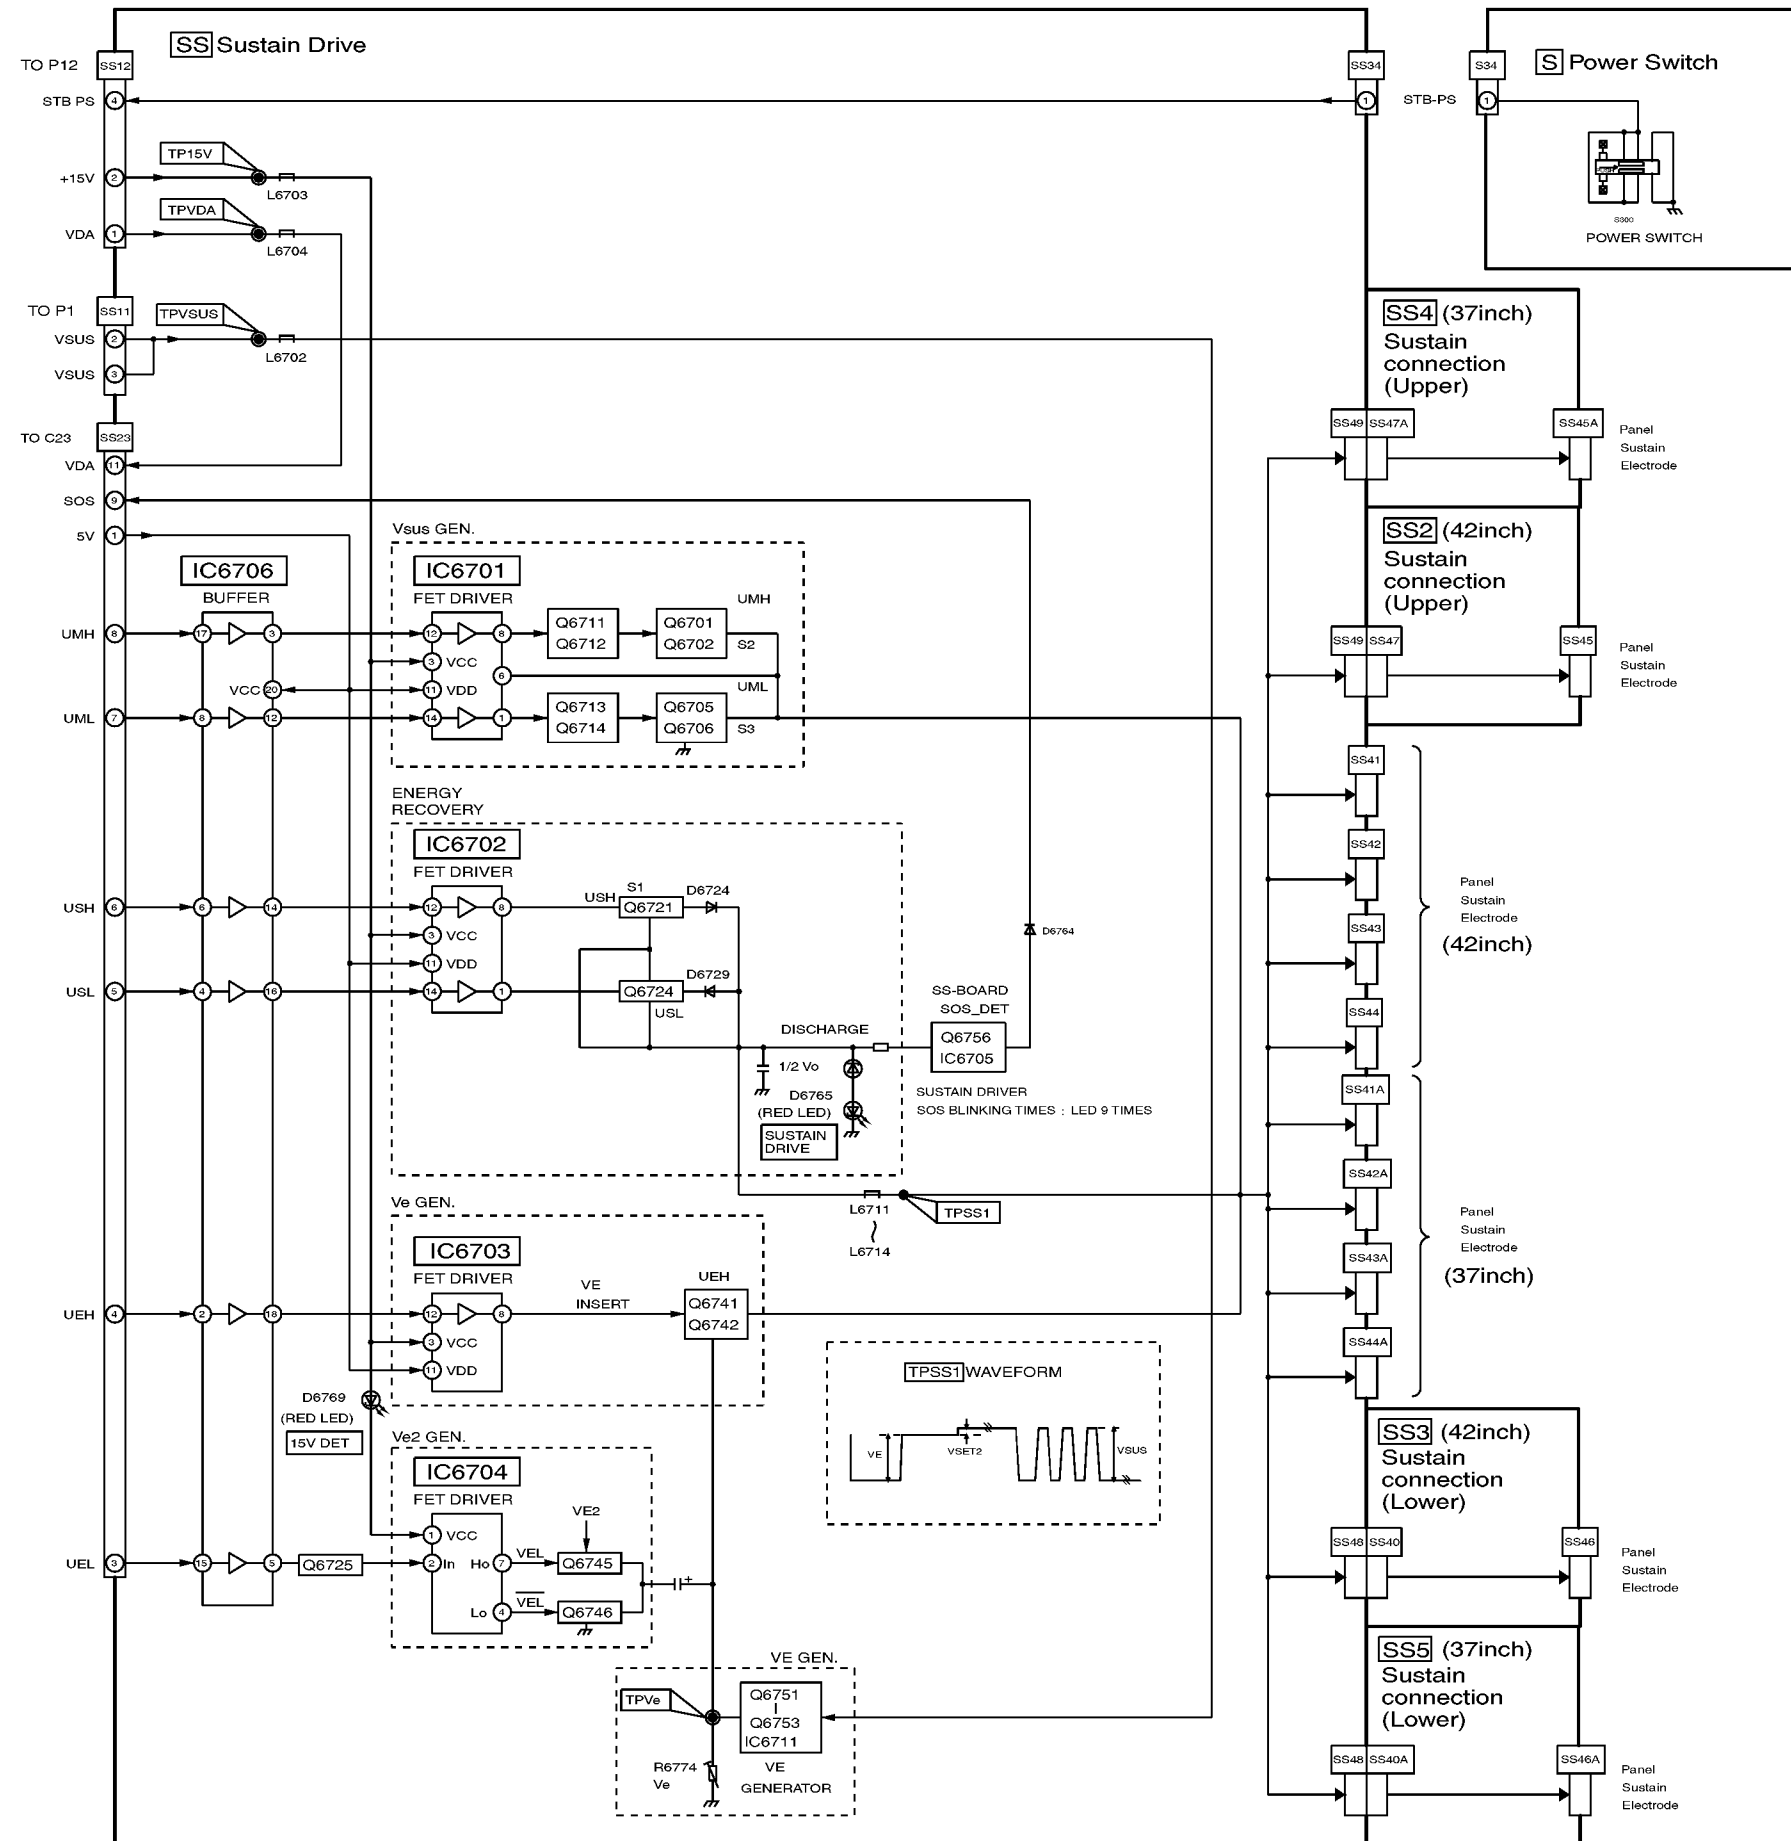





15.57. SS-Board (2 of 2) SS2, SS3, SS4 and SS5-Board Schematic Diagram

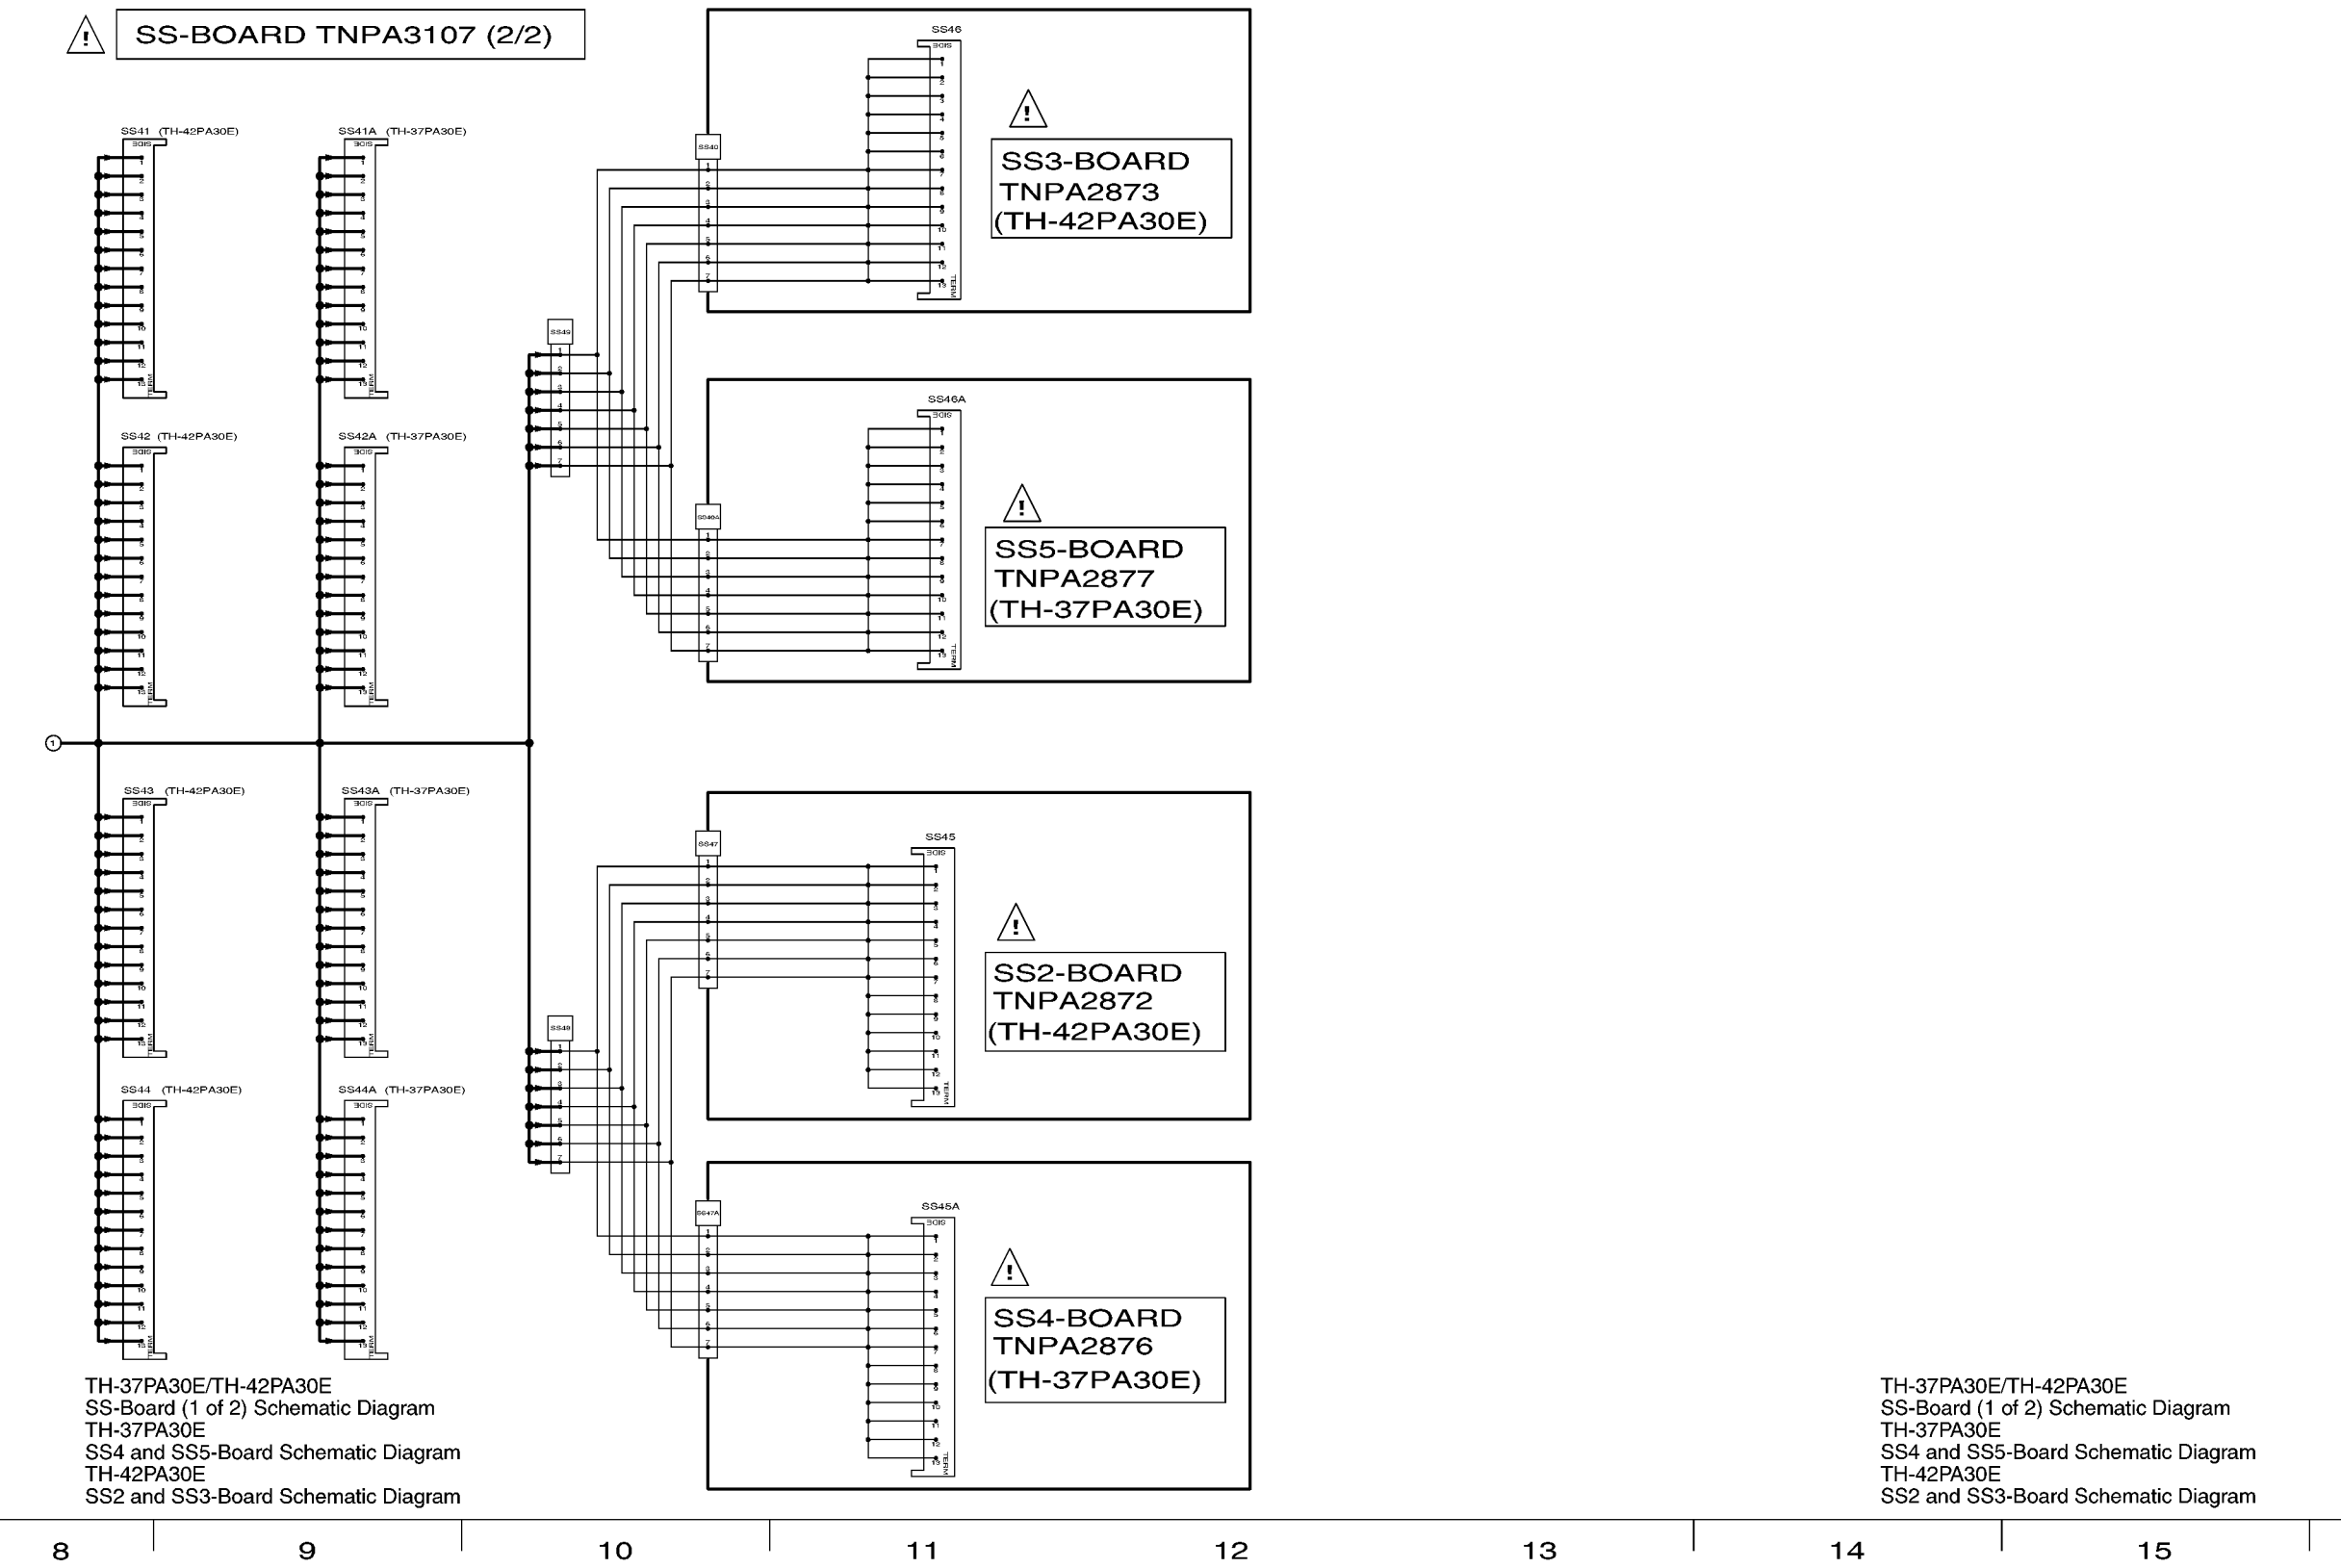


15.58. JG-Board Block Diagram

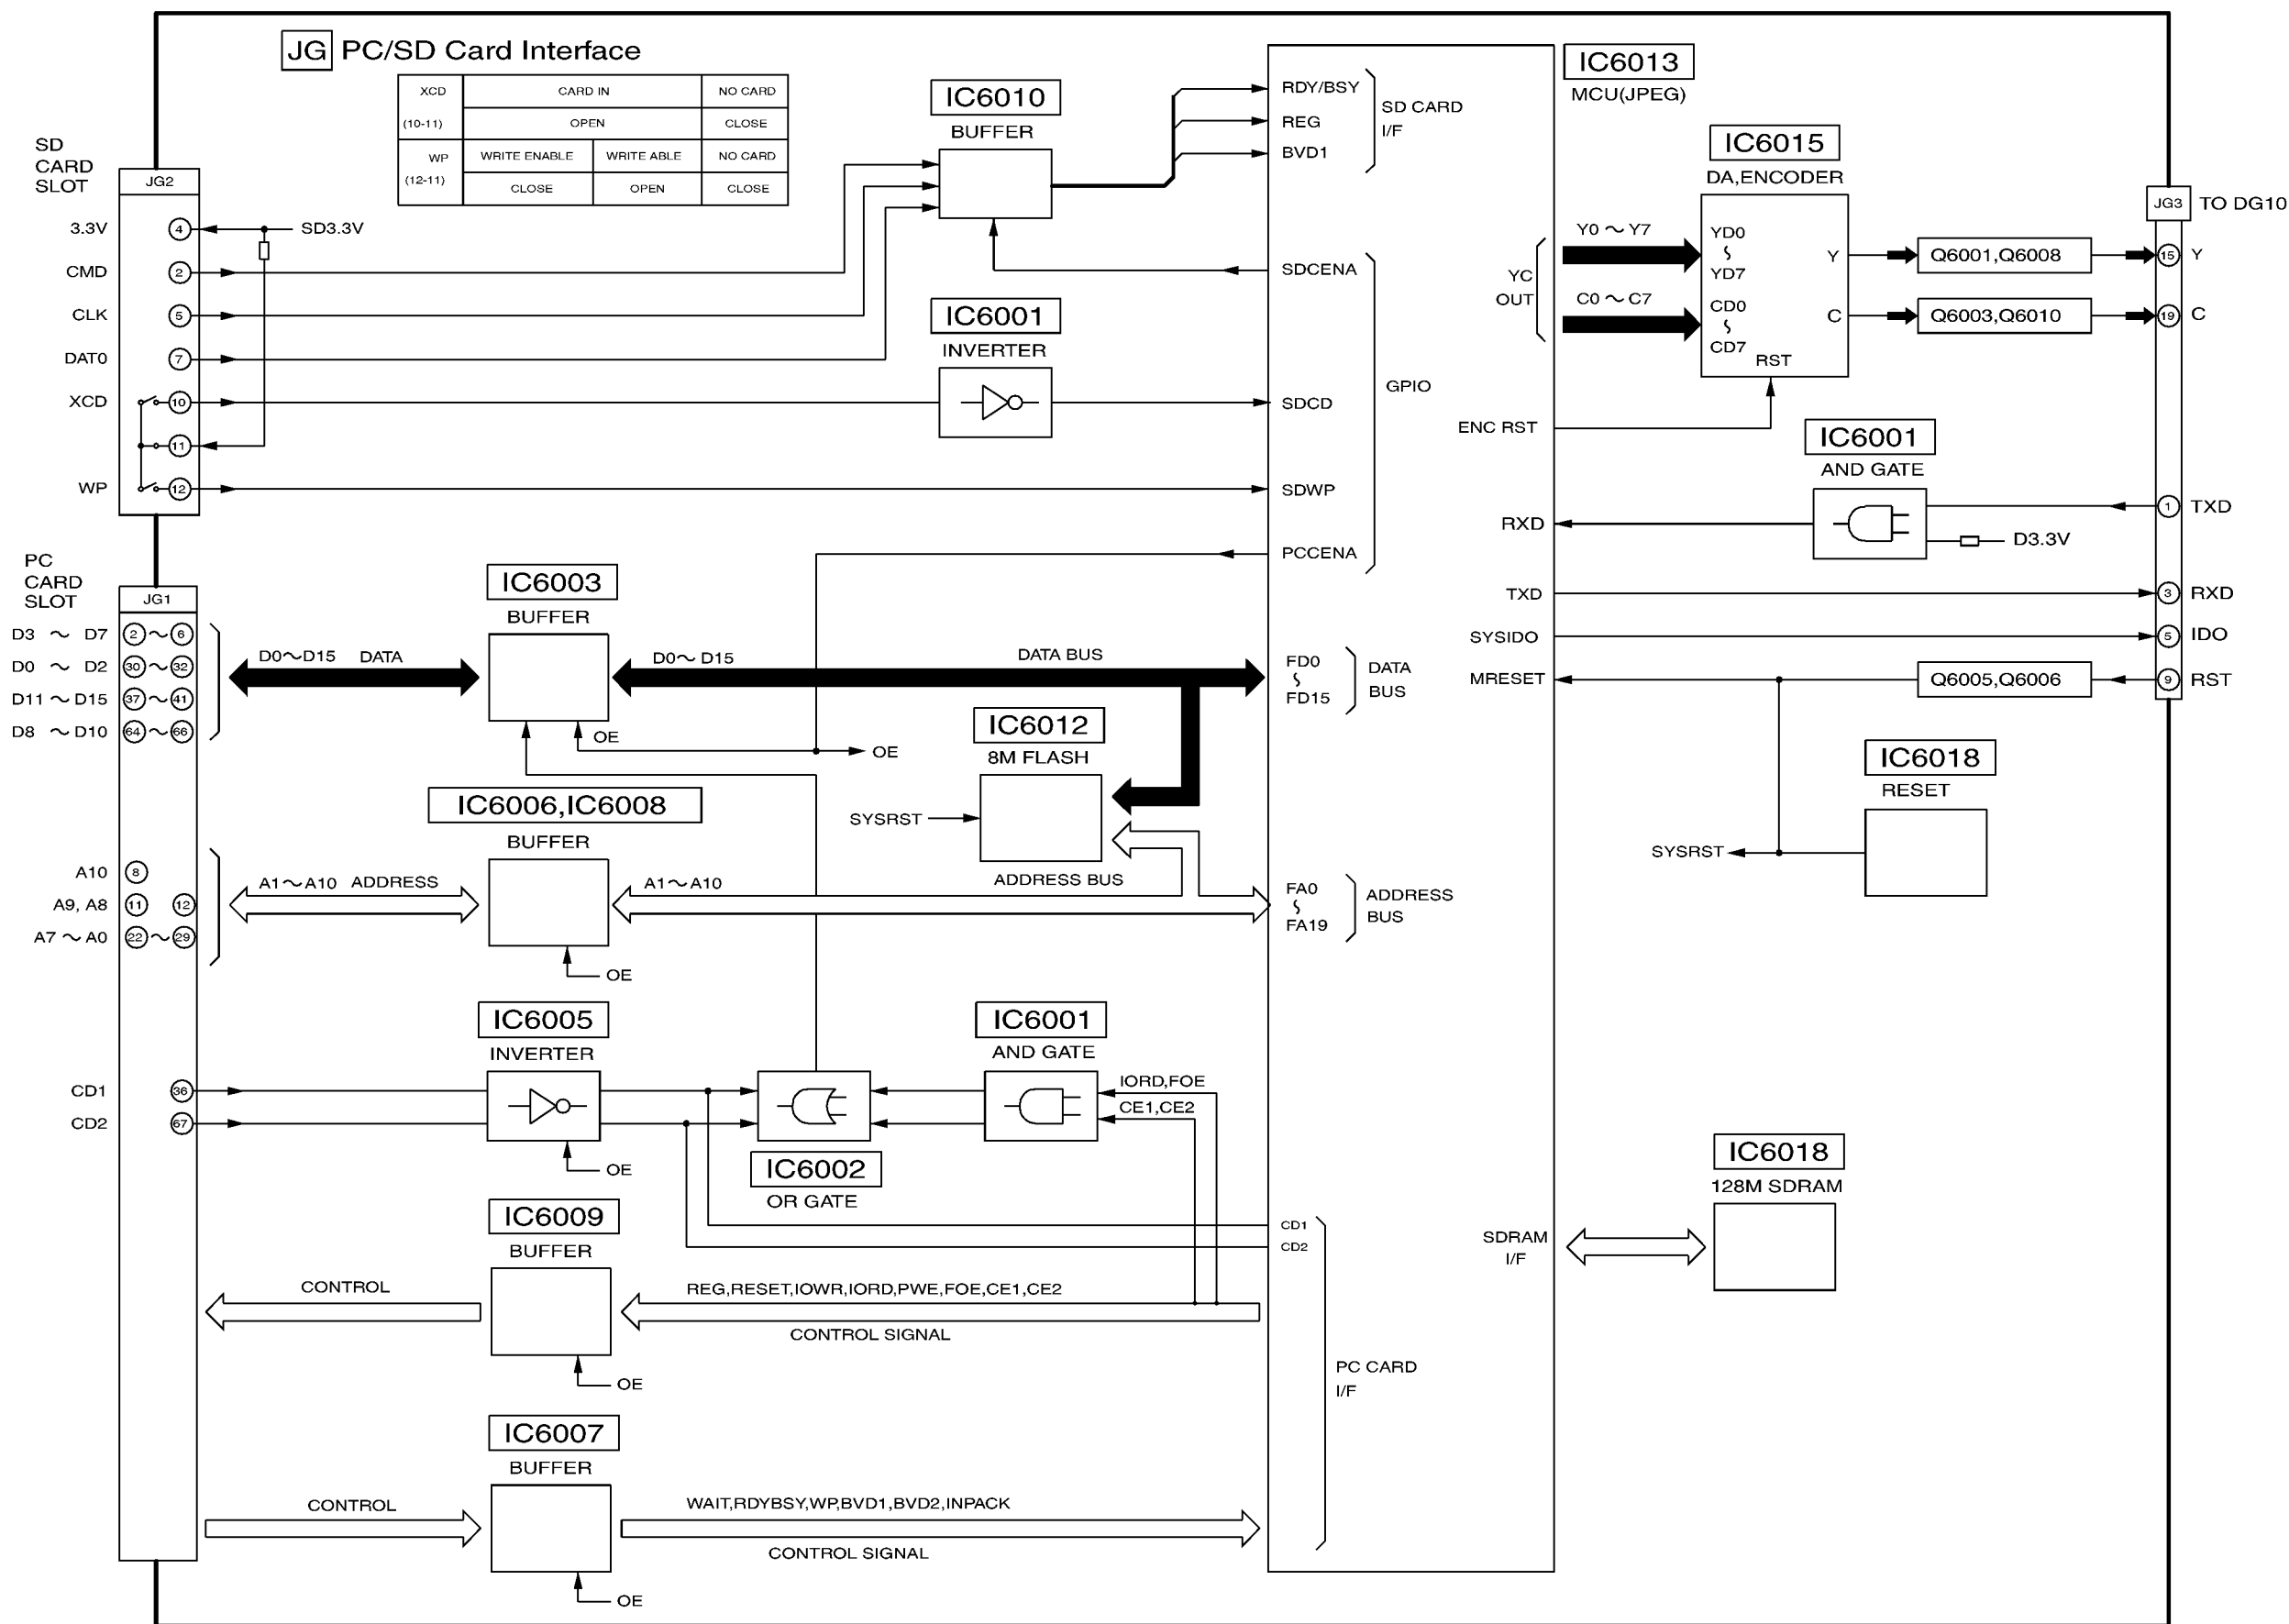

15.59. JG-Board (1 of 2) Schematic Diagram

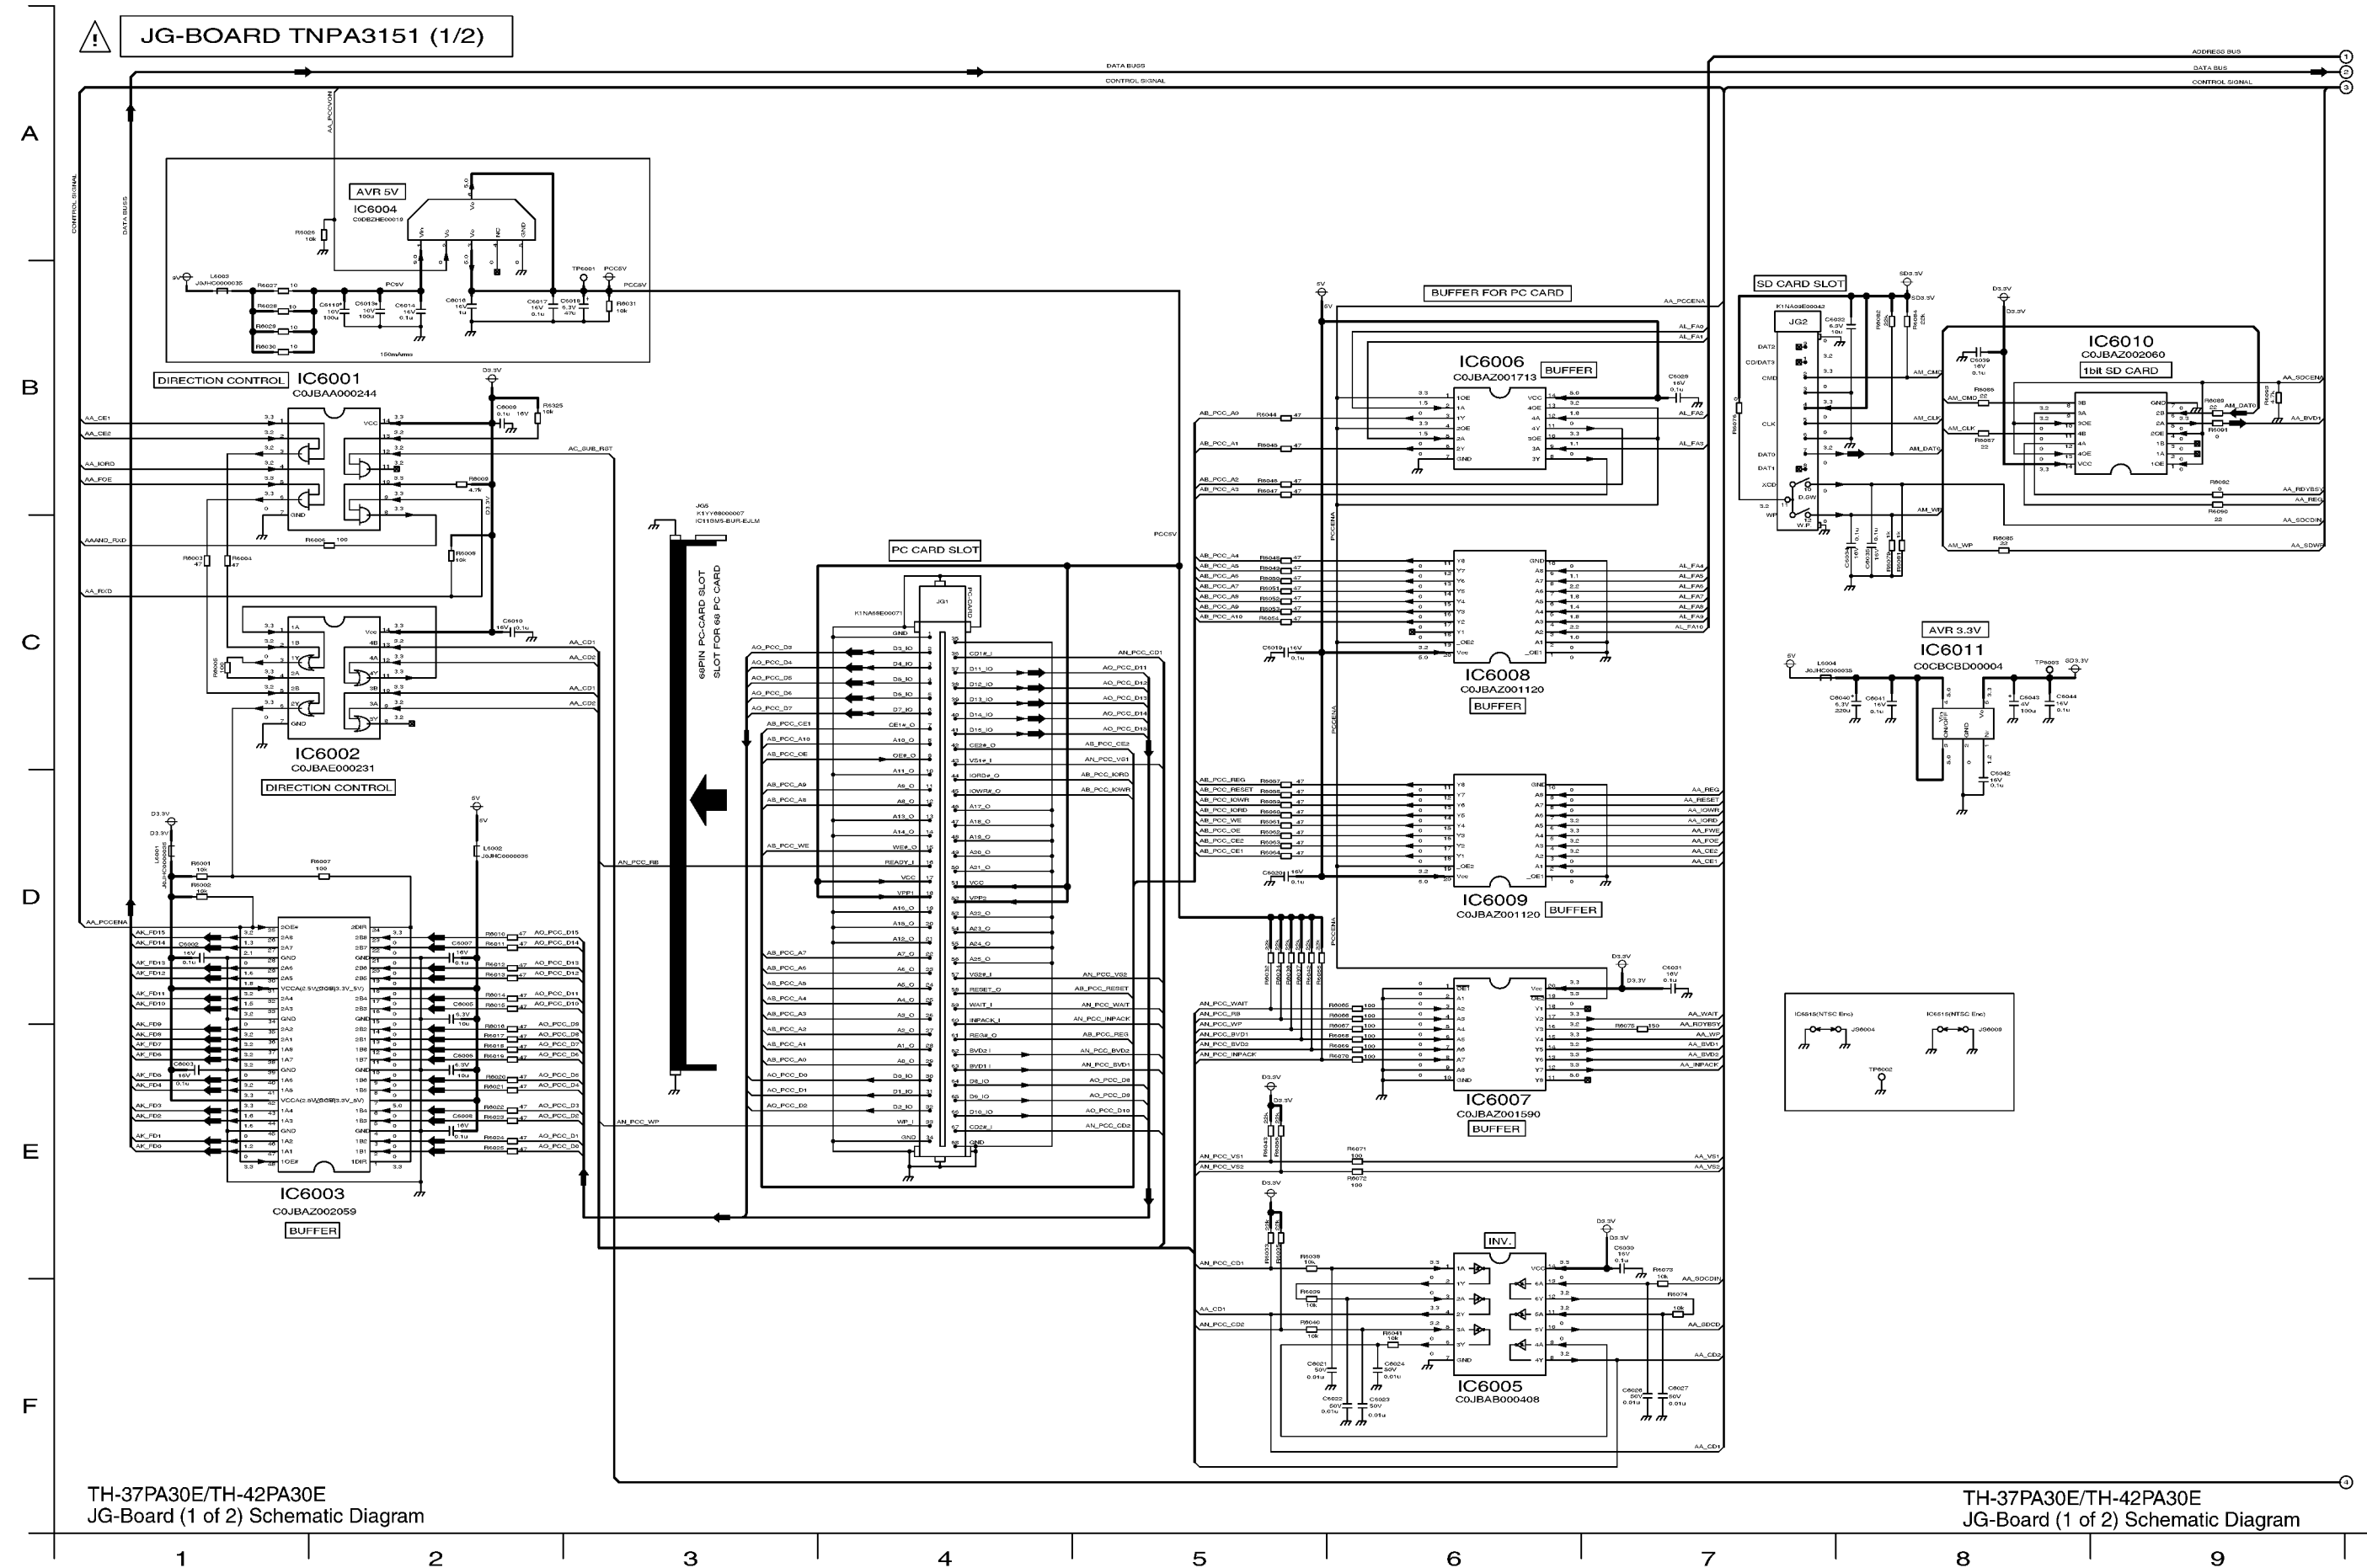


15.60. JG-Board (2 of 2) Schematic Diagram

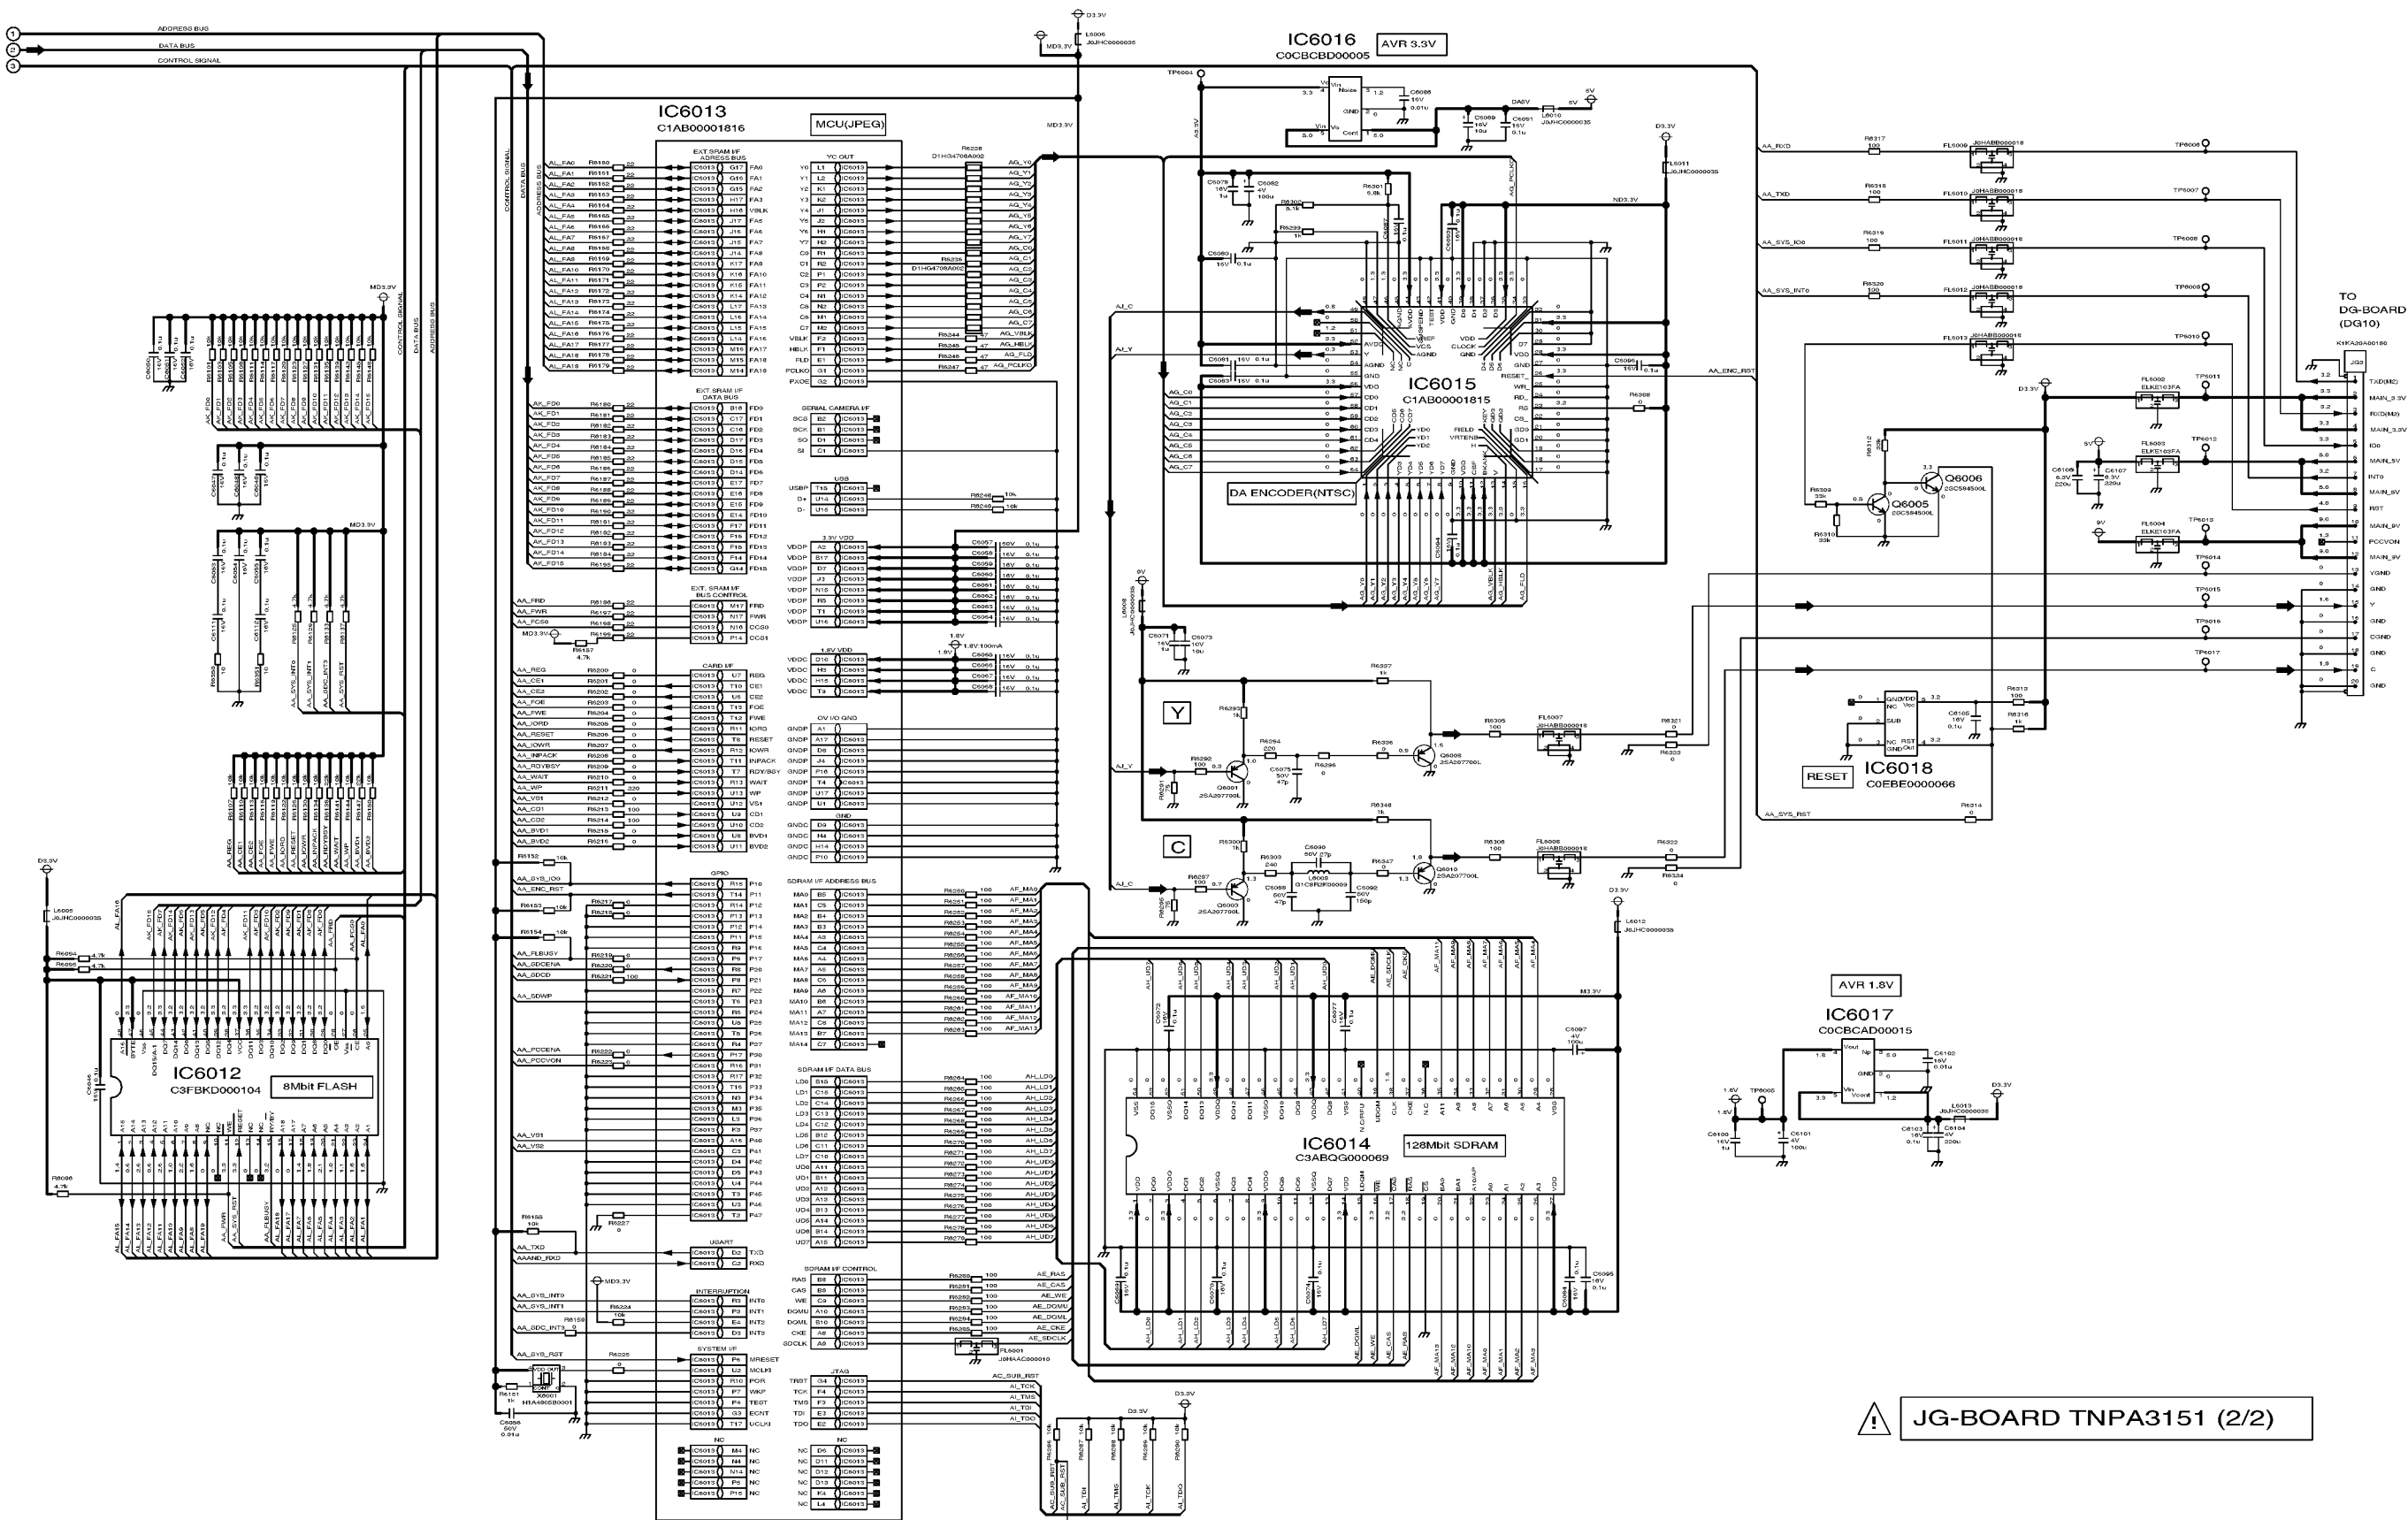


TH-37PA30E/TH-42PA30E
JG-Board (2 of 2) Schematic Diagram


TH-37PA30E/TH-42PA30E
JG-Board (2 of 2) Schematic Diagram

16 Parts Location

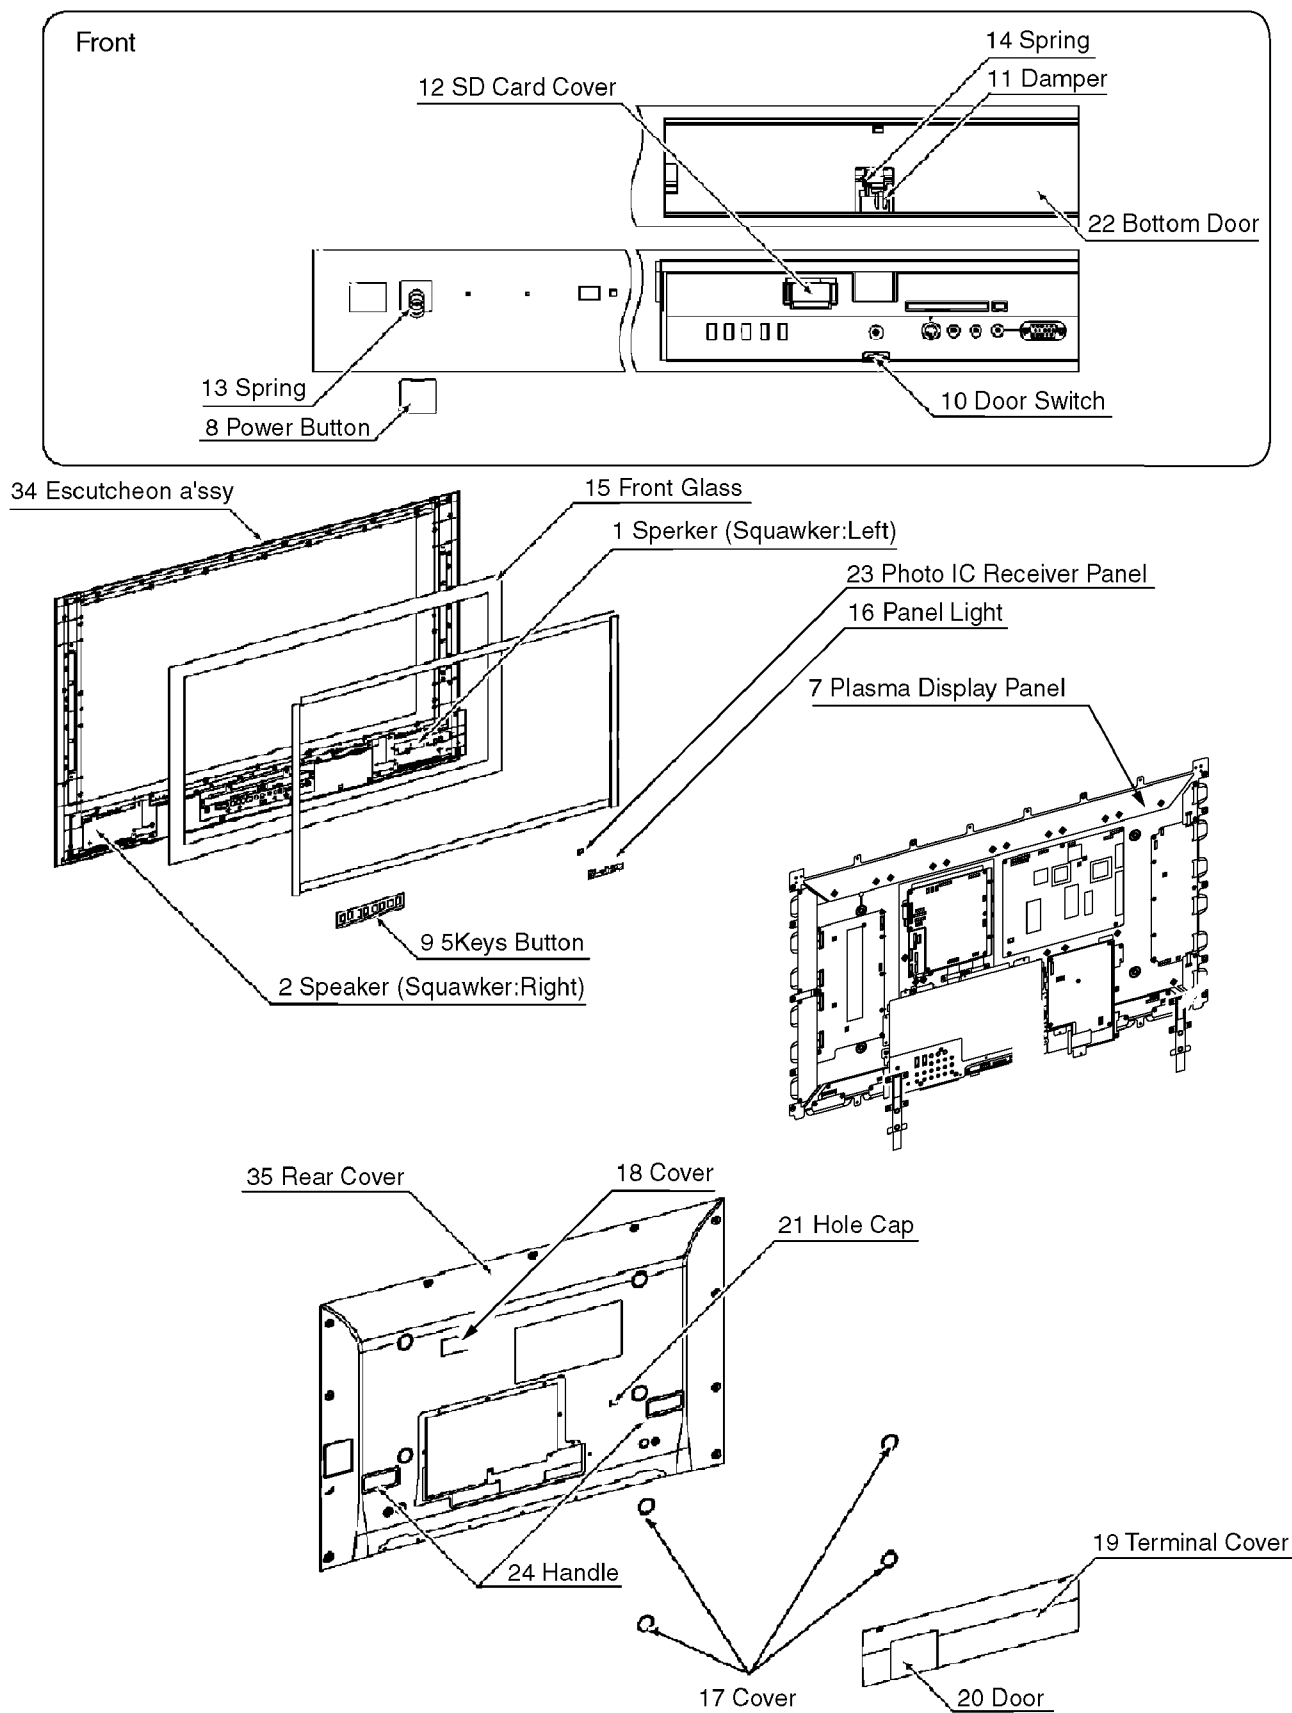

17 Packing Exploded Views

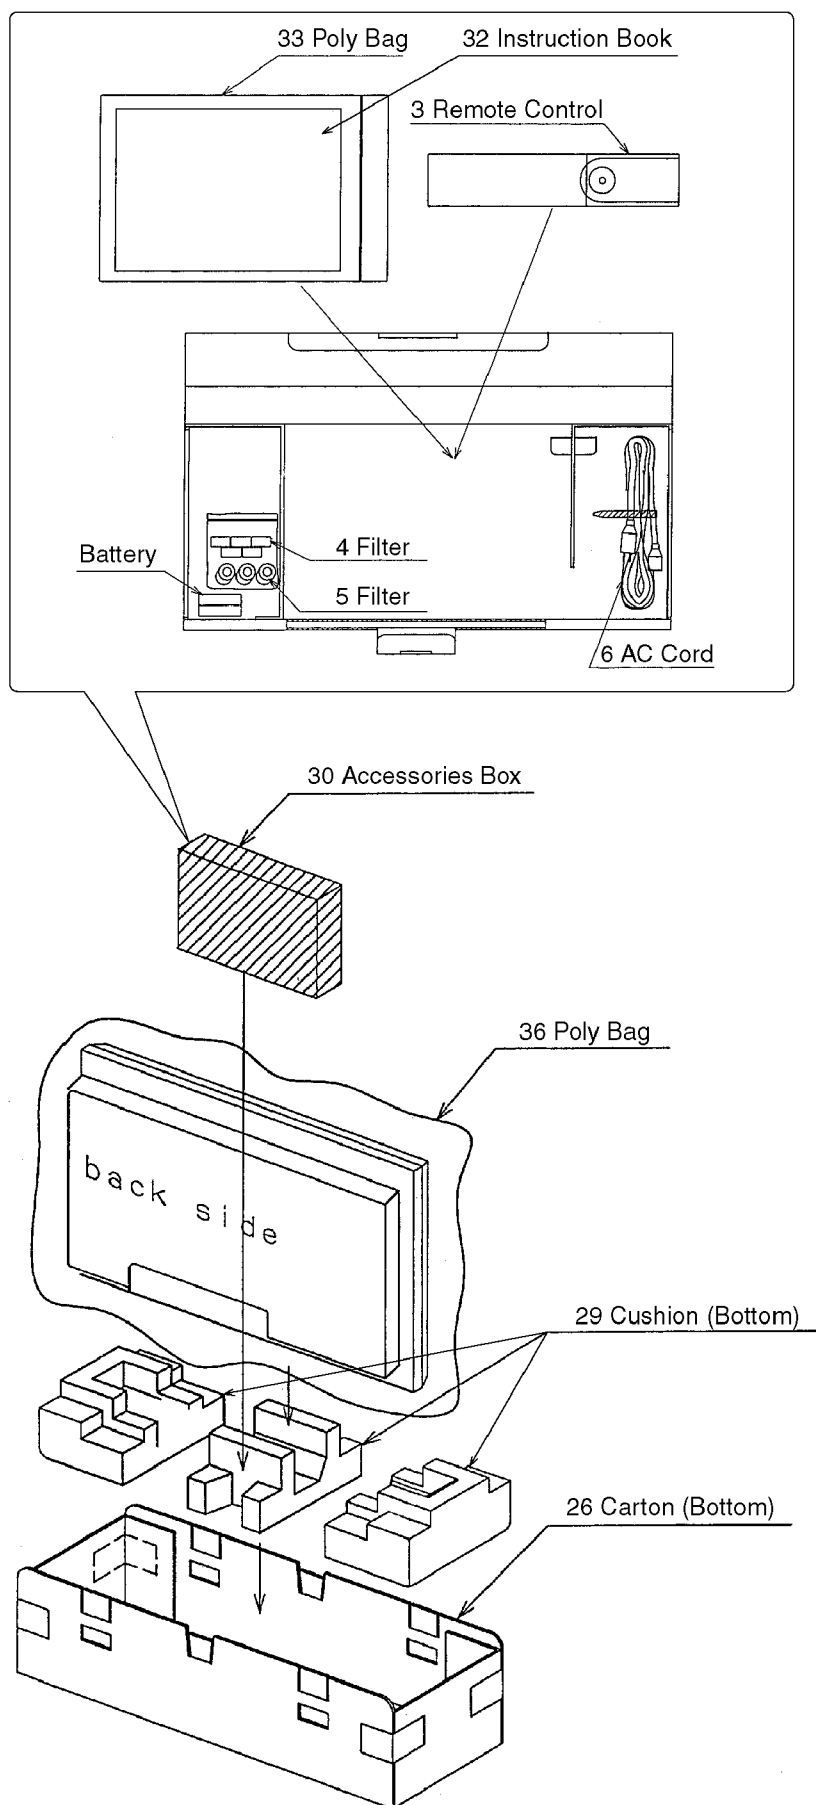

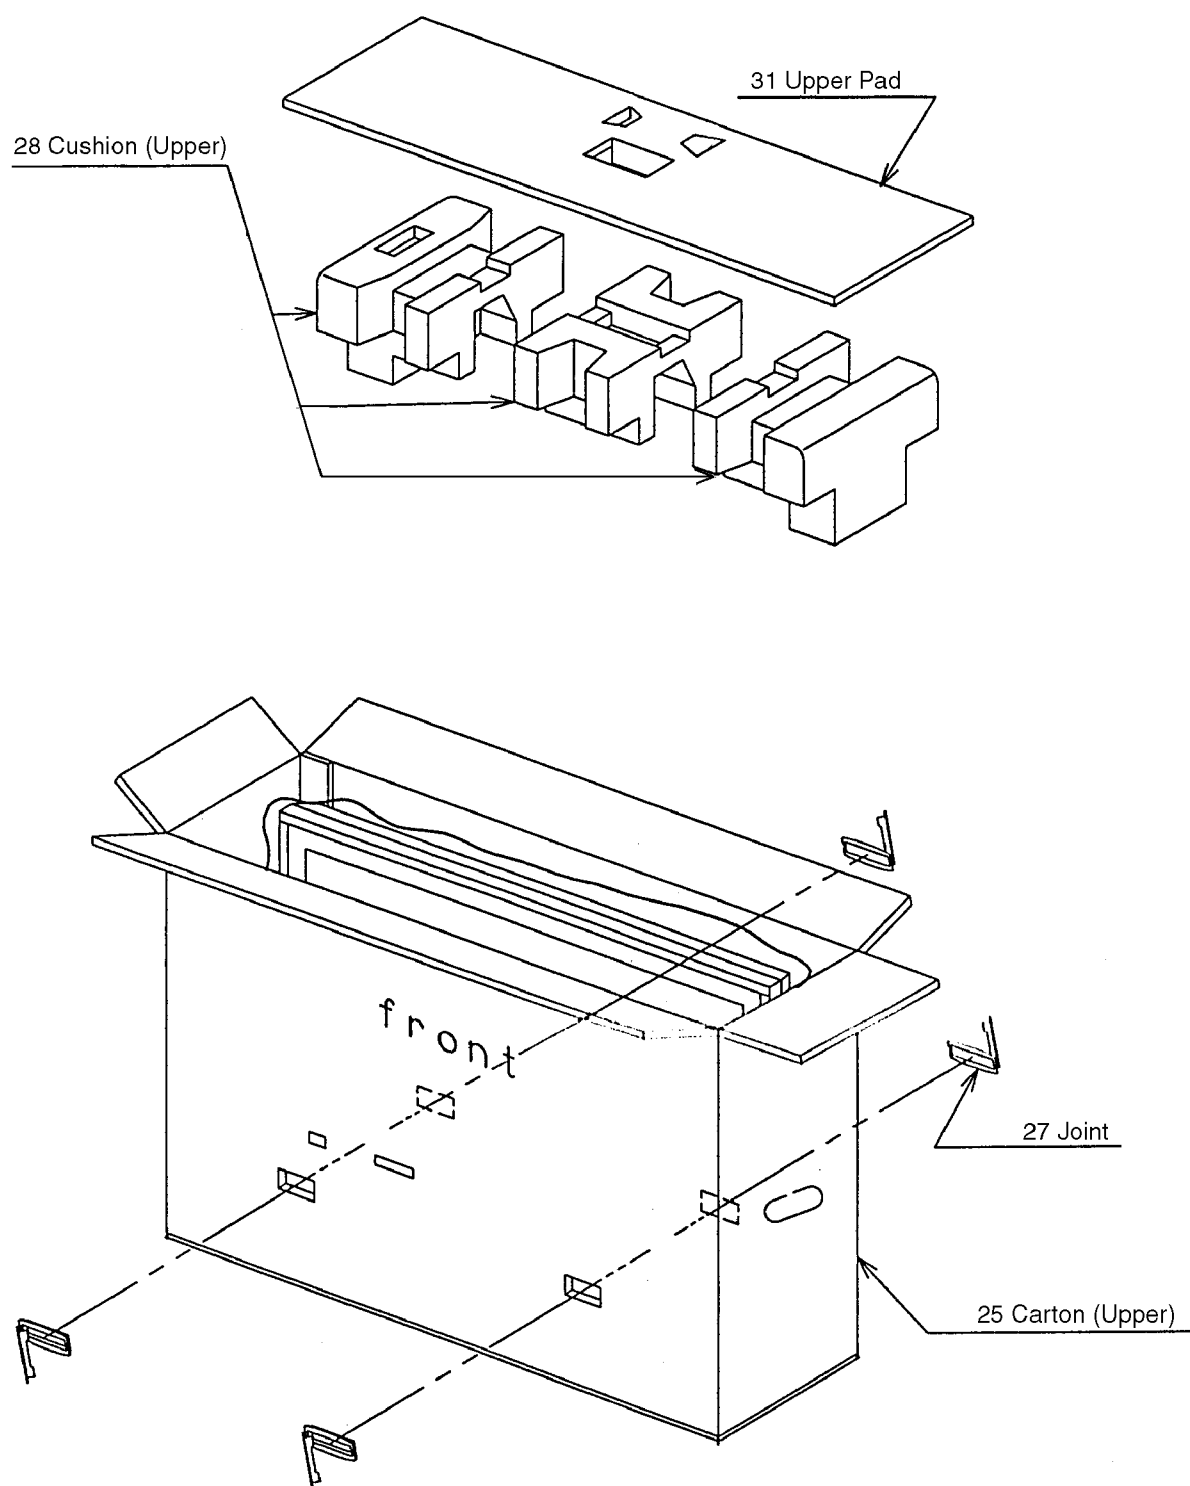

18 Mechanical Replacement Parts List

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
	EAB826AL2	SPEAKER (LEFT)	1	TH-37PA30E
	EAB826AR2	SPEAKER (RIGHT)	1	TH-37PA30E
	EAB827AL2	SPEAKER (LEFT)	1	TH-42PA30E
	EAB827AR2	SPEAKER (RIGHT)	1	TH-42PA30E
1	EAK7H12AL2	SPEAKER (SQUAWKER: LEFT)	1	
2	EAK7H12AR2	SPEAKER (SQUAWKER: RIGHT)	1	
3	EUR7635020	REMOTE CONTROL	1	
	JOKD00000071	FLAT CORE	2	
4	JOKF00000018	FILTER	5	
5	JOKG00000014	FILTER	3	
	KLLA06A00009	RELAY	1	
	KLLB06A00064	RELAY	1	
	KLSZBDBA0002	IEC JACK	1	
	KLTZA9D00093	IF CABLE	1	
	KLZZ00001282	CONNECTOR	2	
	K2AH3H000028	AC INLET	1	△
6	K2CN3DH00004	AC CORD	1	△
7	MD37S06B1J	PLASMA DISPLAY PANEL	1	TH-37PA30E △
7	MD42S06B1J	PLASMA DISPLAY PANEL	1	TH-42PA30E △
8	TBXA39901	POWER BUTTON	1	
9	TBXA40003	5KEYS BUTTON	1	
10	TEK6935	DOOR SWITCH	1	
11	TEKC011	DAMPER	1	
12	TEKX019	SD CARD COVER	1	
13	TES4G204	SPRING	1	
14	TESD060	SPRING	1	
	THEL023Z	SCREW	24	
	THEL027N	SCREW	3	
	THEL035N	SCREW	99	TH-42PA30E
	THEL035N	SCREW	95	TH-37PA30E
	THNA004N	SCREW	1	
	THTF003Y	SCREW	19	
	THW40973N	WASHER	1	
	THW70035Y	WASHER	1	
15	TKGA5120	FRONT GLASS	1	TH-42PA30E
15	TKGA5123	FRONT GLASS	1	TH-37PA30E
16	TKKC5175-1	PANEL LIGHT	1	
17	TKKL5231-1	COVER	4	
18	TKKL5269-1	COVER	1	
19	TKKL5275	TERMINAL COVER	1	
20	TKKL5276	DOOR	1	
21	TKKL5277-1	HOLE CAP	2	
22	TKPA80002	BOTTOM DOOR	1	
23	TKPA80701	PHOTO IC RECEIVER PANEL	1	
24	TKRA19904A	HANDLE	2	
	TKRA34302	ORNAMENT (LEFT)	1	
	TKRA34305	ORNAMENT (RIGHT)	1	
	TKRA34601	BRACKET (RIGHT)	1	
	TKRA34701	BSC BRACKET (LEFT)	1	
	TKRA34801	HANDLE	2	
	TMKG428	SPONGE	2	
	TMM15414-2	CLAMPER	2	
	TMM17499	CLAMPER	1	
	TMM25401	CLAMPER	7	
	TMM7464-2	CLAMPER	2	
	TMM81488	CLAMPER	1	
	TMME047	CLAMPER	9	
	TMME061	CLAMPER	2	
	TMME075	EADG SADOLE	4	
	TMME077	CLAMPER	1	
	TMME084	CLAMPER	1	
	TMME108	CABLE STRAP	1	
	TMME152	CLAMPER	1	
	TMME190	CLAMPER	1	
	TMME199	CLAMPER	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
	TMME206	CLAMPER	2	
	TMMJ044	SPEAKER RUBBER	7	
	TMMX095	BRACKET	2	
	TMXX021-1	CORE HOLDER	2	
25	TPCB46103	CARTON (UPPER)	1	TH-42PA30E △
26	TPCB46201	CARTON (BOTTOM)	1	TH-42PA30E
25	TPCB46302	CARTON (UPPER)	1	TH-37PA30E △
26	TPCB46401	CARTON (BOTTOM)	1	TH-37PA30E
27	TPD169487	JOINT	4	
28	TPDA0820-1	CUSHION (UPPER)	1	
29	TPDA0821-1	CUSHION (BOTTOM)	1	
	TPDA0862	CORNER PAD (RIGHT)	1	
	TPDA0863	CORNER PAD (LEFT)	1	
	TPDF0737	PAPER BOX	1	
31	TPDF1109	UPPER PAD	1	TH-42PA30E
30	TPDF1197	ACCESSORIES BOX	1	
31	TPDF1198	UPPER PAD	1	TH-37PA30E
	TPEH170	PROTECT COVER	1	
32	TQBC0711	INSTRUCTION BOOK (ENGLISH)	1	△
32	TQBC0712	INSTRUCTION BOOK (GERMAN)	1	△
32	TQBC0713	INSTRUCTION BOOK (FRENCH)	1	△
32	TQBC0714	INSTRUCTION BOOK (ITALIAN)	1	△
32	TQBC0715	INSTRUCTION BOOK (SPANISH)	1	△
32	TQBC0716	INSTRUCTION BOOK (DUTCH)	1	△
32	TQBC0717	INSTRUCTION BOOK (DANISH)	1	△
32	TQBC0718	INSTRUCTION BOOK (SWEDISH)	1	△
33	TQEF035	POLY BAG	1	
	TQZH337	INSTRUCTION SHEET	1	
	TSXL222	CABLE (C1-C2)	1	
	TSXL278	CABLE (D-C1/2)	2	
	TSXL323	CABLE (DG7-G7)	1	
34	TTEA0160-1	ESCUTCHEON A'SSY	1	TH-42PA30E △
34	TTEA0161-1	ESCUTCHEON A'SSY	1	TH-37PA30E △
35	TTUA0852	REAR COVER	1	TH-42PA30E △
35	TTUA0853	REAR COVER	1	TH-37PA30E △
	TXFMZ010QKS	STAND POOL BRACKET	2	
	TXJPA3UHSE	SPEAKER LEAD	1	TH-42PA30E
	TXJPA3UJSE	SPEAKER LEAD	1	TH-37PA30E
	XTB4+10A	SCREW	22	
	XTB4+12A	SCREW	26	
	XTB4+12AFZ	SCREW	20	TH-42PA30E
	XTB4+12J	SCREW	29	
	XTB4+15A	SCREW	6	TH-42PA30E
	XTB4+15AFZ	SCREW	10	
	XTB4+20A	SCREW	4	
	XTV3+10JFZ	SCREW	5	
	XTW3+8T	SCREW	2	
	XTW4+35D	SCREW	10	
	XTW4+Z15D	SCREW	7	
	XYC4+FJ35FZ	SCREW	10	
	XYN3+F10	SCREW	13	TH-42PA30E
	XYN3+F10	SCREW	12	TH-37PA30E
	XYN3+F10FZ	SCREW	2	
	XYN3+F6	SCREW	2	
	XYN3+F8	SCREW	34	TH-42PA30E
	XYN3+F8	SCREW	37	TH-37PA30E
	XYN3+J8	SCREW	9	
	XYN4+E8	SCREW	1	
	XYN5+C20	SCREW	8	
36	XZBT6506	POLY BAG	1	TH-42PA30E
36	XZBT6530	POLY BAG	1	TH-37PA30E

19.1. Replacement Parts List Notes

Components identified by mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.

Note: The marking (RTL) indicates that the Retention Time is Limited for this item. After the discontinuation of this assembly in production, the item will continue to be available for a specific period of time. The retention period of availability is dependant on the type of assembly, and in accordance with the laws governing part and product retention. After the end of this period, the assembly will no longer be available.

1. Resistor

ERD25TJ104 C 100KOHM, J, 1/4W

Type	Allowance
------	-----------

Example:

ECKF1H103ZF C 0.01UF, Z, 50V

 Type Allowance

Type	Allowance
C : Ceramic	C : $\pm 0.25\text{pF}$
E : Electrolytic	D : $\pm 0.5\text{pF}$
P : Polyester	F : $\pm 1\text{pF}$
Polyprop	G : $\pm 3\text{pF}$
lene	J : $\pm 5\text{pF}$
T : Tantalum	K : $\pm 10\text{pF}$
	L : $\pm 15\text{pF}$
	M : $\pm 20\text{pF}$
	P : +100%, -0%
	Z : +80%, -20%

19.2. Electrical Replacement Part List

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
F902	K5D312BK0012	FUSE	1	△
F900.901	K5Y802B00001	FUSE	2	△
C001,02	ECA1HM100	E 10UF, 50V	2	
C003	ECA0JM102	E 1000UF, 6.3V	1	
C005,06	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C008	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C009-11	ECJ1XF1C104Z	C 0.1UF, Z, 16V	3	
C11	K1MN50B00026	50P CONNECTOR	1	
C012	ECJ3VB1C474K	C 0.47UF, K, 16V	1	
C12	K1MN20B00043	20P CONNECTOR	1	
C013,14	ECJ1XC1H330J	C 33PF, J, 50V	2	
C21	K1MN50B00026	50P CONNECTOR	1	
C022	ECJ3VB1C474K	C 0.47UF, K, 16V	1	
C22	K1MN20B00043	20P CONNECTOR	1	
C023	ECA0JM102	E 1000UF, 6.3V	1	
C23	K1KA11A00102	11P CONNECTOR	1	
C24	K1KA08A00232	8P CONNECTOR	1	
C300	EEVHB1C470P	E 47UF, 16V	1	
C301	ECJ3XB0J106M	C 10UF, M, 6.3V	1	
C309	ECJ1VB1H103K	C 0.01UF, K, 50V	1	
C402	ECKDNA471KB7	C 470PF, Z,	1	△
C406	ECA2WHG100	E 10UF, 450V	1	
C407	ECJ2XB1H104K	C 0.1UF, K, 50V	1	
C408	ECKD3D392KBP	C 3900PF, K, 2KV	1	
C409	ECA1EHG470	E 47UF, 25V	1	
C411	ECJ2XB1H104K	C 0.1UF, K, 50V	1	
C412	ECA1HHG100	E 10UF, 50V	1	
C414	ECKD2H561KB2	C 560PF, K, 500V	1	
C415	ECJ3VC1H472J	C 4700PF, J, 50V	1	
C416	EEUFC1C471	E 470UF, 16V	1	
C417	ECA1EHG470	E 47UF, 25V	1	
C418	ECA1CHG101	E 100UF, 16V	1	
C419	ECA1AHG471	E 4700UF, 10V	1	
C420	ECA1EHG101	E 100UF, 25V	1	
C421,22	ECQB1H104JF	P 0.1UF, J, 50V	2	
C423	ECJ2XB1H104K	C 0.1UF, K, 50V	1	
C424	ECKCNA471KB7	C 470PF, Z,	1	△
C451-53	ECKDAE472ZE	C 4700PF, Z,	3	△
C455	ECQE6105JF	P 1UF, J, 630V	1	
C456	EEUFC1V331	E 330UF, 35V	1	
C457	ECQB1H103JF	P 0.01UF, J, 50V	1	
C458	ECJ2VC1H821J	C 820PF, J, 50V	1	
C459	EEUFC1H330	E 33UF, 50V	1	
C460	ECJ2XC1H101J	C 100PF, J, 50V	1	
C461	ECJ2XC1H331J	C 330PF, J, 50V	1	
C462	ECQB1H104JF	P 0.1UF, J, 50V	1	
C463	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C464	ECQB1H104JF	P 0.1UF, J, 50V	1	
C465	ECA1HHG010	E 1UF, 50V	1	
C466	ECKD3D101KBP	C 100PF, K, 2KV	1	
C468,69	EETHC2W331L	E 330UF, 450V	2	
C470	ECA1EHG331	E 330UF, 25V	1	
C471	ECQB1H104JF	P 0.1UF, J, 50V	1	
C548	EEUEB1E101	E 100UF, 25V	1	
C549	EEUEB1H101	E 100UF, 50V	1	
C550	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C551,52	ECJ2XC1H471J	C 470PF, J, 50V	2	
C553	ECJ2XC1H102J	C 1000PF, J, 50V	1	
C554	ECJ2XC1H221J	C 220PF, J, 50V	1	
C555	EEUEB1E101	E 100UF, 25V	1	
C556	EEUEB1H220	E 22UF, 50V	1	
C557	ECQE6473KF	P 0.047UF, K, 630V	1	
C558	ECKD3D101KBP	C 100PF, K, 2KV	1	
C559	ECQE6473KF	P 0.047UF, K, 630V	1	
C560	ECKD3D221KBP	C 220PF, K, 2KV	1	
C561,62	ECJ3VC1H472J	C 4700PF, J, 50V	2	
C563	ECKDNA471KB7	C 470PF, Z,	1	△
C564	ECKD3A101KBP	C 100PF, K, 1KV	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C565	EETHC2C821B	E 820UF, 160V	1	
C566	ECKD3D102KBP	C 1000PF, K, 2KV	1	
C567,68	ECJ3VC1H472J	C 4700PF, J, 50V	2	
C569	ECKD3A101KBP	C 100PF, K, 1KV	1	
C570	ECKD3A471KBP	C 470PF, K, 1KV	1	
C571	ECKD3A101KBP	C 100PF, K, 1KV	1	
C572	EEUFC1E222	E 2200UF, 25V	1	
C573,74	EETHC2D182L	E 1800UF, 200V	2	
C575	EEUEB1H220	E 22UF, 50V	1	
C576	EEUFC1E222	E 2200UF, 25V	1	
C577	ECA1EHG222	E 2200UF, 25V	1	
C578	ECQB1H332JF	P 3300PF, J, 50V	1	
C579	ECA1EHG221	E 220UF, 25V	1	
C581	EEUFC0J122	E 1200UF, 6.3V	1	
C583	ECJ2XB1H104K	C 0.1UF, K, 50V	1	
C584	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C585	EEUEB1E101	E 100UF, 25V	1	
C586	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C590	EEUFC1E222	E 2200UF, 25V	1	
C591	ECKD3A101KBP	C 100PF, K, 1KV	1	
C650	EEUEB1H101	E 100UF, 50V	1	
C901	ECQU2A105BN9	P 1UF, 250V	1	△
C902	ECQU2A224BN9	P 0.22UF, 250V	1	△
C903	ECQU2A105BN9	P 1UF, 250V	1	△
C910	ECKCNA221MBB	C 220PF, M	1	△
C911	ECKCNA221KB7	C 220PF, M,	1	△
C914	ECKCNA221MBB	C 220PF, M	1	△
C915	ECQU2A224BN9	P 0.22UF, 250V	1	△
C916,17	ECKDNA471KB7	C 470PF, Z,	2	△
C920	EETHC2W151J	C 150PF, 450V	1	
C921	EEUFC1H330	E 33UF, 50V	1	
C922	ECJ2VF1H104Z	C 0.1UF, Z, 50V	1	
C923	ECQF4103JZ	P 0.01UF, J, 400V	1	
C924	ECKD3D471KBN	C 470PF, K, 2KV	1	
C926	ECJ2XC1H471J	C 470PF, J, 50V	1	
C927	ECJ2XC1H221J	C 220PF, J, 50V	1	
C928	ECJ2XC1H222J	C 2200PF, J, 50V	1	
C929	ECA1HHG100	E 10UF, 50V	1	
C930	ECJ2VF1H103Z	C 0.01UF, Z, 50V	1	
C931	ECJ2XC1H151J	C 150PF, J, 50V	1	
C970	ECKD3A331KBP	C 330PF, K, 1KV	1	
C971	EEUFC1V122	E 1200UF, 6.3V	1	
C972	ECKD3A331KBP	C 330PF, K, 1KV	1	
C973	EEUFC1E102	E 1000UF, 25V	1	
C974	ECJ2XB1H332K	C 3300PF, K, 50V	1	
C990	ECA1HHG100	E 10UF, 50V	1	
C1000	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1001	EEHBOJ470R	C 47PF, J, 6.3V	1	
C1002	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1003	EEHBOG221P	C 220PF, J, 4V	1	
C1004	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1005	EEHBC1C470P	C 47PF, J, 16V	1	
C1006	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1007	EEHBOG101R	C 100PF, J, 4V	1	
C1008	EEHBC1C470P	C 47PF, J, 16V	1	
C1009	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1010	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C1013	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C1014	EEHBOJ101P	C 100PF, J, 6.3V	1	
C1016,17	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C1018	EEHBOJ470R	C 47PF, J, 6.3V	1	
C1019	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C1020	EEHBC1H4R7R	C 4.7PF, J, 50V	1	
C1021	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1022	TCUY1C225KBM	C 2.2UF, 16V	1	F1K1C225A026
C1023	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1024	EEHBOJ101P	C 100PF, J, 6.3V	1	
C1025	ECJ2XC1H102J	C 1000PF, J, 50V	1	
C1027	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C1028	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C1029,30	ECJ2XC1H330J	C 33PF, J, 50V	2	
C1031	ECJ2XB1H563K	C 0.056UF, K, 50V	1	
C1032	EEHBOG101R	C 100PF, J, 4V	1	
C1033	ECJ1VFLH104Z	C 0.1UF, Z, 50V	1	
C1034	EEHBOJ101P	C 100PF, J, 6.3V	1	
C1035	ECJ2VFLC105Z	C 1UF, Z, 16V	1	
C1036	EEHBOG221P	C 220PF, J, 4V	1	
C1037	EEHBP1C100R	C 10PF, J, 16V	1	
C1038-40	ECJ1XF1C104Z	C 0.1UF, Z, 16V	3	
C1041	EEHBB1C470P	C 47PF, J, 16V	1	
C1042	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C1044	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1045	ECJ1XC1H151J	C 150PF, J, 50V	1	
C1046	EEHBB1C100R	C 10PF, J, 16V	1	
C1047	EEHBOG221P	C 220PF, J, 4V	1	
C1048-50	ECJ1XF1C104Z	C 0.1UF, Z, 16V	3	
C1051	EEHBOG101R	C 100PF, J, 4V	1	
C1052	ECJ1VB1H103K	C 0.01UF, K, 50V	1	
C1053	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C1054	EEHBOG221P	C 220PF, J, 4V	1	
C1055	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C1056	ECJ1XC1H221J	C 220PF, J, 50V	1	
C1057,58	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C1059	ECJ1XC1H221J	C 220PF, J, 50V	1	
C1060	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C1062	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C1063	ECJ1XC1H220J	C 22PF, J, 50V	1	
C1064	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C1065	ECJ1XC1H220J	C 22PF, J, 50V	1	
C1066	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C1068-73	ECJ1XF1C104Z	C 0.1UF, Z, 16V	6	
C1075	ECJ2XC1H101J	C 100PF, J, 50V	1	
C1076	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C1077	EEHBB1C100R	C 10PF, J, 16V	1	
C1078	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C1081	EEHBOG101R	C 100PF, J, 4V	1	
C1082-84	ECJ1XF1C104Z	C 0.1UF, Z, 16V	3	
C1086-89	ECJ1XF1C104Z	C 0.1UF, Z, 16V	4	
C1092	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C1093	ECJ1VB1H103K	C 0.01UF, K, 50V	1	
C1094	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1095	EEHBB1C470P	C 47PF, J, 16V	1	
C1152	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1201	ECJ2VFLC105Z	C 1UF, Z, 16V	1	
C1202	ECJ1XC1H221J	C 220PF, J, 50V	1	
C1203	ECJ1XC1H101J	C 100PF, J, 50V	1	
C1204	ECJ1XC1H221J	C 220PF, J, 50V	1	
C1205	ECJ1XC1H101J	C 100PF, J, 50V	1	
C1206,07	ECJ1XC1H221J	C 220PF, J, 50V	2	
C1208	ECJ1XC1H101J	C 100PF, J, 50V	1	
C1231	EEHBOJ101P	C 100PF, J, 6.3V	1	
C1234	ECJ1VFLH103Z	C 0.01UF, Z, 50V	1	
C1235,36	ECJ1XC1H271J	C 270PF, J, 50V	2	
C1238,39	ECJ1XC1H101J	C 100PF, J, 50V	2	
C1240	EEHBB1C101P	C 100PF, J, 16V	1	
C1241	EEHBOJ221UP	C 220PF, J, 6.3V	1	
C1242	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1254	ECJ1XC1H101J	C 100PF, J, 50V	1	
C1270	ECJ2VFLC104Z	C 0.1UF, Z, 16V	1	
C1274	EEHBB1C470P	C 47PF, J, 16V	1	
C1275-81	ECJ2VFLC105Z	C 1UF, Z, 16V	7	
C1301,02	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C1306	EEHBB1C470P	C 47PF, J, 16V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C1308	EEHBB1C470P	C 47PF, J, 16V	1	
C1309-12	EEHBOJ470R	C 47PF, J, 6.3V	4	
C1317	EEHBOG101R	C 100PF, J, 4V	1	
C1318,19	EEHBB1C470P	C 47PF, J, 16V	2	
C1320	EEHBOG101R	C 100PF, J, 4V	1	
C1324	EEHBB1E330P	C 33PF, J, 25V	1	
C1325	ECJ1VFLH103Z	C 0.01UF, Z, 50V	1	
C1326,27	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C1329	EEHBB1H1R0R	C 1.0PF, J, 50V	1	
C1332,33	EEHBOG101R	C 100PF, J, 4V	2	
C1334	EEHBOG221P	C 220PF, J, 4V	1	
C1338	EEHBOG101R	C 100PF, J, 4V	1	
C1339	EEHBOG221P	C 220PF, J, 4V	1	
C1340	EEHBB1H1R0R	C 1.0PF, J, 50V	1	
C1341	EEHBB1C100R	C 10PF, J, 16V	1	
C1342-44	EEHBOG101R	C 100PF, J, 4V	3	
C1345	EEHBOG221P	C 220PF, J, 4V	1	
C1348	EEHBOJ470R	C 47PF, J, 6.3V	1	
C1350	EEHBOG101R	C 100PF, J, 4V	1	
C1351	ECJ1VFLA105Z	C 1UF, Z, 10V	1	
C1352,53	EEHBOG221P	C 220PF, J, 4V	2	
C1354	EEHBOJ470R	C 47PF, J, 6.3V	1	
C1355	EEHBOG101R	C 100PF, J, 4V	1	
C1356	ECJ1VFLA105Z	C 1UF, Z, 10V	1	
C1357	EEHBOG101R	C 100PF, J, 4V	1	
C1358,59	ECJ1VFLA105Z	C 1UF, Z, 10V	2	
C1360	EEHBB1C100R	C 10PF, J, 16V	1	
C1361	EEHBOG101R	C 100PF, J, 4V	1	
C1362	ECJ1VFLA105Z	C 1UF, Z, 10V	1	
C1363	ECJ1VB1H103K	C 0.01UF, K, 50V	1	
C1365	ECJ1VB1C103K	C 0.01UF, K, 16V	1	
C1366,67	ECJ1VFLA105Z	C 1UF, Z, 10V	2	
C1368	ECJ1VB1H103K	C 0.01UF, K, 50V	1	
C1369	ECJ1XB0J105K	C 1UF, K, 16V	1	
C1370	ECJ1VFLA105Z	C 1UF, Z, 10V	1	
C1371	ECJ1XC1H150J	C 15PF, J, 50V	1	
C1375	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C1378,79	ECJ1XC1H680J	C 68PF, J, 50V	2	
C1382	EEHBOJ470R	C 47PF, J, 6.3V	1	
C1383	ECJ1XC1H150J	C 15PF, J, 50V	1	
C1386	ECJ1XB1H102K	C 1000UF, Z, 50V	1	
C1389,90	ECJ1XC1H470J	C 47PF, J, 50V	2	
C1393	ECJ1XC1H220J	C 22PF, J, 50V	1	
C1395	ECJ1XC1H220J	C 22PF, J, 50V	1	
C1398	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C1402,03	ECJ1VFLA105Z	C 1UF, Z, 10V	2	
C1404,05	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C1408,09	ECJ1VFLA105Z	C 1UF, Z, 10V	2	
C1410-13	ECJ1VB0J225K	C 2.2UF, K, 6.3V	4	
C1416	ECJ1VB1H103K	C 0.01UF, K, 50V	1	
C1417	ECJ3YB0J335K	C 33UF, J, 25V	1	
C1418	ECJ1XC1H680J	C 68PF, J, 50V	1	
C1419	ECJ1XC1H100D	C 10PF, D, 50V	1	
C1420	ECJ1XC1H050D	C 5PF, D, 50V	1	
C1421,22	ECJ1XC1H180J	C 18PF, J, 50V	2	
C1424	ECJ1XC1H330J	C 33PF, J, 50V	1	
C1425	ECJ1XC1H101J	C 100PF, J, 50V	1	
C1426	ECJ1VB1H103K	C 0.01UF, K, 50V	1	
C1427	ECJ1XC1H101J	C 100PF, J, 50V	1	
C1428	ECJ1VFLA105Z	C 1UF, Z, 10V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C1429,30	ECJ1XC1H180J	C 18PF, J, 50V	2	
C1431,32	ECJ1XC1H101J	C 100PF, J, 50V	2	
C1433,34	ECJ1VF1A105Z	C 1UF, Z, 10V	2	
C1437	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1438-40	ECJ1VF1A105Z	C 1UF, Z, 10V	3	
C1441	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1442	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1444-49	ECJ1VF1A105Z	C 1UF, Z, 10V	6	
C1452,53	ECJ1VF1A105Z	C 1UF, Z, 10V	2	
C1454	ECJ1VB1H103K	C 0.01UF, K, 50V	1	
C1457	ECJ1VF1H103Z	C 0.01UF, Z, 50V	1	
C1464	EEHBC1C470P	C 47PF, J, 16V	1	
C1466	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1467	ECJ1XC1H820J	C 82PF, J, 50V	1	
C1468	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1471	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1476	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1479	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1482,83	ECJ1VF1A105Z	C 1UF, Z, 10V	2	
C1489	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1496	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1501	ECJ1XC1H150J	C 15PF, J, 50V	1	
C1502	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1505	ECJ1XC1H180J	C 18PF, J, 50V	1	
C1510	ECJ1XC1H470J	C 47PF, J, 50V	1	
C1512	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1514-23	ECJ1VF1A105Z	C 1UF, Z, 10V	10	
C1525-27	ECJ1VF1A105Z	C 1UF, Z, 10V	3	
C1528,29	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C1530	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1531	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1533,34	ECJ1VF1A105Z	C 1UF, Z, 10V	2	
C1535	ECJ1XC1H470J	C 47PF, J, 50V	1	
C1536	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1537,38	ECJ1VF1A105Z	C 1UF, Z, 10V	2	
C1539,40	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C1541	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1542	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1543	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1545	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1546,47	ECJ1VF1A105Z	C 1UF, Z, 10V	2	
C1549-53	ECJ1VF1A105Z	C 1UF, Z, 10V	5	
C1554	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1555	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1557	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1559	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1561-63	ECJ1VF1A105Z	C 1UF, Z, 10V	3	
C1565-70	ECJ1VF1A105Z	C 1UF, Z, 10V	6	
C1572-74	ECJ1VF1A105Z	C 1UF, Z, 10V	3	
C1581	TCUY0J335MBM	C 3.3UF, 6.3V	1	F1K0J335A003
C1584	EEHBOG221P	C 220PF, J, 4V	1	
C1587	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1589	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1590,91	ECJ1XC1H680J	C 68PF, J, 50V	2	
C1592	ECJ1VB1C103K	C 0.01UF, K, 16V	1	
C1593,94	ECJ1XC1H330J	C 33PF, J, 50V	2	
C1595	ECJ1VF1A105Z	C 1UF, Z, 10V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C1597	ECJ1VB1C103K	C 0.01UF, K, 16V	1	
C1598,99	ECJ1VB1H103K	C 0.01UF, K, 50V	2	
C1601	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1603	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1605	EEHBC1C470P	C 47PF, J, 16V	1	
C1609	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1610	ECJ1VB1C103K	C 0.01UF, K, 16V	1	
C1613	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1614	ECJ1XC1H680J	C 68PF, J, 50V	1	
C1615	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1616	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1618-23	ECJ1VF1A105Z	C 1UF, Z, 10V	6	
C1625	ECJ1XC1H330J	C 33PF, J, 50V	1	
C1626	EEHBC1C470P	C 47PF, J, 16V	1	
C1628-30	ECJ1VF1A105Z	C 1UF, Z, 10V	3	
C1631	ECJ1VF1H103Z	C 0.01UF, Z, 50V	1	
C1632,33	ECJ1VF1A105Z	C 1UF, Z, 10V	2	
C1634,35	ECJ1VF1H103Z	C 0.01UF, Z, 50V	2	
C1636-40	ECJ1VF1A105Z	C 1UF, Z, 10V	5	
C1641	ECJ1VB1C103K	C 0.01UF, K, 16V	1	
C1642-51	ECJ1VF1A105Z	C 1UF, Z, 10V	10	
C1652	ECJ1VB1H103K	C 0.01UF, K, 50V	1	
C1653	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1654	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1655	ECJ1VB1H103K	C 0.01UF, K, 50V	1	
C1656	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1657	ECJ1VB1H103K	C 0.01UF, K, 50V	1	
C1658	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1659	EEHBC1C470P	C 47PF, J, 16V	1	
C1660-74	ECJ1VF1A105Z	C 1UF, Z, 10V	15	
C1675	ECJ1VB1H103K	C 0.01UF, K, 50V	1	
C1677-79	ECJ1VF1A105Z	C 1UF, Z, 10V	3	
C1680	ECJ1VB1C103K	C 0.01UF, K, 16V	1	
C1681	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1682	EEHBOG101R	C 100PF, J, 4V	1	
C1691-00	ECJ1VF1H103Z	C 0.01UF, Z, 50V	10	
C1705-11	ECJ1VF1H103Z	C 0.01UF, Z, 50V	7	
C1712	ECJ1VB1H103K	C 0.01UF, K, 50V	1	
C1713	ECJ1VF1H103Z	C 0.01UF, Z, 50V	1	
C1717-19	ECJ1VF1H103Z	C 0.01UF, Z, 50V	3	
C1725	ECJ1XB0J105K	C 1UF, K, 16V	1	
C1727	ECJ1XB0J105K	C 1UF, K, 16V	1	
C1728	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1729	EEHBP1C100R	C 10PF, J, 16V	1	
C1730	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C1731,32	ECJ1XB0J105K	C 1UF, K, 16V	2	
C1733	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C1734	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1735	EEHBP1C100R	C 10PF, J, 16V	1	
C1736	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1737	EEHBP1C100R	C 10PF, J, 16V	1	
C1738	ECJ1XB0J105K	C 1UF, K, 16V	1	
C1739	EEHBP1C100R	C 10PF, J, 16V	1	
C1741	TCUY0J685MBM	C 6.8UF, 6.3V	1	F1K0J685A003
C1742	ECJ1VF1H103Z	C 0.01UF, Z, 50V	1	
C1743	EEHBP1C100R	C 10PF, J, 16V	1	
C1744	EEHBC1C470P	C 47PF, J, 16V	1	
C1745	ECJ1XB0J105K	C 1UF, K, 16V	1	
C1747	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1750	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1751	ECJ1XC1H101J	C 100PF, J, 50V	1	
C1753	ECJ1XC1H220J	C 22PF, J, 50V	1	
C1755	ECJ1XC1H390J	C 39PF, J, 50V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C1757	ECJ1XC1H150J	C 15PF, J, 50V	1	
C1758	ECJ1VC1H080C	C 8PF, C, 50V	1	
C1760	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1761	ECJ1XC1H470J	C 47PF, J, 50V	1	
C1762,63	ECJ1XB0J105K	C 1UF, K, 16V	2	
C1765	ECJ1XC1H330J	C 33PF, J, 50V	1	
C1766	ECJ1XC1H101J	C 100PF, J, 50V	1	
C1767	ECJ1XC1H330J	C 33PF, J, 50V	1	
C1771	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C1772	ECJ1XC1H390J	C 39PF, J, 50V	1	
C1773	ECJ1XC1H150J	C 15PF, J, 50V	1	
C1774	TCUY0J685MBM	C 6.8UF, 6.3V	1	Flk0J685A003
C1776,77	ECJ1XB0J105K	C 1UF, K, 16V	2	
C1780	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1781	EEH1B1C470P	C 47PF, J, 16V	1	
C1783-85	ECJ1XB1C104K	C 0.1UF, Z, 16V	3	
C1807-14	ECJ1VF1H103Z	C 0.01UF, Z, 50V	8	
C1816	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1817-20	ECJ1VF1H103Z	C 0.01UF, Z, 50V	4	
C1827,28	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C1829,30	ECJ1VC1H560J	C 56PF, J, 50V	2	
C1831	ECJ1XC1H151J	C 150PF, J, 50V	1	
C1832	ECJ1VF1H103Z	C 0.01UF, Z, 50V	1	
C1833	ECJ3XB0J106M	C 10UF, M, 6.3V	1	
C1834	ECJ1XC1H101J	C 100PF, J, 50V	1	
C1835,36	ECJ1VF1H103Z	C 0.01UF, Z, 50V	2	
C1837,38	ECJ1VC1H560J	C 56PF, J, 50V	2	
C1839	ECJ1XC1H151J	C 150PF, J, 50V	1	
C1840	ECJ1VF1H103Z	C 0.01UF, Z, 50V	1	
C1841	ECJ3XB0J106M	C 10UF, M, 6.3V	1	
C1842	ECJ1XC1H101J	C 100PF, J, 50V	1	
C1843,44	ECJ1VF1H103Z	C 0.01UF, Z, 50V	2	
C1845,46	ECJ1VC1H560J	C 56PF, J, 50V	2	
C1847	ECJ1XC1H151J	C 150PF, J, 50V	1	
C1848	ECJ1VF1H103Z	C 0.01UF, Z, 50V	1	
C1849	ECJ3XB0J106M	C 10UF, M, 6.3V	1	
C1850	ECJ1VB1C103K	C 0.01UF, K, 16V	1	
C1851	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1852	EEH1B0J470R	C 47PF, J, 6.3V	1	
C1853	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1854	EEH1B1C470P	C 47PF, J, 16V	1	
C1855	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C1856	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1857	EEH1B0G101R	C 100PF, J, 4V	1	
C1858	ECJ1VF1H103Z	C 0.01UF, Z, 50V	1	
C1859	ECJ1XC1H101J	C 100PF, J, 50V	1	
C1860-62	ECJ1VF1H103Z	C 0.01UF, Z, 50V	3	
C1863	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1864	EEH1B0G101R	C 100PF, J, 4V	1	
C1865,66	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C1867,68	EEH1B0G101R	C 100PF, J, 4V	2	
C1869	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C1870	ECJ1VF1H103Z	C 0.01UF, Z, 50V	1	
C1872,73	EEH1B0G101R	C 100PF, J, 4V	2	
C1874,75	EEFCD0G560R	C 56UF,	2	
C1876	ECJ1XC1H471J	C 470PF, J, 50V	1	
C1877	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C1878	ECJ3XB0J106M	C 10UF, M, 6.3V	1	
C1881	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C1883	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C1884	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C1885	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1886	TCUY1C225KBM	C 2.2UF, 16V	1	Flk1C225A026
C1887	ECJ3XB0J106M	C 10UF, M, 6.3V	1	
C1888	ECJ3YB1A475K	C 0.047UF, K, 10V	1	
C1889	ECJ3XB0J106M	C 10UF, M, 6.3V	1	
C1890	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C1891	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1892	ECJ3VB1C474K	C 0.47UF, K, 16V	1	
C1893,94	ECJ2XB1H103K	C 0.01UF, K, 50V	2	
C1895-97	ECJ1VF1H104Z	C 0.1UF, Z, 50V	3	
C1898	EEH1B1C470P	C 47PF, J, 16V	1	
C1899,00	ECJ1VF1H104Z	C 0.1UF, Z, 50V	2	
C1901,02	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C1905-14	ECJ1XB1H102K	C 1000UF, Z, 50V	10	
C1915-17	ECJ1VF1H103Z	C 0.01UF, Z, 50V	3	
C1919,20	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C1921	ECJ1VF1H103Z	C 0.01UF, Z, 50V	1	
C1922	ECJ3YB0J335K	C 33UF, J, 25V	1	
C1923-26	ECJ1XF1C104Z	C 0.1UF, Z, 16V	4	
C1927	ECJ2XC1H102J	C 1000PF, J, 50V	1	
C1928	ECJ2XC1H101J	C 100PF, J, 50V	1	
C1929	ECJ2VF1H103Z	C 0.01UF, Z, 50V	1	
C1930,31	ECJ3XB0J106M	C 10UF, M, 6.3V	2	
C1932	ECJ2XC1H102J	C 1000PF, J, 50V	1	
C1933	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1934	EEH1B1C470P	C 47PF, J, 16V	1	
C1935	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C1936	ECJ2VF1C105Z	C 1UF, Z, 16V	1	
C1937-39	EEH1B1A471P	C 470PF, J, 10V	3	
C1951-53	ECJ3XB0J106M	C 10UF, M, 6.3V	3	
C2001	ECJ2XB1H153K	C 0.015UF, K, 50V	1	
C2002	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C2003,04	ECJ2XB1H102K	C 1000PF, K, 50V	2	
C2006	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C2007,08	ECEA1HN100U	E 10UF, 50V	2	
C2009	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C2010	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C2011	ECA1EM471	E 470UF, 25V	1	
C2012	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C2016	ECA1HM100	E 10UF, 50V	1	
C2017	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C2018	ECA1HM100	E 10UF, 50V	1	
C2019	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C2021	ECA1HM3R3	E 3.3UF, 50V	1	
C2022,23	ECJ2VF1C104Z	C 0.1UF, Z, 16V	2	
C2024	ECA1HM100	E 10UF, 50V	1	
C2026,27	ECJ2VF1C104Z	C 0.1UF, Z, 16V	2	
C2029,30	ECJ2XC1H030C	C 3PF, C, 50V	2	
C2031,32	ECA1CM101	E 100UF, 16V	2	
C2033	ECJ2XC1H470J	C 47PF, J, 50V	1	
C2034	ECA1CM101	E 100UF, 16V	1	
C2035	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C2036	ECJ2XC1H470J	C 47PF, J, 50V	1	
C2037	ECJ2XC1H560J	C 56PF, J, 50V	1	
C2038	ECJ2XC1H100C	C 10PF, C, 50V	1	
C2039	ECJ2XC1H220J	C 22UF, J, 50V	1	
C2043	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C2044	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C2045	ECJ2VB1C104K	C 0.1UF, K, 16V	1	
C2050	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C2052	ECJ2VF1C105Z	C 1UF, Z, 16V	1	
C2056	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C2058,59	ECJ1XC1H221J	C 220PF, J, 50V	2	
C2201,02	ECA1HM100	E 10UF, 50V	2	
C2203	ECJ2VF1C105Z	C 1UF, Z, 16V	1	
C2204	ECA1CEN100	E 10UF, 16V	1	
C2205	ECA1CM101	E 100UF, 16V	1	
C2207	ECJ2YB1E224K	C 0.22UF, K, 25V	1	
C2212,13	TCUY1C225KBM	C 2.2UF, 16V	2	F1K1C225A026
C2214,15	ECJ2XB1H102K	C 1000PF, K, 50V	2	
C2222	ECJ2VF1H104Z	C 0.1UF, Z, 50V	1	
C2225,26	ECJ2VF1H104Z	C 0.1UF, Z, 50V	2	
C2228	ECJ2XB1A105K	C 1UF, K, 10V	1	
C2238,39	ECJ2VF1C105Z	C 1UF, Z, 16V	2	
C2262	ECJ2XB1A105K	C 1UF, K, 10V	1	
C2270	ECA1CM101	E 100UF, 16V	1	
C2271	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C2272,73	ECJ2XB1A105K	C 1UF, K, 10V	2	
C2274,75	ECJ1XC1H470J	C 47PF, J, 50V	2	
C2276	ECJ1VF1H103Z	C 0.01UF, Z, 50V	1	
C2286	ECJ1VF1H103Z	C 0.01UF, Z, 50V	1	
C2287,88	ECJ1XC1H470J	C 47PF, J, 50V	2	
C2289	ECA1CM101	E 100UF, 16V	1	
C2290	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C2305,06	ECA1VHG470	E 47UF, 35V	2	
C2307,08	ECA1HHG220	E 22UF, 50V	2	
C2309,10	ECA1HEN2R2	E 2.2UF, 50V	2	
C2311,12	ECJ2XB1H682K	C 6800PF, K, 50V	2	
C2313,14	ECA1HHG2R2	E 2.2UF, 50V	2	
C2317,18	ECA1VHG221	E 220UF, 35V	2	
C2321,22	ECQV1H225JM	P 2.2UF, J, 50V	2	
C2323,24	ECJ2XC1H102J	C 1000PF, J, 50V	2	
C2325,26	ECA1EHG471	E 470UF, 25V	2	
C2327-30	ECQV1H104JM	P 0.1UF, J, 50V	4	
C2331,32	ERJ6GEYJ104	M 100KOHM, J, 1/10W	2	
C2333,34	ECA1EHG471	E 470UF, 25V	2	
C2339	ECA1HHG100	E 10UF, 50V	1	
C2342	ECA1HHG100	E 10UF, 50V	1	
C2345,46	ECA1VHG470	E 47UF, 35V	2	
C2347,48	ECA1HHG220	E 22UF, 50V	2	
C2349	ECA1HEN2R2	E 2.2UF, 50V	1	
C2355	ECA1HEN2R2	E 2.2UF, 50V	1	
C2381	ECA1HHG100	E 10UF, 50V	1	
C2382	ECA1CHG101	E 100UF, 16V	1	
C2383,84	ECJ2XB1H682K	C 6800PF, K, 50V	2	
C2385,86	ECA1HHG2R2	E 2.2UF, 50V	2	
C2387,88	ECA1VHG221	E 220UF, 35V	2	
C2389,90	ECA1EHG471	E 470UF, 25V	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C2391,92	ECQV1H225JM	P 2.2UF, J, 50V	2	
C2393,94	ECA1EHG471	E 470UF, 25V	2	
C2395,96	ECJ2XC1H102J	C 1000PF, J, 50V	2	
C2397-00	ECQV1H104JM	P 0.1UF, J, 50V	4	
C2401,02	ECJ1VB1H182K	C 1800PF, K, 50V	2	
C2403,04	ECA1HEN4R7	E 4.7UF, 50V	2	
C2407	ECJ1VB1H562K	C 5600PF, K, 50V	1	
C2408	ECA1HHG4R7	E 4.7UF, 50V	1	
C2412	ECJ1VB1H103K	C 0.01UF, K, 50V	1	
C2413	ECA1HHG470	E 47UF, 50V	1	
C2414	EEHBB1C470P	C 47PF, J, 16V	1	
C2415	ECA1HEN4R7	E 4.7UF, 50V	1	
C2416	ECJ1XC1H271J	C 270PF, J, 50V	1	
C2417	ECJ1VB1E333K	C 0.33UF, K, 25V	1	
C2418	ECJ1XC1H271J	C 270PF, J, 50V	1	
C2419	ECJ1VB1E333K	C 0.33UF, K, 25V	1	
C2420	ECJ1XC1H271J	C 270PF, J, 50V	1	
C2421	ECJ1VB1E333K	C 0.33UF, K, 25V	1	
C2422	ECJ1XC1H271J	C 270PF, J, 50V	1	
C2423	ECJ1VB1E333K	C 0.33UF, K, 25V	1	
C2424-27	ECJ1VB1H562K	C 5600PF, K, 50V	4	
C2428	ECA1CHG101	E 100UF, 16V	1	
C2429	ECJ1VB1H103K	C 0.01UF, K, 50V	1	
C2430	ECA1CHG101	E 100UF, 16V	1	
C2431	ECJ1VB1H103K	C 0.01UF, K, 50V	1	
C2432	ECJ1VC1H271K	C 270PF, J, 50V	1	ECJ1VC1H561K
C2436	ECJ1VC1H271K	C 270PF, J, 50V	1	ECJ1VC1H561K
C2440	ECJ1VB1H103K	C 0.01UF, K, 50V	1	
C2441,42	ECJ1VB1H123K	C 0.12UF, K, 50V	2	
C2443	ECA1CHG101	E 100UF, 16V	1	
C2444,45	ECJ1VB1H123K	C 0.12UF, K, 50V	2	
C2655	ECJ1VB1H103K	C 0.01UF, K, 50V	1	
C2656	ECJ1XF1H102Z	C 1000PF, Z, 50V	1	
C2657	ECJ1VB1H103K	C 0.01UF, K, 50V	1	
C2658	ECJ1XF1H102Z	C 1000PF, Z, 50V	1	
C2662,63	ECJ1VB1H103K	C 0.01UF, K, 50V	2	
C2664	ECJ1XF1H102Z	C 1000PF, Z, 50V	1	
C2665,66	ECJ1XC1H150J	C 15PF, J, 50V	2	
C2667	ECJ2XB1A105K	C 1UF, K, 10V	1	
C2668	ECJ1VB1H103K	C 0.01UF, K, 50V	1	
C2669	ECJ1XF1H102Z	C 1000PF, Z, 50V	1	
C2670	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C2671	ECJ1VB1H103K	C 0.01UF, K, 50V	1	
C2672	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C2673	ECA1VM470	E 47UF, 35V	1	
C2675-77	ECJ2XB1A105K	C 1UF, K, 10V	3	
C2680	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C3100-10	ECJ2XC1H561J	C 560PF, J, 50V	11	
C3111,12	ECJ2XC1H102K	C 1000PF, K, 50V	2	
C3113-15	ECJ2XC1H561J	C 560PF, J, 50V	3	
C3116	ECJ2XC1H102K	C 1000PF, K, 50V	1	
C3120,21	ECA1CEN100	E 10UF, 16V	2	
C3122	ECA1CM101	E 100UF, 16V	1	
C3123,24	ECJ2VF1C105Z	C 1UF, Z, 16V	2	
C3125	ECA1CM101	E 100UF, 16V	1	
C3126,27	TCUY0J335MBM	C 3.3UF, 6.3V	2	F1K0J335A003
C3128	ECJ2XB1A105K	C 1UF, K, 10V	1	
C3129	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C3130	ECJ2XB1A105K	C 1UF, K, 10V	1	
C3131,3 2	TCUY0J335MBM	C 3.3UF, 6.3V	2	F1K0J335A003
C3133,3 4	ECJ2VF1C104Z	C 0.1UF, Z, 16V	2	
C3135- 40	ECJ3YB0J106K	C 10 UF, K, 16V	6	ECJ2XB1A105K
C3141,4 2	ECJ2VF1C104Z	C 0.1UF, Z, 16V	2	
C3143	ECJ2VF1C105Z	C 1UF, Z, 16V	1	
C3150	ECA1CM101	E 100UF, 16V	1	
C3151	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C3152,5 3	ECJ2XB1A105K	C 1UF, K, 10V	2	
C3155	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C3170,7 1	ECEA1CN470U	E 47UF, 16V	2	
C3172	ECEA1CN100U	E 10UF, 16V	1	
C3174- 76	ECJ2VF1C104Z	C 0.1UF, Z, 16V	3	
C3177	ECA1HM100	E 10UF, 50V	1	
C3181,8 2	ECJ1XC1H470J	C 47PF, J, 50V	2	
C3194	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C3195	ECJ2XB1H562K	C 5600PF, K, 50V	1	
C3196	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C3197	ECJ2XB1H562K	C 5600PF, K, 50V	1	
C3198,9 9	ECJ2VF1C104Z	C 0.1UF, Z, 16V	2	
C3200	ECJ2VF1H104Z	C 0.1UF, Z, 50V	1	
C3201	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C3202	ECJ2FF1C475Z	C 0.047UF, Z, 16V	1	
C3203,0 4	ECJ3XB1C106M	C 1.0UF, K, 16V	2	
C3206	TCUY0J335MBM	C 3.3UF, 6.3V	1	F1K0J335A003
C3207	ECA1CM101	E 100UF, 16V	1	
C3208	TCUY0J335MBM	C 3.3UF, 6.3V	1	F1K0J335A003
C3209	ECJ2VF1C105Z	C 1UF, Z, 16V	1	
C3210,1 1	ECJ2XB1A105K	C 1UF, K, 10V	2	
C3212,1 3	ECJ3XB1C106M	C 1.0UF, K, 16V	2	
C3214	TCUY0J335MBM	C 3.3UF, 6.3V	1	F1K0J335A003
C3215	ECJ2XB1A105K	C 1UF, K, 10V	1	
C3216	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C3217	TCUY0J335MBM	C 3.3UF, 6.3V	1	F1K0J335A003
C3218	ECA1CM101	E 100UF, 16V	1	
C3219,2 0	ECJ2XB1A105K	C 1UF, K, 10V	2	
C3221	TCUY0J335MBM	C 3.3UF, 6.3V	1	F1K0J335A003
C3222	ECJ2XB1A105K	C 1UF, K, 10V	1	
C3223	TCUY0J335MBM	C 3.3UF, 6.3V	1	F1K0J335A003
C3224,2 5	ECJ2XB1A105K	C 1UF, K, 10V	2	
C3227	ECJ2XB1A105K	C 1UF, K, 10V	1	
C3228,2 9	TCUY0J335MBM	C 3.3UF, 6.3V	2	F1K0J335A003
C3232,3 3	ECJ2XB1A105K	C 1UF, K, 10V	2	
C3234	ECJ2VF1C104Z	C 0.1UF, Z, 16V	1	
C3235	ECJ3XB1C106M	C 1.0UF, K, 16V	1	
C3236	ECJ2VF1C105Z	C 1UF, Z, 16V	1	
C3237- 40	TCUY0J335MBM	C 3.3UF, 6.3V	4	F1K0J335A003
C3241	ECJ2XB1A105K	C 1UF, K, 10V	1	
C3279,8 0	ECJ2VF1C104Z	C 0.1UF, Z, 16V	2	
C3282	ECJ2VF1H104Z	C 0.1UF, Z, 50V	1	
C3290,9 1	ECJ2VF1C104Z	C 0.1UF, Z, 16V	2	
C3311- 13	ECJ2VF1C104Z	C 0.1UF, Z, 16V	3	
C3713,1 4	ECJ2XB1H103K	C 0.01UF, K, 50V	2	
C3718,1 9	ECJ2XC1H561J	C 560PF, J, 50V	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C6002,0 3	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C6005,0 6	ECJ3XB0J106M	C 10UF, M, 6.3V	2	
C6007- 10	ECJ1XF1C104Z	C 0.1UF, Z, 16V	4	
C6013	EEEB1A101P	C 100PF, J, 10V	1	
C6014	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C6016	ECJ2VF1C105Z	C 1UF, Z, 16V	1	
C6017	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C6018	EEFCD0J470R	47UF	1	
C6019,2 0	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C6021- 24	ECJ1VF1H103Z	C 0.01UF, Z, 50V	4	
C6026,2 7	ECJ1VF1H103Z	C 0.01UF, Z, 50V	2	
C6028	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C6030,3 1	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C6032	ECJ3XB0J106M	C 10UF, M, 6.3V	1	
C6034,3 5	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C6039	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C6040	EEEB0J221UP	C 220PF, J, 6.3V	1	
C6041,4 2	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C6043	EEEB0G101R	C 100PF, J, 4V	1	
C6044	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C6046- 55	ECJ1XF1C104Z	C 0.1UF, Z, 16V	10	
C6056	ECJ1VF1H103Z	C 0.01UF, Z, 50V	1	
C6057	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C6058- 70	ECJ1XF1C104Z	C 0.1UF, Z, 16V	13	
C6071	ECJ1VF1C105Z	C 1UF, Z, 10V	1	
C6072	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C6073	ECJ3YB1A106M	C 10UF, M, 6.3V	1	
C6074	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C6075	ECJ1XC1H470J	C 47PF, J, 50V	1	
C6077	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C6078	ECJ1VF1C105Z	C 1UF, Z, 10V	1	
C6080,8 1	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C6082	EEEB0G101R	C 100PF, J, 4V	1	
C6083,8 4	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C6086	ECJ1VB1C103K	C 0.01UF, K, 16V	1	
C6087	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C6088	ECJ1XC1H470J	C 47PF, J, 50V	1	
C6089	EEEB1C100R	C 10PF, J, 16V	1	
C6090	ECJ1VC1H270J	C 27PF, J, 50V	1	
C6091	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C6092	ECJ1XC1H151J	C 150PF, J, 50V	1	
C6093- 96	ECJ1XF1C104Z	C 0.1UF, Z, 16V	4	
C6097	EEEB0G101R	C 100PF, J, 4V	1	
C6100	ECJ1VF1C105Z	C 1UF, Z, 10V	1	
C6101	EEEB0G101R	C 100PF, J, 4V	1	
C6102	ECJ1VB1C103K	C 0.01UF, K, 16V	1	
C6103	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C6104	EEEB0G221P	C 220PF, J, 4V	1	
C6105	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C6106,0 7	EEEB0J221UP	C 220PF, J, 6.3V	2	
C6110	EEEB1A101P	C 100PF, J, 10V	1	
C6111,1 2	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C6401- 08	TCUY1C105ZFN	C 1UF, 16V	8	F1J1C1050006
C6411	ECJ2XB1H222K	C 2200PF, K, 50V	1	
C6412	ECJ2XB1H102K	C 1000PF, K, 50V	1	
C6417	ECJ2XB1H221K	C 220PF, K, 50V	1	
C6421	ECJ2XB1H222K	C 2200PF, K, 50V	1	
C6422	ECJ2XB1H102K	C 1000PF, K, 50V	1	
C6427	F1L2E1040002	E 1000UF, 25V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C6429	F1L2E1040002	E 1000UF, 25V	1	
C6431	F1L2E1040002	E 1000UF, 25V	1	
C6433	F1L2E1040002	E 1000UF, 25V	1	
C6452	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C6453	TCUY1C105ZFN	C 1UF, 16V	1	F1J1C1050006
C6454	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C6455	EEUFC1E221	E 220UF, 25V	1	
C6456	ECA2CM101	E 100UF, 160V	1	
C6458	ECJ4XB1E475M	C 4.7UF, M, 25V	1	
C6459	EEUFC1E470	E 47UF, 25V	1	
C6461	ECA1HM101	E 100UF, 50V	1	
C6462-65	ECJ4XB1E475M	C 4.7UF, M, 25V	4	
C6466	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C6467	ECJ2XB1H472K	C 4700PF, K, 50V	1	
C6468	TCUY1C105ZFN	C 1UF, 16V	1	F1J1C1050006
C6469	EEUFC1E221	E 220UF, 25V	1	
C6470	ECA1HM221	E 220UF, 50V	1	
C6471	TCUY1C105ZFN	C 1UF, 16V	1	F1J1C1050006
C6472	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C6473	TCUY1C105ZFN	C 1UF, 16V	1	F1J1C1050006
C6474	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C6475	EEUFC1E221	E 220UF, 25V	1	
C6476	ECA2CM101	E 100UF, 160V	1	
C6478	ECJ2XB1H104K	C 0.1UF, K, 50V	1	
C6481	F1L2J562A010	C 5600UF, K,6.3V	1	
C6485	F1L2J562A010	C 5600UF, K,6.3V	1	
C6486	F1L2J392A010	C 3900UF, K,6.3V	1	
C6490,91	ECJ3XK2J102K	C 1000PF, K,630V	2	
C6492	ECA2VHG100	E 10UF, 350V	1	
C6493	ECJ3XB2J222K	C 2200PF, K,630V	1	
C6501-08	TCUY1C105ZFN	C 1UF, 16V	8	F1J1C1050006
C6509	ECJ2XC1H102J	C 1000PF, J, 50V	1	
C6511,12	ECJ4XB1E475M	C 4.7UF, M, 25V	2	
C6513	ECA2CM101	E 100UF, 160V	1	
C6521	EEUFC1E470	E 47UF, 25V	1	
C6523	ECA1VM470	E 47UF, 35V	1	
C6524,25	ECJ3FC2D102J	C 1000PF, J,200V	2	
C6526	ECA2EHG220	E 22UF, 250V	1	
C6529	ECJ3XK2J102K	C 1000PF, K,630V	1	
C6531,32	ECJ4XB1E475M	C 4.7UF, M, 25V	2	
C6534	ECJ3XK2J102K	C 1000PF, K,630V	1	
C6541	ECJ4XB1E475M	C 4.7UF, M, 25V	1	
C6543,44	ECJ3FC2D102J	C 1000PF, J,200V	2	
C6546	TCUY1C105ZFN	C 1UF, 16V	1	F1J1C1050006
C6547	ECJ3FC2D102J	C 1000PF, J,200V	1	
C6550	ECA2CM101	E 100UF, 160V	1	
C6571	TCUY1C105ZFN	C 1UF, 16V	1	F1J1C1050006
C6575-78	TCUY1C105ZFN	C 1UF, 16V	4	F1J1C1050006
C6580,81	TCUY1C105ZFN	C 1UF, 16V	2	F1J1C1050006
C6584	ECJ3YB1E105K	C 1UF, K, 25V	1	
C6585	TCUY1C105ZFN	C 1UF, 16V	1	F1J1C1050006
C6588	TCUY1C105ZFN	C 1UF, 16V	1	F1J1C1050006
C6589	ECJ4XB1E475M	C 4.7UF, M, 25V	1	
C6590	TCUY1C105ZFN	C 1UF, 16V	1	F1J1C1050006
C6591	ECJ4XB1E475M	C 4.7UF, M, 25V	1	
C6598	ECA2CHG220	E 22UF, 160V	1	
C6601-04	ECA2DHG221	E 220UF, 200V	4	
C6607	ECJ3YB1E105K	C 1UF, K, 25V	1	
C6608	ECA1EM471	E 470UF, 25V	1	
C6611	F1L2J392A010	C 3900UF, K,6.3V	1	
C6617	F1L2J562A010	C 5600UF, K,6.3V	1	
C6620	ECJ2XB1H104K	C 0.1UF, K, 50V	1	
C6621-28	ECQE2105RKB	P 1UF, 250V	8	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C6631,32	ECJ4XB1E475M	C 4.7UF, M, 25V	2	
C6633	TCUY1C105ZFN	C 1UF, 16V	1	F1J1C1050006
C6634,35	ECJ4XB1E475M	C 4.7UF, M, 25V	2	
C6636	TCUY1C105ZFN	C 1UF, 16V	1	F1J1C1050006
C6637	EEUFC1E121	E 120UF, 25V	1	
C6639	F2A2D1510004	E 150UF, 200V	1	
C6642	F1L2E1040002	E 1000UF, 25V	1	
C6644	ECJ4XB1E475M	C 4.7UF, M, 25V	1	
C6645	ECJ3YB1E105K	C 1UF, K, 25V	1	
C6646	F2A1V121A085	E 120UF, 35V	1	
C6647	TCUY1C105ZFN	C 1UF, 16V	1	F1J1C1050006
C6650	ECQE2224KF	P 0.22UF, K,250V	1	
C6651,52	ECJ2XB1H103K	C 0.01UF, K, 50V	2	
C6655,56	EEUFC1A101	E 100UF, 10V	2	
C6660,61	ECJ3XK2J102K	C 1000PF, K,630V	2	
C6695,96	ECJ3XK2J102K	C 1000PF, K,630V	2	
C6701-04	F2A2D1510004	E 150UF, 200V	4	
C6707,08	EEUED2C470	E 47UF, 160V	2	
C6709	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C6718	F1L2J392A010	E 22UF, 63V	1	
C6721-28	ECQE2105RKB	P 1UF, 250V	8	
C6731,32	ECJ4XB1E475M	C 4.7UF, M, 25V	2	
C6733	TCUY1C105ZFN	C 1UF, 16V	1	F1J1C1050006
C6734,35	ECJ4XB1E475M	C 4.7UF, M, 25V	2	
C6736	TCUY1C105ZFN	C 1UF, 16V	1	F1J1C1050006
C6737	ECQE2224KF	P 0.22UF, K,250V	1	
C6739	F1L2E1040002	E 1000UF, 25V	1	
C6740	ECJ3XB2J222K	C 2200PF, K,630V	1	
C6741,42	TCUY1C105ZFN	C 1UF, 16V	2	F1J1C1050006
C6744	ECJ4XB1E475M	C 4.7UF, M, 25V	1	
C6746	ECJ4XB1E475M	C 4.7UF, M, 25V	1	
C6747	F2A2D1510004	E 150UF, 200V	1	
C6748	EEUFC1E221	E 220UF, 25V	1	
C6749	ECJ4XB1E475M	C 4.7UF, M, 25V	1	
C6750,51	TCUY1C105ZFN	C 1UF, 16V	2	F1J1C1050006
C6753,54	EEUFC1E221	E 220UF, 25V	2	
C6755	ECJ3YB1E105K	C 1UF, K, 25V	1	
C6756	EEUFC1A101	E 100UF, 10V	1	
C6757	ECJ4XB1E475M	C 4.7UF, M, 25V	1	
C6760,61	ECJ3XK2J102K	C 1000PF, K,630V	2	
C6772	F1L2J392A010	C 3900UF, K,6.3V	1	
C6774,75	F1L2J562A010	C 5600UF, K,6.3V	2	
C7101	TCUY1C105ZFN	C 1UF, 16V	1	F1J1C1050006
C7102	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C7104-06	TCUY1C105ZFN	C 1UF, 16V	3	F1J1C1050006
C7107	F1K2A1040004	C 0.1UF, 100V	1	
C7113	F1K2A474A006	C 0.47UF, 100V	1	
C7115	F1K2A474A006	C 0.47UF, 100V	1	
C7117	F1K2A474A006	C 0.47UF, 100V	1	
C7135	TCUY1C105ZFN	C 1UF, 16V	1	F1J1C1050006
C7136	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C7137	TCUY1C105ZFN	C 1UF, 16V	1	F1J1C1050006
C7138	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C7139	TCUY1C105ZFN	C 1UF, 16V	1	F1J1C1050006
C7140	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C7142	ECJ1XC1H101J	C 100PF, J, 50V	1	
C7153-55	ECJ1XC1H101J	C 100PF, J, 50V	3	
C7201	TCUY1C105ZFN	C 1UF, 16V	1	F1J1C1050006

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C7202	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C7203-06	TCUY1C105ZFN	C 1UF, 16V	4	FlJ1C1050006
C7207	F1K2A1040004	C 0.1UF, 100V	1	
C7210	TCUY1C105ZFN	C 1UF, 16V	1	FlJ1C1050006
C7211	F1K2A474A006	C 0.47UF, 100V	1	
C7213	F1K2A474A006	C 0.47UF, 100V	1	
C7215	F1K2A474A006	C 0.47UF, 100V	1	
C7217	F1K2A474A006	C 0.47UF, 100V	1	
C7235	TCUY1C105ZFN	C 1UF, 16V	1	FlJ1C1050006
C7236	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C7237	TCUY1C105ZFN	C 1UF, 16V	1	FlJ1C1050006
C7238	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C7239	TCUY1C105ZFN	C 1UF, 16V	1	FlJ1C1050006
C7240	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C7242,43	TCUY1C105ZFN	C 1UF, 16V	2	FlJ1C1050006
C7252-56	ECJ1XC1H101J	C 100PF, J, 50V	5	
C7501,02	EEUFC1E471	E 470UF, 25V	2	
C7503	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C7505,06	EEUFC1E471	E 470UF, 25V	2	
C7509	ECA1HHG100	E 10UF, 50V	1	
C7511,12	EEUFC1E471	E 470UF, 25V	2	
C7513	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C7516	EEUFC1E471	E 470UF, 25V	1	
C7517	EEUFC1C821	E 820UF, 16V	1	
C7518	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C7521	EEUFC1E471	E 470UF, 25V	1	
C7522	EEUFC1C821	E 820UF, 16V	1	
C7523	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C7525	ECA1HHG100	E 10UF, 50V	1	
C7530-34	EEUFC1C331	E 330UF, 16V	5	
C7535-37	ECJ2VF1C474Z	C 0.47UF, Z, 16V	3	
C7541-44	ECJ2VF1C104Z	C 0.1UF, Z, 16V	4	
C7551,52	EEUFC1E221	E 220UF, 25V	2	
C7554	ECJ2VF1C105Z	C 1UF, Z, 16V	1	
C7568	ECA1HHG220	E 22UF, 50V	1	
C7570,71	ECJ2XB1H103K	C 0.01UF, K, 50V	2	
C7572	ECA1HHG100	E 10UF, 50V	1	
C7581	ECA1HHG4R7	E 4.7UF, 50V	1	
C7582	ECJ2VB1C224K	C 0.22UF, K, 16V	1	
C7583	ECJ2VF1H104Z	C 0.1UF, Z, 50V	1	
C7584	ECJ2XC1H271J	C 270PF, J, 50V	1	
C7585	EEUFC1H100L	E 10UF, 50V	1	
C9030,31	ECJ3XB0J106M	C 10UF, M,6.3V	2	
C9032,33	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C9034,35	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C9036,37	ECJ3XB0J106M	C 10UF, M,6.3V	2	
C9038,39	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C9040	ECJ2VB1E473K	C 0.047UF, K, 25V	1	
C9041	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9042,43	ECJ2VB1E473K	C 0.047UF, K, 25V	2	
C9044	ECJ1XB1H102K	C 1000UF, Z, 50V	1	
C9045,46	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C9048,49	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C9051	ECJ1XB1C393K	C 0.039UF, K, 16V	1	
C9053	ECJ1VB1H392K	C 3900PF, K, 50V	1	
C9054-56	ECJ1XF1C104Z	C 0.1UF, Z, 16V	3	
C9077	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C9149	ECJ1XC1H100D	C 10PF, D, 50V	1	
C9150	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C9151	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9153	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C9154	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9156	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C9157-60	ECJ1XF1C104Z	C 0.1UF, Z, 16V	4	
C9161	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C9162	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C9163-70	ECJ1XF1C104Z	C 0.1UF, Z, 16V	8	
C9172-74	ECJ1XF1C104Z	C 0.1UF, Z, 16V	3	
C9175	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C9176	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9178-82	ECJ1XF1C104Z	C 0.1UF, Z, 16V	5	
C9183	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C9186	ECJ1XC1H100D	C 10PF, D, 50V	1	
C9187	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9191	ECJ1VF1H103Z	C 0.01UF, Z, 50V	1	
C9192	TCUY1C105ZFN	C 1UF, 16V	1	FlJ1C1050006
C9195	TCUY1C105ZFN	C 1UF, 16V	1	FlJ1C1050006
C9196	ECJ3VB1C104K	C 0.10UF, K, 16V	1	
C9197	ECJ2VB1E563K	C 0.056UF, K, 25V	1	
C9198	ECJ2VB1C104K	C 0.1UF, K, 16V	1	
C9199,00	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C9207	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C9301	ECJ1VF1H103Z	C 0.01UF, Z, 50V	1	
C9302	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9303	EEVHB1C470	E 47UF, 16V	1	
C9304	ECJ3XF1C475Z	C 4.7UF, Z, 16V	1	
C9305	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C9307	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9308	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C9309	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C9310	ECJ1XC1H330J	C 33PF, J, 50V	1	
C9311	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9314,15	ECJ3XF1C475Z	C 4.7UF, Z, 16V	2	
C9316	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9449	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9450	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C9453	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9454,55	ECJ3XF1C475Z	C 4.7UF, Z, 16V	2	
C9465	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9466	EEVHB0G221	E 220UF, 4V	1	
C9467	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9468	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C9470	ECJ1XC1H101J	C 100PF, J, 50V	1	
C9471	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9472	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C9474	ECJ3XF1C475Z	C 4.7UF, Z, 16V	1	
C9475-77	ECJ1XF1C104Z	C 0.1UF, Z, 16V	3	
C9478	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C9479-82	ECJ1XF1C104Z	C 0.1UF, Z, 16V	4	
C9485-93	ECJ1XF1C104Z	C 0.1UF, Z, 16V	9	
C9494,95	ECJ3XF1C475Z	C 4.7UF, Z, 16V	2	
C9496	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9598,99	ECJ1VF1H103Z	C 0.01UF, Z, 50V	2	
C9601-05	ECJ1XF1C104Z	C 0.1UF, Z, 16V	5	
C9607	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9611	ECJ3XF1C475Z	C 4.7UF, Z, 16V	1	
C9612	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9613	ECJ1VF1H103Z	C 0.01UF, Z, 50V	1	
C9616	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C9620,21	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C9623	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9625	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9629,30	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C9632	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9635	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9700,01	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C9702	EEVHB1C470	E 47UF, 16V	1	
C9703	ECJ1XC1H101J	C 100PF, J, 50V	1	
C9705	ECJ1XF1H102Z	C 1000PF, Z, 50V	1	
C9706,07	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C9708-10	EEVHB1C470	E 47UF, 16V	3	
C9712-17	ECJ1XC1H101J	C 100PF, J, 50V	6	
C9718	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9719	ECJ3XF1C475Z	C 4.7UF, Z, 16V	1	
C9720	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9722,23	ECJ1XC1H100D	C 10PF, D, 50V	2	
C9724	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9725	ECJ3XB0J106M	C 10UF, M, 6.3V	1	
C9726	ECJ3XF1C475Z	C 4.7UF, Z, 16V	1	
C9727,28	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C9729	ECJ3XF1C475Z	C 4.7UF, Z, 16V	1	
C9730-33	ECJ1XF1C104Z	C 0.1UF, Z, 16V	4	
C9737	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9739-41	ECJ1XF1C104Z	C 0.1UF, Z, 16V	3	
C9742	EEVHB1C470	E 47UF, 16V	1	
C9743	TCUY1C105ZFN	C 1UF, 16V	1	F1J1C1050006
C9748,49	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C9750	ECJ3XF1C475Z	C 4.7UF, Z, 16V	1	
C9751,52	ECJ1VF1H103Z	C 0.01UF, Z, 50V	2	
C9753,54	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C9755,56	ECJ1XF1H102Z	C 1000PF, Z, 50V	2	
C9759	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9760	ECJ1VB1C563K	C 0.056UF, K, 16V	1	
C9761,62	ECJ1XC1H330J	C 33PF, J, 50V	2	
C9763	ECJ1VF1H103Z	C 0.01UF, Z, 50V	1	
C9765	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9766	ECJ3XB0J106M	C 10UF, M, 6.3V	1	
C9767,68	TCUY1C105ZFN	C 1UF, 16V	2	F1J1C1050006
C9769	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C9951-53	EEVHB1C470	E 47UF, 16V	3	
C9954-56	ECJ1XF1C104Z	C 0.1UF, Z, 16V	3	
C9957	ECJ3XF1C475Z	C 4.7UF, Z, 16V	1	
C9958,59	F2H1E221A007	E 2.2UF, 25V	2	
C9960	ECJ3VB1C104K	C 0.10UF, K, 16V	1	
C9961	EEFUD0G121ER	120UF	1	
C9964,65	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C9966	EEVHB0G221	E 220UF, 4V	1	
C9967	ECJ3XB0J106M	C 10UF, M, 6.3V	1	
C9968	EEVHB1C470	E 47UF, 16V	1	
C9969	ECJ3XF1C475Z	C 4.7UF, Z, 16V	1	
C9970	ECJ2XB1E104K	C 0.1UF, K, 25V	1	
C9971	ECJ2XC1H222J	C 2200PF, J, 50V	1	
CB1-B7	K1MN48A00002	CONNECTOR	7	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
CF901,02	ERZV10V621P2	VARISTOR	2	△
D001,02	MA3020	ZENER DIODE	2	
D3	K1KA40A00140	40P CONNECTOR	1	
D4	K1KA12A00227	12P CONNECTOR	1	
D005	MA152K	DIODE	1	MA3X152K
D009	MA8056M	ZENER DIODE	1	MAZ80560M
D12	K1KA07A00189	7P CONNECTOR	1	
D20	K1KA20A00180	20P CONNECTOR	1	
D25	K1KA08A00293	8P CONNECTOR	1	
D27	K1KA09A00077	9P CONNECTOR	1	
D31,32	K1MN50B00026	50P CONNECTOR	2	
D300,01	MA152K	DIODE	2	MA3X152K
D302	LNJ107W5PRW	LED	1	
D303	MA152K	DIODE	1	MA3X152K
D308	MA8056M	ZENER DIODE	1	MAZ80560M
D309,10	MA152K	DIODE	2	MA3X152K
D311	MA8056M	ZENER DIODE	1	MAZ80560M
D317	MA3062M	ZENER DIODE	1	MAZ30620M
D401-03	MA152K	DIODE	3	MA3X152K
D404	SLWBA80Z	DIODE	1	△
D405	MA3082L	ZENER DIODE	1	MAZ30820L
D406	ERA22-10	DIODE	1	B0EAEV000002
D407	BOHCMM000001	DIODE	1	
D408	PC123FY2	PHOTO COUPLER	1	B3PAA0000012 △
D409-11	BOHCMM000001	DIODE	3	
D412	MA3051M	ZENER DIODE	1	MAZ30510M
D413	MA3200M	ZENER DIODE	1	MAZ32000M
D451	B0FBBR000019	DIODE	1	△
D452	BOHCMM000001	DIODE	1	
D453	MA3270M	ZENER DIODE	1	MAZ32700M
D454	BOHCMM000001	DIODE	1	
D457	BOHARR000016	DIODE	1	
D458,59	MA3270M	ZENER DIODE	2	MAZ32700M
D460	MA3100M	ZENER DIODE	1	MAZ31000M
D462	B0EAKT000012	DIODE	1	
D463	MLFS4	DIODE	1	
D550	BOHCMM000001	DIODE	1	
D551,52	B0BA02700021	DIODE	2	
D553-56	BOHCMM000001	DIODE	4	
D557,58	TMFG10G3	DIODE	2	B0BA01000046
D559	BOHCMM000001	DIODE	1	
D560	RC3B2LFU1	DIODE	1	
D561,62	BOHCMM000001	DIODE	2	
D563	RC3B2LFU1	DIODE	1	
D564	BOHCMM000001	DIODE	1	
D565,66	PC123FY2	PHOTO COUPLER	2	B3PAA0000012 △
D567	BOHARR000009	DIODE	1	
D568	BOHFRJ000012	DIODE	1	
D570	BOHARR000009	DIODE	1	
D571	MA3056M	ZENER DIODE	1	MAZ30560M
D572	BOHCMM000001	DIODE	1	
D573,74	BOHFRJ000012	DIODE	2	
D575	MLFS4	DIODE	1	
D576	BOHCMM000001	DIODE	1	
D577-84	MA152K	DIODE	8	MA3X152K
D585	MA3056M	ZENER DIODE	1	MAZ30560M
D586	BOHCMM000001	DIODE	1	
D587	MLFS4	DIODE	1	
D589	BOHCMM000001	DIODE	1	
D590	MA152K	DIODE	1	MA3X152K
D592,93	BOHCMM000001	DIODE	2	
D594	MA3056M	ZENER DIODE	1	MAZ30560M
D595	MA152K	DIODE	1	MA3X152K
D596	MA3051M	ZENER DIODE	1	MAZ30510M
D650	BOHCMM000001	DIODE	1	
D652	BOHCMM000001	DIODE	1	
D654	MA3056M	ZENER DIODE	1	MAZ30560M
D660	BOHFRJ000012	DIODE	1	
D661	MA152K	DIODE	1	MA3X152K

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
D920	D4SB80Z	DIODE	1	B0EBNT000004 △ ;
D921	B0EAKT000017	DIODE	1	
D922	B0HCMM000001	DIODE	1	
D925,26	B0HCMM000001	DIODE	2	
D929	TMPG10G3	DIODE	1	B0BA01000046
D970	FML-G12S	DIODE	1	
D971	RL3Z	DIODE	1	
D990	MA152K	DIODE	1	MA3X152K
D1000	MA152K	DIODE	1	MA3X152K
D1002	MA152K	DIODE	1	MA3X152K
D1003	MA3033L	ZENER DIODE	1	MAZ30330L
D1004	MA111	DIODE	1	MA2J111
D1006	MA152K	DIODE	1	MA3X152K
D1007	MA3047M	ZENER DIODE	1	MAZ30470M
D1011	MA3062M	ZENER DIODE	1	MAZ30620M
D1015	MA152K	DIODE	1	MA3X152K
D1227,28	MA111	DIODE	2	MA2J111
D1231,32	MA111	DIODE	2	MA2J111
D1234	MA111	DIODE	1	MA2J111
D1300,01	MA152K	DIODE	2	MA3X152K
D1302	MA3033L	ZENER DIODE	1	MAZ30330L
D1310-12	MA3140M	ZENER DIODE	3	MAZ31400M
D1488	MA152K	DIODE	1	MA3X152K
D1490	MA111	DIODE	1	MA2J111
D1850-52	MA3140M	ZENER DIODE	3	MAZ31400M
D1853-56	MA3150M	ZENER DIODE	4	MAZ31500M
D1857,58	MA111	DIODE	2	MA2J111
D2001	MA152K	DIODE	1	MA3X152K
D2003	MA152K	DIODE	1	MA3X152K
D2210	MA3036H	ZENER DIODE	1	MAZ30360H
D2301-04	M1FS4	DIODE	4	
D2305	S3L20U	DIODE	1	
D2311,12	MA152K	DIODE	2	MA3X152K
D2314,15	MA111	DIODE	2	MA2J111
D2653	MA152K	DIODE	1	MA3X152K
D3100-02	MA8140M	ZENER DIODE	3	MAZ81400M
D3105-09	MA8140M	ZENER DIODE	5	MAZ81400M
D3110	MA3068M	ZENER DIODE	1	MAZ30680M
D3111-16	MA8140M	ZENER DIODE	6	MAZ81400M
D3118-23	MA8140M	ZENER DIODE	6	MAZ81400M
D3124	MA152	DIODE	1	
D3125	B0BC3R400001		1	
D3126,27	MA111	DIODE	2	MA2J111
D3140	MA3120M	ZENER DIODE	1	MAZ31200M
D3141-52	MA111	DIODE	12	MA2J111
D3200	MA3120M	ZENER DIODE	1	MAZ31200M
D3210-13	MA8140M	ZENER DIODE	4	MAZ81400M
D3215	MA8140M	ZENER DIODE	1	MAZ81400M
D3219	MA8140M	ZENER DIODE	1	MAZ81400M
D3222	MA8140M	ZENER DIODE	1	MAZ81400M
D3225	MA8140M	ZENER DIODE	1	MAZ81400M
D3232,33	MA8140M	ZENER DIODE	2	MAZ81400M
D3715	MA3140M	ZENER DIODE	1	MAZ31400M
D3764	MA3140M	ZENER DIODE	1	MAZ31400M
D3766	MA3140M	ZENER DIODE	1	MAZ31400M
D3767,68	MA165	DIODE	2	MA2C165

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
D3769,70	MA4068M	ZENER DIODE	2	MAZ40680M
D3771,72	MA165	DIODE	2	MA2C165
D3773,74	MA4068M	ZENER DIODE	2	MAZ40680M
D6401-03	MA8056H	ZENER DIODE	3	MAZ80560H
D6405	D1FL40F4063	DIODE	1	B0EHP000001
D6406,07	MA8056H	ZENER DIODE	2	MAZ80560H
D6409-12	D1FL40F4063	DIODE	4	B0EHP000001
D6451	M1FS4	DIODE	1	
D6453	MA111	DIODE	1	MA2J111
D6455	MA111	DIODE	1	MA2J111
D6456	D1FL40F4063	DIODE	1	B0EHP000001
D6459	MA111	DIODE	1	MA2J111
D6460,61	B0HCKS000001	DIODE	2	
D6462	M1FS4	DIODE	1	
D6463	MA8056H	ZENER DIODE	1	MAZ80560H
D6464	M1FS4	DIODE	1	
D6465,66	MA8330M	ZENER DIODE	2	MAZ83300M
D6468	MA111	DIODE	1	MA2J111
D6470,71	MA111	DIODE	2	MA2J111
D6473	MA111	DIODE	1	MA2J111
D6475	MA111	DIODE	1	MA2J111
D6476	D1FL40F4063	DIODE	1	B0EHP000001
D6477	MA111	DIODE	1	MA2J111
D6478	B0HCKS000001	DIODE	1	
D6479	MA111	DIODE	1	MA2J111
D6481,82	MA8330M	ZENER DIODE	2	MAZ83300M
D6483-90	MA8056H	ZENER DIODE	8	MAZ80560H
D6491-94	D1FL40F4063	DIODE	4	B0EHP000001
D6495	B0HCKS000001	DIODE	1	
D6496	M1FS4	DIODE	1	
D6509	MA111	DIODE	1	MA2J111
D6511	M1FL20UF4063	DIODE	1	B0HCMM000009
D6512-14	MA111	DIODE	3	MA2J111
D6515	MA8240M	ZENER DIODE	1	MAZ82400M
D6516	MA111	DIODE	1	MA2J111
D6519	MA111	DIODE	1	MA2J111
D6520	B0JCKG000001	DIODE	1	
D6521	D1FL40F4063	DIODE	1	B0EHP000001
D6522	MA111	DIODE	1	MA2J111
D6523	D1FL40F4063	DIODE	1	B0EHP000001
D6524	MA8051L	ZENER DIODE	1	MAZ80510L
D6525	MA111	DIODE	1	MA2J111
D6526	M1FL20UF4063	DIODE	1	B0HCMM000009
D6527	MA111	DIODE	1	MA2J111
D6529	M1FS4	DIODE	1	
D6541	B0HCKS000001	DIODE	1	
D6542	MA111	DIODE	1	MA2J111
D6543	MA8051L	ZENER DIODE	1	MAZ80510L
D6544	MA111	DIODE	1	MA2J111
D6545	MA8051L	ZENER DIODE	1	MAZ80510L
D6546-48	MA8330M	ZENER DIODE	3	MAZ83300M
D6549,50	MA111	DIODE	2	MA2J111
D6551	M1FS4	DIODE	1	
D6552,53	MA111	DIODE	2	MA2J111
D6570	M1FL20UF4063	DIODE	1	B0HCMM000009
D6572	D1FL40F4063	DIODE	1	B0EHP000001
D6582	MA8051L	ZENER DIODE	1	MAZ80510L
D6583	LNJ201LPQJA	LED	1	
D6584	MA111	DIODE	1	MA2J111

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
D6585, 86	MA8330M	ZENER DIODE	2	MAZ83300M
D6611, 12	MLFS4	DIODE	2	
D6615	D1FL40F4063	DIODE	1	B0ECHP000001
D6620-22	SF20LC30F10	DIODE	3	
D6624	SF20LC30F10	DIODE	1	
D6629	BOHBSM000031	DIODE	1	
D6635	MA8051L	ZENER DIODE	1	MAZ80510L
D6636	MA111	DIODE	1	MA2J111
D6637	D1FL40F4063	DIODE	1	B0ECHP000001
D6640	D1FL40F4063	DIODE	1	B0ECHP000001
D6641, 42	MLFS4	DIODE	2	
D6645-47	D1FL40F4063	DIODE	3	B0ECHP000001
D6711, 12	MLFS4	DIODE	2	
D6715	D1FL40F4063	DIODE	1	B0ECHP000001
D6720-22	SF20LC30F10	DIODE	3	
D6724	SF20LC30F10	DIODE	1	
D6729	BOHBSM000031	DIODE	1	
D6735	MA8051L	ZENER DIODE	1	MAZ80510L
D6736	MA111	DIODE	1	MA2J111
D6737	D1FL40F4063	DIODE	1	B0ECHP000001
D6740, 41	D1FL40F4063	DIODE	2	B0ECHP000001
D6750, 51	D1FL40F4063	DIODE	2	B0ECHP000001
D6752, 53	MLFS4	DIODE	2	
D6754	D1FL40F4063	DIODE	1	B0ECHP000001
D6755	MLFS4	DIODE	1	
D6757	D1FL40F4063	DIODE	1	B0ECHP000001
D6758, 59	MA111	DIODE	2	MA2J111
D6762	MA111	DIODE	1	MA2J111
D6763	MA8051L	ZENER DIODE	1	MAZ80510L
D6764	MA111	DIODE	1	MA2J111
D6765	LNJ201LPQJA	LED	1	
D6766, 67	MA8330M	ZENER DIODE	2	MAZ83300M
D6768	MA111	DIODE	1	MA2J111
D6769	LNJ201LPQJA	LED	1	
D7201-04	MA152K	DIODE	4	MA3X152K
D7501	MA737	DIODE	1	MA2Q737
D7502	MA2120A	ZENER DIODE	1	MAZ21200A
D7504	MA737	DIODE	1	MA2Q737
D7505	MA2120A	ZENER DIODE	1	MAZ21200A
D7507	MA737	DIODE	1	MA2Q737
D7508	MA2068A	ZENER DIODE	1	
D7511	MA2068A	ZENER DIODE	1	
D7512	MA737	DIODE	1	MA2Q737
D7513	MA2051A	ZENER DIODE	1	MAZ20510A
D7515	MA737	DIODE	1	MA2Q737
D7537, 38	MA111	DIODE	2	MA2J111
D7539	MA3047H	ZENER DIODE	1	
D7540	MA3039H	ZENER DIODE	1	MAZ30390H
D7541, 42	MA111	DIODE	2	MA2J111
D7543	MA728	DIODE	1	MA2J728
D7544, 45	MA111	DIODE	2	MA2J111
D7546	MA152	DIODE	1	
D7547-49	MA111	DIODE	3	MA2J111
D7551	MA737	DIODE	1	MA2Q737
D7552	MA152K	DIODE	1	MA3X152K
D7581	MA111	DIODE	1	MA2J111
D7582	MA3X78900L	ZENER DIODE	1	
D9705-13	MA3062M	ZENER DIODE	9	MAZ30620M

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
D9715	MA3062M	ZENER DIODE	1	MAZ30620M
D9716	MA111	DIODE	1	MA2J111
D9719, 20	MA3062M	ZENER DIODE	2	MAZ30620M
D9723	MA3062M	ZENER DIODE	1	MAZ30620M
D9724	MA111	DIODE	1	MA2J111
D9727	MA152K	DIODE	1	MA3X152K
D9730	MA152K	DIODE	1	MA3X152K
D9769	MA152K	DIODE	1	MA3X152K
D9771	MA152K	DIODE	1	MA3X152K
D9952	MLFS4	DIODE	1	
D9953	MA152K	DIODE	1	MA3X152K
D9954	MLFS4	DIODE	1	
D9955	B0JCPD000010	DIODE	1	
DG1	K1KB50A00127	CONNECTOR	1	
DG2	K1KA40B00062	40P CONNECTOR	1	
DG3	K1KA30B00054	30P CONNECTOR	1	
DG4	K1KB50A00127	CONNECTOR	1	
DG6	K1KA20B00103	20P CONNECTOR	1	
DG7	TJSF18228	28P CONNECTOR	1	K1MN28A00023
DG8	K1KA20B00125	20P CONNECTOR	1	
DG10	K1KA20A00180	20P CONNECTOR	1	
DG12	K1KA09A00077	9P CONNECTOR	1	
DG18	K1KA06A00183	6P CONNECTOR	1	
DG30	K1KA10A00317	10P CONNECTOR	1	
DG31	TJS3A9880	8P CONNECTOR	1	K1KA08A00179
DG32	K1KA07A00096	7P CONNECTOR	1	
F900-1, -2	EYF-52BC	FUSE HOLDER	2	
F901-1, -2	EYF-52BC	FUSE HOLDER	2	
F902-1, -2	EYF-52BC	FUSE HOLDER	2	
FL1000, 01	ELKE103FA	NOISE FILTER	2	
FL1003	ELKE103FA	NOISE FILTER	1	
FL1015	ELKE103FA	NOISE FILTER	1	
FL1031, 32	ELKE103FA	NOISE FILTER	2	
FL1046	ELKE103FA	NOISE FILTER	1	
FL1048	ELKE103FA	NOISE FILTER	1	
FL1051	ELKE103FA	NOISE FILTER	1	
FL1064	ELKE103FA	NOISE FILTER	1	
FL1072-74	ELKE103FA	NOISE FILTER	3	
FL1077	ELKE103FA	NOISE FILTER	1	
FL1090, 91	ELKE103FA	NOISE FILTER	2	
FL1092-94	TSK1025	FERRITE CORE	3	J0MAB0000081
FL3101, 02	TLPD021	LINE FILTER	2	G1BYYYH00003
FL6001	TAX10088	EMI FILTER	1	J0HAAC000010
FL6002-04	ELKE103FA	NOISE FILTER	3	
FL6007-13	TLK20LFA473M	EMI FILTER	7	J0HABB000018
FL7106	ELKE103FA	NOISE FILTER	1	
FL7207-09	ELKE103FA	NOISE FILTER	3	
G5	K1KA06B00117	6P CONNECTOR	1	
G7	K1MN28B00056	28P CONNECTOR	1	
G18	K1KA06B00049	6P CONNECTOR	1	
H1	K1KB50A00127	50P CONNECTOR	1	
H4	K1KB50A00127	50P CONNECTOR	1	
H9	K1KA06A00220	6P CONNECTOR	1	
H10	TJS6A9390	24P CONNECTOR	1	K1KA24A00041
IC300	B3L000000020	IC	1	
IC401	MIP2E1DMY1TV	IC	1	
IC402	AN1431T	LINEAR IC	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
IC403	AN7705F	LINEAR IC	1	
IC451	C0DABZG00001	IC	1	
IC550	UPC24M18AHF	LINEAR IC	1	C0CAAME00003
IC551	C5HABZZ00123	IC	1	
IC552	C5HABZZ00080	IC	1	
IC553,54	AN1431T	LINEAR IC	2	
IC555	C0DAAHG00007	IC	1	
IC557,58	AN1431T	LINEAR IC	2	
IC920	C5HABZZ00121	IC	1	
IC921	B3PAA0000261	IC	1	△
IC970	AN1431M	LINEAR IC	1	
IC1001	MC14052BF	MOS IC (CMOS GATE ARRLY)	1	C0JBAR000021
IC1002	C2BBFE000138	IC	1	
IC1003	PQ07VZ012ZF	IC	1	C0DBEZG00004
IC1004	M51957BFP	LINEAR IC	1	C0EBB0000024
IC1005	C0CBCBF00001	IC	1	
IC1006	TC4066BF	MOS IC	1	C0JBAS000085
IC1007	C2CBYF000029	IC	1	
IC1008	TVRJ958	IC	1	
IC1009	C0JBAZ001839	IC	1	
IC1010	PST9128NR	IC (LOGIC)	1	C0EBE0000066
IC1012	C3ABPG000133	IC	1	
IC1013	TVRJ926	IC	1	
IC1106	CXA1875AM	LINEAR IC	1	C0FBBD000017
IC1235	C0ZBZ0000800	IC	1	
IC1270	AN15851B	IC	1	
IC1301	C1AB00001826	IC	1	
IC1302	C1AB00001703	IC	1	
IC1303	C0JBAS000061	IC	1	
IC1304	C1AB00001707	IC	1	
IC1305	M52055FP	LINEAR IC	1	C1AB00000734
IC1306	PQ07VZ012ZF	IC	1	C0DBEZG00004
IC1308	C3ABPJ000017	IC	1	
IC1309	AN15935A-VF	IC	1	
IC1311	C0CBCAD00012	IC	1	
IC1313	TC7WU04FU	IC	1	C0JBAB0000339
IC1315	C0CBCAD00012	IC	1	
IC1319	C0CBCAD00012	IC	1	
IC1321	C3ABPJ000048	IC	1	
IC1322	C0CBCAD00012	IC	1	
IC1323	AN78L09M	LINEAR IC	1	
IC1324	C0CBCAD00012	IC	1	
IC1325	C0CBCBD00008	IC	1	
IC1329	C0JBAZ001488	IC	1	
IC1331	C3ABPJ000048	IC	1	
IC1332,33	C0CBCBD00006	IC	2	
IC1350	C1AB00001827	IC	1	
IC1750	C0JBAS000061	IC	1	
IC1800	C0JBAZ001488	IC	1	
IC1851	C1AB00001834	IC	1	
IC1853	C0CBCBD00008	IC	1	
IC2001	AN77L08M	IC	1	
IC2002	C1AB00001883	IC	1	
IC2003	C0DBEZE00002	IC	1	
IC2004	M51957BFP	LINEAR IC	1	C0EBB0000024
IC2200	AN17880A	IC	1	
IC2206,07	NJM2115M	IC	2	C0ABBB000036
IC2301,02	LA4901	IC	2	C1BA00000278
IC2304	AN7709SP	IC	1	
IC2305,06	LA4901	IC	2	C1BA00000278
IC2401	C1BB00000800	IC	1	
IC2402,03	NJM2904M	LINEAR IC	2	C0ABBA000021
IC2652	C2HBZE000003	IC	1	
IC2653	C0CBCAD00006	IC	1	
IC2654	C0JBAZ001834	IC	1	
IC2670	TC74LCX244F	MOS IC (CMOS S/LOGIC)	1	C0JBAZ001234

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
IC3003	CXA1315M	LINEAR IC	1	C1AB00000440
IC3004	CXA1875AM	LINEAR IC	1	C0FBBD000017
IC3100	NJM2283M	IC	1	C1AB00000419
IC3101	NJM2286M	IC	1	C1AB00000948
IC3102	C1AB00000421	IC	1	
IC3200	CXA2069Q	LINEAR IC	1	C1AB00000459
IC3251	C1AB00001720	IC	1	
IC3290	CXA1315M	LINEAR IC	1	C1AB00000440
IC3517	AHC2G66HDCTR	INTEGRATED CIRCUIT	1	C0JBAS0000109
IC3699	TVRJ969	IC	1	C3EBDC000046
IC6001	C0JBAA000244	IC	1	
IC6002	C0JBAB000231	IC	1	
IC6003	C0JBAZ002059	IC	1	
IC6004	C0DBZHE00019	IC	1	
IC6005	C0JBAB000408	IC	1	
IC6006	C0JBAZ001713	IC	1	
IC6007	C0JBAZ001590	IC	1	
IC6008,09	C0JBAZ001120	IC	2	
IC6010	C0JBAZ002060	IC	1	
IC6011	C0CBCBD00004	IC	1	
IC6012	TVRN178	IC	1	
IC6013	C1AB00001816	IC	1	
IC6014	C3ABQG000069	IC	1	
IC6015	C1AB00001815	IC	1	
IC6016	C0CBCBD00005	IC	1	
IC6017	C0CBCAD00015	IC	1	△
IC6018	PST9128NR	IC (LOGIC)	1	C0EBE0000066
IC6401-08	C0HBC0000005	IC	8	
IC6434	TLP181	PHOTO COUPLER	1	B3PBA0000081
IC6451	AN1431M	LINEAR IC	1	
IC6452,53	AN78L15M	LINEAR IC	2	
IC6454,55	AN78L05M	LINEAR IC	2	
IC6456	AN1431M	LINEAR IC	1	
IC6458	TLP181	PHOTO COUPLER	1	B3PBA0000081
IC6467	TLP181	PHOTO COUPLER	1	B3PBA0000081
IC6469	TLP181	PHOTO COUPLER	1	B3PBA0000081
IC6471,72	AN1431M	LINEAR IC	2	
IC6474	TLP181	PHOTO COUPLER	1	B3PBA0000081
IC6480	TLP181	PHOTO COUPLER	1	B3PBA0000081
IC6491	AN1431M	LINEAR IC	1	
IC6501,02	TC74HC14AF	IC	2	C0JBAB0000155
IC6503-10	K7GBZEE00006	DIODE	8	
IC6511	C0ZBZ0000735	IC	1	
IC6512	AN78L05M	LINEAR IC	1	
IC6517	TLP181	PHOTO COUPLER	1	B3PBA0000081
IC6521	C0ZBZ0000735	IC	1	
IC6541,42	C0ZBZ0000735	IC	2	
IC6543	AN78L05M	LINEAR IC	1	
IC6581	NJM2903M	INTEGRATED CIRCUIT	1	C0BBBA000019
IC6601-03	C0ZBZ0000138	IC	3	
IC6604	AN1431M	LINEAR IC	1	
IC6605,06	C0JBAZ000005	IC	2	
IC6607	TC74HC08AF	IC	1	C0JBAA000084
IC6701-03	C0ZBZ0000138	IC	3	
IC6704	C0ZBZ0000735	IC	1	
IC6705	NJM2903M	INTEGRATED CIRCUIT	1	C0BBBA000019
IC6706	C0JBAZ000005	IC	1	
IC6711	AN1431M	LINEAR IC	1	
IC7101	C0JBAZ001604	IC	1	
IC7104-06	C0JBAZ001604	IC	3	
IC7201-04	C0JBAZ001604	IC	4	
IC7501-05	C0DAAZG00006	IC	5	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
IC7551	PQ1CZ21H2ZP	IC	1	C0DBCMG00001
IC7581	C0DBAMA00014	IC	1	
IC8002	MC14052BF	MOS IC (CMOS GATE ARRLY)	1	C0JBAR000021
IC8004	M52346SP	LINEAR IC	1	C1AA00000395
IC8006	TC74HC14AF	IC	1	C0JBAB000155
IC8008	TC4W53FEL	IC	1	C0JBAR000111
IC8009	AHC2G66HDCTR	INTEGRATED CIRCUIT	1	C0JBAS000109
IC9006, 07	C0CBCBD00008	IC	2	
IC9009	C0FBAD000069	IC	1	
IC9023	74LVC244APWL	IC	1	C0JBAZ001466
IC9151	MN845041-A	IC	1	
IC9152, 53	C0CBCBD00008	IC	2	
IC9155	C3ABPJ000017	IC	1	
IC9157	TLC2933IPWL	INTEGRATED CIRCUIT	1	C0ABFA000012
IC9301	CLZBZ0002358	IC	1	
IC9302	C0CBCBD00008	IC	1	
IC9303	CLZBZ0002357	IC	1	
IC9453	PQ07VZ0122P	IC	1	C0DBEZG00004
IC9454	C3ABPJ000043	IC	1	
IC9455	MN84510-A	IC	1	
IC9456	TVRJ952-3	IC	1	C3FBMD000156
IC9459	C0JBAZ001992	IC	1	
IC9601	TC74ACT244F	INTEGRATED CIRCUIT	1	C0JBAZ000448
IC9602	74LVC244APWL	IC	1	C0JBAZ001466
IC9603, 04	TC74ACT244F	INTEGRATED CIRCUIT	2	C0JBAZ000448
IC9605	CLZBZ0002377	IC	1	
IC9606	PST9128NR	IC (LOGIC)	1	C0EBE0000066
IC9701	MN102L230	IC	1	
IC9702	TVRN230	IC	1	C3EBJC000038
IC9703	TC74ACT244F	INTEGRATED CIRCUIT	1	C0JBAZ000448
IC9704	C3HBHG000001	IC	1	
IC9705	TVRJ951-1	IC	1	C3FBLD000026
IC9706	74LVC244APWL	IC	1	C0JBAZ001466
IC9707	C0JBAB000239	IC	1	
IC9708	C3EBGC000018	INTEGRATED CIRCUIT	1	
IC9709	C2BBGF000491	IC	1	
IC9710	M51957BFP	LINEAR IC	1	C0EBB0000024
IC9711	AHC2G66HDCTR	INTEGRATED CIRCUIT	1	C0JBAS000109
IC9951	C0DBAMH00006	IC	1	
IC9952	C0DBAFH00021	IC	1	
JG1	K1NA68E00071	68P CONNECTOR	1	
JG2	K1NA09E00042	9P CONNECTOR	1	
JG3	K1KA20A00180	20P CONNECTOR	1	
JG5	K1YY68000007	CONNECTOR	1	
JK3100-02	K1FB121A0006	JACK	3	
JK3103	K2HA307A0008	JACK	1	
JK3104	K2HA204A0038	JACK	1	
JK3709	K1FB315A0001	CONNECTOR	1	
JK3714	K4BK29A00006	PHONO PIN TERMINAL	1	K4BK29A00005
JK7002-07	K4ZZ01000121	EARTH LUG	6	
JS001-03	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
JS006	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS007-09	ERJ6GEY0R00	M 0 OHM, 1/10W	3	
JS011,02	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
JS012	J0JGC0000021	CHIP INDUCTOR COIL	1	
JS013-20	ERJ6GEY0R00	M 0 OHM, 1/10W	8	
JS021	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS023	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
JS025-32	ERJ6GEY0R00	M 0 OHM, 1/10W	8	
JS034-44	ERJ6GEY0R00	M 0 OHM, 1/10W	11	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
JS046-48	ERJ6GEY0R00	M 0 OHM, 1/10W	3	
JS052-54	ERJ6GEY0R00	M 0 OHM, 1/10W	3	
JS056-66	ERJ6GEY0R00	M 0 OHM, 1/10W	11	
JS070-74	ERJ6GEY0R00	M 0 OHM, 1/10W	5	
JS081	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS083,84	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
JS089-91	ERJ6GEY0R00	M 0 OHM, 1/10W	3	
JS100	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS102-05	ERJ6GEY0R00	M 0 OHM, 1/10W	4	
JS109	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
JS110-31	ERJ3GEY0R00	M 0 OHM, 1/16W	22	
JS134	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
JS135-43	ERJ3GEY0R00	M 0 OHM, 1/16W	9	
JS144-46	ERJ6GEY0R00	M 0 OHM, 1/10W	3	
JS150-52	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
JS154	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
JS155-58	ERJ3GEY0R00	M 0 OHM, 1/16W	4	
JS161	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS164	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS166	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
JS168-70	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
JS172-75	ERJ3GEY0R00	M 0 OHM, 1/16W	4	
JS176-79	ERJ6GEY0R00	M 0 OHM, 1/10W	4	
JS182	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
JS186	ERJ8GEY0R00	M 0 OHM, 1/8W	1	
JS192,93	ERJ8GEY0R00	M 0 OHM, 1/8W	2	
JS194	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS199	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
JS207-09	ERJ6GEY0R00	M 0 OHM, 1/10W	3	
JS215,16	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
JS218,19	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
JS221	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS223	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS225-30	ERJ3GEY0R00	M 0 OHM, 1/16W	6	
JS232	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS240	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS3240-42	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
JS300,01	ERJ8GEY0R00	M 0 OHM, 1/8W	2	
JS304,05	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
JS1850	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS2014-17	ERJ3GEY0R00	M 0 OHM, 1/16W	4	
JS2022	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
JS2026	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS2032	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS2035	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS2103	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS2106,07	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
JS2227	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
JS2303,04	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
JS2638	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS2651	ERJ3GEY0R00	M 0 OHM, 1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
JS2657, 58	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
JS3100-05	ERJ3GEY0R00	M 0 OHM, 1/16W	6	
JS3106-20	ERJ6GEY0R00	M 0 OHM, 1/10W	15	
JS3121	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS3132	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
JS3133, 34	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
JS3200	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS3202	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS3211	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS3280	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS3284	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS3312, 13	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
JS3705, 06	ERJ8GEY0R00	M 0 OHM, 1/8W	2	
JS6004	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS6009	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS6601	ERD25V0T	M OHM, 1/10W	1	
JS6702	ERD25V0T	M OHM, 1/10W	1	
K12	TJSF43709	9P CONNECTOR	1	K1KA09B00048
K24	K1KA08B00005	8P CONNECTOR	1	
L001	ELJNC15NJF	CHIP COIL	1	
L002-05	G1C121Z00004	INDUCTOR COIL	4	
L006	J0JCC0000241	CHIP INDUCTOR	1	
L008	EXC3BB221H	BEAD CHOKE	1	
L009	TSK1040	FERRITE CORE	1	G1BYYYH00004
L011	ELJNC15NJF	CHIP COIL	1	
L401	ELEXT100KA	PEAKING COIL	1	
L451	G4D4A0000048	SWITCHING TRANSFORMER	1	
L452	EXCELD35C	BEAD CHOKE	1	
L554	TALFP15B221K	INDUCTION COIL	1	G0A221GA0001
L920	EXCELD35C	BEAD CHOKE	1	
L921	EXCELSA24	BEAD CHOKE	1	
L922	EXCELD35C	BEAD CHOKE	1	
L970	EXCELSA24	BEAD CHOKE	1	
L971	G0A100GA0013	CHOKE COIL	1	
L973	G0A100GA0013	CHOKE COIL	1	
L1000	ELJPA100KB	CHIP INDUCTOR	1	
L1003	TALC325T3R3M	CHIP INDUCTOR COIL	1	G1C3R3MA0063
L1004-06	TALC325T4R7M	CHIP INDUCTOR COIL	3	G1C4R7MA0063
L1008,09	TALC325T4R7M	CHIP INDUCTOR COIL	2	G1C4R7MA0063
L1270	J0JCC0000241	CHIP INDUCTOR	1	
L1301	G1C2R2K00006	INDUCTION COIL	1	
L1302,03	TALC168T100K	CHIP INDUCTOR COIL	2	G1C100KA0009
L1307	TALC168T5R6K	CHIP INDUCTOR COIL	1	G1C5R6K00007
L1309-16	TALC325T4R7M	CHIP INDUCTOR COIL	8	G1C4R7MA0063
L1317,18	TALC168T3R3K	CHIP INDUCTOR COIL	2	G1C3R3K00007
L1319,20	TALC168T6R8K	CHIP INDUCTOR COIL	2	G1C6R8K00005
L1328	G1C100KA0008	INDUCTOR COIL	1	
L1331	TALC325T4R7M	CHIP INDUCTOR COIL	1	G1C4R7MA0063
L1333-42	TALC325T4R7M	CHIP INDUCTOR COIL	10	G1C4R7MA0063
L1343,44	ELJPA100KB	CHIP INDUCTOR	2	
L1350	J0JGC0000021	CHIP INDUCTOR COIL	1	
L1352	G1C100KA0008	INDUCTOR COIL	1	
L1353,54	J0JGC0000021	CHIP INDUCTOR COIL	2	
L1360-62	J0JGC0000021	CHIP INDUCTOR COIL	3	
L1366,67	J0JGC0000021	CHIP INDUCTOR COIL	2	
L1600	ELJPA100KB	CHIP INDUCTOR	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
L1650-52	J0JGC0000021	CHIP INDUCTOR COIL	3	
L1750	TALC168T5R6K	CHIP INDUCTOR COIL	1	G1C5R6K00007
L1751-53	TALC168T1R0K	CHIP INDUCTOR COIL	3	G1C1R0K00005
L1754	TALC168T5R6K	CHIP INDUCTOR COIL	1	G1C5R6K00007
L1755	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
L1801	G1C100KA0008	INDUCTOR COIL	1	
L1805,06	G1C100KA0008	INDUCTOR COIL	2	
L1807-09	TALC168T6R8K	CHIP INDUCTOR COIL	3	G1C6R8K00005
L1825	G1C100KA0008	INDUCTOR COIL	1	
L1850,51	G1C100KA0008	INDUCTOR COIL	2	
L1852-56	ELJPA100KB	CHIP INDUCTOR	5	
L2001,02	TSK1032	BEAD CHOKE	2	J0JCC0000100
L2003	EXCELD35C	BEAD CHOKE	1	
L2006	ELESE6R8KA	PEAKING COIL	1	
L2013	EXCELD35C	BEAD CHOKE	1	
L2023	TSK1032	BEAD CHOKE	1	J0JCC0000100
L2027-30	EXCELD35C	BEAD CHOKE	4	
L2031	J0JCC0000241	CHIP INDUCTOR	1	
L2032	TSK1032	BEAD CHOKE	1	J0JCC0000100
L2035	J0JCC0000241	CHIP INDUCTOR	1	
L2038	TSK1032	BEAD CHOKE	1	J0JCC0000100
L2200	ELJPA470KB	CHIP INDUCTOR	1	
L2207	EXCELD35C	BEAD CHOKE	1	
L2215	EXCELD35C	BEAD CHOKE	1	
L2220-22	EXC3BB221H	BEAD CHOKE	3	
L2301,02	TAL10RP221LB	INDUCTION COIL	2	G0ZZ00001909
L2303,04	EXCELD35C	BEAD CHOKE	2	
L2306	ELJPA100KB	CHIP INDUCTOR	1	
L2307,08	TAL10RP221LB	INDUCTION COIL	2	G0ZZ00001909
L2309,10	ERD25V0T	M OHM, 1/10W	2	
L2430	ERJ8GEY0R00	M 0 OHM, 1/8W	1	
L2653	J0JCC0000241	CHIP INDUCTOR	1	
L2658	ELESE4R7KA	PEAKING COIL	1	
L3100-16	EXC3BB221H	BEAD CHOKE	17	
L3117	EXCELD35C	BEAD CHOKE	1	
L3118,19	ELJPA100KB	CHIP INDUCTOR	2	
L3120	TSKX027	CHOKE COIL	1	G0BYYYG00005
L3200	J0JCC0000241	CHIP INDUCTOR	1	
L3210	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
L3767-70	G1C121Z00004	INDUCTOR COIL	4	
L3772,73	J0HABB000003	LC FILTER	2	
L3775-77	J0HABB000004	LC FILTER	3	
L3778-80	TSK1040	FERRITE CORE	3	G1BYYYH00004
L6001-06	J0JHC0000035	CHIP INDUCTOR	6	
L6008	J0JHC0000035	CHIP INDUCTOR	1	
L6009	G1C8R2K00009	INDUCTOR COIL	1	
L6010-13	J0JHC0000035	CHIP INDUCTOR	4	
L6451	J0JJC0000021	CHIP INDUCTOR	1	
L6453	J0JJC0000021	CHIP INDUCTOR	1	
L6471	J0JJC0000021	CHIP INDUCTOR	1	
L6472	G0ZZ00002183	PEAKING COIL	1	
L6602	G0ZZ00002183	PEAKING COIL	1	
L6604,05	G0ZZ00002183	PEAKING COIL	2	
L6611,12	ELC16BR82L	CHOKE COIL	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
L6615,16	ELC16BR82L	CHOKE COIL	2	
L6618	J0JJC0000021	CHIP INDUCTOR	1	
L6620-28	G0ZZ00002183	PEAKING COIL	9	
L6634-38	G0ZZ00002183	PEAKING COIL	5	
L6644,45	G0ZZ00002183	PEAKING COIL	2	
L6647,48	J0JJC0000021	CHIP INDUCTOR	2	
L6702-04	G0ZZ00002183	PEAKING COIL	3	
L6705	G0C101K00023	PEAKING COIL	1	
L6711-14	ELC16BR82L	CHOKE COIL	4	
L6717,18	J0JJC0000021	CHIP INDUCTOR	2	
L6719-23	G0ZZ00002183	PEAKING COIL	5	
L6726,27	G0ZZ00002183	PEAKING COIL	2	
L6736,37	G0ZZ00002183	PEAKING COIL	2	
L6744,45	G0ZZ00002183	PEAKING COIL	2	
L6747	J0JJC0000021	CHIP INDUCTOR	1	
L6750	G0ZZ00002183	PEAKING COIL	1	
L7111-13	J0JHC0000096	CHIP INDUCTOR	3	
L7214-17	J0JHC0000096	CHIP INDUCTOR	4	
L7501	G0C101K00023	PEAKING COIL	1	
L7502	G0A101ZA0038	CHOKE COIL	1	
L7503	TALL08N330KA	INDUCTION COIL	1	G0A330GA0011
L7504	G0C101K00023	PEAKING COIL	1	
L7505	G0A101ZA0038	CHOKE COIL	1	
L7506	TALL08N330KA	INDUCTION COIL	1	G0A330GA0011
L7507	G0C101K00023	PEAKING COIL	1	
L7508	G0A101ZA0038	CHOKE COIL	1	
L7509	G0A220GA0002	CHOKE COIL	1	
L7510	G0C101K00023	PEAKING COIL	1	
L7511	G0A101ZA0038	CHOKE COIL	1	
L7512	G0A220GA0002	CHOKE COIL	1	
L7513	G0C101K00023	PEAKING COIL	1	
L7514	G0A101ZA0038	CHOKE COIL	1	
L7515	G0A220GA0002	CHOKE COIL	1	
L7551	G0C101K00023	PEAKING COIL	1	
L7552	G0A101ZA0038	CHOKE COIL	1	
L7581	TALL08N330KA	INDUCTION COIL	1	G0A330GA0011
L7582	G1C101M00018	INDUCTION COIL	1	
L9452	ELJFA1R0KF	CHIP COIL	1	
L9459	ELKE103FA	NOISE FILTER	1	
L9701	ELKE103FA	NOISE FILTER	1	
L9951-54	ELKE103FA	NOISE FILTER	4	
L9955	G1C470M00012	INDUCTOR COIL	1	
L9956	G1C1R5Z00002	INDUCTION COIL	1	
LF904	G0B123K00001	CHOKE COIL	1	△
LF909	G0B123K00001	CHOKE COIL	1	△
LF911	G0B353G00001	CHOKE COIL	1	△
LF915	G0B123K00001	CHOKE COIL	1	△
P2	K1KA06A00180	6P CONNECTOR	1	
P5	K1KA11A00073	11P CONNECTOR	1	
P7	K1KA04A00242	4P CONNECTOR	1	
P9	K1KA02A00244	2P CONNECTOR	1	
P10	K1KA05A00177	5P CONNECTOR	1	
P11	K1KA07A00096	7P CONNECTOR	1	
P12	K1KA05A00139	5P CONNECTOR	1	
P23	K1KA03A00213	3P CONNECTOR	1	
P25	TJS1A8840	8P CONNECTOR	1	K1KA08A00221
P27	K1KA09A00099	9P CONNECTOR	1	
PA1	K1KA05A00139	5P CONNECTOR	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
PA2	K1KA40A00140	40P CONNECTOR	1	
PA3	K1KA04A00195	4P CONNECTOR	1	
PA4	K1KA12A00176	12P CONNECTOR	1	
PA5	K1KA11A00073	11P CONNECTOR	1	
PA6	K1KA20A00180	20P CONNECTOR	1	
PA7	K1KA04A00242	4P CONNECTOR	1	
PA8	K1KA20A00180	20P CONNECTOR	1	
PA10A	TJS3A9890	9P CONNECTOR	1	K1KA09A00074
PA12	K1KA07A00056	7P CONNECTOR	1	
PA17	K1KA04A00242	4P CONNECTOR	1	
PA21	K1KA07A00056	7P CONNECTOR	1	
PA22	K1KA12A00176	12P CONNECTOR	1	
PA23	TJS3A9880	8P CONNECTOR	1	K1KA08A00179
PA24	K1KA07A00096	7P CONNECTOR	1	
PA25	K1KA04A00242	4P CONNECTOR	1	
PF1, F2	K1KA03A00181	3P CONNECTOR	2	
PF10	TJS118660	9P CONNECTOR	1	K1KA09A00073
Q001,02	2SB709A	TRANSISTOR	2	2SB0709A
Q300,01	2SC2412K	TRANSISTOR	2	
Q305	2SD601A	TRANSISTOR	1	2SD0601A
Q401-04	2SC3311A	TRANSISTOR	4	2SC3311AW
Q405	B1CBGD000001	TRANSISTOR	1	
Q406	2SC3311A	TRANSISTOR	1	2SC3311AW
Q451	B1DEGR000021	TRANSISTOR	1	
Q452	2SD2177R	TRANSISTOR	1	
Q453	2SB1434R	TRANSISTOR	1	2SB14340RA
Q454	B1DEGR000021	TRANSISTOR	1	
Q455,56	2SC3311A	TRANSISTOR	2	2SC3311AW
Q457	2SA1309A	TRANSISTOR	1	2SA13090WA
Q552	B1DEGQ000019	FET	1	
Q553	2SB621A	TRANSISTOR	1	2SB0621AW
Q554,55	2SC3311A	TRANSISTOR	2	2SC3311AW
Q557,58	2SC3311A	TRANSISTOR	2	2SC3311AW
Q650,51	2SC3311A	TRANSISTOR	2	2SC3311AW
Q990	2SD13280TL	TRANSISTOR	1	
Q1000	2SB709A	TRANSISTOR	1	2SB0709A
Q1001,02	2SD601A	TRANSISTOR	2	2SD0601A
Q1004	2SD601A	TRANSISTOR	1	2SD0601A
Q1007	2SD601A	TRANSISTOR	1	2SD0601A
Q1010	2SD601A	TRANSISTOR	1	2SD0601A
Q1012-19	2SD601A	TRANSISTOR	8	2SD0601A
Q1024-26	2SD601A	TRANSISTOR	3	2SD0601A
Q1225	2SB709A	TRANSISTOR	1	2SB0709A
Q1230	2SB709A	TRANSISTOR	1	2SB0709A
Q1233	2SD601A	TRANSISTOR	1	2SD0601A
Q1254,55	2SD601A	TRANSISTOR	2	2SD0601A
Q1302-04	2SD601A	TRANSISTOR	3	2SD0601A
Q1310-12	2SD601A	TRANSISTOR	3	2SD0601A
Q1315-17	2SD601A	TRANSISTOR	3	2SD0601A
Q1325,26	2SD601A	TRANSISTOR	2	2SD0601A
Q1327	2SD1030	TRANSISTOR	1	
Q1330	XN6501	TRANSISTOR	1	XN06501
Q1334,35	2SD601A	TRANSISTOR	2	2SD0601A
Q1336,37	2SB709A	TRANSISTOR	2	2SB0709A
Q1340	2SB709A	TRANSISTOR	1	2SB0709A
Q1342,43	2SB709A	TRANSISTOR	2	2SB0709A
Q1351	2SK198R	FET	1	2SK01980R
Q1355	2SB709A	TRANSISTOR	1	2SB0709A
Q1359-61	2SB709A	TRANSISTOR	3	2SB0709A
Q1363	2SB709A	TRANSISTOR	1	2SB0709A
Q1368	2SD601A	TRANSISTOR	1	2SD0601A

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
Q1600-02	2SD601A	TRANSISTOR	3	2SD0601A
Q1750-53	2SD601A	TRANSISTOR	4	2SD0601A
Q1754	UN2215	TRANSISTOR	1	UNR2215
Q1755	2SB709A	TRANSISTOR	1	2SB0709A
Q1756	2SD601A	TRANSISTOR	1	2SD0601A
Q1757	XN6501	TRANSISTOR	1	XN06501
Q1758	2SD601A	TRANSISTOR	1	2SD0601A
Q1759	2SB709A	TRANSISTOR	1	2SB0709A
Q1760	2SD601A	TRANSISTOR	1	2SD0601A
Q1761,62	2SB709A	TRANSISTOR	2	2SB0709A
Q1763	2SD601A	TRANSISTOR	1	2SD0601A
Q1764,65	2SD1030	TRANSISTOR	2	
Q1800	UN2215	TRANSISTOR	1	UNR2215
Q1801	2SD601A	TRANSISTOR	1	2SD0601A
Q1802	2SB709A	TRANSISTOR	1	2SB0709A
Q1804	2SD601A	TRANSISTOR	1	2SD0601A
Q1811	2SD601A	TRANSISTOR	1	2SD0601A
Q1812	2SB709A	TRANSISTOR	1	2SB0709A
Q1814	2SD601A	TRANSISTOR	1	2SD0601A
Q1821	2SD601A	TRANSISTOR	1	2SD0601A
Q1822	2SB709A	TRANSISTOR	1	2SB0709A
Q1824	2SD601A	TRANSISTOR	1	2SD0601A
Q1830	2SD301A	TRANSISTOR	1	
Q1850,51	2SD601A	TRANSISTOR	2	2SD0601A
Q2003,04	2SB709A	TRANSISTOR	2	2SB0709A
Q2006-08	2SD601A-R	TRANSISTOR	3	2SD0601AR
Q2012	2SD601A-R	TRANSISTOR	1	2SD0601AR
Q2202	2SD601A-R	TRANSISTOR	1	2SD0601AR
Q2203,04	2SB709A	TRANSISTOR	2	2SB0709A
Q2301,02	2SD1266A	TRANSISTOR	2	2SD1266AJ
Q2303-06	2SD601A	TRANSISTOR	4	2SD0601A
Q2308,09	2SD601A	TRANSISTOR	2	2SD0601A
Q2311	2SD601A	TRANSISTOR	1	2SD0601A
Q2313,14	2SD1802ST	TRANSISTOR	2	B1BBCF000013
Q3100-07	2SD601A-R	TRANSISTOR	8	2SD0601AR
Q3170-72	2SD601A-R	TRANSISTOR	3	2SD0601AR
Q3196,97	2SD601A-R	TRANSISTOR	2	2SD0601AR
Q3200,01	2SD601A-R	TRANSISTOR	2	2SD0601AR
Q3203-05	2SB709A	TRANSISTOR	3	2SB0709A
Q3206,07	2SD601A-R	TRANSISTOR	2	2SD0601AR
Q3208-11	2SB709A	TRANSISTOR	4	2SB0709A
Q3214	2SB709A	TRANSISTOR	1	2SB0709A
Q3311-16	2SD601A	TRANSISTOR	6	2SD0601A
Q6001	2SA207700L	TRANSISTOR	1	
Q6003	2SA207700L	TRANSISTOR	1	
Q6005,06	2SC584500L	TRANSISTOR	2	
Q6008	2SA207700L	TRANSISTOR	1	
Q6010	2SA207700L	TRANSISTOR	1	
Q6401	2SK620	FET	1	2SK0620
Q6451	B1BBCJ000003	TRANSISTOR	1	
Q6452	2SB0709A	TRANSISTOR	1	
Q6454	2SD814A	TRANSISTOR	1	
Q6455	2SD601A	TRANSISTOR	1	2SD0601A
Q6461	B1BBCJ000003	TRANSISTOR	1	
Q6462	2SB0709A	TRANSISTOR	1	
Q6463	2SD601A	TRANSISTOR	1	2SD0601A

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
Q6471	B1BBCJ000003	TRANSISTOR	1	
Q6472	2SB0709A	TRANSISTOR	1	
Q6474	2SD814A	TRANSISTOR	1	
Q6475-77	2SD601A	TRANSISTOR	3	2SD0601A
Q6491	2SD1263A	TRANSISTOR	1	
Q6492	2SC1473A	TRANSISTOR	1	2SC1473AE
Q6501-04	2SK620	FET	4	2SK0620
Q6511,12	B1DFGL000005	TRANSISTOR	2	
Q6520	2SD601A	TRANSISTOR	1	2SD0601A
Q6521	B1DFES000001	TRANSISTOR	1	
Q6522-27	2SK2993	FET	6	
Q6530	2SB1073001TV	TRANSISTOR	1	
Q6541	2SB1073001TV	TRANSISTOR	1	
Q6542-47	2SK373100L	TRANSISTOR	6	
Q6550	2SC1473A	TRANSISTOR	1	2SC1473AE
Q6551	2SD601A	TRANSISTOR	1	2SD0601A
Q6552	B1DFES000001	TRANSISTOR	1	
Q6553	2SB1073001TV	TRANSISTOR	1	
Q6554	2SD2185	TRANSISTOR	1	
Q6555	B1DFES000001	TRANSISTOR	1	
Q6581	2SD601A	TRANSISTOR	1	2SD0601A
Q6601,02	2SK3795000SB	TRANSISTOR	2	
Q6603,04	2SK620	FET	2	2SK0620
Q6605,06	2SK3795000SB	TRANSISTOR	2	
Q6611	2SD2185	TRANSISTOR	1	
Q6612	2SB1073001TV	TRANSISTOR	1	
Q6613	2SD2185	TRANSISTOR	1	
Q6614	2SB1073001TV	TRANSISTOR	1	
Q6621	2SK3637000VE	TRANSISTOR	1	
Q6624	2SK3637000VE	TRANSISTOR	1	
Q6641,42	B1DFHM000002	TRANSISTOR	2	
Q6671	2SB940A	TRANSISTOR	1	2SB0940AJ
Q6672	2SC1473A	TRANSISTOR	1	2SC1473AE
Q6673	2SD1263A	TRANSISTOR	1	
Q6701,02	2SK3795000SB	TRANSISTOR	2	
Q6705,06	2SK3795000SB	TRANSISTOR	2	
Q6711	2SD2185	TRANSISTOR	1	
Q6712	2SB1073001TV	TRANSISTOR	1	
Q6713	2SD2185	TRANSISTOR	1	
Q6714	2SB1073001TV	TRANSISTOR	1	
Q6721	2SK3637000VE	TRANSISTOR	1	
Q6724	2SK3637000VE	TRANSISTOR	1	
Q6725	2SK620	FET	1	2SK0620
Q6741,42	B1DFHM000002	TRANSISTOR	2	
Q6745,46	2SK326800L	FET	2	
Q6751	2SD1263A	TRANSISTOR	1	
Q6752,53	2SC1473	TRANSISTOR	2	2SC14730E
Q6756	2SD601A	TRANSISTOR	1	2SD0601A
Q7201,02	2SB709A	TRANSISTOR	2	2SB0709A
Q7501	B1DHDD000012	TRANSISTOR	1	
Q7502	UN2214	TRANSISTOR	1	UNR2214
Q7503	B1DHDD000012	TRANSISTOR	1	
Q7504,05	UN2214	TRANSISTOR	2	UNR2214
Q7506	B1DHDD000012	TRANSISTOR	1	
Q7507	UN5211	TRANSISTOR	1	UNR5211
Q7509	2SD601A	TRANSISTOR	1	2SD0601A
Q7510	UN2214	TRANSISTOR	1	UNR2214
Q7541-43	2SB709A	TRANSISTOR	3	2SB0709A
Q7544	2SD601A	TRANSISTOR	1	2SD0601A

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
Q7552,53	UN221N	TRANSISTOR	2	
Q7581	UN5211	TRANSISTOR	1	UNR5211
Q7582	BLABPF000005	TRANSISTOR	1	
Q9301	2SD601A	TRANSISTOR	1	2SD0601A
Q9400	2SD601A	TRANSISTOR	1	2SD0601A
Q9596-99	2SD601A	TRANSISTOR	4	2SD0601A
Q9601,02	2SD601A	TRANSISTOR	2	2SD0601A
Q9701	2SD601A	TRANSISTOR	1	2SD0601A
Q9702	2SB1440	TRANSISTOR	1	2SB14400H
Q9703,04	2SK620	FET	2	2SK0620
Q9706	2SK620	FET	1	2SK0620
Q9707	2SB709A	TRANSISTOR	1	2SB0709A
Q9708,09	2SD601A	TRANSISTOR	2	2SD0601A
Q9710	2SB709A	TRANSISTOR	1	2SB0709A
Q9714-16	2SD601A	TRANSISTOR	3	2SD0601A
Q9719	2SK620	FET	1	2SK0620
R001	ERJ3GEYJ153	M 15KOHM, J, 1/16W	1	
R002	ERJ3GEYJ221	M 220 OHM, J, 1/16W	1	
R003	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R004	ERJ6GEYJ561	M 560 OHM, J, 1/10W	1	
R005	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R007	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R300	ERJ6GEYJ562	M 5.6KOHM, J, 1/10W	1	
R301	ERJ6GEYJ223	M 22KOHM, J, 1/10W	1	
R302	ERJ6GEYJ471	M 470 OHM, J, 1/10W	1	
R304	ERJ6GEYJ223	M 22KOHM, J, 1/10W	1	
R306	ERJ6GEYJ102	M 1KOHM, J, 1/10W	1	
R307	ERJ6GEYJ470	M 47 OHM, J, 1/10W	1	
R310	ERJ6GEYJ470	M 47 OHM, J, 1/10W	1	
R311	ERJ6GEYJ224	M 220KOHM, J, 1/10W	1	
R312	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R313	ERJ6GEYJ102	M 1KOHM, J, 1/10W	1	
R314	ERJ6GEYJ470	M 47 OHM, J, 1/10W	1	
R317	ERJ6GEYJ562	M 5.6KOHM, J, 1/10W	1	
R402	ERF10TK3R3	W 3.3 OHM, 10W	1	
R404	ERF10TK3R3	W 3.3 OHM, 10W	1	
R406	ERU5TAJ150	F 15 OHM, 5W	1	△
R407	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R408	ERJ6GEYJ6R8	M 6.8 OHM, J, 1/10W	1	
R409	ERG1FJS104D	M 100KOHM, J, 1W	1	
R410	ERJ6GEYJ6R8	M 6.8 OHM, J, 1/10W	1	
R411	ERDS1FJ101	C 100 OHM, J, 1/2W	1	
R412	ERDS1FJ221	C 220 OHM, J, 1/2W	1	
R413	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R414	ERJ6GEYJ473	M 47KOHM, J, 1/10W	1	
R415	ERJ6ENF3901	M 3.9KOHM, 1/10W	1	
R416	ERJ6ENF2551	M2.55KOHM, 1/10W	1	
R417	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R418	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R420-22	ERJ6GEYJ103	M 10KOHM, J, 1/10W	3	
R423	ERJ6GEYJ223	M 22KOHM, J, 1/10W	1	
R424,25	ERJ6GEYJ473	M 47KOHM, J, 1/10W	2	
R426,27	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	2	
R428	ERJ6GEYJ223	M 22KOHM, J, 1/10W	1	
R429-31	ERJ6ENF3303	M 330KOHM, 1/10W	3	
R432	ERJ6ENF1003	M 100KOHM, 1/10W	1	
R433-35	ERJ6ENF3303	M 330KOHM, 1/10W	3	
R436	ERJ6ENF1202	M 12KOHM, 1/10W	1	
R451	ERDS1FJ274	C 270KOHM, J, 1/2W	1	
R452	ERDS1FJ224	C 220KOHM, J, 1/2W	1	
R453	ERJ6GEYJ272	M 2.7KOHM, J, 1/10W	1	
R454,55	ERG3FJS333D	M 33KOHM, J, 3W	2	
R456	ERDS1FJ2R7	C 2.7 OHM, J, 1/2W	1	
R457,58	ERF5EKR15	W0.15 OHM, 5W	2	
R459	ERJ6GEYJ270	M 27 OHM, J, 1/10W	1	
R460	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R461	ERJ6GEYF563	M 56KOHM, F, 1/10W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R462	ERG1FJS101D	M 100 OHM, J, 1W	1	
R463	ERDS1FJ220	C 22 OHM, J, 1/2W	1	
R464	ERDS1FJ103	C 10KOHM, J, 1/2W	1	
R465	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R466	ERJ6ENF2703	M 270KOHM, 1/10W	1	
R467	ERDS1FJ220	C 22 OHM, J, 1/2W	1	
R468	ERDS1FJ103	C 10KOHM, J, 1/2W	1	
R469	ERDS1FJ221	C 220 OHM, J, 1/2W	1	
R470	ERJ6ENF5602	M 56KOHM, 1/10W	1	
R471	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R472-74	ERJ6ENF3303	M 330KOHM, 1/10W	3	
R476	ERJ6ENF3601	M 3.6KOHM, 1/10W	1	
R477	ERJ6ENF4020	M 402 OHM, 1/10W	1	
R478-80	ERJ6ENF3303	M 330KOHM, 1/10W	3	
R481	ERJ6ENF3301	M 3.3KOHM, 1/10W	1	
R482	ERJ6ENF4220	M 422 OHM, 1/10W	1	
R483	ERG2FJS104D	M 100KOHM, J, 2W	1	
R484	ERJ6GEYJ562	M 5.6KOHM, J, 1/10W	1	
R485	ERG1FJS393D	M 39KOHM, J, 3W	1	
R486	ERJ6GEYJ333	M 33KOHM, J, 1/10W	1	
R487	ERJ6GEYJ101	M 100 OHM, J, 1/10W	1	
R488	ERJ6GEYJ473	M 47KOHM, J, 1/10W	1	
R489	ERJ6GEYJ153	M 15KOHM, J, 1/10W	1	
R490	ERJ6GEYJ272	M 2.7KOHM, J, 1/10W	1	
R491,92	ERJ6GEYJ223	M 22KOHM, J, 1/10W	2	
R493	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	1	
R502,03	ERJ6GEYJ562	M 5.6KOHM, J, 1/10W	2	
R504	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R550	ERX1FJSR56D	M0.56 OHM, J, 1W	1	
R551	ERG2FJS104D	M 100KOHM, J, 2W	1	
R552	ER0S2CKF1053	M 105KOHM, F, 1/4W	1	EROS2CKF1053
R553	ERG2FJS104D	M 100KOHM, J, 2W	1	
R554	ER0S2CKF1053	M 105KOHM, F, 1/4W	1	EROS2CKF1053
R555	ERJ6ENF2491	M2.49KOHM, 1/10W	1	
R556	ERJ6GEYJ123	M 12KOHM, J, 1/10W	1	
R557,58	ERJ6GEYJ332	M 3.3KOHM, J, 1/10W	2	
R560	ERX1FJSR56D	M0.56 OHM, J, 1W	1	
R561	ERJ6ENF1212	M12.1KOHM, 1/10W	1	
R563	ERG3FJS683D	M 68KOHM, J, 3W	1	
R564,65	ERJ6GEYJ681	M 680 OHM, J, 1/10W	2	
R568	ERX1FJSR56D	M0.56 OHM, J, 1W	1	
R569	ERX2FJSR47D	M 0.47OHM, J, 2W	1	
R571	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R572	ERG3FJS683D	M 68KOHM, J, 3W	1	
R573	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	1	
R574	ERX1FJSR56D	M0.56 OHM, J, 1W	1	
R575	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	1	
R576	ERX2FJSR47D	M 0.47OHM, J, 2W	1	
R577,78	ERG3FJS683D	M 68KOHM, J, 3W	2	
R579,80	ERDS1FJ220	C 22 OHM, J, 1/2W	2	
R581,82	ERJ6GEYJ102	M 1KOHM, J, 1/10W	2	
R583,84	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	2	
R585,86	ERJ6GEYJ101	M 100 OHM, J, 1/10W	2	
R587	ERDS1FJ220	C 22 OHM, J, 1/2W	1	
R588	ERJ6GEYJ473	M 47KOHM, J, 1/10W	1	
R589	ERJ6ENF4992	M49.9KOHM, 1/10W	1	
R590	EVMEASA00B14	CONTROL 10KOHMB 0.3W	1	
R591	ERJ6GEYJ473	M 47KOHM, J, 1/10W	1	
R592	ERG1FJS222D	M 2.2KOHM, J, 1W	1	
R593	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R594	ERDS1FJ220	C 22 OHM, J, 1/2W	1	
R595	ERDS1FJ471	C 470 OHM, J, 1/2W	1	
R596	ERJ6GEYJ682	M 6.8KOHM, J, 1/10W	1	
R597,98	ERDS1FJ224	C 220KOHM, J, 1/2W	2	
R599	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	1	
R600	ERDS1FJ224	C 220KOHM, J, 1/2W	1	
R601	ERJ6GEYJ682	M 6.8KOHM, J, 1/10W	1	
R602	ERJ6ENF4642	M46.4KOHM, 1/10W	1	
R603,04	ERJ6ENF4992	M49.9KOHM, 1/10W	2	
R605	EVMEASA00B54	CONTROL 50KOHMB 0.3W	1	
R606	ERJ6ENF2551	M2.55KOHM, 1/10W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R607	ERJ6GEYJ151	M 150 OHM, J, 1/10W	1	
R608	ERJ6GEYJ682	M 6.8KOHM, J, 1/10W	1	
R609	ERJ6ENF1212	M12.1KOHM, 1/10W	1	
R610	ERJ6ENF3301	M 3.3KOHM, 1/10W	1	
R611	ERJ6ENF1501	M 1.5KOHM, 1/10W	1	
R612	ERJ6ENF2551	M2.55KOHM, 1/10W	1	
R613	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R614	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	1	
R615, 16	ERJ6GEYJ102	M 1KOHM, J, 1/10W	2	
R617	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R618	ERJ6GEYJ680	M 68 OHM, J, 1/10W	1	
R619	ERJ12YJ472	M 4.7KOHM, J, 1/2W	1	
R620	ERJ6GEYJ680	M 68 OHM, J, 1/10W	1	
R621	ERJ12YJ472	M 4.7KOHM, J, 1/2W	1	
R623	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R625, 26	ERJ6GEYJ103	M 10KOHM, J, 1/10W	2	
R627	ERJ6GEYJ473	M 47KOHM, J, 1/10W	1	
R628	ERDS1FJ470	C 47 OHM, J, 1/2W	1	
R630	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	1	
R631	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R635	ERJ6ENF2551	M2.55KOHM, 1/10W	1	
R650	ERGLFJS222D	M 2.2KOHM, J, 1W	1	
R652	ERDS1FJ220	C 22 OHM, J, 1/2W	1	
R653	ERJ6GEYJ473	M 47KOHM, J, 1/10W	1	
R654	ERJ6GEYJ560	M 56 OHM, J, 1/10W	1	
R655	ERDS1FJ472	C 4.7KOHM, J, 1/2W	1	
R656, 57	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	2	
R901, 02	ERC12ZGK105	S 1MOHM, K, 1/2W	2	△
R904	ERF7ZK3R3	W 3.3 OHM, K, 7W	1	ERF7ZXXK3R3
R920, 21	ERGLFJS104D	M 100KOHM, J, 1W	2	
R922	ERDS2TJ224	C 220KOHM, J, 1/4W	1	
R923	ERG2FJS100D	M 10 OHM, J, 2W	1	
R924	ERDS1FJ3R3	C 3.3 OHM, J, 1/2W	1	
R927	ERJ6GEYJ561	M 560 OHM, J, 1/10W	1	
R928	ERJ6GEYJ471	M 470 OHM, J, 1/10W	1	
R931	ERX12SJR68	M0.68 OHM, J, 1/2W	1	
R932	ERX12SJR82	M0.82 OHM, J, 1/2W	1	
R933	ERDS1FJ181	C 180 OHM, J, 1/2W	1	
R934	ERJ6GEYJ151	M 150 OHM, J, 1/10W	1	
R935	ERJ6GEYJ102	M 1KOHM, J, 1/10W	1	
R936	ERJ6GEYJ223	M 22KOHM, J, 1/10W	1	
R938	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R939	ERX12SJR82	M0.82 OHM, J, 1/2W	1	
R940	ERJ6GEYJ101	M 100 OHM, J, 1/10W	1	
R970	ERJ6GEYJ681	M 680 OHM, J, 1/10W	1	
R971	ERJ6GEYJ471	M 470 OHM, J, 1/10W	1	
R972	ERJ6GEYJ101	M 100 OHM, J, 1/10W	1	
R973	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	1	
R974	ERJ6ENF1692	M16.9KOHM, 1/10W	1	
R975	ERJ6ENF2321	M2.32KOHM, 1/10W	1	
R990	ERJ6GEYJ332	M 3.3KOHM, J, 1/10W	1	
R992	ERJ6GEYJ473	M 47KOHM, J, 1/10W	1	
R993, 94	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
R1000	ERJ3GEYJ473	M 47KOHM, J, 1/16W	1	
R1005	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R1013	ERJ3GEYJ562	M 5.6KOHM, J, 1/16W	1	
R1015	ERJ3GEYJ332	M 3.3KOHM, J, 1/16W	1	
R1016, 17	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R1018	ERJ3GEYJ224	M 220KOHM, J, 1/16W	1	
R1019	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1022	ERJ3GEYJ273	M 27KOHM, J, 1/16W	1	
R1023	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1025	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1027	ERJ3GEYJ222	M 2.2KOHM, J, 1/16W	1	
R1028	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R1030	ERJ3GEYJ331	M 330 OHM, J, 1/16W	1	
R1031	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R1032	ERJ3GEYJ222	M 2.2KOHM, J, 1/16W	1	
R1033, 34	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R1037	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R1038, 39	ERJ3GEYJ220	M 22 OHM, J, 1/16W	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R1040	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1043-48	ERJ3GEYJ103	M 10KOHM, J, 1/16W	6	
R1049	ERJ3GEYJ332	M 3.3KOHM, J, 1/16W	1	
R1051	ERJ3GEYJ332	M 3.3KOHM, J, 1/16W	1	
R1052, 53	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R1054	ERJ3GEYJ473	M 47KOHM, J, 1/16W	1	
R1055-57	ERJ3GEYJ103	M 10KOHM, J, 1/16W	3	
R1058, 59	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R1063	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R1065, 66	ERJ3EKF3901	M 3.9KOHM, 1/16W	2	
R1067	ERJ3GEYJ223	M 22KOHM, J, 1/16W	1	
R1068	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R1069	ERJ3GEYJ105	M 1MOHM, J, 1/16W	1	
R1070	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R1071, 72	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R1073	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1075	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R1079	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R1081	ERJ3GEYJ473	M 47KOHM, J, 1/16W	1	
R1082	ERJ3GEYJ223	M 22KOHM, J, 1/16W	1	
R1083	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1086	ERJ3GEYJ821	M 820 OHM, J, 1/16W	1	
R1090	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R1091	ERJ3GEYJ391	M 390 OHM, J, 1/16W	1	D0GB391JA002
R1092	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R1093	ERJ3GEYJ471	M 470 OHM, J, 1/16W	1	
R1095	ERJ3GEYJ473	M 47KOHM, J, 1/16W	1	
R1099, 00	EXB38V680J	RESISTOR ARRAY	2	
R1101	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R1102	EXB38V680J	RESISTOR ARRAY	1	
R1105	ERJ3GEYJ225	M 2.2MOHM, J, 1/16W	1	ERJ3GEYJ225V
R1107	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1108	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R1109	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1110	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R1111	ERJ3GEYJ560	M 56 OHM, J, 1/16W	1	
R1112, 13	ERJ3GEYJ102	M 1KOHM, J, 1/16W	2	
R1114	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R1115	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R1117	ERJ3GEYJ473	M 47KOHM, J, 1/16W	1	
R1119, 20	ERJ3GEYJ563	M 56KOHM, J, 1/16W	2	
R1124	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R1125	EXB38V680J	RESISTOR ARRAY	1	
R1126	ERJ3GEYJ273	M 27KOHM, J, 1/16W	1	
R1127	ERJ3GEYJ223	M 22KOHM, J, 1/16W	1	
R1128	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R1129	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1130	EXB38V680J	RESISTOR ARRAY	1	
R1131	ERJ3GEYJ104	M 100KOHM, J, 1/16W	1	
R1132	ERJ3GEYJ220	M 22 OHM, J, 1/16W	1	
R1133	ERJ3GEYJ104	M 100KOHM, J, 1/16W	1	
R1134	EXB38V680J	RESISTOR ARRAY	1	
R1135	ERJ3GEYJ224	M 220KOHM, J, 1/16W	1	
R1136	ERJ3GEYJ221	M 220 OHM, J, 1/16W	1	
R1137	EXB38V680J	RESISTOR ARRAY	1	
R1138	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R1139	ERJ3GEYJ273	M 27KOHM, J, 1/16W	1	
R1140	EXB38V680J	RESISTOR ARRAY	1	
R1141	ERJ3GEYJ820	M 82 OHM, J, 1/16W	1	
R1142	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R1143	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1145, 46	TAJAAH0101JV	M 100 OHM, J, 1/16W	2	D0GB101JA006
R1147	EXB38V680J	RESISTOR ARRAY	1	
R1148-51	TAJAAH0101JV	M 100 OHM, J, 1/16W	4	D0GB101JA006

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R1152	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R1153-55	TAJAAH0101JV	M 100 OHM, J, 1/16W	3	D0GB101JA006
R1156	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1157	ERJ3GEYJ223	M 22KOHM, J, 1/16W	1	
R1158, 59	EXB38V680J	RESISTOR ARRAY	2	
R1160	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R1161	ERJ3GEYJ332	M 3.3KOHM, J, 1/16W	1	
R1162-64	TAJAAH0101JV	M 100 OHM, J, 1/16W	3	D0GB101JA006
R1167-69	TAJAAH0101JV	M 100 OHM, J, 1/16W	3	D0GB101JA006
R1170, 71	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R1172	ERJ3GEYJ272	M 2.7KOHM, J, 1/16W	1	
R1174-76	ERJ3GEYJ272	M 2.7KOHM, J, 1/16W	3	
R1177	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1178	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R1179	ERJ3GEYJ473	M 47KOHM, J, 1/16W	1	
R1180	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1181	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R1182, 83	TAJAAH0101JV	M 100 OHM, J, 1/16W	2	D0GB101JA006
R1184	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R1185	ERJ3GEYJ562	M 5.6KOHM, J, 1/16W	1	
R1186	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R1187	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R1188-90	ERJ3GEYJ103	M 10KOHM, J, 1/16W	3	
R1192, 93	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R1195-97	ERJ3GEYJ103	M 10KOHM, J, 1/16W	3	
R1202, 03	ERJ3GEYJ562	M 5.6KOHM, J, 1/16W	2	
R1205	ERJ6ENF75R0	M 75 OHM, 1/10W	1	
R1207	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R1208-10	ERJ3GEYJ820	M 82 OHM, J, 1/16W	3	
R1212	ERJ6ENF75R0	M 75 OHM, 1/10W	1	
R1213	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R1214	TAJAAH0470JV	M 47 OHM, J, 1/16W	1	D0GB470JA006
R1215	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R1222	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1224	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1225, 26	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R1227	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1228	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R1229	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R1230	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R1231	ERJ3GEYJ471	M 470 OHM, J, 1/16W	1	
R1232	ERJ3GEYJ223	M 22KOHM, J, 1/16W	1	
R1233	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R1234	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R1235, 36	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	2	
R1237	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R1242, 43	ERJ3GEYJ683	M 68KOHM, J, 1/16W	2	
R1245-48	ERJ3GEYJ560	M 56 OHM, J, 1/16W	4	
R1249	ERJ3GEYJ153	M 15KOHM, J, 1/16W	1	
R1254	ERJ3GEYJ104	M 100KOHM, J, 1/16W	1	
R1255	ERJ3GEYJ473	M 47KOHM, J, 1/16W	1	
R1256	ERJ3GEYJ104	M 100KOHM, J, 1/16W	1	
R1257	ERJ3GEYJ473	M 47KOHM, J, 1/16W	1	
R1258	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R1259, 60	TAJAAH0101JV	M 100 OHM, J, 1/16W	2	D0GB101JA006
R1261, 62	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R1263, 64	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R1267	ERJ3GEYJ683	M 68KOHM, J, 1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R1268	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R1270-73	TAJAAH0101JV	M 100 OHM, J, 1/16W	4	D0GB101JA006
R1276	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R1278, 79	TAJAAH0101JV	M 100 OHM, J, 1/16W	2	D0GB101JA006
R1280, 81	TAJAAH0470JV	M 47 OHM, J, 1/16W	2	D0GB470JA006
R1282-84	TAJAAH0101JV	M 100 OHM, J, 1/16W	3	D0GB101JA006
R1285	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1286, 87	TAJAAH0101JV	M 100 OHM, J, 1/16W	2	D0GB101JA006
R1290	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R1292	ERJ3GEYJ223	M 22KOHM, J, 1/16W	1	
R1301	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1303	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1304	ERJ3GEYJ330	M 33 OHM, J, 1/16W	1	
R1305	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1306	ERJ3EKF1800	M 180 OHM, 1/16W	1	
R1307	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1308	ERJ3EKF1800	M 180 OHM, 1/16W	1	
R1310	ERJ3GEYJ151	M 150 OHM, J, 1/16W	1	
R1311, 12	ERJ3GEYJ221	M 220 OHM, J, 1/16W	2	
R1313	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R1317	ERJ3GEYJ473	M 47KOHM, J, 1/16W	1	
R1318	ERJ3GEYJ222	M 2.2KOHM, J, 1/16W	1	
R1319	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R1320	ERJ3GEYJ331	M 330 OHM, J, 1/16W	1	
R1321	ERJ3GEYJ681	M 680 OHM, J, 1/16W	1	
R1322	ERJ3GEYJ331	M 330 OHM, J, 1/16W	1	
R1323	ERJ3GEYJ222	M 2.2KOHM, J, 1/16W	1	
R1324	ERJ3GEYJ331	M 330 OHM, J, 1/16W	1	
R1325	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1326	ERJ3GEYJ221	M 220 OHM, J, 1/16W	1	
R1328	ERJ3GEYJ222	M 2.2KOHM, J, 1/16W	1	
R1330	ERJ3GEYJ223	M 22KOHM, J, 1/16W	1	
R1332	ERJ3EKF4700	M 470 OHM, 1/16W	1	
R1333, 34	ERJ3EKF2700	M 270 OHM, 1/16W	2	
R1335	ERJ3GEYJ332	M 3.3KOHM, J, 1/16W	1	
R1336	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R1338, 39	ERJ3EKF1200	M 120 OHM, 1/16W	2	
R1344, 45	ERJ3EKF6801	M 6.8KOHM, 1/16W	2	
R1348, 49	ERJ3GEYJ821	M 820 OHM, J, 1/16W	2	
R1353	ERJ3EKF2100	M 210 OHM, 1/16W	1	
R1355	ERJ3GEYJ332	M 3.3KOHM, J, 1/16W	1	
R1357	ERJ3EKF1331	M 13.3KOHM, 1/16W	1	
R1360	ERJ3GEYJ222	M 2.2KOHM, J, 1/16W	1	
R1366-69	ERJ3GEYJ223	M 22KOHM, J, 1/16W	4	
R1370, 71	ERJ3GEYJ102	M 1KOHM, J, 1/16W	2	
R1380, 81	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R1382	ERJ3GEYJ221	M 220 OHM, J, 1/16W	1	
R1383, 84	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R1385	ERJ3GEYJ221	M 220 OHM, J, 1/16W	1	
R1386	ERJ3GEYJ471	M 470 OHM, J, 1/16W	1	
R1387	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1388	ERJ3GEYJ681	M 680 OHM, J, 1/16W	1	
R1389	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1390	ERJ3GEYJ681	M 680 OHM, J, 1/16W	1	
R1391	ERJ3EKF2400	M 240 OHM, 1/16W	1	
R1392	ERJ3GEYJ221	M 220 OHM, J, 1/16W	1	
R1393	ERJ3EKF2400	M 240 OHM, 1/16W	1	
R1394	ERJ3GEYJ471	M 470 OHM, J, 1/16W	1	
R1395	ERJ3GEYJ121	M 120 OHM, J, 1/16W	1	
R1396	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R1397	ERJ3GEYJ152	M 1.5KOHM, J, 1/16W	1	
R1398	ERJ3GEY0R00	M 0 OHM, 1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R1399,00	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R1401	ERJ3EKF2200	M 220 OHM, 1/16W	1	
R1402	ERJ3GEYJ151	M 150 OHM,J,1/16W	1	
R1403	ERJ3EKF2200	M 220 OHM, 1/16W	1	
R1406	ERJ3EKF2701	M 2.7KOHM, 1/16W	1	
R1407	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R1408	ERJ3GEYJ151	M 150 OHM,J,1/16W	1	
R1409	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R1410	ERJ3EKF1101	M 1.1KOHM, 1/16W	1	
R1411	ERJ3EKF1401	M 1.4KOHM, 1/16W	1	
R1412	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1413	ERJ3EKF2550	M 255 OHM, 1/16W	1	
R1414	ERJ3EKF1101	M 1.1KOHM, 1/16W	1	
R1415	ERJ3EKF1401	M 1.4KOHM, 1/16W	1	
R1416	ERJ3EKF2701	M 2.7KOHM, 1/16W	1	
R1417	ERJ3EKF1800	M 180 OHM, 1/16W	1	
R1418	ERJ3EKF43R0	M 43 OHM, 1/16W	1	
R1419	ERJ3EKF1020	M 102 OHM, 1/16W	1	
R1420,21	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R1422	ERJ3EKF47R0	M 47 OHM, 1/16W	1	
R1423,24	ERJ3EKF3901	M 3.9KOHM, 1/16W	2	
R1435	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1439	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1443	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1446	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1447	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1459	ERJ3GEYJ333	M 33KOHM,J,1/16W	1	
R1461	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R1464	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1467	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1468,69	ERJ3GEYJ333	M 33KOHM,J,1/16W	2	
R1470	ERJ3GEYJ823	M 82KOHM,J,1/16W	1	
R1472	ERJ3GEYJ332	M 3.3KOHM,J,1/16W	1	
R1474	ERJ3GEYJ105	M 1MOHM,J,1/16W	1	
R1476	ERJ3GEYJ182	M 1.8KOHM,J,1/16W	1	
R1477,78	TAJAAH0101JV	M 100 OHM,J,1/16W	2	D0GB101JA006
R1479	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R1481	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R1484	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R1485	ERJ3GEYJ822	M 8.2KOHM,J,1/16W	1	
R1486	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	
R1487	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1488,89	ERJ3GEYJ102	M 1KOHM,J,1/16W	2	
R1490	ERJ3EKF2701	M 2.7KOHM, 1/16W	1	
R1491	ERJ3EKF1401	M 1.4KOHM, 1/16W	1	
R1492	ERJ3EKF1101	M 1.1KOHM, 1/16W	1	
R1493	ERJ3EKF33R0	M 33 OHM, 1/16W	1	
R1494	ERJ3EKF1500	M 150 OHM, 1/16W	1	
R1495	ERJ3EKF75R0	M 0.75HM, 1/16W	1	
R1496	ERJ3GEYJ100	M 10 OHM,J,1/16W	1	
R1497	ERJ3EKF1401	M 1.4KOHM, 1/16W	1	
R1498	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	
R1499	ERJ3EKF1101	M 1.1KOHM, 1/16W	1	
R1500	ERJ3EKF33R0	M 33 OHM, 1/16W	1	
R1501	ERJ3EKF2701	M 2.7KOHM, 1/16W	1	
R1502,03	ERJ3EKF1401	M 1.4KOHM, 1/16W	2	
R1504	ERJ3EKF75R0	M 0.75HM, 1/16W	1	
R1505	ERJ3GEYJ100	M 10 OHM,J,1/16W	1	
R1507	ERJ3EKF33R0	M 33 OHM, 1/16W	1	
R1509	ERJ3EKF1500	M 150 OHM, 1/16W	1	
R1510	ERJ3GEYJ100	M 10 OHM,J,1/16W	1	
R1511	ERJ3EKF75R0	M 0.75HM, 1/16W	1	
R1512,13	ERJ3EKF1101	M 1.1KOHM, 1/16W	2	
R1514	ERJ3GEYJ271	M 270 OHM,J,1/16W	1	
R1515	ERJ3EKF33R0	M 33 OHM, 1/16W	1	
R1516	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R1517	ERJ3EKF2701	M 2.7KOHM, 1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R1518	ERJ3EKF33R0	M 33 OHM, 1/16W	1	
R1519	ERJ3GEYJ151	M 150 OHM,J,1/16W	1	
R1520	ERJ3EKF1500	M 150 OHM, 1/16W	1	
R1521	ERJ3EKF2701	M 2.7KOHM, 1/16W	1	
R1522	ERJ3EKF33R0	M 33 OHM, 1/16W	1	
R1526	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1528	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1529	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R1531	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R1532,33	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R1534	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R1535	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R1536	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R1537	TAJAAH0101JV	M 100 OHM,J,1/16W	1	D0GB101JA006
R1539	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R1540,41	ERJ3GEYJ102	M 1KOHM,J,1/16W	2	
R1545	ERJ3GEYJ560	M 56 OHM,J,1/16W	1	
R1546,47	TAJAAH0101JV	M 100 OHM,J,1/16W	2	D0GB101JA006
R1548	ERJ3GEYJ560	M 56 OHM,J,1/16W	1	
R1549,50	ERJ3GEYJ121	M 120 OHM,J,1/16W	2	
R1551	ERJ3GEYJ162	M 1.6KOHM,J,1/16W	1	
R1552	ERJ3GEYJ331	M 330 OHM,J,1/16W	1	
R1553	ERJ3GEYJ242	M 2.4KOHM,J,1/16W	1	
R1554,55	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	2	
R1557-59	ERJ3GEYJ121	M 120 OHM,J,1/16W	3	
R1562,63	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R1570	ERJ3GEYJ152	M 1.5KOHM,J,1/16W	1	
R1573-76	ERJ3GEYJ471	M 470 OHM,J,1/16W	4	
R1578,79	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R1604,05	ERJ3GEYJ471	M 470 OHM,J,1/16W	2	
R1606-08	ERJ3EKF33R0	M 33 OHM, 1/16W	3	
R1609-11	ERJ3EKF1500	M 150 OHM, 1/16W	3	
R1612-14	ERJ3EKF33R0	M 33 OHM, 1/16W	3	
R1615	ERJ3EKF2200	M 220 OHM, 1/16W	1	
R1623,24	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R1626	ERJ3EKF1401	M 1.4KOHM, 1/16W	1	
R1627	ERJ3EKF1001	M 1KOHM, 1/16W	1	
R1628	ERJ3EKF2701	M 2.7KOHM, 1/16W	1	
R1629	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R1630	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R1634	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R1635	ERJ3GEYJ331	M 330 OHM,J,1/16W	1	
R1639	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1647	ERJ6GEYJ271	M 270 OHM,J,1/10W	1	
R1649,50	ERJ6GEYJ271	M 270 OHM,J,1/10W	2	
R1652,53	EXB38VR000	RESISTOR ARRAY	2	
R1654-61	EXB38V820J	RESISTOR ARRAY	8	
R1662,63	EXB38VR000	RESISTOR ARRAY	2	
R1664	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1665-68	ERJ3GEYJ221	M 220 OHM,J,1/16W	4	
R1669,70	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R1672-79	EXB38V820J	RESISTOR ARRAY	8	
R1680	ERJ3GEYJ331	M 330 OHM,J,1/16W	1	
R1681	TAJAAH0101JV	M 100 OHM,J,1/16W	1	D0GB101JA006
R1682	ERJ3GEY0R00	M 0 OHM, 1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R1683-85	ERJ6GEYJ391	M 390 OHM,J,1/10W	3	
R1686	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1687-89	ERJ6GEYJ121	M 120 OHM,J,1/10W	3	
R1694	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1700,01	ERJ3GEYJ221	M 220 OHM,J,1/16W	2	
R1702	ERJ3GEYJ821	M 820 OHM,J,1/16W	1	
R1703	ERJ3GEYJ681	M 680 OHM,J,1/16W	1	
R1704	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1705	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R1706	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1707	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R1708,09	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R1710-13	EXB38V221J	RESISTOR ARRAY	4	
R1714-17	ERJ3GEY0R00	M 0 OHM, 1/16W	4	
R1719	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1721	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1722	ERJ3GEYJ100	M 10 OHM,J,1/16W	1	
R1723	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R1724	TAJAAH0101JV	M 100 OHM,J,1/16W	1	D0GB101JA006
R1728,29	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R1731,32	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R1734-36	ERJ3GEYJ331	M 330 OHM,J,1/16W	3	
R1737	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1739	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1741-44	ERJ3GEYJ220	M 22 OHM,J,1/16W	4	
R1745	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R1746-48	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R1750	ERJ3GEYJ331	M 330 OHM,J,1/16W	1	
R1751	ERJ3EKF5110	M 511 OHM, 1/16W	1	
R1752	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R1753	ERJ3EKF1101	M 1.1KOHM, 1/16W	1	
R1755	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1756	ERJ6GEYJ471	M 470 OHM,J,1/10W	1	
R1757	ERJ3EKF1200	M 120 OHM, 1/16W	1	
R1758	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R1759	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1760	ERJ6GEYJ331	M 330 OHM,J,1/10W	1	
R1761	ERJ3EKF1800	M 180 OHM, 1/16W	1	
R1762	ERJ3EKF1500	M 150 OHM, 1/16W	1	
R1765	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1766	ERJ3EKF1500	M 150 OHM, 1/16W	1	
R1767	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1768	ERJ3GEYJ331	M 330 OHM,J,1/16W	1	
R1769	ERJ3EKF4701	M 4.7KOHM, 1/16W	1	
R1770	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R1771	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R1772	ERJ3GEYJ821	M 820 OHM,J,1/16W	1	
R1773	ERJ3EKF39R0	M 39 OHM, 1/16W	1	
R1774	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1775	ERJ6GEYJ471	M 470 OHM,J,1/10W	1	
R1776	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R1777	ERJ3EKF1200	M 120 OHM, 1/16W	1	
R1778	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R1779	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1780	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R1781	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	
R1782	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R1783	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1784	ERJ3EKF1800	M 180 OHM, 1/16W	1	
R1785	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1787	ERJ3EKF20R0	M 20 OHM, 1/16W	1	
R1790	ERJ3EKF2611	M2.61KOHM, 1/16W	1	
R1791	ERJ3GEYJ681	M 680 OHM,J,1/16W	1	
R1792	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R1793	ERJ3EKF1500	M 150 OHM, 1/16W	1	
R1794	ERJ3EKF4701	M 4.7KOHM, 1/16W	1	
R1795	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1796	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	
R1797	ERJ3GEYJ821	M 820 OHM,J,1/16W	1	
R1798	ERJ6GEYJ471	M 470 OHM,J,1/10W	1	
R1799	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1800	ERJ3GEYJ153	M 15KOHM,J,1/16W	1	
R1801,02	ERJ3GEYJ331	M 330 OHM,J,1/16W	2	
R1803	ERJ3EKF2200	M 220 OHM, 1/16W	1	
R1805	ERJ3GEYJ331	M 330 OHM,J,1/16W	1	
R1806	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R1807	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	
R1808	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R1809	ERJ3EKF2700	M 270 OHM, 1/16W	1	
R1810	ERJ3GEYJ153	M 15KOHM,J,1/16W	1	
R1811,12	ERJ3GEYJ331	M 330 OHM,J,1/16W	2	
R1813	ERJ3EKF2200	M 220 OHM, 1/16W	1	
R1815	ERJ3GEYJ331	M 330 OHM,J,1/16W	1	
R1816	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R1817	ERJ6GEYJ331	M 330 OHM,J,1/10W	1	
R1818	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R1819	ERJ3EKF2700	M 270 OHM, 1/16W	1	
R1820	ERJ3GEYJ153	M 15KOHM,J,1/16W	1	
R1821,22	ERJ3GEYJ331	M 330 OHM,J,1/16W	2	
R1823	ERJ3EKF2200	M 220 OHM, 1/16W	1	
R1825	ERJ3GEYJ331	M 330 OHM,J,1/16W	1	
R1826	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R1827	ERJ6GEYJ471	M 470 OHM,J,1/10W	1	
R1828	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R1829	ERJ3EKF2700	M 270 OHM, 1/16W	1	
R1830	ERJ3GEYJ331	M 330 OHM,J,1/16W	1	
R1831	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1832	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R1833	ERJ6ENF68R0	M 68 OHM, 1/10W	1	
R1834	ERJ6ENF82R0	M 82 OHM, 1/10W	1	
R1835	ERJ6ENF68R0	M 68 OHM, 1/10W	1	
R1836	ERJ6ENF82R0	M 82 OHM, 1/10W	1	
R1837-39	ERJ3GEYJ220	M 22 OHM,J,1/16W	3	
R1842,43	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R1844,45	ERJ6ENF51R0	M0.51KOHM, 1/10W	2	
R1846	ERJ6ENF82R0	M 82 OHM, 1/10W	1	
R1847	ERJ6ENF68R0	M 68 OHM, 1/10W	1	
R1850,51	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R1852	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1853	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1854	TAJAAH0101JV	M 100 OHM,J,1/16W	1	D0GB101JA006
R1855	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1856,57	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R1858-60	ERJ3GEYJ331	M 330 OHM,J,1/16W	3	
R1861-63	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R1866-69	ERJ3GEYJ103	M 10KOHM,J,1/16W	4	
R1870,71	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R1872	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1875	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1877	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1878,79	ERJ3GEYJ331	M 330 OHM,J,1/16W	2	
R1882	ERJ6ENF75R0	M 75 OHM, 1/10W	1	
R1883	ERJ3GEYJ271	M 270 OHM,J,1/16W	1	
R1884	TAJAAH0101JV	M 100 OHM,J,1/16W	1	D0GB101JA006
R1885	ERJ6GEYJ100	M 10 OHM,J,1/10W	1	
R1886,87	ERJ3GEYJ332	M 3.3KOHM,J,1/16W	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R1888	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R1889	ERJ3GEYJ222	M 2.2KOHM, J, 1/16W	1	
R1890	ERJ3GEYJ332	M 3.3KOHM, J, 1/16W	1	
R1892	ERJ3EKF1501	M 1.5KOHM, 1/16W	1	
R1893	ERJ3EKF4701	M 4.7KOHM, 1/16W	1	
R1896	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R1899	ERJ3EKF3301	M 3.3KOHM, 1/16W	1	
R1901	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1902	ERJ3EKF2201	M 2.2KOHM, 1/16W	1	
R1903	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R1904	ERJ3EKF8200	M 820 OHM, 1/16W	1	
R1905-08	ERJ3GEY0R00	M 0 OHM, 1/16W	4	
R1909	ERJ3EKF4701	M 4.7KOHM, 1/16W	1	
R1910-33	ERJ3GEYJ820	M 82 OHM, J, 1/16W	24	
R1934	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R1935	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1936	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R1937	ERJ3EKF4701	M 4.7KOHM, 1/16W	1	
R1938	ERJ6GEYJ183	M 18KOHM, J, 1/10W	1	
R1939	ERJ3GEYJ560	M 56 OHM, J, 1/16W	1	
R1940	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1941	EXB38V820J	RESISTOR ARRAY	1	
R1942	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R1943	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1944	ERJ6GEYJ102	M 1KOHM, J, 1/10W	1	
R1945	EXB38V820J	RESISTOR ARRAY	1	
R1946-48	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	3	
R1949	EXB38V820J	RESISTOR ARRAY	1	
R1952	ERJ6ENF75R0	M 75 OHM, 1/10W	1	
R1953	EXB38V820J	RESISTOR ARRAY	1	
R1954	ERJ6ENF75R0	M 75 OHM, 1/10W	1	
R1955,56	TAJAAH0101JV	M 100 OHM, J, 1/16W	2	D0GB101JA006
R1957	EXB38V820J	RESISTOR ARRAY	1	
R1958,59	TAJAAH0101JV	M 100 OHM, J, 1/16W	2	D0GB101JA006
R1960	ERJ3GEYJ820	M 82 OHM, J, 1/16W	1	
R1961	EXB38V820J	RESISTOR ARRAY	1	
R1963,64	ERJ3GEYJ330	M 33 OHM, J, 1/16W	2	
R1965	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R1966,67	ERJ3GEYJ152	M 1.5KOHM, J, 1/16W	2	
R1968-70	ERJ3EKF75R0	M 0.75HM, 1/16W	3	
R1971	ERJ3GEYJ152	M 1.5KOHM, J, 1/16W	1	
R1972-74	ERJ3GEYJ102	M 1KOHM, J, 1/16W	3	
R1975,76	ERJ3GEYJ562	M 5.6KOHM, J, 1/16W	2	
R1989,90	TAJAAH0101JV	M 100 OHM, J, 1/16W	2	D0GB101JA006
R1991-94	ERJ3GEYJ102	M 1KOHM, J, 1/16W	4	
R1996	ERJ6ENF1020	M 105 OHM, 1/10W	1	
R1997	ERJ6ENF1500	M 150 OHM, 1/10W	1	
R1998,99	ERJ6ENF1020	M 105 OHM, 1/10W	2	
R2001,02	TAJAAH0101JV	M 100 OHM, J, 1/16W	2	D0GB101JA006
R2003	ERJ3GEYJ183	M 18KOHM, J, 1/16W	1	
R2004	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R2006,07	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	2	
R2009,10	TAJAAH0101JV	M 100 OHM, J, 1/16W	2	D0GB101JA006
R2014-17	ERJ3GEYJ221	M 220 OHM, J, 1/16W	4	
R2018	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R2021	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R2022	ERJ6GEYJ561	M 560 OHM, J, 1/10W	1	
R2023	ERJ3GEYJ471	M 470 OHM, J, 1/16W	1	
R2025	ERJ3GEYJ332	M 3.3KOHM, J, 1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R2026	ERJ6GEYJ681	M 680 OHM, J, 1/10W	1	
R2027	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R2029	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R2030	ERJ3GEYJ332	M 3.3KOHM, J, 1/16W	1	
R2031	ERJ3GEYJ331	M 330 OHM, J, 1/16W	1	
R2032	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R2033	ERJ6ENF1781	M 1.78KOHM, 1/10W	1	
R2034	ERJ6ENF1601	M 1.6KOHM, 1/10W	1	
R2046	ERJ6GEYJ471	M 470 OHM, J, 1/10W	1	
R2047,48	ERJ3GEYJ221	M 220 OHM, J, 1/16W	2	
R2049,50	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R2052	ERJ3GEYJ221	M 220 OHM, J, 1/16W	1	
R2054	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R2055	ERJ3GEYJ561	M 560 OHM, J, 1/16W	1	
R2058,59	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R2200,01	ERJ3GEYJ473	M 47KOHM, J, 1/16W	2	
R2203	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R2204,05	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
R2206,07	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R2208,09	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
R2210,11	TAJAAH0101JV	M 100 OHM, J, 1/16W	2	D0GB101JA006
R2220,21	ERJ6GEYJ101	M 100 OHM, J, 1/10W	2	
R2222	ERJ6GEYJ2R2	M 2.2 OHM, J, 1/10W	1	
R2225,26	ERJ6GEYJ2R2	M 2.2 OHM, J, 1/10W	2	
R2245	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R2250,51	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R2253	ERJ3GEYJ473	M 47KOHM, J, 1/16W	1	
R2254	ERJ3GEYJ333	M 33KOHM, J, 1/16W	1	
R2256	ERJ3GEYJ473	M 47KOHM, J, 1/16W	1	
R2257	ERJ3GEYJ333	M 33KOHM, J, 1/16W	1	
R2258	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R2259	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R2260	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R2261	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R2279	ERJ3GEYJ333	M 33KOHM, J, 1/16W	1	
R2282	ERJ3GEYJ333	M 33KOHM, J, 1/16W	1	
R2283	ERJ3GEYJ473	M 47KOHM, J, 1/16W	1	
R2284	ERJ3GEYJ273	M 27KOHM, J, 1/16W	1	
R2286	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R2295	ERJ3GEYJ473	M 47KOHM, J, 1/16W	1	
R2296	ERJ3GEYJ273	M 27KOHM, J, 1/16W	1	
R2305,06	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	2	
R2307,08	ERJ6GEYJ202	M 2KOHM, J, 1/10W	2	
R2311-16	ERDS1FJ2R2	C 2.2 OHM, J, 1/2W	6	
R2317,18	ERJ6GEYJ271	M 270 OHM, J, 1/10W	2	
R2319,20	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	2	
R2321,22	ERJ6GEYJ104	M 100KOHM, J, 1/10W	2	
R2323-28	ERDS1FJ2R2	C 2.2 OHM, J, 1/2W	6	
R2329,30	ERJ6GEYJ203	M 20KOHM, J, 1/10W	2	
R2331,32	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R2333,34	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
R2335,36	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R2337,38	ERJ6GEYJ270	M 27 OHM, J, 1/10W	2	
R2339,40	ERJ8GEYJ392	M 3.9KOHM, J, 1/8W	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R2346, 47	ERJ6GEYJ473	M 47KOHM, J, 1/10W	2	
R2348	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R2371	ERJ6GEYJ184	M 180KOHM, J, 1/10W	1	
R2372	ERJ6GEYJ223	M 22KOHM, J, 1/10W	1	
R2373	ERJ6GEYJ562	M 5.6KOHM, J, 1/10W	1	
R2374	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R2375	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R2376	ERJ6GEYJ223	M 22KOHM, J, 1/10W	1	
R2377	ERJ6GEYJ471	M 470 OHM, J, 1/10W	1	
R2378	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R2382, 83	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R2385	ERJ6GEYJ821	M 820 OHM, J, 1/10W	1	
R2390	ERJ6GEYJ102	M 1KOHM, J, 1/10W	1	
R2391	ERJ6GEYJ682	M 6.8KOHM, J, 1/10W	1	
R2392	ERJ6GEYJ273	M 27KOHM, J, 1/10W	1	
R2393	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R2395	ERJ6GEYJ273	M 27KOHM, J, 1/10W	1	
R2396	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R2398	ERJ6GEYJ102	M 1KOHM, J, 1/10W	1	
R2401, 02	ERJ3GEYJ562	M 5.6KOHM, J, 1/16W	2	
R2403, 04	ERJ3GEYJ223	M 22KOHM, J, 1/16W	2	
R2405, 06	ERJ3GEYJ220	M 22 OHM, J, 1/16W	2	
R2408	ERJ3GEYJ333	M 33KOHM, J, 1/16W	1	
R2409	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R2412	ERJ3GEYJ184	M 180KOHM, J, 1/16W	1	
R2413	ERJ3GEYJ333	M 33KOHM, J, 1/16W	1	
R2414	ERJ3GEYJ473	M 47KOHM, J, 1/16W	1	
R2415	ERJ3GEYJ104	M 100KOHM, J, 1/16W	1	
R2416	ERJ3GEYJ184	M 180KOHM, J, 1/16W	1	
R2417	ERJ3GEYJ333	M 33KOHM, J, 1/16W	1	
R2418	ERJ3GEYJ473	M 47KOHM, J, 1/16W	1	
R2419	ERJ3GEYJ104	M 100KOHM, J, 1/16W	1	
R2420	ERJ3GEYJ563	M 56KOHM, J, 1/16W	1	
R2421, 22	ERJ3GEYJ363	M 36KOHM, J, 1/16W	2	D0GB363JA002
R2423	ERJ3GEYJ563	M 56KOHM, J, 1/16W	1	
R2427, 28	TAJAAH0101JV	M 100 OHM, J, 1/16W	2	D0GB101JA006
R2430, 31	ERJ3GEYJ223	M 22KOHM, J, 1/16W	2	
R2434, 35	ERJ3GEYJ223	M 22KOHM, J, 1/16W	2	
R2439	ERJ3GEYJ223	M 22KOHM, J, 1/16W	1	
R2440	ERJ3GEYJ473	M 47KOHM, J, 1/16W	1	
R2442	ERJ3GEYJ223	M 22KOHM, J, 1/16W	1	
R2443	ERJ3GEYJ473	M 47KOHM, J, 1/16W	1	
R2444, 45	ERJ3GEYJ102	M 1KOHM, J, 1/16W	2	
R2494	ERJ12YJ821	M 820 OHM, J, 1/2W	1	
R2651-54	TAJAAH0101JV	M 100 OHM, J, 1/16W	4	D0GB101JA006
R2655	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2657, 58	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R2660	ERJ3GEYJ104	M 100KOHM, J, 1/16W	1	
R2664, 65	TAJAAH0101JV	M 100 OHM, J, 1/16W	2	D0GB101JA006
R2666	ERJ3GEYJ105	M 1MOHM, J, 1/16W	1	
R2667	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R2668	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R2671-74	TAJAAH0101JV	M 100 OHM, J, 1/16W	4	D0GB101JA006
R2675, 76	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R3100-13	ERJ6ENF75R0	M 75 OHM, 1/10W	14	
R3114, 15	ERJ6GEYJ223	M 22KOHM, J, 1/10W	2	
R3116	ERJ6ENF75R0	M 75 OHM, 1/10W	1	
R3117-20	ERJ6GEYJ223	M 22KOHM, J, 1/10W	4	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R3121	ERJ3GEYJ104	M 100KOHM, J, 1/16W	1	
R3122, 23	ERJ6GEYJ101	M 100 OHM, J, 1/10W	2	
R3124, 25	ERJ6GEYJ680	M 68 OHM, J, 1/10W	2	
R3126	ERJ3GEYJ104	M 100KOHM, J, 1/16W	1	
R3127-29	ERJ6GEYJ223	M 22KOHM, J, 1/10W	3	
R3130-32	ERJ3GEYJ123	M 12KOHM, J, 1/16W	3	
R3134, 35	ERJ3GEYJ104	M 100KOHM, J, 1/16W	2	
R3136	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R3137	ERJ3GEYJ473	M 47KOHM, J, 1/16W	1	
R3138	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R3140, 41	ERJ3GEYJ221	M 220 OHM, J, 1/16W	2	
R3142	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R3143-45	ERJ6GEYJ750	M 75 OHM, J, 1/10W	3	
R3147-49	ERJ8GEYJ391	M 390 OHM, J, 1/8W	3	
R3150-52	ERJ3GEYJ102	M 1KOHM, J, 1/16W	3	
R3153	ERJ3GEYJ332	M 3.3KOHM, J, 1/16W	1	
R3154-56	ERJ3GEYJ221	M 220 OHM, J, 1/16W	3	
R3157	ERJ3GEYJ332	M 3.3KOHM, J, 1/16W	1	
R3158	ERJ3GEYJ562	M 5.6KOHM, J, 1/16W	1	
R3159-64	ERJ6GEYJ220	M 22 OHM, J, 1/10W	6	
R3168-70	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R3172	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R3173	ERJ3GEYJ222	M 2.2KOHM, J, 1/16W	1	
R3174-79	ERJ3GEYJ333	M 33KOHM, J, 1/16W	6	
R3180-83	ERJ3GEYJ471	M 470 OHM, J, 1/16W	4	
R3184-86	ERJ3GEYJ820	M 82 OHM, J, 1/16W	3	
R3187-89	ERJ3GEYJ471	M 470 OHM, J, 1/16W	3	
R3196	ERJ3GEYJ221	M 220 OHM, J, 1/16W	1	
R3197	ERJ3GEYJ332	M 3.3KOHM, J, 1/16W	1	
R3198	ERJ3GEYJ221	M 220 OHM, J, 1/16W	1	
R3199	ERJ3GEYJ332	M 3.3KOHM, J, 1/16W	1	
R3200, 01	ERJ3GEYJ104	M 100KOHM, J, 1/16W	2	
R3202, 03	ERJ3GEYJ221	M 220 OHM, J, 1/16W	2	
R3205	ERJ3GEYJ221	M 220 OHM, J, 1/16W	1	
R3206	ERJ3GEYJ332	M 3.3KOHM, J, 1/16W	1	
R3209, 10	ERJ3EKF5600	M 560 OHM, 1/16W	2	
R3211	ERJ3GEYJ332	M 3.3KOHM, J, 1/16W	1	
R3212, 13	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	2	
R3214	ERJ3GEYJ104	M 100KOHM, J, 1/16W	1	
R3216	ERJ3GEYJ221	M 220 OHM, J, 1/16W	1	
R3217	ERJ3GEYJ104	M 100KOHM, J, 1/16W	1	
R3218, 19	ERJ3GEYJ332	M 3.3KOHM, J, 1/16W	2	
R3220, 21	ERJ3GEYJ221	M 220 OHM, J, 1/16W	2	
R3222	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R3223, 24	ERJ3GEYJ221	M 220 OHM, J, 1/16W	2	
R3225	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R3226-36	ERJ3GEYJ221	M 220 OHM, J, 1/16W	11	
R3237	TAJAAH0470JV	M 47 OHM, J, 1/16W	1	D0GB470JA006
R3239-41	ERJ3GEYJ221	M 220 OHM, J, 1/16W	3	
R3242	TAJAAH0470JV	M 47 OHM, J, 1/16W	1	D0GB470JA006
R3245, 46	ERJ3GEYJ221	M 220 OHM, J, 1/16W	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R3247-50	TAJAAH0101JV	M 100 OHM, J, 1/16W	4	D0GB101JA006
R3251-53	ERJ3GEYJ221	M 220 OHM, J, 1/16W	3	
R3255	ERJ3GEYJ221	M 220 OHM, J, 1/16W	1	
R3256	ERJ3GEYJ222	M 2.2KOHM, J, 1/16W	1	
R3259	ERJ3EKF7500	M 750 OHM, 1/16W	1	
R3260,61	ERJ3GEYJ104	M 100KOHM, J, 1/16W	2	
R3262-64	ERJ3EKF7500	M 750 OHM, 1/16W	3	
R3265,66	TAJAAH0101JV	M 100 OHM, J, 1/16W	2	D0GB101JA006
R3267,68	ERJ3EKF6980	M 698 OHM, 1/16W	2	
R3269	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R3270,71	ERJ3EKF6980	M 698 OHM, 1/16W	2	
R3275-77	ERJ8GEYJ391	M 390 OHM, J, 1/8W	3	
R3280	ERJ3GEYJ221	M 220 OHM, J, 1/16W	1	
R3281,82	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R3283	ERJ3GEYJ222	M 2.2KOHM, J, 1/16W	1	
R3291,92	TAJAAH0470JV	M 47 OHM, J, 1/16W	2	D0GB470JA006
R3293	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R3297	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R3298	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R3301	ERJ3GEYJ152	M 1.5KOHM, J, 1/16W	1	
R3302-04	ERJ3GEYJ103	M 10KOHM, J, 1/16W	3	
R3311	ERJ3GEYJ101	M 100 OHM, J, 1/16W	1	D0GB101JA002
R3312	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R3313	ERJ3GEYJ101	M 100 OHM, J, 1/16W	1	D0GB101JA002
R3314	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R3315	ERJ3GEYJ101	M 100 OHM, J, 1/16W	1	D0GB101JA002
R3316	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R3317	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R3318,19	ERJ3GEYJ333	M 33KOHM, J, 1/16W	2	
R3320	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R3321	ERJ3GEYJ222	M 2.2KOHM, J, 1/16W	1	
R3324	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3328-30	ERJ3GEYJ101	M 100 OHM, J, 1/16W	3	D0GB101JA002
R3701	ERJ6GEYJ683	M 68KOHM, J, 1/10W	1	
R3702	ERJ6GEYJ223	M 22KOHM, J, 1/10W	1	
R3703	ERJ6GEYJ682	M 6.8KOHM, J, 1/10W	1	
R3704,05	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
R3706	ERJ6GEYJ123	M 12KOHM, J, 1/10W	1	
R3711	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R3714	ERJ6ENF75R0	M 75 OHM, 1/10W	1	
R3715,16	ERJ6GEYJ184	M 180KOHM, J, 1/10W	2	
R3720,21	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	2	
R3723,24	ERJ6GEYJ101	M 100 OHM, J, 1/10W	2	
R3725,26	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
R6001,02	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R6003,04	TAJAAH0470JV	M 47 OHM, J, 1/16W	2	D0GB470JA006
R6005-07	TAJAAH0101JV	M 100 OHM, J, 1/16W	3	D0GB101JA006
R6008	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R6009	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R6010-25	TAJAAH0470JV	M 47 OHM, J, 1/16W	16	D0GB470JA006
R6026	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R6027-30	ERJ1TYJ100	M 100OHM, J, 1W	4	
R6031	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R6032-37	ERJ3GEYJ223	M 22KOHM, J, 1/16W	6	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R6038-41	ERJ3GEYJ103	M 10KOHM, J, 1/16W	4	
R6042,43	ERJ3GEYJ223	M 22KOHM, J, 1/16W	2	
R6044-54	TAJAAH0470JV	M 47 OHM, J, 1/16W	11	D0GB470JA006
R6055,56	ERJ3GEYJ223	M 22KOHM, J, 1/16W	2	
R6057-64	TAJAAH0470JV	M 47 OHM, J, 1/16W	8	D0GB470JA006
R6065-72	TAJAAH0101JV	M 100 OHM, J, 1/16W	8	D0GB101JA006
R6073,74	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R6075	ERJ3GEYJ151	M 150 OHM, J, 1/16W	1	
R6076	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R6079	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R6081	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R6082	ERJ3GEYJ223	M 22KOHM, J, 1/16W	1	
R6084	ERJ3GEYJ223	M 22KOHM, J, 1/16W	1	
R6085-87	ERJ3GEYJ220	M 22 OHM, J, 1/16W	3	
R6089,90	ERJ3GEYJ220	M 22 OHM, J, 1/16W	2	
R6091,92	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R6093-96	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	4	
R6101	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R6103	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R6105	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R6107,08	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R6110,11	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R6113,14	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R6116,17	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R6119,20	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R6122,23	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R6125	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R6126,27	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R6129	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R6130,31	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R6133	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R6134,35	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R6137	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R6138	ERJ3GEYJ223	M 22KOHM, J, 1/16W	1	
R6139	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R6141,42	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R6144,45	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R6147	ERJ3GEYJ223	M 22KOHM, J, 1/16W	1	
R6148	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R6150	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R6151	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R6152-55	ERJ3GEYJ103	M 10KOHM, J, 1/16W	4	
R6157	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R6159	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R6160-99	ERJ3GEYJ220	M 22 OHM, J, 1/16W	40	
R6200-10	ERJ3GEY0R00	M 0 OHM, 1/16W	11	
R6211	ERJ3GEYJ221	M 220 OHM, J, 1/16W	1	
R6212	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R6213,14	TAJAAH0101JV	M 100 OHM, J, 1/16W	2	D0GB101JA006
R6215-20	ERJ3GEY0R00	M 0 OHM, 1/16W	6	
R6221	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R6222,23	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R6224	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R6225	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R6227	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R6228	DIHG4708A002	NETWORK RESISTER	1	
R6236	DIHG4708A002	NETWORK RESISTER	1	
R6244-47	TAJAAH0470JV	M 47 OHM, J, 1/16W	4	D0GB470JA006
R6248,49	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R6250-85	TAJAAH0101JV	M 100 OHM, J, 1/16W	36	D0GB101JA006
R6286-90	ERJ3GEYJ103	M 10KOHM, J, 1/16W	5	
R6291	ERJ3GEYJ750	M 75 OHM, J, 1/16W	1	
R6292	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R6293	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R6294	ERJ3GEYJ221	M 220 OHM, J, 1/16W	1	
R6295	ERJ3GEYJ750	M 75 OHM, J, 1/16W	1	
R6296	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R6297	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R6299	ERJ3EKF1001	M 1KOHM, 1/16W	1	
R6300	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R6301	ERJ3EKF6801	M 6.8KOHM, 1/16W	1	
R6302	ERJ3EKF5101	M 5.1KOHM, 1/16W	1	
R6303	ERJ3GEYJ241	M 240 OHM, J, 1/16W	1	
R6305,06	ERJ6GEYJ101	M 100 OHM, J, 1/10W	2	
R6308	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R6309,10	ERJ3GEYJ333	M 33KOHM, J, 1/16W	2	
R6312	ERJ3GEYJ333	M 33KOHM, J, 1/16W	1	
R6313	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R6314	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R6316	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R6317-20	TAJAAH0101JV	M 100 OHM, J, 1/16W	4	D0GB101JA006
R6321-24	ERJ3GEY0R00	M 0 OHM, 1/16W	4	
R6325	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R6336	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R6337	ERJ6GEYJ102	M 1KOHM, J, 1/10W	1	
R6347	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R6348	ERJ6GEYJ102	M 1KOHM, J, 1/10W	1	
R6350,51	ERJ3GEYJ100	M 10 OHM, J, 1/16W	2	
R6401-08	ERJ6GEYJ221	M 220 OHM, J, 1/10W	8	
R6409	ERJ6GEYJ224	M 220KOHM, J, 1/10W	1	
R6410,11	ERJ6GEYJ104	M 100KOHM, J, 1/10W	2	
R6412	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	1	
R6413	ERJ6GEYJ224	M 220KOHM, J, 1/10W	1	
R6420-23	ERJ6GEYJ103	M 10KOHM, J, 1/10W	4	
R6424	ERJ6GEYJ224	M 220KOHM, J, 1/10W	1	
R6425-28	ERJ6GEYJ103	M 10KOHM, J, 1/10W	4	
R6429	ERJ6GEYJ224	M 220KOHM, J, 1/10W	1	
R6431	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R6433	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R6441	ERJ6ENF7502	M 75KOHM, 1/10W	1	
R6442	ERJ6ENF6982	M69.8KOHM, 1/10W	1	
R6444	ERJ6GEYJ272	M 2.7KOHM, J, 1/10W	1	
R6445	ERJ6ENF2551	M2.55KOHM, 1/10W	1	
R6446	ERJ14YJ224	M 220KOHM, J, 1/4W	1	
R6447	ERG2FJS223D	M 22KOHM, J, 2W	1	
R6448	ERG2FJS472D	M 82KOHM, J, 3W	1	
R6449,50	ERJ12YJ1R0	M 1 OHM, J, 1/2W	2	
R6452	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R6453	ERJ6GEYJ223	M 22KOHM, J, 1/10W	1	
R6454	ERDS1FJ221	C 220 OHM, J, 1/2W	1	
R6455	ERJ6GEYJ332	M 3.3KOHM, J, 1/10W	1	
R6456	ERJ6ENF4533	M 453KOHM, 1/10W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R6457,58	ERJ6ENF1002	M 10KOHM, 1/10W	2	
R6459	ERJ14YJ104	M 100KOHM, J, 1/4W	1	
R6460	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6461	ERG1FJS471D	M 470 OHM, J, 1W	1	
R6463	ERJ6GEYJ102	M 1KOHM, J, 1/10W	1	
R6464	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	1	
R6465	ERX2FJS8R2D	M 8.2 OHM, J, 2W	1	
R6466	ERJ6GEYJ102	M 1KOHM, J, 1/10W	1	
R6467	ERJ6GEYJ122	M 1.2KOHM, J, 1/10W	1	
R6468	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	1	
R6469	ERJ6GEYJ163	M 16KOHM, J, 1/10W	1	
R6470	ERJ14YJ153	M 15KOHM, 1/2W	1	
R6471	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	1	
R6472	ERJ6GEYJ102	M 1KOHM, J, 1/10W	1	
R6473	ERJ6GEYJ223	M 22KOHM, J, 1/10W	1	
R6474	ERDS1FJ221	C 220 OHM, J, 1/2W	1	
R6475	ERJ6GEYJ332	M 3.3KOHM, J, 1/10W	1	
R6476	ERJ6ENF3243	M 324KOHM, 1/10W	1	
R6478	ERJ6ENF6981	M6.98KOHM, 1/10W	1	
R6479	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R6480	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6482	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	1	
R6483	ERJ14YJ622	M 62KOHM, J, 1/4W	1	
R6484	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	1	
R6485,86	ERJ6GEYJ103	M 10KOHM, J, 1/10W	2	
R6487	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	1	
R6488	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6489	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	1	
R6491	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R6492,93	ERJ6ENF2203	M 220KOHM, 1/10W	2	
R6495,96	ERJ12YJ1R0	M 1 OHM, J, 1/2W	2	
R6497	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6498,99	ERX1FJS8R2D	M 8.2 OHM, J, 1W	2	
R6500	ERJ6GEYJ122	M 1.2KOHM, J, 1/10W	1	
R6501	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	1	
R6502	ERJ6GEYJ102	M 1KOHM, J, 1/10W	1	
R6503-09	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	7	
R6510	ERX3FJS2R2D	M 2.2 OHM, J, 3W	1	
R6511	ERJ6GEYJ100	M 10 OHM, J, 1/10W	1	
R6512	ERJ6GEYJ471	M 470 OHM, J, 1/10W	1	
R6513	ERX3FJS2R2D	M 2.2 OHM, J, 3W	1	
R6514	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R6515	ERJ6GEYJ100	M 10 OHM, J, 1/10W	1	
R6516	ERJ6GEYJ471	M 470 OHM, J, 1/10W	1	
R6517	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6518	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R6519	ERJ6GEYJ102	M 1KOHM, J, 1/10W	1	
R6520	ERJ6GEYJ151	M 150 OHM, J, 1/10W	1	
R6521	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R6522	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R6524	ERJ6ENF2001	M 2KOHM, 1/10W	1	
R6525	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R6526	ERJ6GEYJ470	M 47 OHM, J, 1/10W	1	
R6527	ERJ14YJ102	M 1KOHM, J, 1/4W	1	
R6528	ERJ6GEYJ102	M 1KOHM, J, 1/10W	1	
R6529	ERJ6GEYJ470	M 47 OHM, J, 1/10W	1	
R6530-35	ERJ6GEYJ220	M 22 OHM, J, 1/10W	6	
R6538	ERJ6GEYJ102	M 1KOHM, J, 1/10W	1	
R6539	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R6540	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R6541	ERJ6GEYJ470	M 47 OHM, J, 1/10W	1	
R6542-47	ERJ6GEYJ5R6	M 5.6 OHM, J, 1/10W	6	
R6550	ERG1FJS332D	M 3.3KOHM, J, 1W	1	
R6551	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R6552,53	ERJ6ENF1003	M 100KOHM, 1/10W	2	
R6554	ERJ6ENF1002	M 10KOHM, 1/10W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R6555	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R6556	ERJ6GEYJ392	M 3.9KOHM, J, 1/10W	1	
R6558	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6559	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	1	
R6560, 61	ERJ6GEYJ470	M 47 OHM, J, 1/10W	2	
R6562	ERJ6GEYJ102	M 1KOHM, J, 1/10W	1	
R6563	ERJ6GEYJ5R6	M 5.6 OHM, J, 1/10W	1	
R6565	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6566	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R6567, 68	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	2	
R6571-78	ERJ6GEYJ471	M 470 OHM, J, 1/10W	8	
R6580	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6581	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R6582, 83	ERJ6GEYJ104	M 100KOHM, J, 1/10W	2	
R6584	ERJ6GEYJ223	M 22KOHM, J, 1/10W	1	
R6585	ERJ6GEYJ102	M 1KOHM, J, 1/10W	1	
R6586	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6587	ERJ6GEYJ152	M 1.5KOHM, J, 1/10W	1	
R6588, 89	ERJ6GEYJ103	M 10KOHM, J, 1/10W	2	
R6590	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	1	
R6591	ERJ6GEYJ152	M 1.5KOHM, J, 1/10W	1	
R6592, 93	ERJ6GEYJ224	M 220KOHM, J, 1/10W	2	
R6594	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R6595, 96	ERJ6ENF5231	M 5.23KOHM, 1/10W	2	
R6599, 00	ERJ6GEYJ101	M 100 OHM, J, 1/10W	2	
R6603	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R6604	ERJ6GEYJ101	M 100 OHM, J, 1/10W	1	
R6605-07	ERJ6GEYJ224	M 220KOHM, J, 1/10W	3	
R6608, 09	ERJ12YJ1R0	M 1 OHM, J, 1/2W	2	
R6610	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R6611-14	ERJ6GEYJ5R6	M 5.6 OHM, J, 1/10W	4	
R6615	ERJ6GEYJ332	M 3.3KOHM, J, 1/10W	1	
R6616	ERDS1FJ221	C 220 OHM, J, 1/2W	1	
R6617, 18	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	2	
R6619, 20	ERJ6GEYJ240	M 24 OHM, J, 1/10W	2	
R6621	ERJ6ENF1543	M 154KOHM, 1/10W	1	
R6623	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6624	ERJ6GEYJ100	M 10 OHM, J, 1/10W	1	
R6625	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6626	ERJ6GEYJ100	M 10 OHM, J, 1/10W	1	
R6627, 28	TAJAAH0101JV	M 100 OHM, J, 1/16W	2	D0GB101JA006
R6629	ERJ6ENF2202	M 2.2KOHM, 1/10W	1	
R6636-39	ERJ12YJ1R0	M 1 OHM, J, 1/2W	4	
R6641, 42	ERJ6GEYJ5R6	M 5.6 OHM, J, 1/10W	2	
R6643, 44	ERJ12YJ220	M 22 OHM, J, 1/2W	2	
R6645, 46	ERJ6GEYJ151	M 150 OHM, J, 1/10W	2	
R6647, 48	ERJ6GEYJ5R6	M 5.6 OHM, J, 1/10W	2	
R6649-54	ERJ6GEYJ680	M 68 OHM, J, 1/10W	6	
R6655	ERJ6GEYJ101	M 100 OHM, J, 1/10W	1	
R6656	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R6658	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R6659, 60	TAJAAH0101JV	M 100 OHM, J, 1/16W	2	D0GB101JA006
R6661, 62	ERJ6GEYJ470	M 47 OHM, J, 1/10W	2	
R6663	ERJ3GEYJ473	M 47KOHM, J, 1/16W	1	
R6664	ERJ3GEYJ471	M 470 OHM, J, 1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R6665, 66	ERJ6GEYJ680	M 68 OHM, J, 1/10W	2	
R6667, 68	TAJAAH0101JV	M 100 OHM, J, 1/16W	2	D0GB101JA006
R6669	ERJ3GEYJ473	M 47KOHM, J, 1/16W	1	
R6670	ERJ3GEYJ471	M 470 OHM, J, 1/16W	1	
R6671	ERG3FJS821D	M 820 OHM, J, 3W	1	
R6672	ERJ12YJ101	M 100 OHM, J, 1/2W	1	
R6673	ERG1SJ100P	M 10 OHM, J, 1W	1	
R6675	ERJ3GEYJ473	M 47KOHM, J, 1/16W	1	
R6676	ERJ3GEYJ471	M 470 OHM, J, 1/16W	1	
R6678, 79	ERJ3GEYJ471	M 470 OHM, J, 1/16W	2	
R6680, 81	ERJ3GEYJ473	M 47KOHM, J, 1/16W	2	
R6682-85	ERJ3GEYJ471	M 470 OHM, J, 1/16W	4	
R6686-89	ERJ3GEYJ473	M 47KOHM, J, 1/16W	4	
R6690, 91	ERJ3GEYJ471	M 470 OHM, J, 1/16W	2	
R6692, 93	ERJ3GEYJ473	M 47KOHM, J, 1/16W	2	
R6694, 95	ERJ3GEYJ471	M 470 OHM, J, 1/16W	2	
R6697, 98	ERJ3GEYJ473	M 47KOHM, J, 1/16W	2	
R6701	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R6711-14	ERJ6GEYJ5R6	M 5.6 OHM, J, 1/10W	4	
R6719, 20	ERJ6GEYJ240	M 24 OHM, J, 1/10W	2	
R6723	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6724	ERJ6GEYJ100	M 10 OHM, J, 1/10W	1	
R6725	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6726	ERJ6GEYJ100	M 10 OHM, J, 1/10W	1	
R6727, 28	TAJAAH0101JV	M 100 OHM, J, 1/16W	2	D0GB101JA006
R6736-39	ERJ12YJ1R0	M 1 OHM, J, 1/2W	4	
R6741, 42	ERJ6GEYJ5R6	M 5.6 OHM, J, 1/10W	2	
R6743, 44	ERJ12YJ220	M 22 OHM, J, 1/2W	2	
R6747, 48	ERJ6GEYJ5R6	M 5.6 OHM, J, 1/10W	2	
R6755	ERJ6GEYJ101	M 100 OHM, J, 1/10W	1	
R6756	ERJ6GEYJ104	M 100KOHM, J, 1/10W	1	
R6759, 60	TAJAAH0101JV	M 100 OHM, J, 1/16W	2	D0GB101JA006
R6761	ERJ12YJ470	M 47 OHM, J, 1/2W	1	
R6762-64	ERJ6GEYJ224	M 220KOHM, J, 1/10W	3	
R6765	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6766-68	ERJ6GEYJ223	M 22KOHM, J, 1/10W	3	
R6769, 70	ERJ6GEYJ104	M 100KOHM, J, 1/10W	2	
R6771	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6772	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	1	
R6773	ERJ6GEYJ272	M 2.7KOHM, J, 1/10W	1	
R6777, 78	ERX3FJSR22D	M 2.2 OHM, J, 3W	2	
R6779, 80	ERJ6GEYJ101	M 100 OHM, J, 1/10W	2	
R6781	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	1	
R6782, 83	TAJAAH0101JV	M 100 OHM, J, 1/16W	2	D0GB101JA006
R6784	ERJ6GEYJ224	M 220KOHM, J, 1/10W	1	
R6785, 86	ERJ6GEYJ470	M 47 OHM, J, 1/10W	2	
R6787	ERJ6GEYJ101	M 100 OHM, J, 1/10W	1	
R6788	ERJ6GEYJ103	M 10KOHM, J, 1/10W	1	
R6789	ERJ6GEYJ102	M 1KOHM, J, 1/10W	1	
R6801-03	ERJ3GEYJ471	M 470 OHM, J, 1/16W	3	
R6804-06	ERJ3GEYJ473	M 47KOHM, J, 1/16W	3	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R6807-09	ERJ3GEYJ471	M 470 OHM,J,1/16W	3	
R6810-12	ERJ3GEYJ473	M 47KOHM,J,1/16W	3	
R6818,19	ERJ6GEYJ104	M 100KOHM,J,1/10W	2	
R6820	ERJ6GEYJ223	M 22KOHM,J,1/10W	1	
R6821	ERJ6GEYJ103	M 10KOHM,J,1/10W	1	
R6823	ERJ6GEYJ152	M 1.5KOHM,J,1/10W	1	
R6824	ERJ6GEYJ103	M 10KOHM,J,1/10W	1	
R6825	ERJ6GEYJ222	M 2.2KOHM,J,1/10W	1	
R6826	ERJ6GEYJ152	M 1.5KOHM,J,1/10W	1	
R6827	ERJ6GEYJ101	M 100 OHM,J,1/10W	1	
R7102,03	ERJ14YJ220	M 22 OHM, J,1/4W	2	
R7106,07	ERJ14YJ220	M 22 OHM, J,1/4W	2	
R7110,11	ERJ14YJ220	M 22 OHM, J,1/4W	2	
R7117	ERJ6GEYJ224	M 220KOHM,J,1/10W	1	
R7119	ERJ6ENF1651	M1.65KOHM, 1/10W	1	TH-42PA30E
R7120	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	TH-42PA30E
R7125	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R7126-28	TAJAAH0101JV	M 100 OHM,J,1/16W	3	TH-37PA30E
R7126-28	TAJAAH0470JV	M 47 OHM,J,1/16W	3	TH-42PA30E
R7130	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7132	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7136-41	ERJ14YJ220	M 22 OHM, J,1/4W	6	
R7142-59	TAJAAH0101JV	M 100 OHM,J,1/16W	18	TH-37PA30E
R7142-59	TAJAAH0470JV	M 47 OHM,J,1/16W	18	TH-42PA30E
R7161	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R7162,63	ERJ3GEYJ221	M 220 OHM,J,1/16W	2	TH-37PA30E
R7162,63	ERJ3GEYJ181	M 180 OHM,J,1/16W	2	TH-42PA30E
R7166,67	ERJ3GEYJ181	M 180 OHM,J,1/16W	2	TH-37PA30E
R7166,67	ERJ3GEYJ151	M 150 OHM,J,1/16W	2	TH-42PA30E
R7170,71	TAJAAH0101JV	M 100 OHM,J,1/16W	2	TH-37PA30E
R7170,71	ERJ3GEYJ121	M 120 OHM,J,1/16W	2	TH-42PA30E
R7178	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7187	ERJ6GEYJ223	M 22KOHM,J,1/10W	1	
R7188	ERJ6GEYJ104	M 100KOHM,J,1/10W	1	
R7189	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R7192	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R7202,03	ERJ14YJ220	M 22 OHM, J,1/4W	2	
R7206,07	ERJ14YJ220	M 22 OHM, J,1/4W	2	
R7210,11	ERJ14YJ220	M 22 OHM, J,1/4W	2	
R7214,15	ERJ14YJ220	M 22 OHM, J,1/4W	2	
R7217	ERJ6GEYJ224	M 220KOHM,J,1/10W	1	
R7221-24	ERJ6GEYJ103	M 10KOHM,J,1/10W	4	
R7225	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R7226-29	TAJAAH0101JV	M 100 OHM,J,1/16W	4	TH-37PA30E
R7226-29	TAJAAH0470JV	M 47 OHM,J,1/16W	4	TH-42PA30E
R7230	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7232	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R7233-40	ERJ14YJ220	M 22 OHM, J,1/4W	8	
R7241-64	TAJAAH0101JV	M 100 OHM,J,1/16W	24	TH-37PA30E
R7241-64	TAJAAH0470JV	M 47 OHM,J,1/16W	24	TH-42PA30E
R7278	ERJ3GEY0R00	M 0 OHM, 1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R7285	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R7289,90	ERJ3GEYJ121	M 120 OHM,J,1/16W	2	TH-37PA30E
R7289,90	TAJAAH0101JV	M 100 OHM,J,1/16W	2	TH-42PA30E
R7293	TAJAAH0101JV	M 100 OHM,J,1/16W	1	TH-37PA30E
R7293	ERJ3GEYJ151	M 150 OHM,J,1/16W	1	TH-42PA30E
R7296	TAJAAH0101JV	M 100 OHM,J,1/16W	1	TH-37PA30E
R7296	ERJ3GEYJ151	M 150 OHM,J,1/16W	1	TH-42PA30E
R7297	ERJ3GEYJ181	M 180 OHM,J,1/16W	1	
R7300	ERJ3GEYJ181	M 180 OHM,J,1/16W	1	
R7301	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R7304	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R7305	ERJ6GEYJ223	M 22KOHM,J,1/10W	1	
R7306	ERJ6GEYJ104	M 100KOHM,J,1/10W	1	
R7309,10	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
R7501	ERJ6ENF8200	M 820 OHM, 1/10W	1	
R7502	ERJ6ENF1871	M1.87KOHM, 1/10W	1	
R7503	ERJ6ENF8060	M 806 OHM, 1/10W	1	
R7504	ERJ6ENF3921	M3.92KOHM, 1/10W	1	
R7505	ERJ6GEYJ223	M 22KOHM,J,1/10W	1	
R7506	ERJ6GEYJ222	M 2.2KOHM,J,1/10W	1	
R7507	ERJ6ENF8200	M 820 OHM, 1/10W	1	
R7508	ERJ6ENF1871	M1.87KOHM, 1/10W	1	
R7509	ERJ6ENF8060	M 806 OHM, 1/10W	1	
R7510	ERJ6ENF1001	M 1KOHM, 1/10W	1	
R7511	ERJ6ENF8200	M 820 OHM, 1/10W	1	
R7512	ERJ6ENF6040	M 604 OHM, 1/10W	1	
R7514	ERJ6GEYJ222	M 2.2KOHM,J,1/10W	1	
R7515,16	ERJ6GEYJ223	M 22KOHM,J,1/10W	2	
R7517	ERJ6GEYJ222	M 2.2KOHM,J,1/10W	1	
R7518	ERJ6GEYJ223	M 22KOHM,J,1/10W	1	
R7519	ERJ6GEYJ123	M 12KOHM,J,1/10W	1	
R7520	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R7522,23	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
R7525-27	ERJ6GEYJ472	M 4.7KOHM,J,1/10W	3	
R7529-31	ERJ6GEY0R00	M 0 OHM, 1/10W	3	
R7532	ERJ6GEYJ471	M 470 OHM,J,1/10W	1	
R7533	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R7534	ERJ6GEYJ101	M 100 OHM,J,1/10W	1	
R7535	ERJ6GEYJ221	M 220 OHM,J,1/10W	1	
R7536	ERJ6GEYJ471	M 470 OHM,J,1/10W	1	
R7537,38	ERJ6GEYJ103	M 10KOHM,J,1/10W	2	
R7539	ERJ6GEYJ222	M 2.2KOHM,J,1/10W	1	
R7540	ERJ6GEYJ472	M 4.7KOHM,J,1/10W	1	
R7541	ERJ6GEYJ222	M 2.2KOHM,J,1/10W	1	
R7542	ERJ6GEYJ471	M 470 OHM,J,1/10W	1	
R7543	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R7544	ERJ6GEYJ222	M 2.2KOHM,J,1/10W	1	
R7545,46	ERJ6ENF2201	M 2.2KOHM, 1/10W	2	
R7547	ERJ6GEYJ681	M 680 OHM,J,1/10W	1	
R7548	ERJ6GEYJ222	M 2.2KOHM,J,1/10W	1	
R7549	ERJ6GEYJ104	M 100KOHM,J,1/10W	1	
R7550	ERJ6GEYJ221	M 220 OHM,J,1/10W	1	
R7551	ERJ6ENF7151	M7.15KOHM, 1/10W	1	
R7552	ERJ6ENF8060	M 806 OHM, 1/10W	1	
R7557	ERJ6GEYJ104	M 100KOHM,J,1/10W	1	
R7558	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R7559	ERJ6ENF3301	M 3.3KOHM, 1/10W	1	
R7560	ERJ6GEYJ473	M 47KOHM,J,1/10W	1	
R7579	ERJ6GEYJ104	M 100KOHM,J,1/10W	1	
R7580	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R7583	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R7584	ERJ6GEYJ512	M 5.1KOHM,J,1/10W	1	
R7585	ERJ6ENF8202	M 82KOHM, 1/10W	1	
R7586	ERJ6ENF1371	M1.37KOHM, 1/10W	1	
R7588	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R7590	ERJ6GEY0R00	M 0 OHM, 1/10W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R7591	ERJ6GEYJ563	M 56KOHM,J,1/10W	1	
R7595	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R9018-20	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R9022-24	ERJ3GEYJ750	M 75 OHM,J,1/16W	3	
R9028	ERJ3GEYJ100	M 10 OHM,J,1/16W	1	
R9029	ERJ3GEYJ332	M 3.3KOHM,J,1/16W	1	
R9064	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9104,05	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R9109,10	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
R9111,12	ERJ3GEYJ330	M 33 OHM,J,1/16W	2	
R9113	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9114,15	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
R9118	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R9122	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R9127-29	EXB2HVR000	RESISTOR ARRAY	3	
R9130-32	TAJAAH0101JV	M 100 OHM,J,1/16W	3	D0GB101JA006
R9153,54	EXB2HVR000	RESISTOR ARRAY	2	
R9157	EXB2HVR000	RESISTOR ARRAY	1	
R9167,68	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R9171,72	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R9176	TAJAAH0101JV	M 100 OHM,J,1/16W	1	D0GB101JA006
R9177	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R9178,79	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R9180	ERJ3GEYJ100	M 10 OHM,J,1/16W	1	
R9182	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9183	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R9187	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9190	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9199	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9200	ERJ3GEYJ332	M 3.3KOHM,J,1/16W	1	
R9202	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9203-05	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R9207,08	ERJ3GEYJ100	M 10 OHM,J,1/16W	2	
R9216	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9218	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9219	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	
R9220,21	ERJ3GEYJ151	M 150 OHM,J,1/16W	2	
R9224	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R9226	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9228	ERJ3GEYJ151	M 150 OHM,J,1/16W	1	
R9229,30	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R9231	ERJ3GEYJ272	M 2.7KOHM,J,1/16W	1	
R9232	ERJ3GEYJ331	M 330 OHM,J,1/16W	1	
R9234	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9236	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9240	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	
R9244,45	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R9247	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9302	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9303	EXB38V103J	RESISTOR ARRAY	1	
R9306	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9308	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9310	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R9311	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9315	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9322	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9330	ERJ3GEYJ100	M 10 OHM,J,1/16W	1	
R9333	TAJAAH0470JV	M 47 OHM,J,1/16W	1	D0GB470JA006
R9335	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R9336	ERJ3GEYJ100	M 10 OHM,J,1/16W	1	
R9337	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R9339	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9349	EXB38V470J	RESISTOR ARRAY	1	
R9352	ERJ3GEYJ100	M 10 OHM,J,1/16W	1	
R9353	EXB38V470J	RESISTOR ARRAY	1	
R9355	ERJ3GEYJ100	M 10 OHM,J,1/16W	1	
R9357	EXB38V470J	RESISTOR ARRAY	1	
R9362	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9365	EXB38V470J	RESISTOR ARRAY	1	
R9367	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9368	EXB38V470J	RESISTOR ARRAY	1	
R9371	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9373	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9376	TAJAAH0470JV	M 47 OHM,J,1/16W	1	D0GB470JA006
R9380	EXB38V151J	RESISTOR ARRAY	1	
R9411	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R9413	ERJ3GEYJ331	M 330 OHM,J,1/16W	1	
R9415	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R9417	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R9420	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R9449	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R9455	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9459	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9460-62	ERJ3GEYJ100	M 10 OHM,J,1/16W	3	
R9465,66	EXB2HVR000	RESISTOR ARRAY	2	
R9468	EXB2HVR000	RESISTOR ARRAY	1	
R9469	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9475	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R9476	TAJAAH0101JV	M 100 OHM,J,1/16W	1	D0GB101JA006
R9477,78	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R9479	TAJAAH0101JV	M 100 OHM,J,1/16W	1	D0GB101JA006
R9480,81	ERJ6ENF1001	M 1KOHM, 1/10W	2	
R9483	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9484,85	ERJ3GEYJ102	M 1KOHM,J,1/16W	2	
R9486,87	ERJ6ENF1001	M 1KOHM, 1/10W	2	
R9488,89	ERJ3GEYJ100	M 10 OHM,J,1/16W	2	
R9490,91	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R9501	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9503	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9513-15	ERJ3GEYJ100	M 10 OHM,J,1/16W	3	
R9525,26	EXB38V470J	RESISTOR ARRAY	2	
R9530	EXB38V470J	RESISTOR ARRAY	1	
R9532	TAJAAH0470JV	M 47 OHM,J,1/16W	1	D0GB470JA006
R9535	TAJAAH0470JV	M 47 OHM,J,1/16W	1	D0GB470JA006
R9537	TAJAAH0470JV	M 47 OHM,J,1/16W	1	D0GB470JA006
R9538	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R9540	EXB38V470J	RESISTOR ARRAY	1	
R9541	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R9547	TAJAAH0470JV	M 47 OHM,J,1/16W	1	D0GB470JA006
R9548	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9551	EXB38V470J	RESISTOR ARRAY	1	
R9553	EXB38V680J	RESISTOR ARRAY	1	
R9558	ERJ3GEYJ151	M 150 OHM,J,1/16W	1	
R9559	EXB38V470J	RESISTOR ARRAY	1	
R9560	ERJ3GEYJ151	M 150 OHM,J,1/16W	1	
R9561	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	
R9562	ERJ3GEYJ151	M 150 OHM,J,1/16W	1	
R9564	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9570	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9577	TAJAAH0101JV	M 100 OHM,J,1/16W	1	D0GB101JA006
R9579-81	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R9585,86	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R9592	ERJ3GEYJ104	M 100KOHM,J,1/16W	1	
R9593	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9594	TAJAAH0101JV	M 100 OHM,J,1/16W	1	D0GB101JA006
R9595	ERJ3GEYJ104	M 100KOHM,J,1/16W	1	
R9596	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9597	TAJAAH0101JV	M 100 OHM,J,1/16W	1	D0GB101JA006
R9598,99	EXB38VR000	RESISTOR ARRAY	2	
R9600-05	ERJ3GEY0R00	M 0 OHM, 1/16W	6	
R9608,09	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R9611-15	ERJ3GEY0R00	M 0 OHM, 1/16W	5	
R9618	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R9620,21	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R9624	TAJAAH0101JV	M 100 OHM,J,1/16W	1	D0GB101JA006
R9625	ERJ3GEYJ561	M 560 OHM,J,1/16W	1	
R9627,28	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R9631-35	ERJ3GEY0R00	M 0 OHM, 1/16W	5	
R9640,41	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R9642	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R9643	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9648	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9650-53	EXB38V103J	RESISTOR ARRAY	4	
R9654,55	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R9670-72	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R9679	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9683	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9686-88	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R9700	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9701	TAJAAH0101JV	M 100 OHM,J,1/16W	1	D0GB101JA006
R9702	TAJAAH0680JV	M 68 OHM,J,1/16W	1	D0GB680JA006
R9703-08	TAJAAH0101JV	M 100 OHM,J,1/16W	6	D0GB101JA006
R9709	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R9710-16	ERJ3GEYJ151	M 150 OHM,J,1/16W	7	
R9717,18	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R9719-24	ERJ3GEYJ151	M 150 OHM,J,1/16W	6	
R9725	ERJ3GEYJ823	M 82KOHM,J,1/16W	1	
R9726	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9727	EXB38VR000	RESISTOR ARRAY	1	
R9728	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9730-32	TAJAAH0101JV	M 100 OHM,J,1/16W	3	D0GB101JA006
R9733	ERJ3GEYJ562	M 5.6KOHM,J,1/16W	1	
R9734	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R9735	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9736	ERJ3GEYJ272	M 2.7KOHM,J,1/16W	1	
R9737	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R9738,39	ERJ3GEYJ272	M 2.7KOHM,J,1/16W	2	
R9741	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R9743-45	ERJ3GEYJ103	M 10KOHM,J,1/16W	3	
R9747	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R9748	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9749	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R9750	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R9751	EXB38V103J	RESISTOR ARRAY	1	
R9752	TAJAAH0101JV	M 100 OHM,J,1/16W	1	D0GB101JA006
R9754	EXB38V272J	RESISTOR ARRAY	1	
R9755,56	ERJ3GEYJ272	M 2.7KOHM,J,1/16W	2	
R9757	ERJ3GEYJ560	M 56 OHM,J,1/16W	1	
R9758	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R9759	ERJ3GEYJ560	M 56 OHM,J,1/16W	1	
R9760	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9761	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R9762	EXB38V103J	RESISTOR ARRAY	1	
R9763	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9765	TAJAAH0101JV	M 100 OHM,J,1/16W	1	D0GB101JA006
R9766	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9767	TAJAAH0101JV	M 100 OHM,J,1/16W	1	D0GB101JA006
R9768	EXB38V470J	RESISTOR ARRAY	1	
R9769	EXB38VR000	RESISTOR ARRAY	1	
R9770	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9771	EXB38VR000	RESISTOR ARRAY	1	
R9773	TAJAAH0101JV	M 100 OHM,J,1/16W	1	D0GB101JA006
R9774-76	ERJ3GEYJ103	M 10KOHM,J,1/16W	3	
R9777	ERJ3GEYJ471	M 470 OHM,J,1/16W	1	
R9779	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9781	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9782	ERJ3GEYJ562	M 5.6KOHM,J,1/16W	1	
R9783,84	ERJ3GEYJ560	M 56 OHM,J,1/16W	2	
R9785,86	EXB38VR000	RESISTOR ARRAY	2	
R9787	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R9788	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9789	ERJ3GEYJ471	M 470 OHM,J,1/16W	1	
R9790	ERJ3GEYJ152	M 1.5KOHM,J,1/16W	1	
R9791	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R9794	ERJ3GEYJ272	M 2.7KOHM,J,1/16W	1	
R9795	ERJ3GEYJ105	M 1MOHM,J,1/16W	1	
R9798,99	ERJ3GEYJ562	M 5.6KOHM,J,1/16W	2	
R9800	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9803,04	TAJAAH0101JV	M 100 OHM,J,1/16W	2	D0GB101JA006
R9805	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9806	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R9809	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9810,11	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R9814	ERJ3GEYJ100	M 10 OHM,J,1/16W	1	
R9816	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R9817	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9818,19	TAJAAH0101JV	M 100 OHM,J,1/16W	2	D0GB101JA006
R9820	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R9823,24	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R9825	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R9826	TAJAAH0101JV	M 100 OHM,J,1/16W	1	D0GB101JA006
R9827	ERJ3GEYJ332	M 3.3KOHM,J,1/16W	1	
R9829	ERJ3GEYJ393	M 39KOHM,J,1/16W	1	
R9832	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9833	ERJ3GEYJ393	M 39KOHM,J,1/16W	1	
R9834,35	ERJ3GEYJ560	M 56 OHM,J,1/16W	2	
R9836	TAJAAH0101JV	M 100 OHM,J,1/16W	1	D0GB101JA006
R9837	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R9838	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9839,40	TAJAAH0101JV	M 100 OHM,J,1/16W	2	D0GB101JA006
R9841,42	ERJ3GEYJ560	M 56 OHM,J,1/16W	2	
R9843,44	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R9846,47	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R9848	EXB38V103J	RESISTOR ARRAY	1	
R9849,50	TAJAAH0101JV	M 100 OHM,J,1/16W	2	D0GB101JA006
R9851	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R9852,53	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R9855	ERJ3GEYJ393	M 39KOHM,J,1/16W	1	
R9856	TAJAAH0101JV	M 100 OHM,J,1/16W	1	D0GB101JA006
R9857	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R9858	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R9859	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R9860	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R9861	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9864	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R9867	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9868	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R9869	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R9871	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R9872	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9873	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R9874, 75	TAJAAH0101JV	M 100 OHM, J, 1/16W	2	D0GB101JA006
R9876	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9878-80	TAJAAH0101JV	M 100 OHM, J, 1/16W	3	D0GB101JA006
R9882, 83	TAJAAH0101JV	M 100 OHM, J, 1/16W	2	D0GB101JA006
R9885	EXB38V103J	RESISTOR ARRAY	1	
R9886	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R9887	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9889	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R9890	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9893-96	TAJAAH0101JV	M 100 OHM, J, 1/16W	4	D0GB101JA006
R9897	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9898	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9900	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R9901	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9903-05	ERJ3GEYJ103	M 10KOHM, J, 1/16W	3	
R9906	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R9907	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9908	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R9909	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9910	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R9913	ERJ6ENF2202	M 2.2KOHM, 1/10W	1	
R9914	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R9916	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9917	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9918	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9919	ERJ6ENF1002	M 10KOHM, 1/10W	1	
R9920	ERJ3GEYJ105	M 1MOHM, J, 1/16W	1	
R9921-23	TAJAAH0101JV	M 100 OHM, J, 1/16W	3	D0GB101JA006
R9924	ERJ3GEYJ223	M 22KOHM, J, 1/16W	1	
R9925	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9929, 30	TAJAAH0101JV	M 100 OHM, J, 1/16W	2	D0GB101JA006
R9931	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9932	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R9933	ERJ3GEYJ331	M 330 OHM, J, 1/16W	1	
R9934	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9935, 36	ERJ3GEYJ562	M 5.6KOHM, J, 1/16W	2	
R9937	ERJ3GEYJ331	M 330 OHM, J, 1/16W	1	
R9939	ERJ3GEYJ331	M 330 OHM, J, 1/16W	1	
R9940	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9941	ERJ3GEYJ331	M 330 OHM, J, 1/16W	1	
R9942	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9943	TAJAAH0101JV	M 100 OHM, J, 1/16W	1	D0GB101JA006
R9944	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R9945, 46	ERJ3GEYJ100	M 10 OHM, J, 1/16W	2	
R9947	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R9949	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9951, 52	ERJ3GEYJ471	M 470 OHM, J, 1/16W	2	
R9954	ERJ3GEYJ471	M 470 OHM, J, 1/16W	1	
R9956	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	1	
R9957	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9959, 60	ERJ3GEYJ472	M 4.7KOHM, J, 1/16W	2	
R9961	ERJ6ENF1621	M 1.62KOHM, 1/10W	1	
R9962	ERJ6ENF1001	M 1KOHM, 1/10W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R9964	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R9965	ERJ3GEYJ102	M 1KOHM, J, 1/16W	1	
R9966	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9969	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R9971	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R9972	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9973	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R9984-88	ERJ3GEY0R00	M 0 OHM, 1/16W	5	
R9991	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
R9993, 94	ERJ3GEYJ103	M 10KOHM, J, 1/16W	2	
R9996	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R9998	ERJ3GEYJ103	M 10KOHM, J, 1/16W	1	
RL401	K6B2ADA00007	REALY	1	△
RL402, 03	K6B1ADA00009	REALY	2	△
RL901	K6B1ADA00023	RELAY	1	△
RM300	PNA4601M05TV	REMOCO RECEIVER	1	
RTL	TNPA3115	CIRCUIT BOARD H	1	△
RTL	TNPA3116	CIRCUIT BOARD T	1	△
RTL	TXNDG1UHSE	CIRCUIT BOARD DG	1	△
RTL	TXNPA1UKSE	CIRCUIT BOARD PA	1	△
RTL	TXNPF1UKSE	CIRCUIT BOARD PF	1	△
RTL	TNPA3089	CIRCUIT BOARD C1	1	TH-37PA30E △
RTL	TNPA3090	CIRCUIT BOARD C2	1	TH-37PA30E △
RTL	TNPA3083	CIRCUIT BOARD C1	1	TH-42PA30E △
RTL	TNPA3084	CIRCUIT BOARD C2	1	TH-42PA30E △
RTL	TZTNP01UHSE	CIRCUIT BOARD D	1	△
RTL	TNPA3336	CIRCUIT BOARD P	1	△
RTL	TNPA3106	CIRCUIT BOARD SC	1	TH-42PA30E △
RTL	TNPA3106AB	CIRCUIT BOARD SC	1	TH-37PA30E △
RTL	TNPA2627AB	CIRCUIT BOARD SD	1	TH-37PA30E △
RTL	TNPA2958AB	CIRCUIT BOARD SD	1	TH-42PA30E △
RTL	TNPA3107	CIRCUIT BOARD SS	1	TH-42PA30E △
RTL	TNPA3107AB	CIRCUIT BOARD SS	1	TH-37PA30E △
RTL	TNPA2872	CIRCUIT BOARD SS2	1	TH-42PA30E △
RTL	TNPA2873	CIRCUIT BOARD SS3	1	TH-42PA30E △
RTL	TNPA2876	CIRCUIT BOARD SS4	1	TH-37PA30E △
RTL	TNPA2877	CIRCUIT BOARD SS5	1	TH-37PA30E △
RTL	TNPA2626AB	CIRCUIT BOARD SU	1	TH-37PA30E △
RTL	TNPA2957AB	CIRCUIT BOARD SU	1	TH-42PA30E △
RTL	TNPA2990AC	CIRCUIT BOARD S	1	△
RTL	TNPA3151	CIRCUIT BOARD JG	1	△
RTL	TNPA3320	CIRCUIT BOARD G	1	△
RTL	TNPA2988AC	CIRCUIT BOARD K	1	△
S4	K1KA07B00006	7P CONNECTOR	1	
S34	K1KA03A00213	3P CONNECTOR	1	
S300	K0F162B00002	SWITCH	1	
S901	J0LT00000009	SWICH	1	△
S915	J0LT00000009	SWICH	1	△
S3701-05	EVQ23405R	SWITCH	5	
SC2	K1KA06A00180	6P CONNECTOR	1	
SC20	K1KA20A00180	20P CONNECTOR	1	
SC23	K1KA03A00213	3P CONNECTOR	1	
SC41-44	K1KB40B00015	40P CONNECTOR	4	
SC45, 46	K1KA10A00194	10P CONNECTOR	2	
SD1-D3	K1MN80B00004	80P CONNECTOR	3	
SD46	K1KA10B00209	10P CONNECTOR	1	
SS11	K1KA07A00096	7P CONNECTOR	1	
SS12	K1KA05A00139	5P CONNECTOR	1	
SS23	K1KA11A00073	11P CONNECTOR	1	
SS34	K1KA03A00213	3P CONNECTOR	1	
SS40	K1KB07A00037	7P CONNECTOR	1	TH-42PA30E
SS40A	K1KB07A00037	7P CONNECTOR	1	TH-37PA30E
SS41-46	K1MN13B00020	13P CONNECTOR	6	TH-42PA30E

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
SS41A-6A	K1MN13B00020	13P CONNECTOR	6	TH-37PA30E
SS47	K1KB07A00037	7P CONNECTOR	1	TH-42PA30E
SS47A	K1KB07A00037	7P CONNECTOR	1	TH-37PA30E
SS48,49	K1KA07A00170	7P CONNECTOR	2	
SU1-U3	K1MN80B00004	80P CONNECTOR	3	
SU45	K1KA10B00209	10P CONNECTOR	1	
T10	TJS6A9390	24P CONNECTOR	1	K1KA24A00041
T401	ETS25AD1H6AG	SWITCHING TRANS	1	△
T501	ETS49BP116AD	SWITCHING TRANS	1	△
T502	ETS42BV116AD	SWITCHING TRANS	1	△
T920	ETS29AK7E6AD	SWITCHING TRANS	1	△
T6451	G4D1A0000072	SWITCHING TRANS	1	
T6461	ETS13TB139AP	SWITCHING TRANS	1	
T6471	G4D1A0000072	SWITCHING TRANS	1	
TPP1	ERD25V0R00	C 0 OHM, 1/4W	1	
TU001	ENG29526G	TUNER	1	△
VR6443	EVMEASA00B24	CONTROL 20KOHMB 0.3W	1	
VR6477	EVMEASA00B53	CONTROL 5KOHMB 0.3W	1	
VR6557	EVMEASA00B14	CONTROL 10KOHMB 0.3W	1	
VR6774	EVMEASA00B53	CONTROL 5KOHMB 0.3W	1	
X1000	H0J921400003	CRYSTAL	1	
X1001	H0J600400006	CRYSTAL	1	
X1301	H0J202500002	CRYSTAL	1	
X2001	TSSA128	CRYSTAL	1	H0D184500008
X2002	EFCT6504BN	CRYSTAL	1	
X2003	EFCT7004BN	CRYSTAL	1	
X2651	H0D245500009	CRYSTAL	1	
X6001	H1A4905B0001	CRYSTAL	1	
X9302	H0J200500016	CRYSTAL	1	
X9701	H0J245500013	CRYSTAL	1	
X9702	H0J921400003	CRYSTAL	1	
X9703	H0J200500016	CRYSTAL	1	
ZA001	K4ZZ01000121	EARTH LUG	1	
ZA1,02	K4ZZ01000121	EARTH LUG	2	
ZA901	K4ZZ01000121	EARTH LUG	1	
ZA3101-04	K4ZZ01000121	EARTH LUG	4	
ZA3106,07	K4ZZ01000121	EARTH LUG	2	

If you need more information on Computer and Electronic Repair, please visit these websites to improve yourself.

<http://www.fastrepairguide.com>


<http://www.protech2u.com>

<http://www.plasma-television-repair.com>

<http://www.lcd-television-repair.com>

Happy Repairing!!

Highly Recommended Repair Ebook:

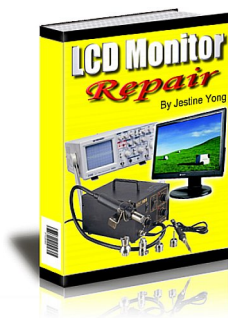


If you're a LCD Monitor repairer, then this is the best guide for you. Why? Because, the author revealed all his LCD Monitor Repairing secrets for you. I think, with just few Repair tips you learned from this guide you will get back your investment!

[Click Here to read](#) more.



This eBook will show you how to test the electronic component correctly and accurately. Some of you may say that I don't need this eBook because it is too simple! Do you know that, in fact there is lots of testing electronic components secrets I have learned from this guide? Do you know how to test a 'TRIAC' correctly and accurately? If you answer no then I guess you have to get this eBook. [Click Here to read more.](#)

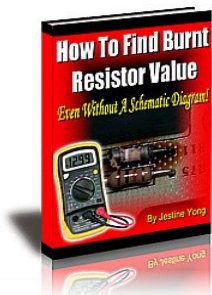

Are you tired of searching the service manuals to look for the value of a burnt resistor? If the answer is YES, then this eBook is a 'must have' guide for you. You can save a lot of time and be able to repair customer's Electronic equipment with burnt resistors in it.

[Click here to read more.](#)